

OPERATING INSTRUCTIONS

PRINCE CASTLE INC. 
WORLDWIDE

Push-Up & Wide Stance High Chairs Model No. 442 & 447

COMFORTLINE®



Prince Castle's high chairs are constructed of high-impact resistant molded plastic that can withstand the tough treatment kids are known to give. The Push-up and Wide Stance High Chairs feature web safety straps with positive lock buckles, triple chrome-plated finish on heavy-duty tubular steel legs. Model 447 features a three-position adjustable tray which is virtually unbreakable.

WARRANTY

This product is warranted to be free from defects in material and/or workmanship for a period of (1) year from date of original purchase not to exceed 18 months from date of shipment from our factory. Any component which proves faulty in material and/or workmanship within the warranty period will be replaced or repaired (at the option of Prince Castle, Inc.) without cost to the customer for parts or labor.

This warranty is subject to the following exception/conditions:

- I Damage caused by carelessness, neglect, and/or abuse and misuse (e.g., dropping, tampering with or improper maintenance) is not covered.
- I Equipment damaged in shipment, by fire, flood or an act of God is not covered.
- I Any use of non-genuine Prince Castle replacement spare parts voids this warranty. All genuine Prince Castle replacement spare parts are warranted for ninety (90) days from date of purchase.

SPECIFICATIONS

Dimensions:

Overall Height:	34-1/8" (86.68 cm)
Table Clearance:	27-7/8" (70.80 cm)
Width w/tray:	23-3/4" (60.33 cm)
Depth at Base:	24-3/4" (62.87 cm)
Shipping Weight:	17 lbs (7.71 kg)

PRINCE CASTLE INC. 
WORLDWIDE

355 East Kehoe Blvd. • Carol Stream, IL 60188

Tel: (630) 462-8800 • Fax: (630) 462-1460

Toll Free: 1-800-PCASTLE

PARTS

1. Always refer to the Parts List in this manual. Part numbers are needed for reference when ordering.
2. All replacement parts should be purchased from your local Prince Castle Service Agency or your local Prince Castle Distributor.
3. RETURNS: All inoperable warranty parts must be returned to the Service Center.

INSTALLATION

1. After you have removed the unit from the carton, inspect the unit for signs of damage. If there is damage to the unit:
 - Notify carrier within 24 hours after delivery.
 - Save carton and packing materials for inspection purposes.
 - Contact the Prince Castle Customer Sales Department at 1-800-722-7853 or your local Prince Castle distributor to arrange for a replacement to be sent.
2. Verify that all parts have been received.
3. Open carton and remove seat, legs, tray, and accessory carton (4 casters, 4 screws).
4. Assemble casters to legs.
5. Turn seat upside down.
6. Place legs mounting plate on the bottom of the chair making sure the part marked "FRONT" on the mounting plate faces the front of the plastic seat.
7. Attach seat to mounting plate with (4) screws provided. Start all (4) screws before tightening.
8. Turn chair upright and attach tray to chair arms. The chair is now ready for use.


OPERATION



CAUTION: When a child is in the chair always fasten his/her seat-belt. Never leave a child unattended. Any child using the high chair should be secured by the restraining strap and crotch strap at all times.

To use the seat belt simply push the clasp into the buckle. To release squeeze the top and bottom edge of the buckle and pull apart. See figure 2.

figure 2

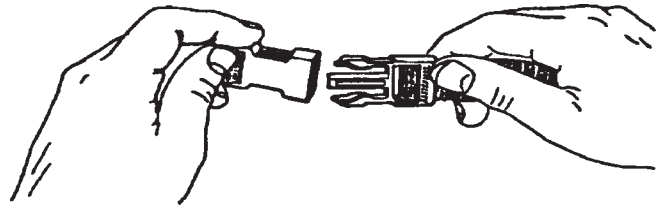

CLEANING

Wipe the entire chair with a clean cloth soaked in a mild soap solution. Afterwards, wipe the chair down with a dry, clean cloth.



PARTS LIST

Item	Part No.	Description
1	447-43S	Seat (White & White)
	CL462S	Seat (White & Saddle)
	CL456S	Seat (Brown & Saddle)
	CL054S	Seat (Gold & Brown)
2	446-5S	Back Pad (Walnut)
	2447-4S	Back Pad (Gray)
	447-41S	Back Pad (White)
3	460-13	Safety Strap
	2447-3S	Restraining Strap (Black)
4	CL2033	Crotch Strap
	2447-2S	Crotch Strap (Black)
5	446-13	Tray (White)
6	447-26S	Leg Assembly
7	447-8	Caster Insert
8	447-7	Caster
•	442-7	Belly Bar Kit
•	445-23	Tray Slides (Pack of 2)
•	Not Shown	