

**PUSH-UP HIGH CHAIR
PRINCE CASTLE NO. 461 SERIES**



This equipment chapter is to be placed
in the Miscellaneous Section of your
Equipment Manual.

MANUFACTURED FOR
McDONALD'S®
BY
PRINCE CASTLE INC.
CAROL STREAM, IL 60188 USA
PHONE 1-630-462-8800
TOLL FREE NUMBER
1-800-323-2930
FAX: 1-630-462-1460



LIMITED WARRANTY

This product is warranted to be free from defects in material and/or workmanship for a period of two years from the date of original installation. Any component which proves to be faulty during the warranty period will be replaced without cost to the customer.

ORDERING/SERVICE INFORMATION

1. WHERE AND HOW TO ORDER
REPLACEMENT PARTS

To order replacement parts, look on the back of your Prince Castle Price List for the name and phone number of your local Prince Castle Service Center. You may also call 1-630-462-8800 or 1-800-298-1862 (Within the U.S.) for the name of your local Service Center.

2. PARTS RETURNS

To return parts to your Service Center for credit, you must obtain authorization from your Service Center.

3. PRICES

All prices are F.O.B. Prince Castle Service Center or F.O.B. factory, Carol Stream, Illinois.

All prices are subject to change without notice.

These prices are exclusive of all sales taxes or any special taxes which may be levied by federal, state, or city governments.

Parts price lists are sent to the USA restaurants once a year, which indicates the prices available from your local Service Center.

4. TERMS

Net 30 days.

OUTSIDE THE U.S.

Contact your Kitchen Equipment Supplier or designated Service Center facility for parts and service.


This manual is for the exclusive use of licensees and employees of McDonald's Systems, Inc.

HOW TO ASSEMBLE

1. Open carton and remove seat, leg assembly, tray, and accessory carton (4 casters, 4 screws).
2. Assemble casters to legs.
3. Turn the seat upside down and place the leg mounting plate on the bottom of the seat. Make sure the part marked FRONT on the mounting plate faces the front of the seat.
4. Attach seat to mounting plate with 4 screws provided. Start all 4 screws before tightening.
5. Turn chair upright and attach tray to chair arms. Chair is ready for use.

IMPORTANT: Any child using this chair should be secured by the restraining seat belt and crotch strap at all times. Simply push buckle and clasp together to secure. To open, depress buckle and pull apart. See figure 1.

figure 1

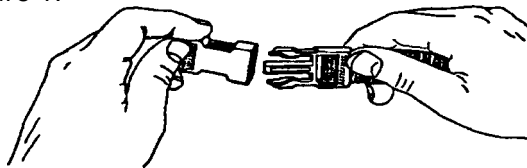

HOW TO CLEAN

Wash high chair seat with soap and water. A soft scrub brush can be used to remove ground-in dirt. Wipe the high chair dry with a dry, clean cloth. Wipe high chair legs with a damp cloth.

EXPLODED VIEW



PARTS LIST

ITEM	PART NO.	DESCRIPTION				
1	460-3S	Seat Assy. (Brown) (461 & 461-UK)				
	461-16	Seat Assy. (Gray) (461-G)				
	461-25S	Seat Assy. (Burgandy) (461-B)				
	461-26S	Seat Assy. (Tan) (461-T)				
	461-27S	Seat Assy. (Royal Blue) (461-RB)				
	461-28S	Seat Assy. (Slate Blue) (461-SB)				
	461-36BS	Seat Assy. (Blue) (461-BY) (461-BR)				
	461-37YS	Seat Assy. (Yellow) (461-YP) (461-YR)				
	461-38RS	Seat Assy. (Red) (461-RY) (461-RP)				
	2	461-1	Tray			
3		460-14	Back Pad			
		4	460-12	Belly Bar Kit		
			5	460-13	Restraining Strap (Brown) (461 & 461-UK)	
				2447-3S	Restraining Strap (Black) (461-B,461-G,461-T, 461-RB & SB)	
				461-48BS	Restraining Strap (Blue) (461-BY, 461-YP, 461-RY, 461-YR, 461-BR & 461-RP)	
				6	460-8	Crotch Strap (Brown) (461 & 461-UK)
					2447-2S	Crotch Strap (Black) (461-B, 461-G, 461-T, 461-RB & SB)
					461-49BS	Crotch Strap (Blue) (461-BY, 461-YP, 461-RY, 461-YR, 461-BR & 461-RP)
					7	445-029SA
	8					461-15
461-39YS						Leg Assembly (Yellow)
461-40PS		Leg Assembly (Purple/Blue)				
461-41RS		Leg Assembly (Red)				
9		460-18	Caster Insert			
		10	460-10			Caster
			461-23	Locking Caster (461-UK Only)		