

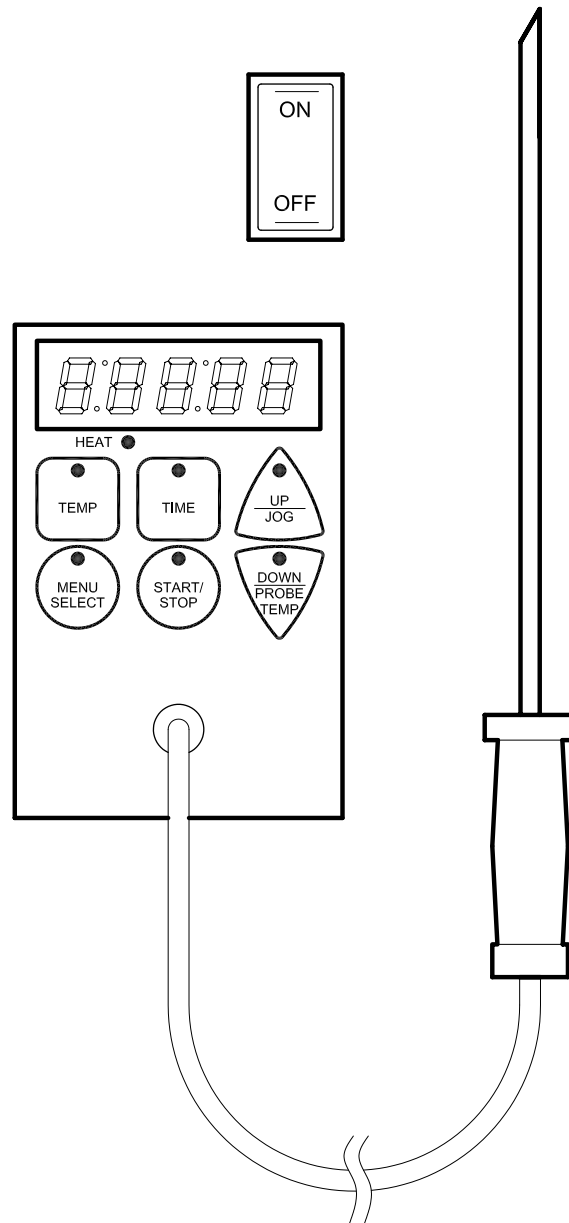


Table of Contents

1-01. Cooking Controller buttons and functions 2

1-02. Setting and running a Manual Menu 4

1-03. Programming a Programmed Menu 6

1-04. Running a Programmed Menu 7


1-05. Cancelling a Manual or Programmed Menu 8

1-06. Viewing actual temperature in Rotisserie 8

1-07. Using the Hand-Held Temperature Probe 9


1-01. Cooking Controller buttons and functions

This section describes how to operate the Cooking Controller.

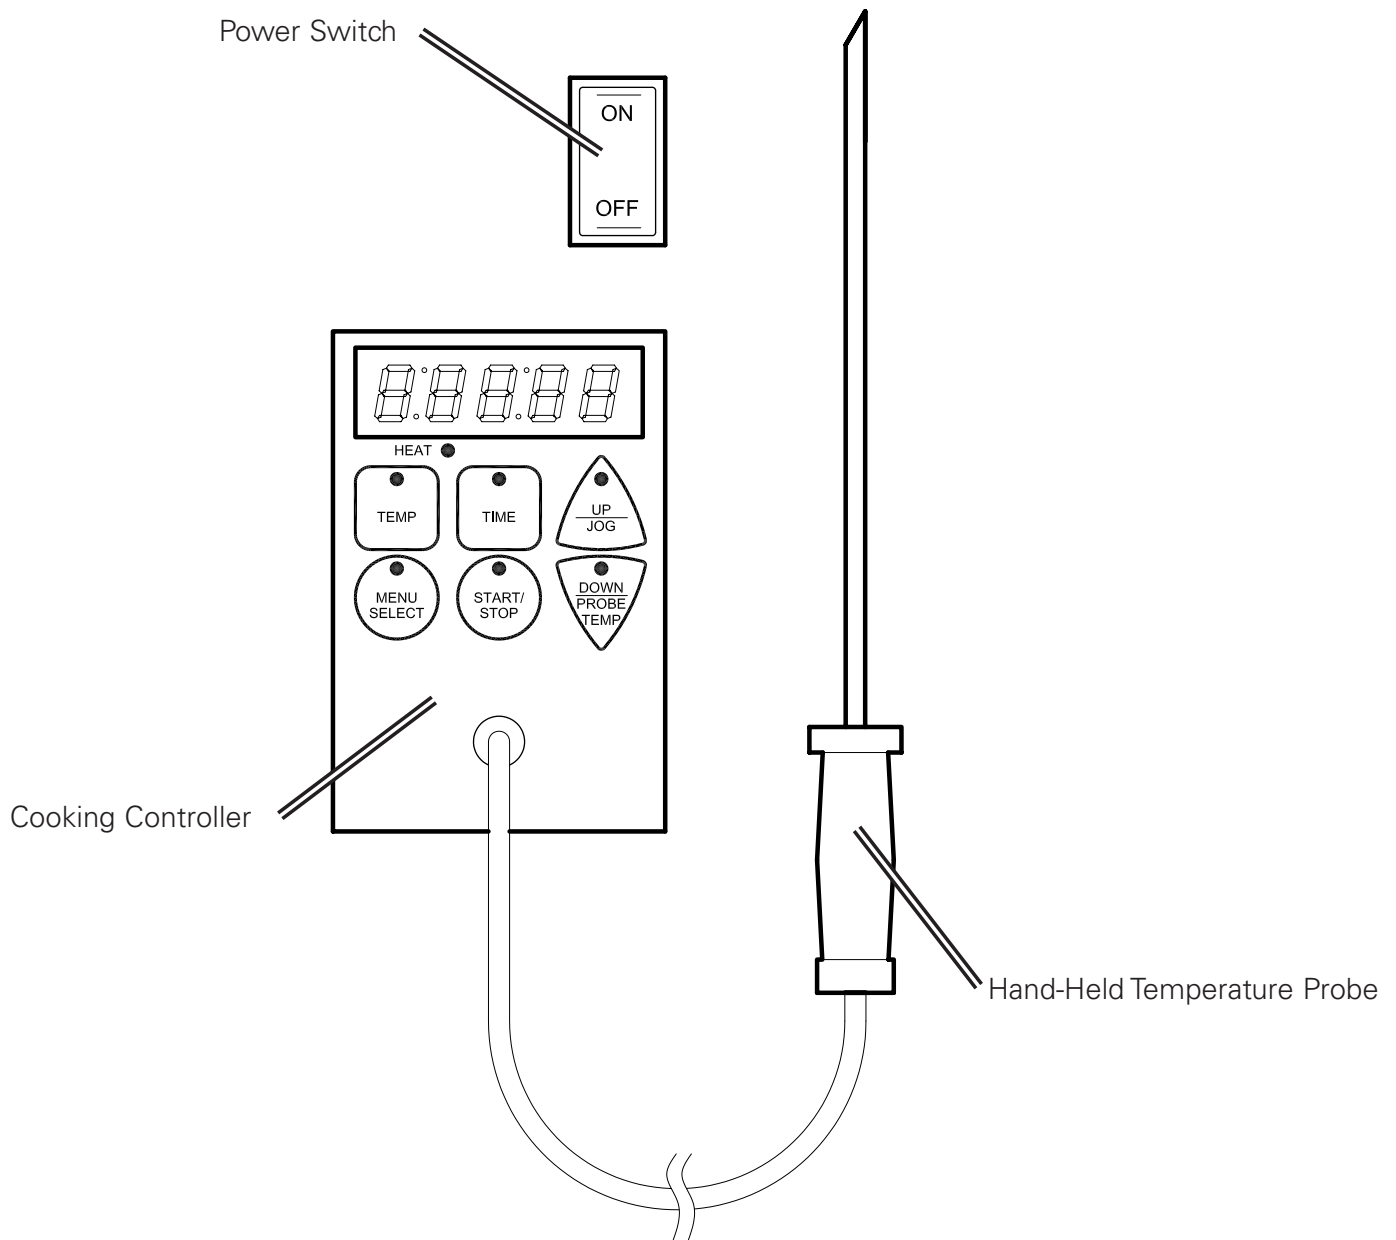

1-01. Cooking Controller buttons and functions

This section describes the basic function of each button on the controller.

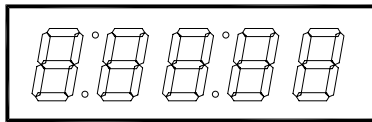

Used to display Times, Temperatures and other various messages.



Used for setting and display Cooking and Holding Temperature.




Used for setting and display Cooking and Holding Time.



Used to select menus 1-10.



Used for starting and stopping a menu (Cooking Cycle).

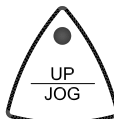

Used to increase Time and Temperature. Also used to rotate the internal spits when the door is open.




Used to decrease Time and Temperature. Also used to activate the Hand-Held Temperature Probe (when door is open).

1-02. Setting and running a Manual Menu

This section describes how to set and run a Manual Menu (A Non-Programmed Menu). The Manual Menu controls Cooking Temperature, Holding Temperature, and Cooking Time. The Manual Menu program will not be saved once the power is turned off.

Step 1

Power On

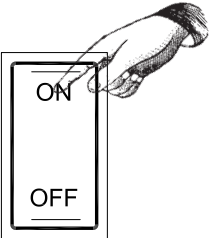

Step 2

Display reads



Step 3

Press to begin setting Cooking Temp



After pressing you have 5 seconds to proceed to the next step or the controller will return to the idle state.


Step 4

Display reads



Step 5

Press to Adjust Cooking Temperature

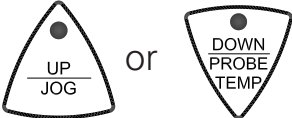

After adjusting you have 5 seconds to proceed to Step 7 or the controller will return to the idle state.

Step 6

Cooking Temp is displayed



Step 7

Press to begin setting Holding Temp



After pressing you have 5 seconds to proceed to Step 9 or the controller will return to the idle state.


Step 8

Display reads



Step 9

Press to Adjust Holding Temperature

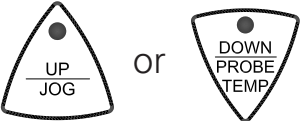

After adjusting you have 5 seconds to proceed to Step 11 or the controller will return to the idle state.

Step 10

Holding Temp is displayed



Step 11


Press to begin setting Cooking Time



After pressing you have 5 seconds to proceed to Step 12 or the controller will return to the idle state.

Step 12

Press to Adjust Cooking Time

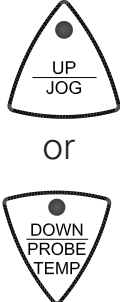

Continued next page

1-02. Setting and running a Manual Menu (Continued from previous page)

Step 13

Cooking Time is displayed



Step 14

Press to Start Pre-Heat



RT-5 begins Pre-Heating and the Spit Wheel begins rotating

Step 15

Display reads.



then displays the actual temperature inside the RT-5 until Pre-Heated

Step 16

Display reads.



Unit is now ready for product

Step 17

Load Product

See Section 4-08. for loading Spits.

See Section 4-09. for loading Baskets

Step 18

Press to Start Cooking Time



Step 19

Cooking Time begins counting down



Step 20

At the end of the Cooking Time, the unit cycles to the Holding Temperature

Display reads



Step 21

Holding Time begins counting.



Step 22

Open Door and Unload Product. (Note: When the door is open the Holding Time will pause.)

Step 23

Press to end the Manual Menu. (Note: if not pressed when the Door is closed the Holding Time will continue.)








Step 24

Power may be turned off or the Manual Menu may be re-started



1-03. Programming a Programmed Menu

This section describes how to program a Programmed Menu into the Cooking Controller. A programmed Menu contains Cooking Temperature, Holding Temperature and Cooking Time. The Menu is saved in the Controller, even when the unit is turned off. This function is useful when cooking various products at different cooking temperatures and times.. You may program up to 10 Programmed Menus in the RT-5.

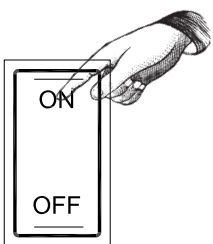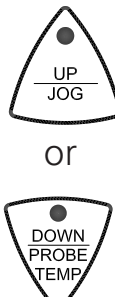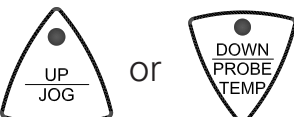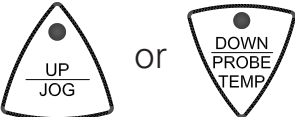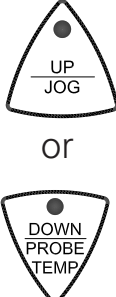
Step 1 Power On 	Step 2 Display reads 	Step 3 Press to begin programming 	Step 4 Press to find menu 1-10 to program 
Step 5 Press to select menu 	Step 6 Press to begin setting Cooking Temperature  After pressing you have 5 seconds to proceed to the next step or the controller will return to the idle state.	Step 7 Press to adjust Cooking Temperature  After adjusting you have 5 seconds to proceed to the next step or the controller will return to the idle state.	Step 8 Press to begin setting Holding Temperature  After pressing you have 5 seconds to proceed to the next step or the controller will return to the idle state.
Step 9 Press to Adjust Holding Temperature  After adjusting you have 5 seconds to proceed to the next step or the controller will return to the idle state.	Step 10 Press to begin setting Cooking Time  After pressing you have 5 seconds to proceed to the next step or the controller will return to the idle state.	Step 11 Press to Adjust Cooking Time 	Step 12 Press to save the program to the menu 

1-04. Running a Programmed Menu

This section describes how to run a Programmed Menu. If you have not programmed a menu please see Section 1-03.

Step 1

Power On

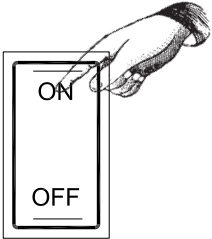

Step 2

Display reads




Step 3

Press



Step 4

Press to find menu 1-10

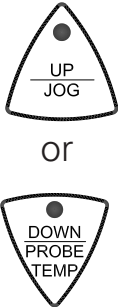

Step 5

Press to Start Pre-Heat



RT-5 begins Pre-Heating and the Spit Wheel begins rotating

Step 6

When Display reads



Open Door and Load Product

Step 7

Press to Start Cooking Time



Step 8

At the end of the Cooking Time, the unit cycles to the Holding Temp. Display reads



Step 9

Holding Time begins counting.



Step 10

Open Door and Unload Product.
(Note: When the door is open the Holding Time will pause.)


Step 11

Press to end the Menu. (Note: if not pressed when the Door is closed the Holding Time will continue.)




1-05. Cancelling a Manual or Programmed Menu

This section describes how to cancel a Manual or Programmed Menu.

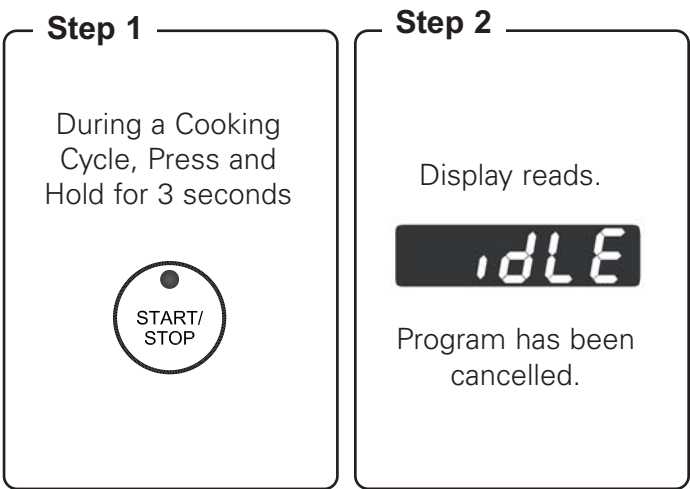

1-06. Viewing actual temperature in Rotisserie

This section describes how to view the actual temperature in the Rotisserie.

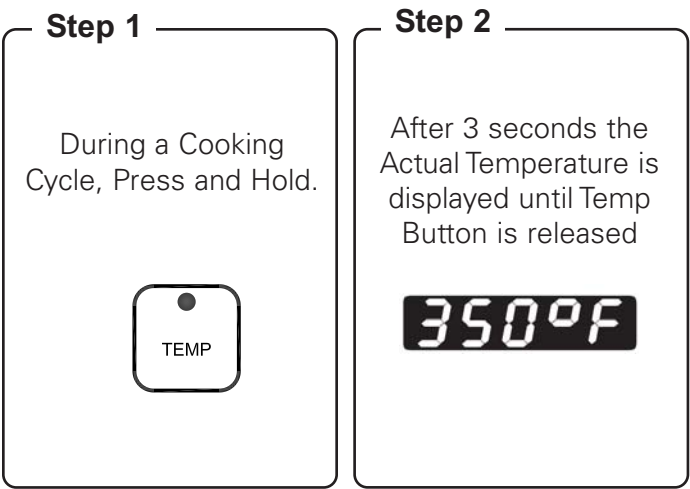

1-07. Using the Hand-Held Temperature Probe

This section describes how to use the Hand-Held Temperature Probe. The Probe is used to check the internal temperature of the product being cooked.

Step 1

The Rotisserie door must be open to enable the Probe Temp mode.

door

Step 2

Press




Step 3

Display reads

Probe

Step 4

Insert Probe into Product

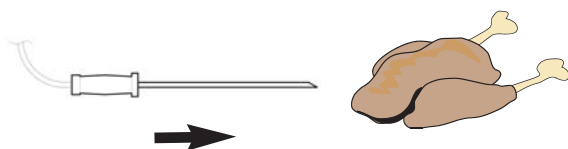


Step 5

Internal Temperature is display

170°F


Step 6

Remove Probe from Product

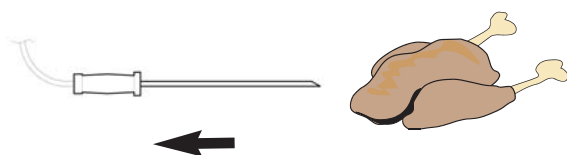

Step 7

The Jog button may be used to manually rotate the Spits or Baskets while the door is open.

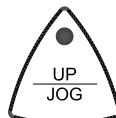

Step 8

Close the Rotisserie door. If running a Menu the Cooking Time will resume.



Giles Enterprises, Inc.

2750 Gunter Park Drive West • Montgomery, Al 36109 USA
(334) 272-1457 • Service Hotline 1-800-554-4537 (USA & Canada Only) • FAX (334) 272-3561 • www.gilesent.com

Form No. 63375 (Release date: 02/04/2005)(Rev B)(ECO0944)(CSY)