



Instruction Manual

Portion Pak Cheese Warmer and Warming Cabinet

Model No. 5588, 5888, 5588EX, 5888EX




GOLD MEDAL PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA



SAFETY PRECAUTIONS

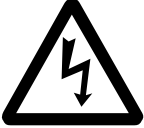	⚠ DANGER Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse any part of this equipment in water. Do NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing. 008GEND1112
	⚠ DANGER Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Any alterations to this equipment will void the warranty and may cause a dangerous condition. NEVER make alterations to this equipment. Read the Installation, Operating, and Maintenance Instructions thoroughly before installing, servicing, or operating this equipment. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle. 014GEND1112
	⚠ WARNING To avoid burns, do NOT touch heated surfaces. Do NOT place or leave objects in contact with heated surfaces. 009GHW1112
	⚠ WARNING ALWAYS wear safety glasses when servicing this equipment. 010GENW1112
	⚠ CAUTION Do NOT allow direct contact of this equipment by the public when used in food service locations. Only personnel trained and experienced in the equipment operation may operate this equipment. Carefully read all instructions before operation. 012GENC1112
	⚠ CAUTION This machine is NOT to be operated by minors. 007GENC0413

NOTE: Improvements are always being made to Gold Medal's equipment. This information may not be the latest available for your purposes. It is critical that you call Gold Medal's Technical Service Department at 1-800-543-0862 for any questions about your machine operations, replacement parts, or any service questions. *(Gold Medal Products Co. does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.)*

INSTALLATION INSTRUCTIONS

Inspection of Shipment

After unpacking, check thoroughly for any damage which may have occurred in transit. Claims should be filed immediately with the transportation company. The warranty does not cover damage that occurs in transit, or damage caused by abuse, or consequential damage due to the operation of this machine, since it is beyond our control.

Setup

Remove all packing material and tape before starting operation.

Electrical Requirements:

The following power supply must be provided:

5588: 120 Volts, 520 Watts, 60 Hz

5888: 120 Volts, 685 Watts, 60 Hz

5588EX: 230 Volts, 520 Watts, 50 Hz

5888EX: 230 Volts, 685 Watts, 50 Hz

	⚠ DANGER
	Machine must be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse any part of this equipment in water. Do NOT use excessive water when cleaning. Keep cord and plug off the ground and away from moisture. Always unplug the equipment before cleaning or servicing.

Your electrician must furnish sufficient power for proper machine operation. We recommend this equipment be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is Gold Medal Products Co.'s recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

Before You Plug In Machine

1. Make sure all machine switches are in the OFF position before plugging the equipment into the receptacle.
2. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
3. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
4. **DO NOT** use a grounded to un-grounded receptacle adapter.
5. Install the unit in a level position.



OPERATING INSTRUCTIONS

Controls and Their Functions

ON / OFF SWITCH - Energizes the Heat Element and turns the lighting on.



ON/OFF Switch

Operation Instructions

1. Place the cheese inside the warmer cabinet.
2. Allow cheese to pre-heat for 45-60 minutes before serving.
3. Do not re-heat cheese more than 7 times.




CARE AND CLEANING

1. Unplug the machine and clean it after use.
2. Make sure to clean all of the pans in order to sanitize them before each use.
3. Clean the outside of the unit with a soft cloth, soap and hot water.
4. Wipe the stainless steel parts with a clean cloth and cleaner designed for stainless steel, such as Gold Medal Watchdog Stainless Cleaner (Item No. 2088).

DO NOT use oven cleaners or abrasive materials as they will damage parts of the machine.

5. Ammonia cleaners will damage the plastic doors. Use only non-ammonia cleaners, such as Gold Medal Watchdog Glass Cleaner (Item No. 2588).

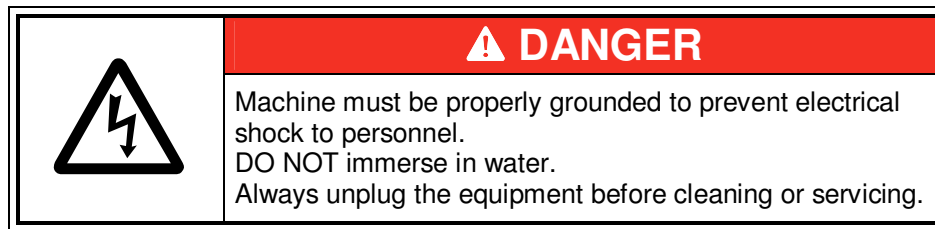

Good sanitation practice demands that all food preparation equipment be cleaned regularly. A clean looking, well-kept machine is one of the best ways of advertising your product.



REPLACING BROKEN GLASS

If you accidentally break a panel of glass, it can be replaced very easily. Gold Medal Products does not ship glass. It can be obtained from a local glass shop and always purchase tempered glass.

1. Remove all loose pieces of glass.
2. Remove all rigid glass channels from around the glass to be replaced. Set it aside as it must be reused.
3. Carefully remove the rest of broken glass.
4. Apply decals (if desired) to the new glass panel.
5. Slide rigid glass channels over the exposed sides and bottom of new glass panel.
6. Fasten new glass panel in machine with the existing glass strips. (On some units, the front and side glass slide under top and is then lowered into the bottom channel.)

Glass Dimensions

(Height/Width/Depth)

Front/Side Glass: 30" X 16 7/8" X 1/8 (3 pieces per unit)



MAINTENANCE INSTRUCTIONS



⚠ DANGER

Improper installation, adjustment, alteration, service, or maintenance can cause property damage, injury or death. Read the installation, Operating, and Maintenance Instructions thoroughly before installing or servicing this equipment.



⚠ DANGER

Do Not immerse the equipment in water. Unplug your machine before servicing.



⚠ WARNING

Adequate eye protection must be used when servicing this equipment to prevent eye injury.



⚠ CAUTION

THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.



ORDERING SPARE PARTS


1. Identify the needed part by checking it against the photos, illustrations, and/or parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model number, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807

Or, place orders by phone or online:


Phone: (800) 543-0862
(513) 769-7676
Fax: (800) 542-1496
(513) 769-8500
E-mail: info@gmpopcorn.com
Web Page: gmpopcorn.com

Cabinet Exterior – Front View

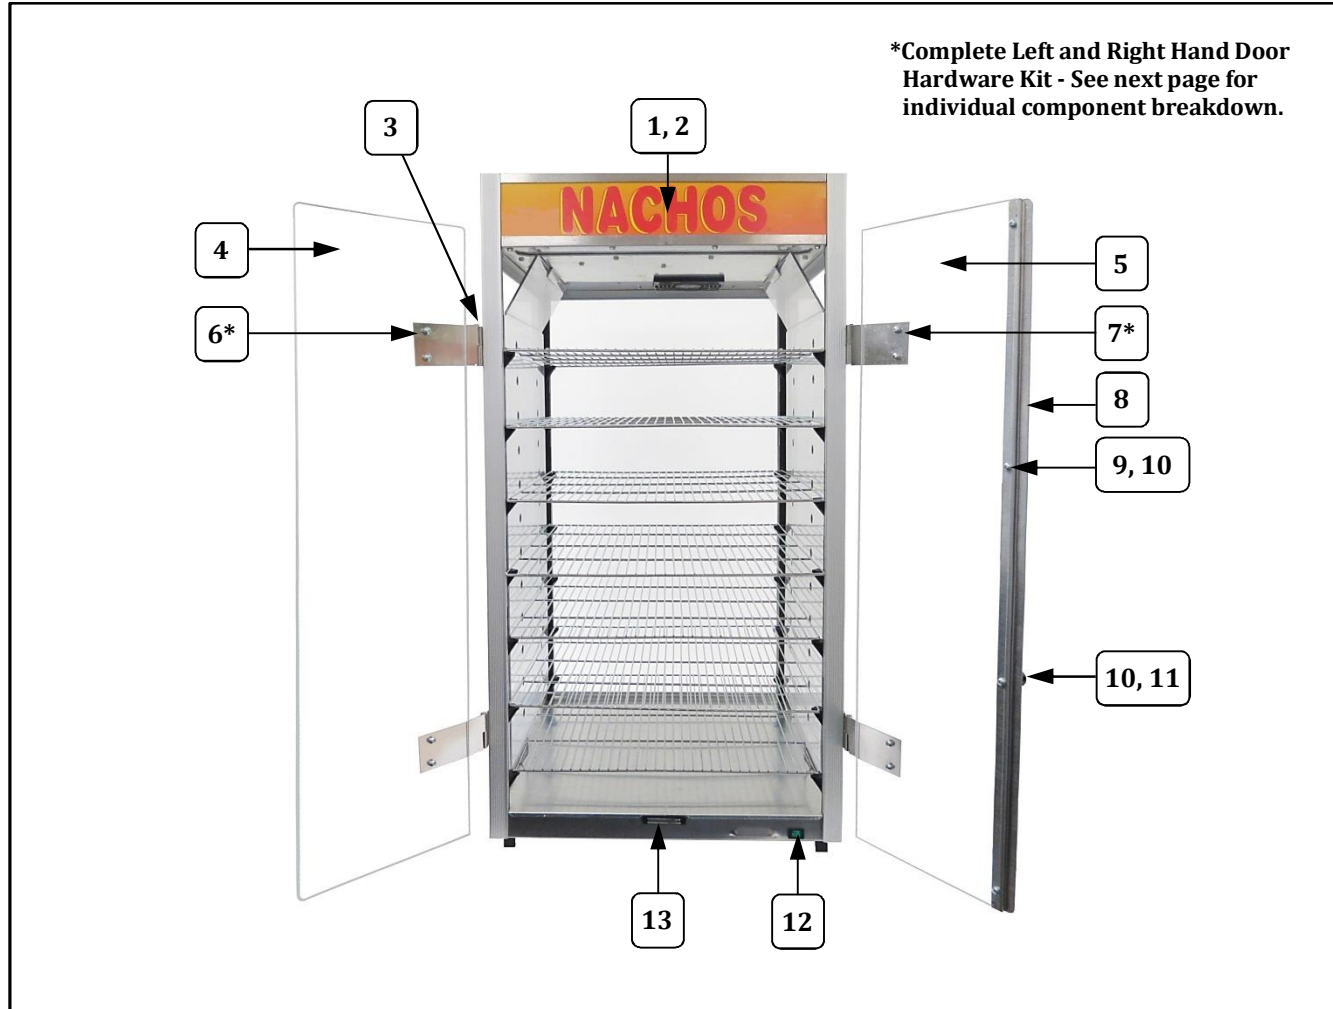

Item	Parts Description	Qty.	Part Number			
			5588	5888	5588EX	5888EX
1	NACHOS SIGN	1	74179		74179	
	HOT AND FRESH SIGN	1		74912		74912
2	SIGN COVER	1	74181	74181	74181	74181
3	8-32 X 3/8 SLT. HWH M/S (Frame Hinge Screws not included in Door Hardware Kit)	8	42044	42044	42044	42044
4	LEFT DOOR	1	74961	74961	74961	74961
5	RIGHT DOOR	1	74961R	74961R	74961R	74961R
6*	COMPLETE LH DOOR HARDWARE KIT *	1	47054	47054	47054	47054
7*	COMPLETE RH DOOR HARDWARE KIT *	1	47055	47055	47055	47055
8	DOOR SUPPORT	1	74673	74673	74673	74673
9	8-32 ACORN NUT	3	47702	47702	47702	47702
10	8-32 X 1/2 PH PAN	4	47124	47124	47124	47124
11	KNOB LID LIFT	1	47120	47120	47120	47120
12	DPST ROCKER SWITCH	1	42532	42532	42532	42532
12	MAGNETIC CATCH	1	47561	47561	47561	47561


Door Hardware Kits – Individual Component Breakdown

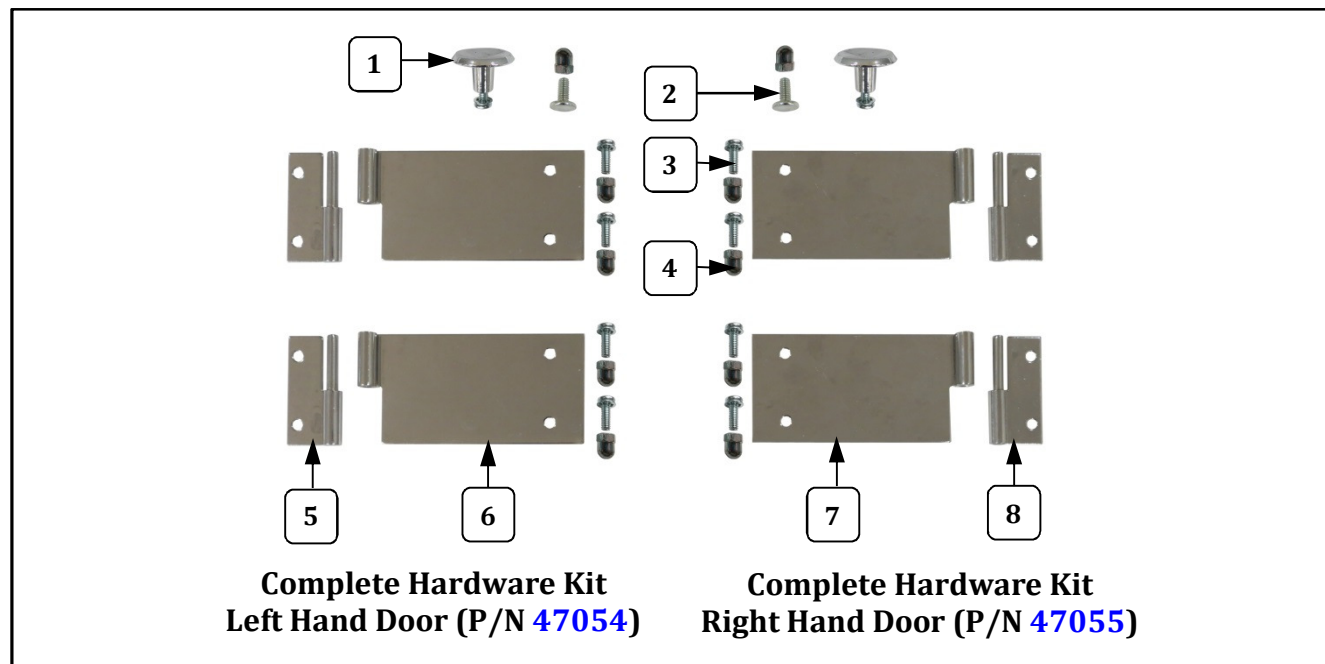

Item	Part Description	Qty.	Part Number	
			47054	47055
1	DOOR KNOB	1	41013	41013
2	TEE BOLT	1	75267	75267
3	8-32 X 1/2 SCREWS PH PAN W/SEMS	5	47124	47124
4	ACORN NUT #8-32	5	47702	47702
5	MALE HINGE SHORT LEFT	2	41349	
6	FEMALE HINGE LONG LEFT	2	41352	
7	FEMALE HINGE LONG RIGHT	2		41351
8	MALE HINGE SHORT RIGHT	2		41350




Cabinet Exterior – Bottom View

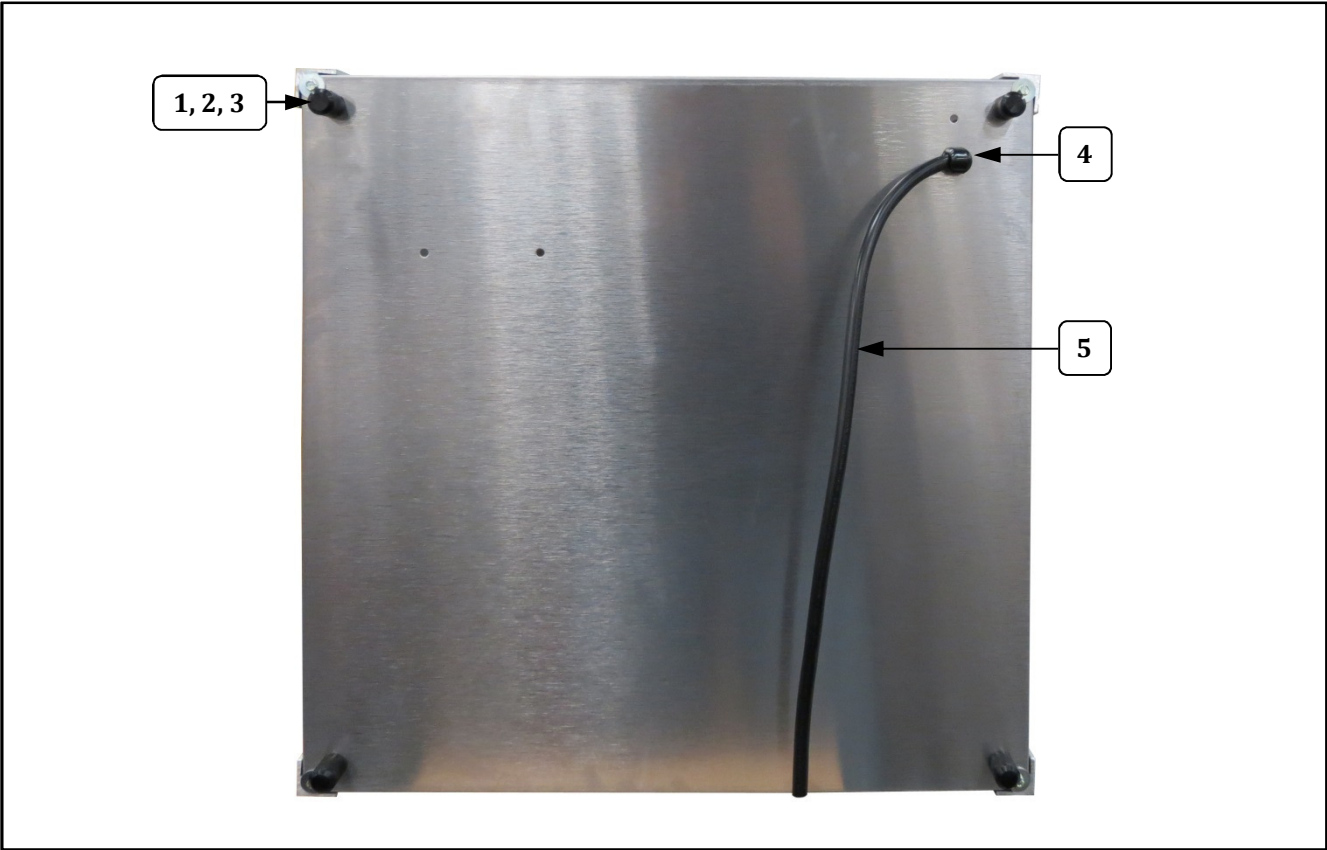

Item	Parts Description	Qty.	Part Number			
			5588	5888	5588EX	5888EX
1	GLIDE	4	47328	47328	47328	47328
2	CRUTCH TIP	4	49123	49123	49123	49123
3	10-24 X 3/4 HEX HEAD SCREW	4	41314	41314	41314	41314
4	SR-10-2 STRAIN RELIEF	1	87163	87163	87163	87163
5	LEAD-IN CORD 15 AMP PLUG	1	22038	22038		
	EXPORT POWER SUPPLY CORD	1			42369	42369




Cabinet Interior – Front View

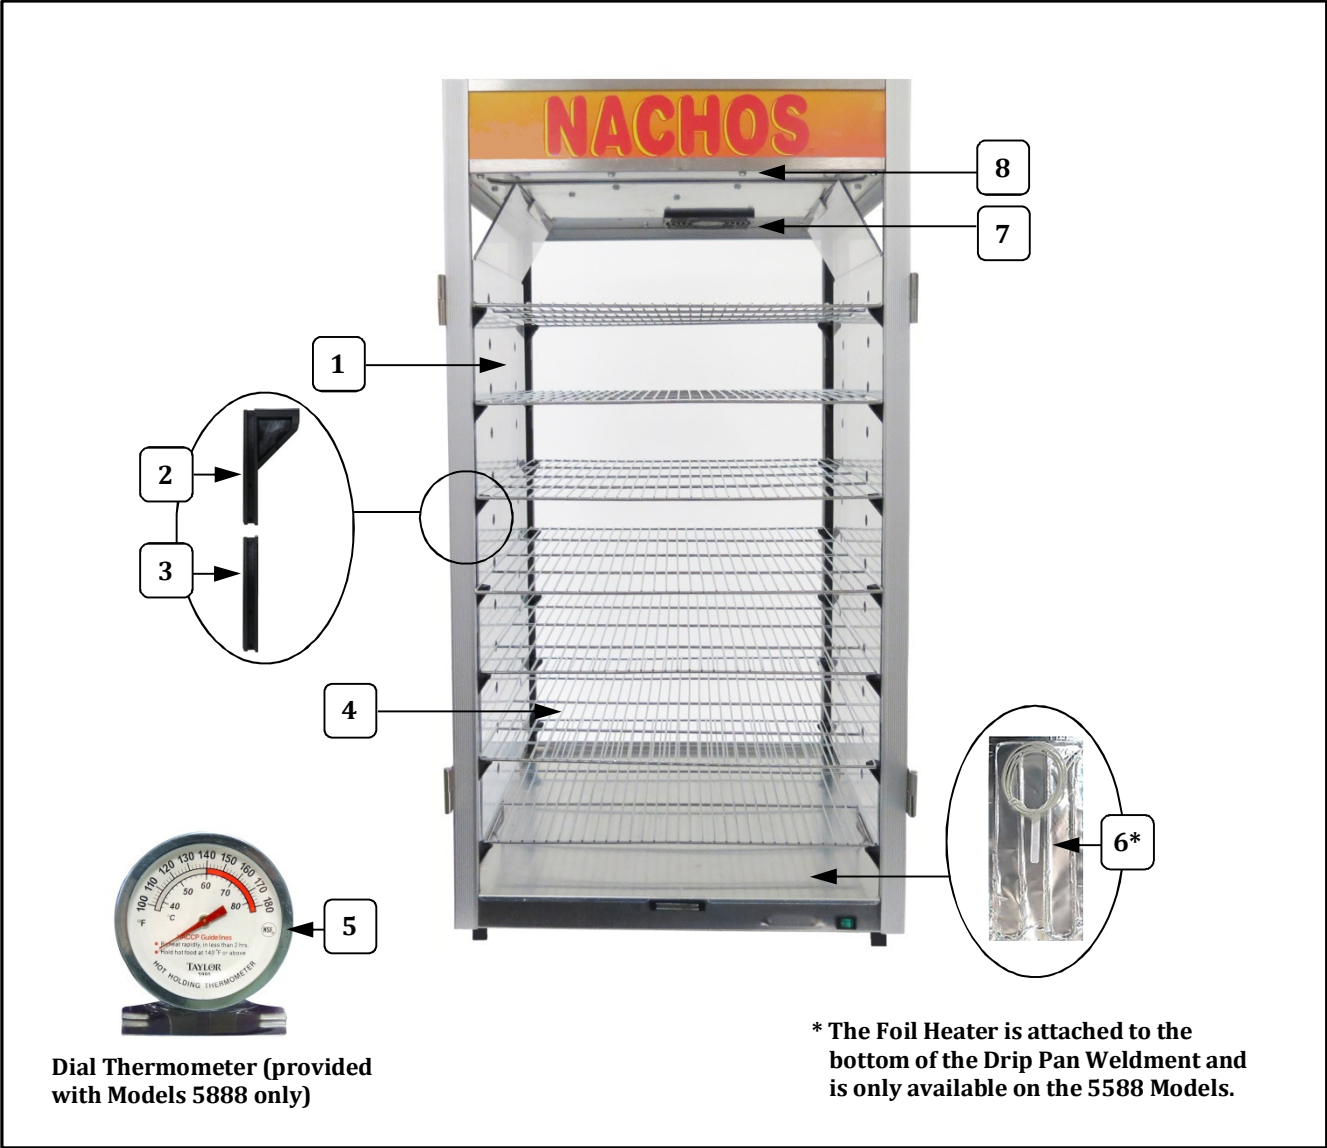

Item	Parts Description	Qty.	Part Number			
			5588	5888	5588EX	5888EX
1	AIR DUCT	2	17475	17475	17475	17475
2	RACK HOLDER	28	39899	39899	39899	39899
3	2 " GROOVE FILLER	28	39903	39903	39903	39903
4	5558 AND 5888 SHELF	7	17285	17285	17285	17285
5	DIAL THERMOMETER	1		47913		47913
6*	120 VOLT 20 WATT FOIL HEATER	1	40557			
	230 VOLT 20 WATT FOIL HEATER	1			40557EX	
7	FINGER GUARD	1	47200	47200	47200	47200
8	LIGHT TUBE COVER	1	74788	74788	74788	74788




Motor Plate Components

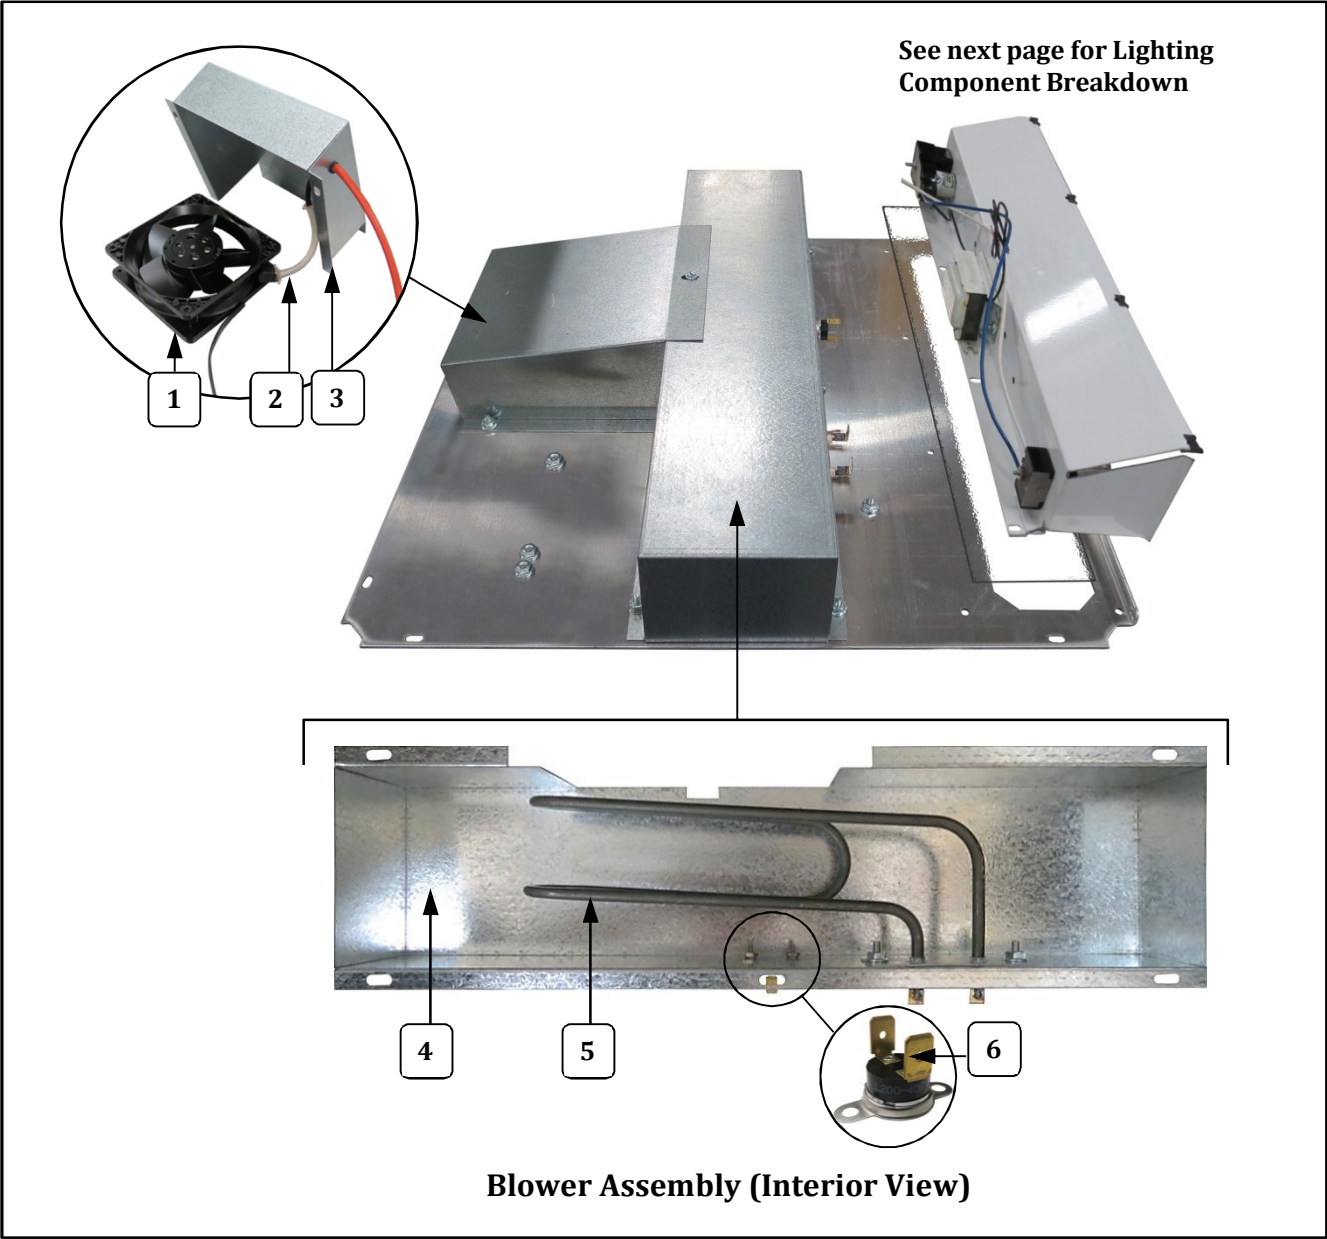

Item	Part Description	Qty.	Part Number			
			5588	5888	5588EX	5888EX
1	AXIAL FAN	1	40721	40721		
	230 VOLT AXIAL FAN				40721EX	40721EX
2	EXHAUST BLOWER PLUG & CORD	1	47199	47199	47199	47199
3	BLOWER WRAPPER	1	74738	74738	74738	74738
4	BLOWER BOX	1	74736	74736	74736	74736
5	HEAT ELEMENT 475W 120V	1	74720			
	HEAT ELEMENT 475W 230V	1			74720EX	
	HEAT ELEMENT 660W 120V	1		55235		
	HEAT ELEMENT 660W 230V	1				55235EX
6	THERMOSTAT, 260F	1	74748	74748	74748	74748



Lighting Component Breakdown

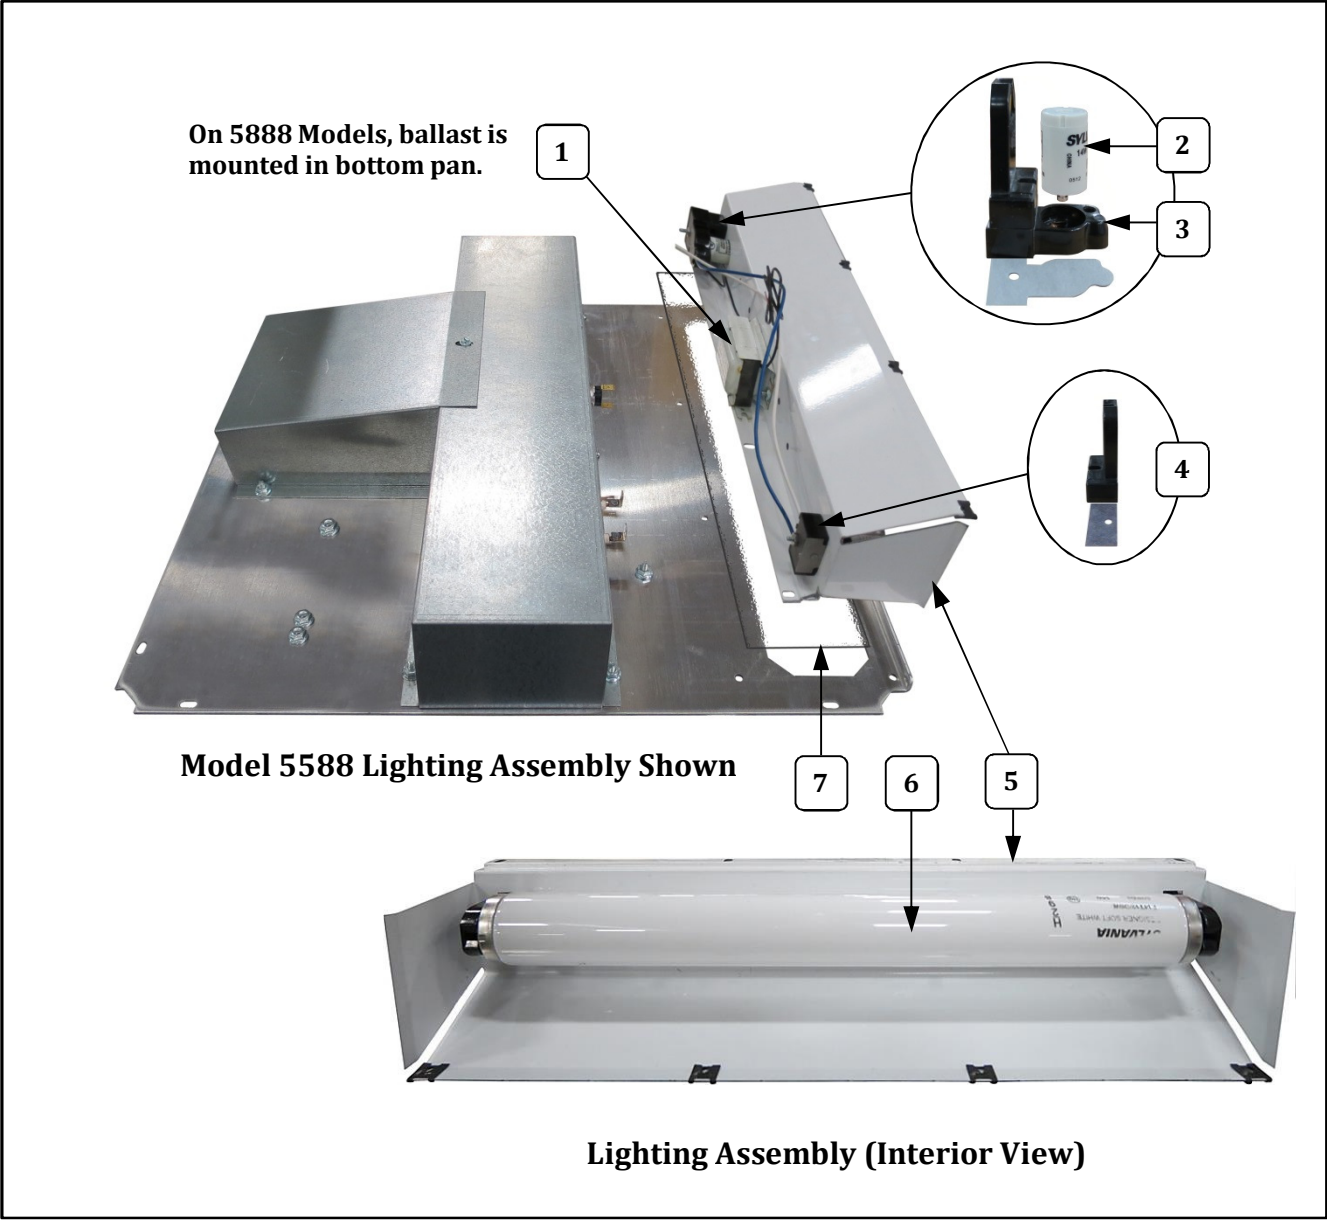


Item	Part Description	Qty.	Part Number			
			5588	5888	5588EX	5888EX
1	LIGHT BALLAST 120V 60HZ	1	41022	41022		
	LIGHT BALLAST 240V 50Hz	1			41722	41722
2	LIGHT STARTER	1	41023	41023	41023	41023
3	LIGHT TUBE HOLDER - STARTER	1	41021	41021	41021	41021
4	LIGHT TUBE HOLDER	1	41020	41020	41020	41020
5	LIGHT DEFLECTOR	1	74787	74787	74787	74787
6	LIGHT TUBE	1	41057	41057	41057	41057
7	LIGHT TUBE COVER	1	74788	74788	74788	74788




WIRING DIAGRAM

Model No. 5588

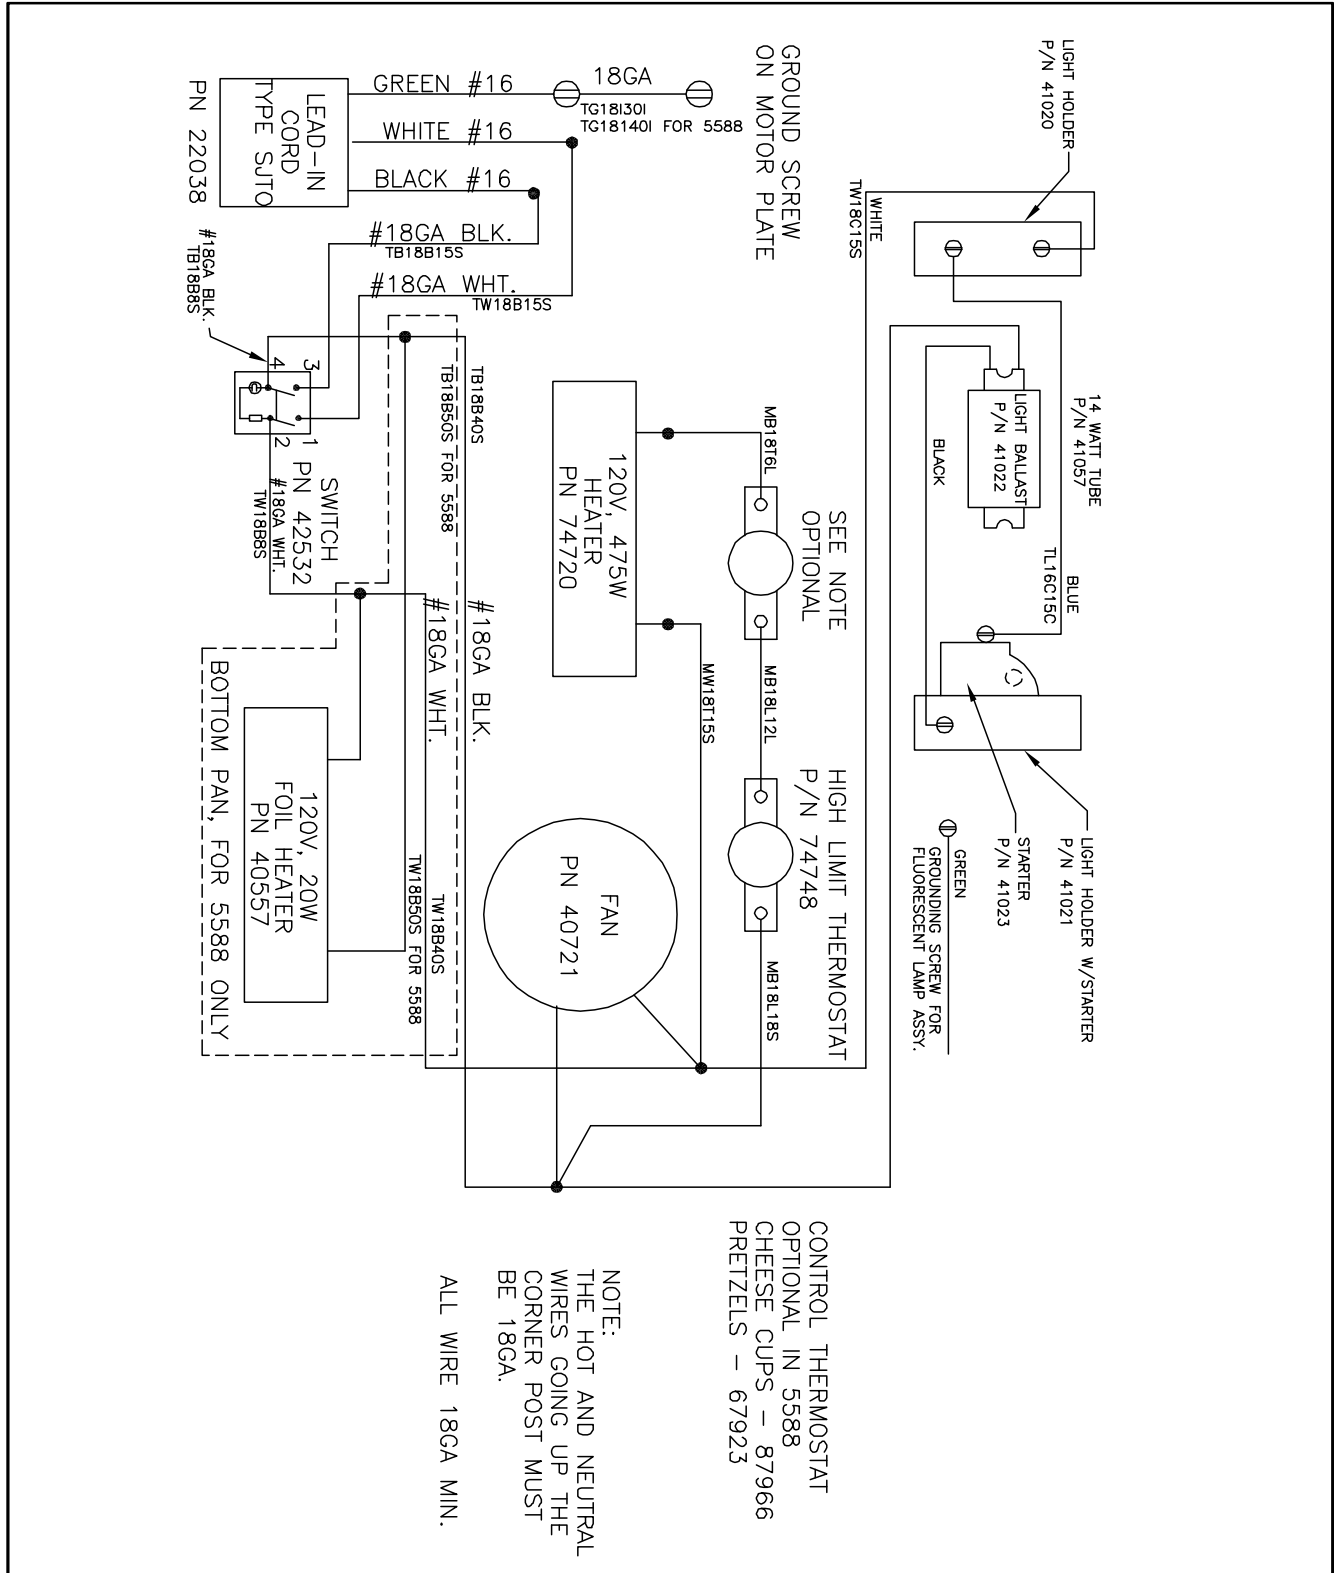




Model No. 5888

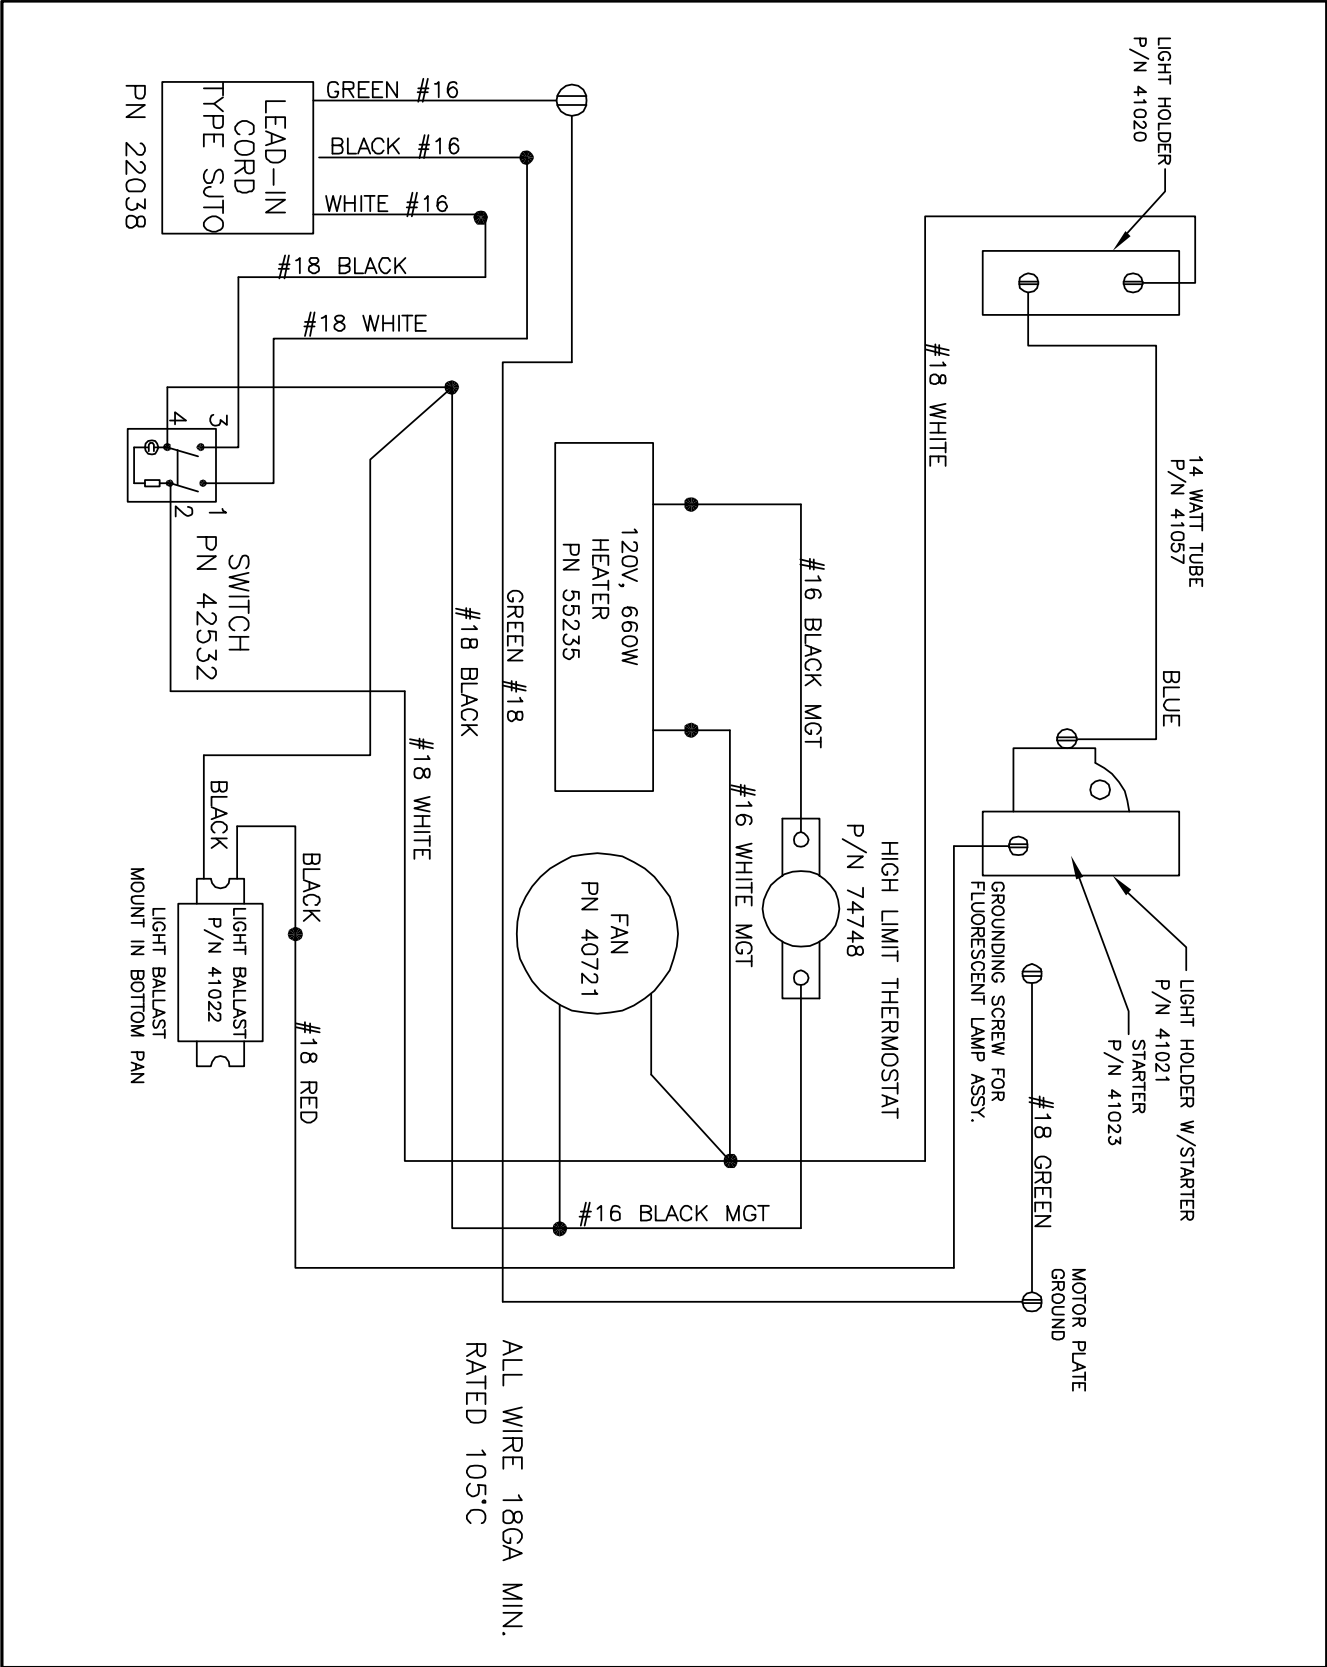




Model No. 5588EX

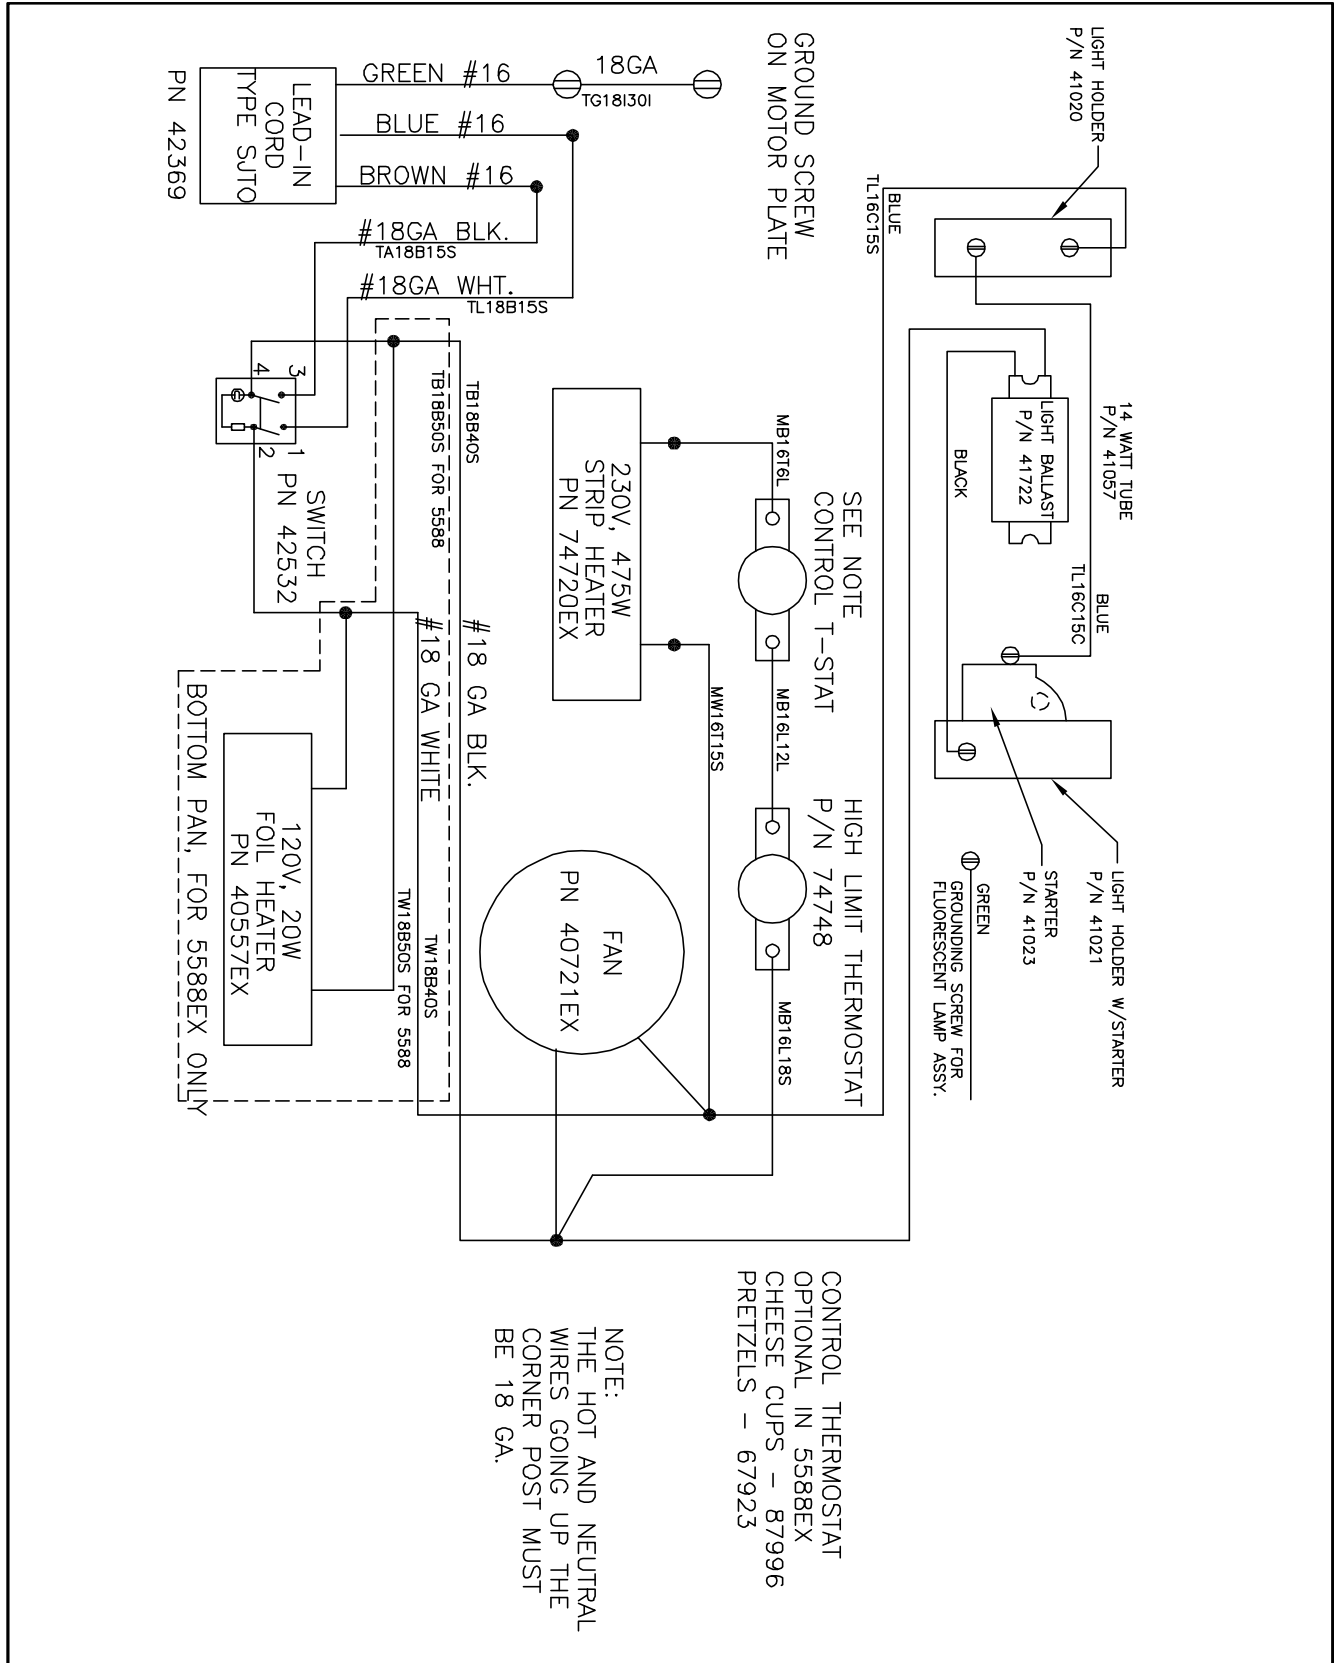



Model No. 5888EX

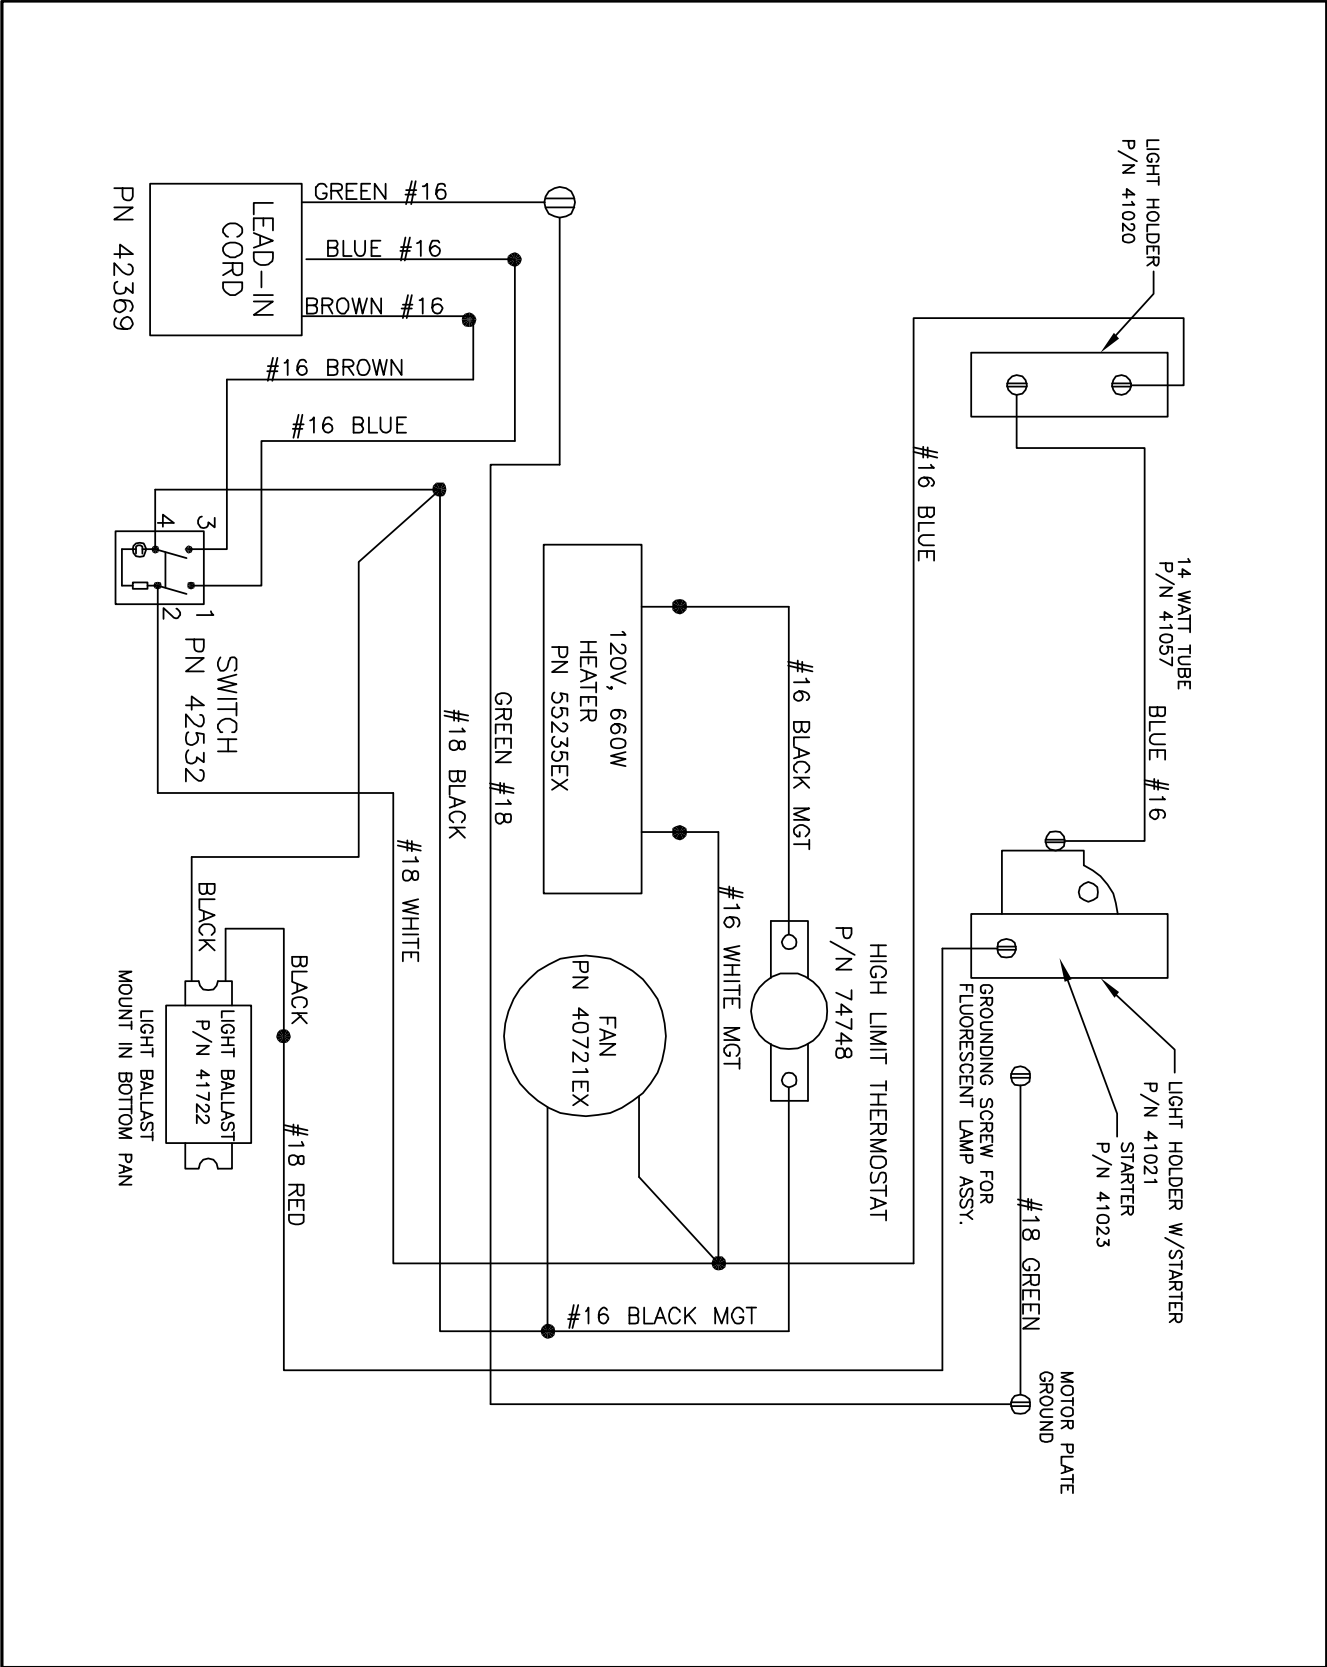



WARRANTY

Gold Medal Products Co. warrants to the original purchaser each item of its manufacture to be free of defects in workmanship and material under normal use and service. Gold Medal Products Co.'s obligation under this warranty is limited solely to repairing or replacing parts, f.o.b. Cincinnati, Ohio, which in its judgment are defective in workmanship or material and which are returned, freight prepaid, to its Cincinnati, Ohio factory or other designated point. Except for "Perishable Parts" on specific machines, the above warranty applies for a period of two (2) years from the date of original sale to the original purchaser of equipment when recommended operating instructions and maintenance procedures have been followed. These are packed with the machine. Parts warranty is two (2) years, labor is six (6) months.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. In no event shall Gold Medal Products Co. be liable for special, incidental or consequential damages. No claim under this warranty will be honored if the equipment covered has been misused, neglected, damaged in transit, or has been tampered with or changed in any way. No claim under this warranty shall be honored in the event that components in the unit at the time of the claim were not supplied or approved by Gold Medal Products Co. This warranty is effective only when electrical items have been properly attached to city utility lines only at proper voltages. This warranty is not transferable without the written consent of Gold Medal Products Co.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS CO., or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS CO. AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL[®] PRODUCTS CO.

10700 Medallion Drive, Cincinnati, Ohio 45241-4807 USA

gmpopcorn.com

Phone: (800) 543-0862 Fax: (800) 542-1496
(513) 769-7676 (513) 769-8500