

INSTALLATION AND OPERATING INSTRUCTIONS

CHECKING SHIPMENT


Unpack all cartons and check thoroughly for any damage which might have occurred in transit. Damage claims should be filed immediately with the transportation company.

ELECTRICAL REQUIREMENTS

2388: 120V, 60Hz, 1525W

2388EX: 230V, 50Hz 1525W

If in doubt, your electrician must furnish sufficient power for proper machine operation. We recommend this popper be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is **Gold Medal®** Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

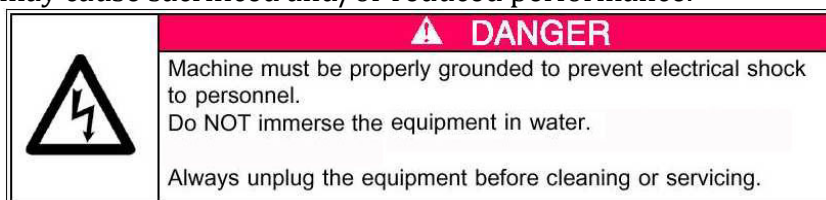

INSTALLATION


Your *Econo 8 Popper* was adjusted, inspected, and tested before it left the factory. Remove all packing before setting up your new *Econo 8*. Hang the kettle on the hanger assembly attached to the ceiling of your *Econo 8*. Finally, make sure to plug the power cord into the power receptacle located on the ceiling of your popper.

CONTROLS AND THEIR FUNCTIONS

LIGHT AND WARMER SWITCH – Turns on the heat to the bottom corn pan and heat light.

KETTLE MOTOR SWITCH – Turns on the motor which drives kettle agitator shaft.

KETTLE HEAT SWITCH – Turns on the heat element

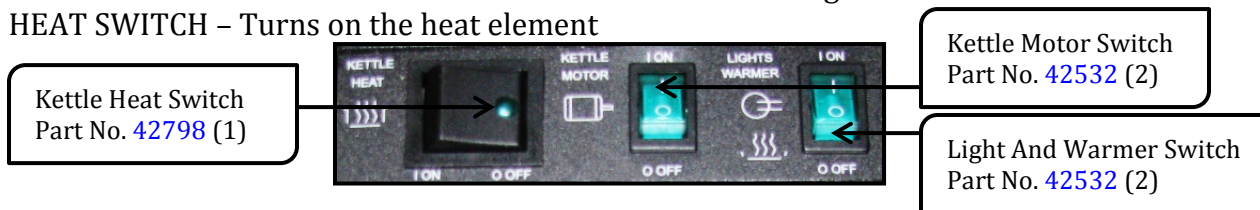

AMOUNT OF POPCORN AND OIL

Your new *Econo 8* is equipped with a *corn measuring cup* (Part No.47147).

Corn charge – 8 oz.

Oil charge – 2.4 oz.

Flavacol – 1 1/2 teaspoon

POPPING INSTRUCTIONS

1. Turn *Kettle Heat* and *Kettle Motor* switch on.
2. Make a test pop by putting 3 kernels of corn and 1 oz. (30 ml) of oil into the kettle.
3. When the 3 kernels have popped, load the kettle with corn and oil charge.
4. When corn has popped, dump the kettle.
5. Repeat cycle starting with step number 3 above; always pop 3-5 batches for best popcorn.

INSTALLATION AND OPERATING INSTRUCTIONS

CHECKING SHIPMENT


Unpack all cartons and check thoroughly for any damage which might have occurred in transit. Damage claims should be filed immediately with the transportation company.

ELECTRICAL REQUIREMENTS

2388: 120V, 60Hz, 1525W

2388EX: 230V, 50Hz 1525W

If in doubt, your electrician must furnish sufficient power for proper machine operation. We recommend this popper be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is **Gold Medal®** Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

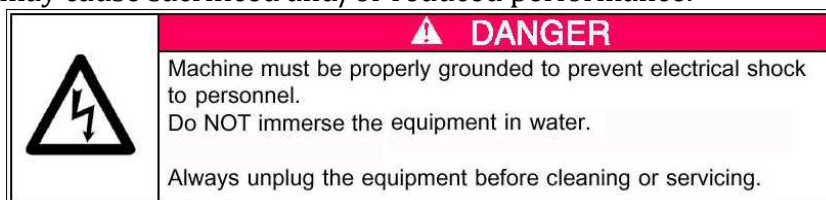

INSTALLATION


Your *Econo 8 Popper* was adjusted, inspected, and tested before it left the factory. Remove all packing before setting up your new *Econo 8*. Hang the kettle on the hanger assembly attached to the ceiling of your *Econo 8*. Finally, make sure to plug the power cord into the power receptacle located on the ceiling of your popper.

CONTROLS AND THEIR FUNCTIONS

LIGHT AND WARMER SWITCH – Turns on the heat to the bottom corn pan and heat light.

KETTLE MOTOR SWITCH – Turns on the motor which drives kettle agitator shaft.

KETTLE HEAT SWITCH – Turns on the heat element

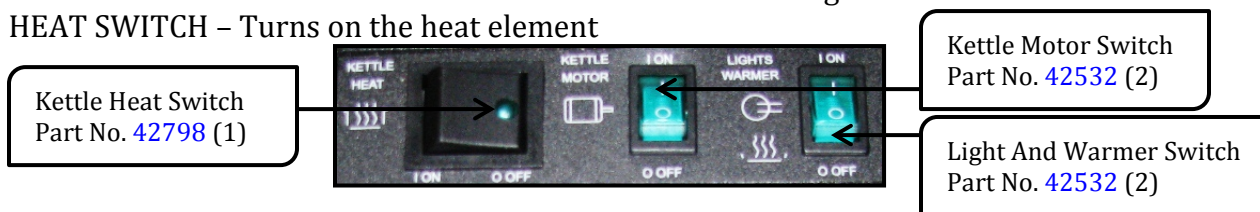

AMOUNT OF POPCORN AND OIL

Your new *Econo 8* is equipped with a *corn measuring cup* (Part No.47147).

Corn charge – 8 oz.

Oil charge – 2.4 oz.

Flavacol – 1 1/2 teaspoon

POPPING INSTRUCTIONS

1. Turn *Kettle Heat* and *Kettle Motor* switch on.
2. Make a test pop by putting 3 kernels of corn and 1 oz. (30 ml) of oil into the kettle.
3. When the 3 kernels have popped, load the kettle with corn and oil charge.
4. When corn has popped, dump the kettle.
5. Repeat cycle starting with step number 3 above; always pop 3-5 batches for best popcorn.

INSTALLATION AND OPERATING INSTRUCTIONS

CHECKING SHIPMENT


Unpack all cartons and check thoroughly for any damage which might have occurred in transit. Damage claims should be filed immediately with the transportation company.

ELECTRICAL REQUIREMENTS

2388: 120V, 60Hz, 1525W

2388EX: 230V, 50Hz 1525W

If in doubt, your electrician must furnish sufficient power for proper machine operation. We recommend this popper be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is **Gold Medal®** Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

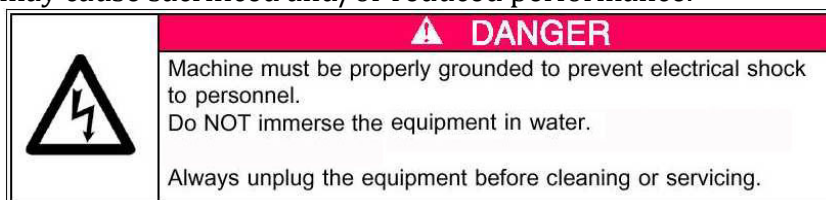

INSTALLATION


Your *Econo 8 Popper* was adjusted, inspected, and tested before it left the factory. Remove all packing before setting up your new *Econo 8*. Hang the kettle on the hanger assembly attached to the ceiling of your *Econo 8*. Finally, make sure to plug the power cord into the power receptacle located on the ceiling of your popper.

CONTROLS AND THEIR FUNCTIONS

LIGHT AND WARMER SWITCH – Turns on the heat to the bottom corn pan and heat light.

KETTLE MOTOR SWITCH – Turns on the motor which drives kettle agitator shaft.

KETTLE HEAT SWITCH – Turns on the heat element

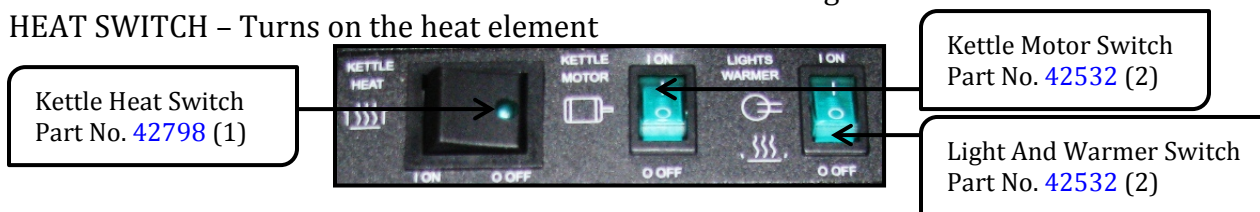

AMOUNT OF POPCORN AND OIL

Your new *Econo 8* is equipped with a *corn measuring cup* (Part No.47147).

Corn charge – 8 oz.

Oil charge – 2.4 oz.

Flavacol – 1 1/2 teaspoon

POPPING INSTRUCTIONS

1. Turn *Kettle Heat* and *Kettle Motor* switch on.
2. Make a test pop by putting 3 kernels of corn and 1 oz. (30 ml) of oil into the kettle.
3. When the 3 kernels have popped, load the kettle with corn and oil charge.
4. When corn has popped, dump the kettle.
5. Repeat cycle starting with step number 3 above; always pop 3-5 batches for best popcorn.

INSTALLATION AND OPERATING INSTRUCTIONS

CHECKING SHIPMENT


Unpack all cartons and check thoroughly for any damage which might have occurred in transit. Damage claims should be filed immediately with the transportation company.

ELECTRICAL REQUIREMENTS

2388: 120V, 60Hz, 1525W

2388EX: 230V, 50Hz 1525W

If in doubt, your electrician must furnish sufficient power for proper machine operation. We recommend this popper be on a dedicated and protected circuit. Failure to wire properly will void the warranty and may result in damage to the machine. It is **Gold Medal®** Products Company's recommendation that this machine be plugged directly into a wall outlet. The use of extension cords is not recommended due to safety concerns, and may cause sacrificed and/or reduced performance.

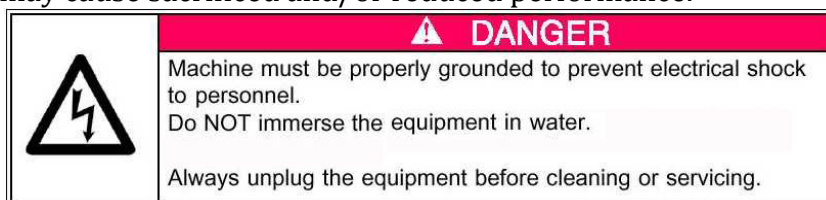

INSTALLATION


Your *Econo 8 Popper* was adjusted, inspected, and tested before it left the factory. Remove all packing before setting up your new *Econo 8*. Hang the kettle on the hanger assembly attached to the ceiling of your *Econo 8*. Finally, make sure to plug the power cord into the power receptacle located on the ceiling of your popper.

CONTROLS AND THEIR FUNCTIONS

LIGHT AND WARMER SWITCH – Turns on the heat to the bottom corn pan and heat light.

KETTLE MOTOR SWITCH – Turns on the motor which drives kettle agitator shaft.

KETTLE HEAT SWITCH – Turns on the heat element

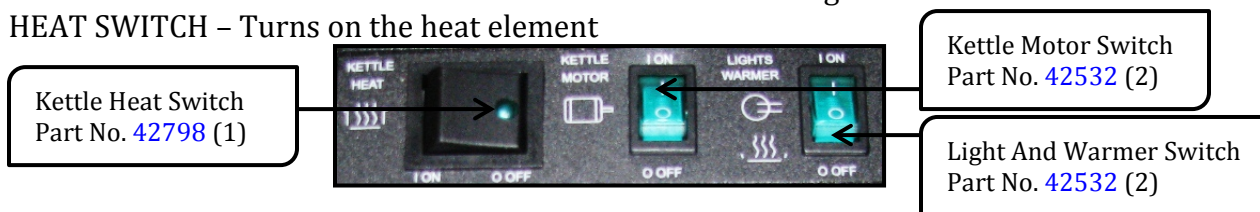

AMOUNT OF POPCORN AND OIL

Your new *Econo 8* is equipped with a *corn measuring cup* (Part No.47147).

Corn charge – 8 oz.

Oil charge – 2.4 oz.

Flavacol – 1 1/2 teaspoon

POPPING INSTRUCTIONS

1. Turn *Kettle Heat* and *Kettle Motor* switch on.
2. Make a test pop by putting 3 kernels of corn and 1 oz. (30 ml) of oil into the kettle.
3. When the 3 kernels have popped, load the kettle with corn and oil charge.
4. When corn has popped, dump the kettle.
5. Repeat cycle starting with step number 3 above; always pop 3-5 batches for best popcorn.



ORDERING SPARE PARTS

1. Identify the worn or broken part by checking it with the illustrations and parts list.
2. When ordering parts, include part number, part name, and quantity required.
3. Include your model name and machine serial number (found on nameplate) with your order.
4. Address orders to:

Parts Department
Gold Medal® Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807


Or place orders at:

(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
www.gmpopcorn.com




KETTLE BREAKDOWN

Part No. 49472N, 49472EXN

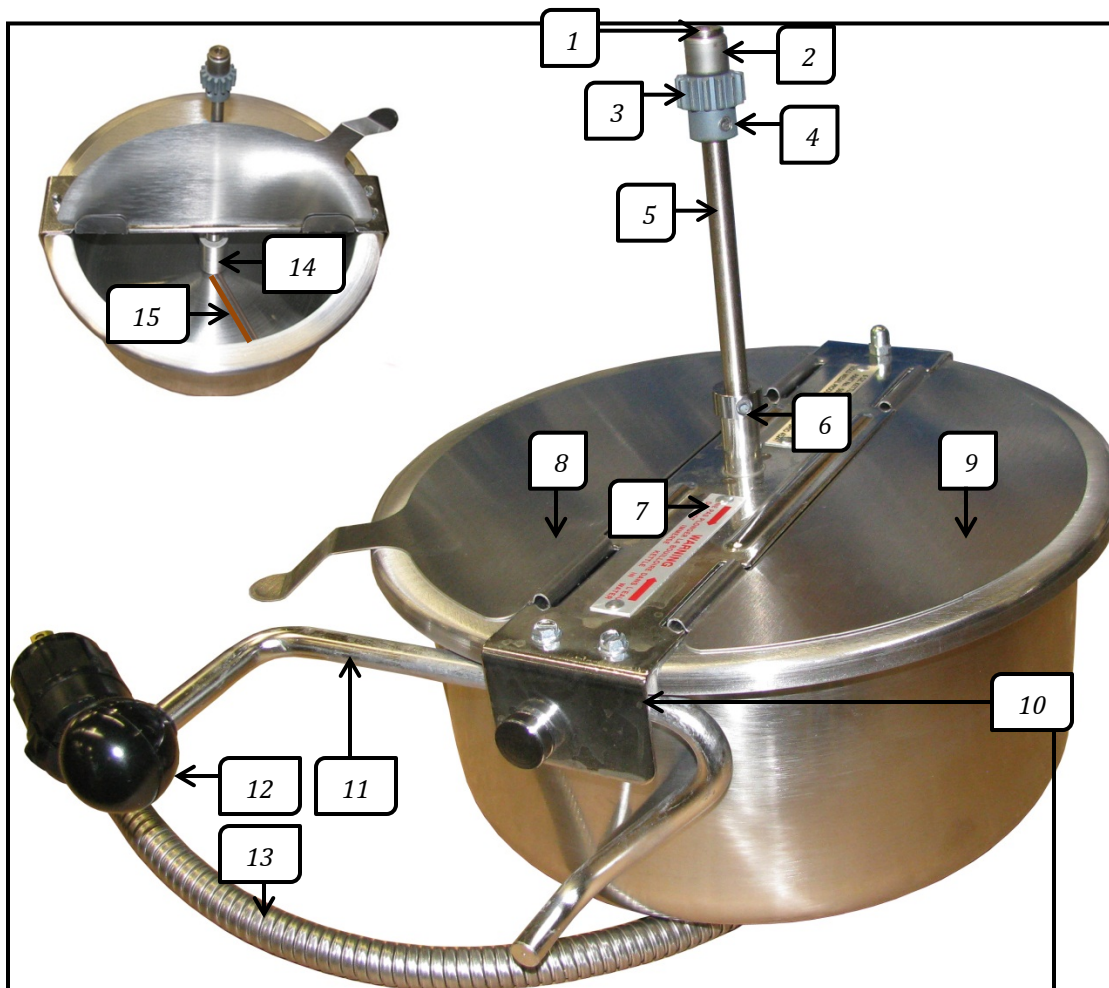


ITEM	PART NO.	MODEL(S)	PART NAME	QTY.
1	43434	All	Agitator Bearing Hub	1
2	47106	All	Needle Bearing	1
3	47060	All	Spur Gear	1
4	41742	All	#10-32x3/16 Set Screw	3
5	69710	All	8 Oz Agitator Shaft	1
6	46649	All	5/16 ID 5/8 OD Set Collar	2
7	49907N	2388	Kettle Crossbar Assy.	1
	49907EXN	2388EX	Kettle Crossbar Assy.	1
8	49017	All	Front Lid With Lifter	1
9	49016	All	Rear Kettle Lid	1
10	49362	All	Spacer, Dump Handle	1
11	49314	All	RH Dump Handle	1
12	47110	All	Knob Dump Handle	1
13	49328	2388	Kettle Lead Assy.	1
	49490	2388EX	Export Kettle Lead Assy.	1
14	69715	All	Agitator Weight	1
15	69714	All	Stir Rod	1

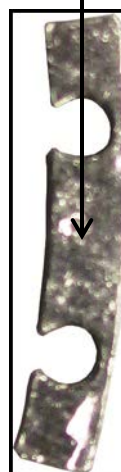


KETTLE BREAKDOWN

Part No. 49472N, 49472EXN

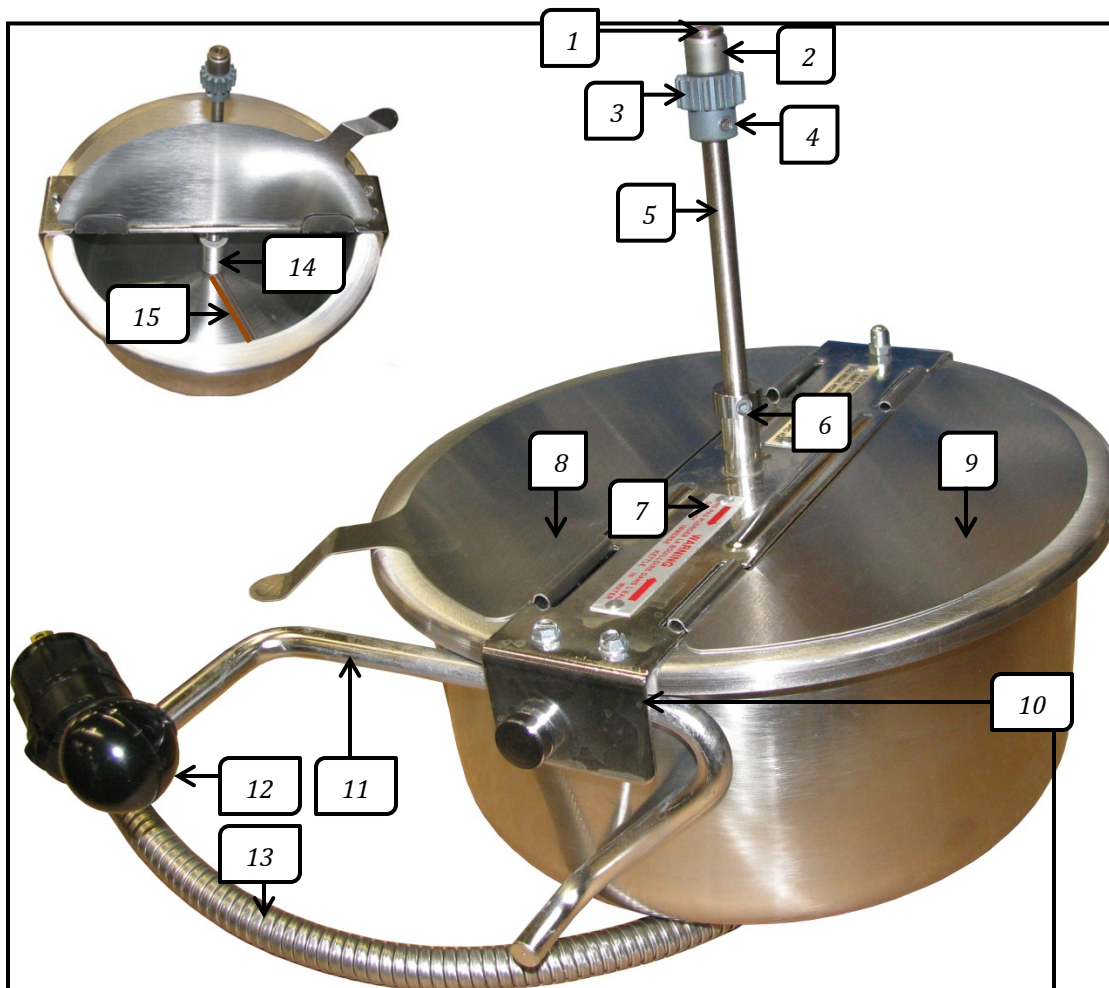


ITEM	PART NO.	MODEL(S)	PART NAME	QTY.
1	43434	All	Agitator Bearing Hub	1
2	47106	All	Needle Bearing	1
3	47060	All	Spur Gear	1
4	41742	All	#10-32x3/16 Set Screw	3
5	69710	All	8 Oz Agitator Shaft	1
6	46649	All	5/16 ID 5/8 OD Set Collar	2
7	49907N	2388	Kettle Crossbar Assy.	1
	49907EXN	2388EX	Kettle Crossbar Assy.	1
8	49017	All	Front Lid With Lifter	1
9	49016	All	Rear Kettle Lid	1
10	49362	All	Spacer, Dump Handle	1
11	49314	All	RH Dump Handle	1
12	47110	All	Knob Dump Handle	1
13	49328	2388	Kettle Lead Assy.	1
	49490	2388EX	Export Kettle Lead Assy.	1
14	69715	All	Agitator Weight	1
15	69714	All	Stir Rod	1

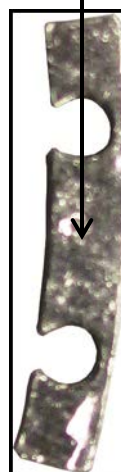


KETTLE BREAKDOWN

Part No. 49472N, 49472EXN

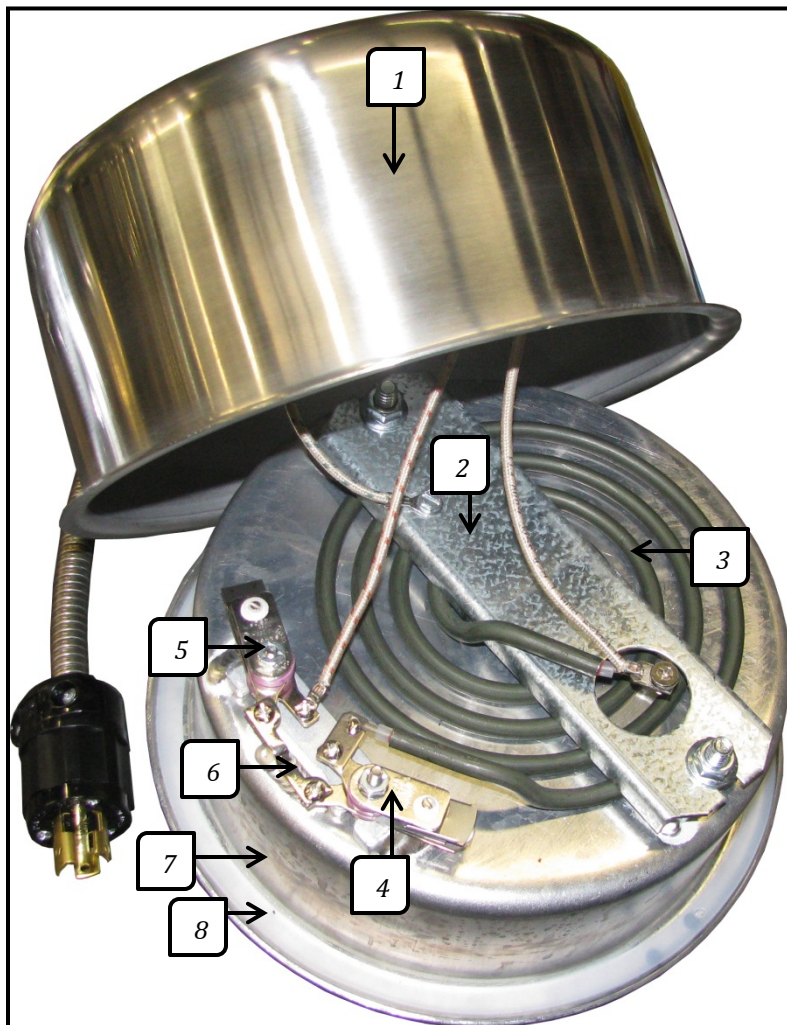

*Domestic Model No. 49472N

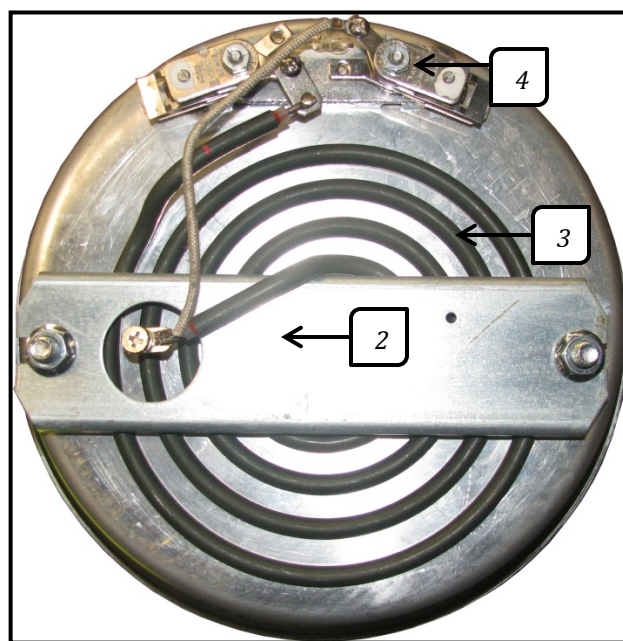


*Export Model No. 49472EXN


ITEM	PART NO.	MODEL(S)	PART NAME	QTY.
1	49431	All	Kettle Shell	1
2	49532	All	Element Clamp	1
3	49529	2388	120V~, 1125W Heat Element	1
	49578	2388EX	230V~, 1125W Heat Element	1
4	76089	2388EX	450 °F Thermostat	2
	76089	2388	450°F Thermostat	1
5	76702	2388	525 °F Thermostat	1
6	47193	2388	Thermostat Shunt Bar	1
7	49596	All	Clad Kettle Weld Assy.	1
8	49368	All	Kettle Gasket	1

KETTLE BREAKDOWN

Part No. 49472N, 49472EXN

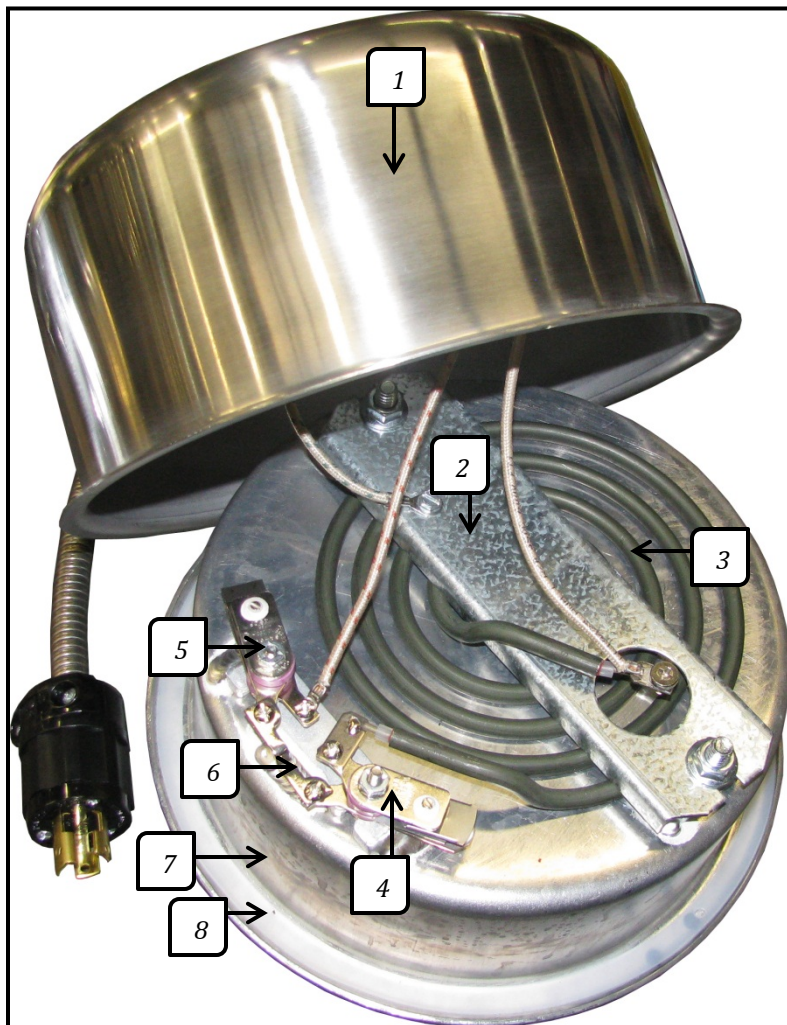

*Domestic Model No. 49472N

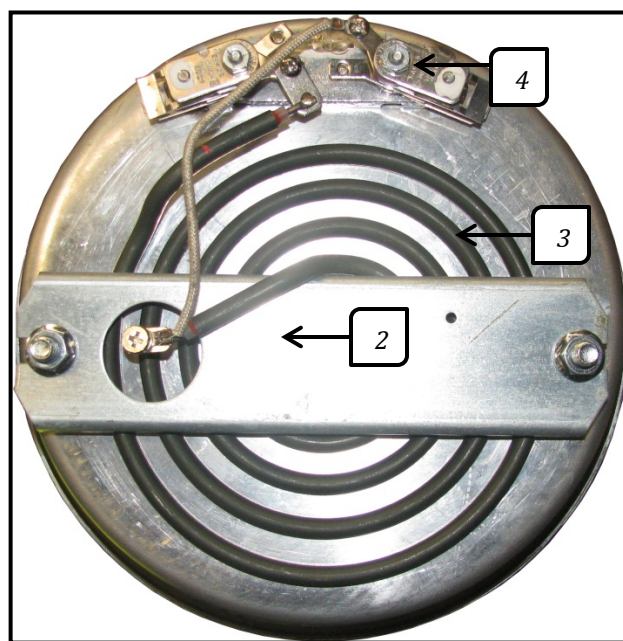


*Export Model No. 49472EXN


ITEM	PART NO.	MODEL(S)	PART NAME	QTY.
1	49431	All	Kettle Shell	1
2	49532	All	Element Clamp	1
3	49529	2388	120V~, 1125W Heat Element	1
	49578	2388EX	230V~, 1125W Heat Element	1
4	76089	2388EX	450 °F Thermostat	2
	76089	2388	450°F Thermostat	1
5	76702	2388	525 °F Thermostat	1
6	47193	2388	Thermostat Shunt Bar	1
7	49596	All	Clad Kettle Weld Assy.	1
8	49368	All	Kettle Gasket	1

KETTLE BREAKDOWN

Part No. 49472N, 49472EXN

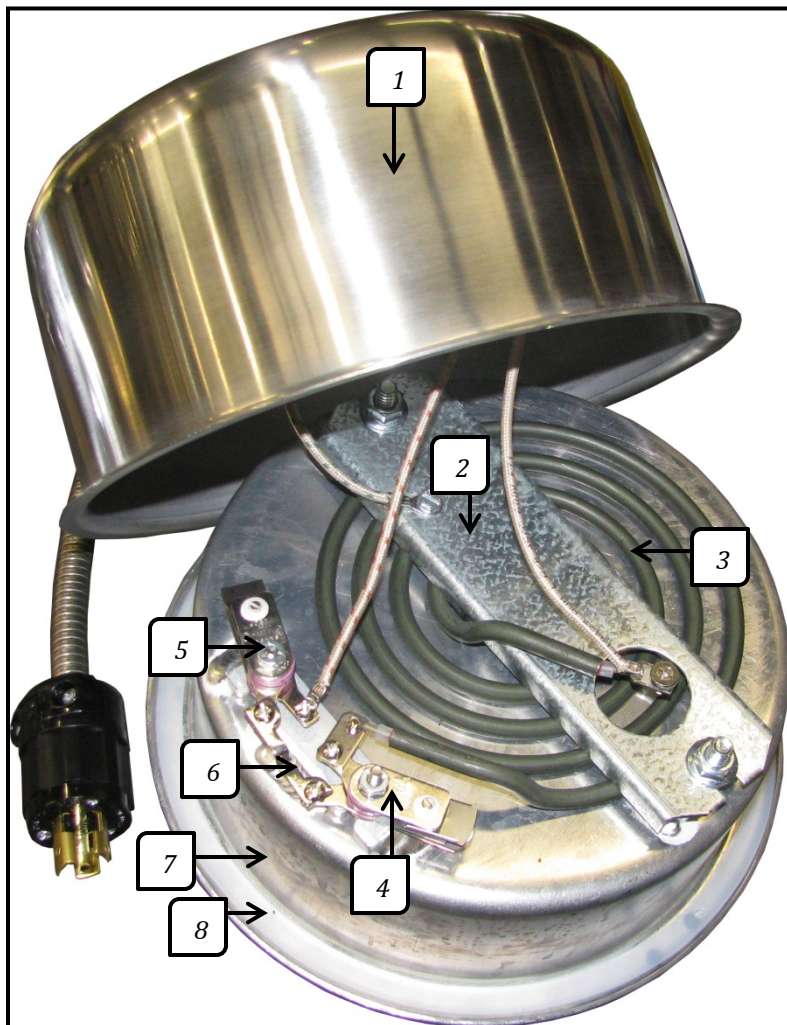

*Domestic Model No. 49472N

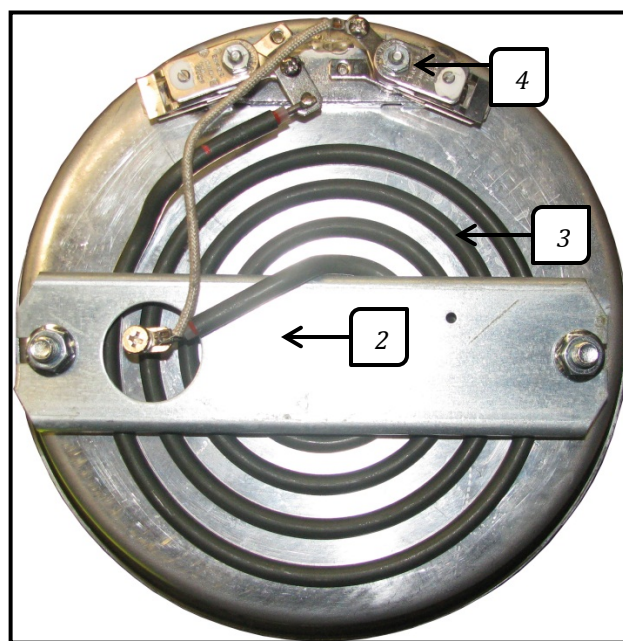


*Export Model No. 49472EXN


ITEM	PART NO.	MODEL(S)	PART NAME	QTY.
1	49431	All	Kettle Shell	1
2	49532	All	Element Clamp	1
3	49529	2388	120V~, 1125W Heat Element	1
	49578	2388EX	230V~, 1125W Heat Element	1
4	76089	2388EX	450 °F Thermostat	2
	76089	2388	450°F Thermostat	1
5	76702	2388	525 °F Thermostat	1
6	47193	2388	Thermostat Shunt Bar	1
7	49596	All	Clad Kettle Weld Assy.	1
8	49368	All	Kettle Gasket	1

KETTLE BREAKDOWN

Part No. 49472N, 49472EXN

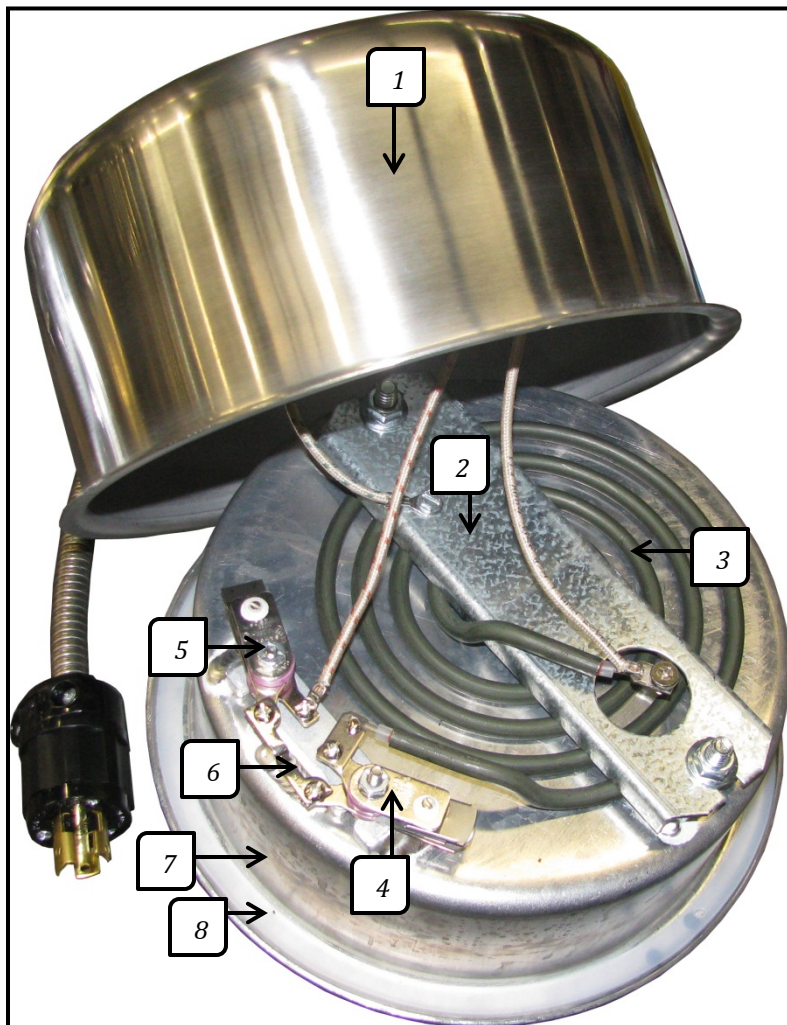

*Domestic Model No. 49472N

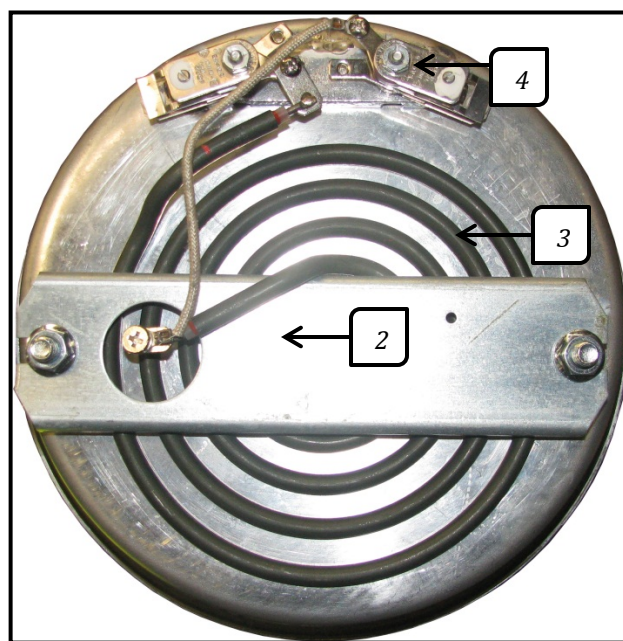

*Export Model No. 49472EXN

ITEM	PART NO.	MODEL(S)	PART NAME	QTY.
1	49431	All	Kettle Shell	1
2	49532	All	Element Clamp	1
3	49529	2388	120V~, 1125W Heat Element	1
	49578	2388EX	230V~, 1125W Heat Element	1
4	76089	2388EX	450 °F Thermostat	2
	76089	2388	450°F Thermostat	1
5	76702	2388	525 °F Thermostat	1
6	47193	2388	Thermostat Shunt Bar	1
7	49596	All	Clad Kettle Weld Assy.	1
8	49368	All	Kettle Gasket	1