



## ID-0450-AN INSTALL & SERVICE MANUAL



ICE / WATER  
DISPENSER

**ID-0450-AN**


**AIR COOLED**

**KEY FEATURES:**

- 378 lbs daily nugget ice production (70F/50F)
- 30 lbs ice storage capacity
- Rugged stainless steel evaporator & auger
- Counter top model
- Swing front door for easy maintenance
- Three modes available (ICE / WATER / ICE & WATER)
- Automatic flush for scale prevention
- UV sterilization for bacteria prevention
- 304 durable Stainless steel
- R-404A Refrigerant
- Power cord with NEMA 5-15 plug

**STANDARD WARRANTY:**

- ID-0450-AN: 3-Year Parts & Labor
- Compressor: 5- Year Parts & 3-Year Labor

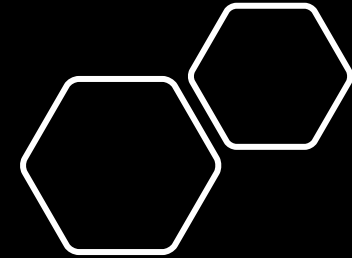

**UV Sterilization**

Detachable inner chute for cleaning and sterilization




1. Counter top and air flow from bottom to top
2. 30 lbs ice storage
3. Swing front door for easy maintenance
4. Serving ice, water, ice and water by three modes

ID-0450 Specs

# ID-0450-AN

## ICE / WATER DISPENSER

### PLAN VIEW

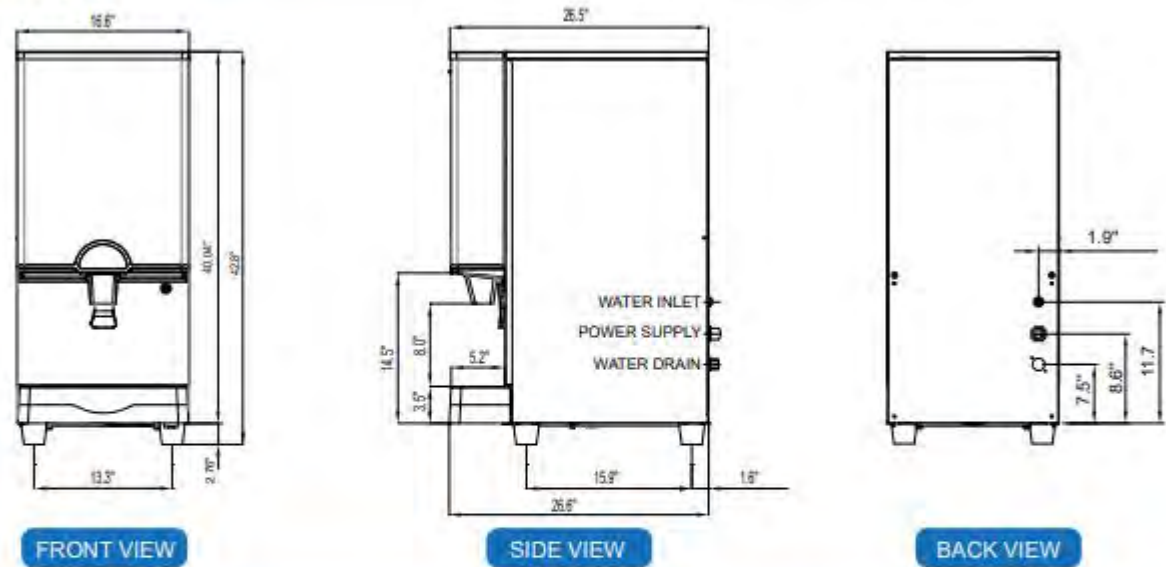

| MODEL      | DIMENSIONS | WIDTH | DEPTH | HEIGHT | WEIGHT        |                    |
|------------|------------|-------|-------|--------|---------------|--------------------|
| ID-0450-AN | Inch       | 16.6" | 26.5" | 43.1"  | 203 lbs (Net) | 223 lbs (Shipping) |

| SPECIFICATIONS |          |                          |                          |                                     |                               |                         |            |                                   |
|----------------|----------|--------------------------|--------------------------|-------------------------------------|-------------------------------|-------------------------|------------|-----------------------------------|
| Model          | Ice Type | Ice Production 24 hrs    |                          | Water usage<br>Gal /<br>100 lbs ice | Power<br>kWh /<br>100 lbs ice | Electrical<br>(V/Hz/ph) | Condenser  | Minimum<br>Circuit<br>Breaker (A) |
|                |          | Air/Water<br>70°F / 50°F | Air/Water<br>90°F / 70°F |                                     |                               |                         |            |                                   |
| ID-0450-AN     | Nugget   | 378 lbs                  | 289 lbs                  | 12                                  | 7.28                          | 115 / 60 / 1            | Air Cooled | 15                                |

| OPERATING LIMITS   | MIN               | MAX               |
|--------------------|-------------------|-------------------|
| AMBIENT TEMP RANGE | 50 °F             | 100 °F            |
| WATER TEMP RANGE   | 50 °F             | 90 °F             |
| WATER PRESSURE     | 20 psi (1.38 bar) | 80 psi (5.52 bar) |


ID-0450 Specs



**All equipment leaves our distribution points in new condition.**

When receiving new equipment, please pay close attention to the packaging for any damage to the crating. If there appears to be any exterior damage, please either note the damaged on the delivery bill of lading OR refuse it.

**Failure to note damage on BOL or refuse damaged equipment means that the receiver accepts all liability for damaged equipment.**

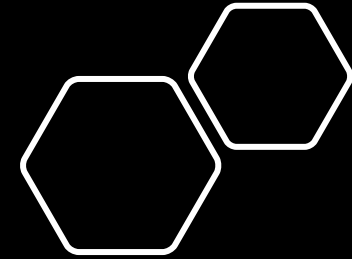

**Damage**

Receiving & Unpackaging  
Dispensers






### Installation, Start Up, and Check

Please double check these items before install & start-up before calling for service.


**(These items are not covered under your Labor Warranty)**

1. Has all tape and packing materials been removed from Machine?
2. Is the unit installed in a location that is away from heat generating equipment or direct sunlight?
3. Is the unit level front to back and side to side? This unit is equipped with legs which are adjustable from 3.25" – 4" in height.
4. Is the correct electrical power provided? Ensure the unit has the specified voltage and amperage and is on a dedicated circuit. Do not use a drop cord or power strip with any ice machine. This could cause a voltage drop and compensatory amperage spike or cause the circuit breaker to trip.
5. Check drain line pipe sizes. Insure they are  $\frac{3}{4}$  inch and line drops  $\frac{1}{4}$  inch per foot of run to insure both machine and bin drainage is effective.
6. Is water supplied to the unit? Water Line size,  $\frac{3}{8}$  inch, must be supplied to ensure sufficient water flow is always available. Required water pressure is 20 psi minimum and 80 psi maximum. This unit is designed to work with water temperatures of 50°F - 90°F.
7. Is the unit installed in an area with sufficient ventilation on top for proper rejection of condenser heat and maintenance? **The manufacturer requires 30" of clearance above the unit for maintenance and service. Never block the top vents on the unit! Fresh air is taken in from the bottom and dispelled from the top.**
8. This unit is designed to work in ambient air temperatures of 50°F - 100°F.
9. Scale or Mold build-up can affect the sequence of operation and production. Is a water filter installed? We recommend our exclusive Citryne Pro Ice Filtration for the best results. Scale will increase operating costs and reduce or shut down the machine's performance.
10. Do not install this unit outdoors.

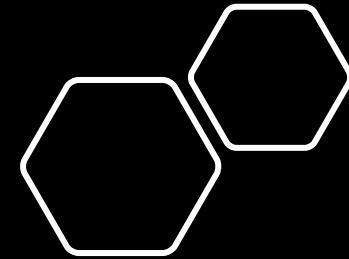



Proper Installation  
ID-0450

Ensure the power switch is set to 'ON'  
and the ICE-OFF-WASH switch is  
set to 'ICE'.

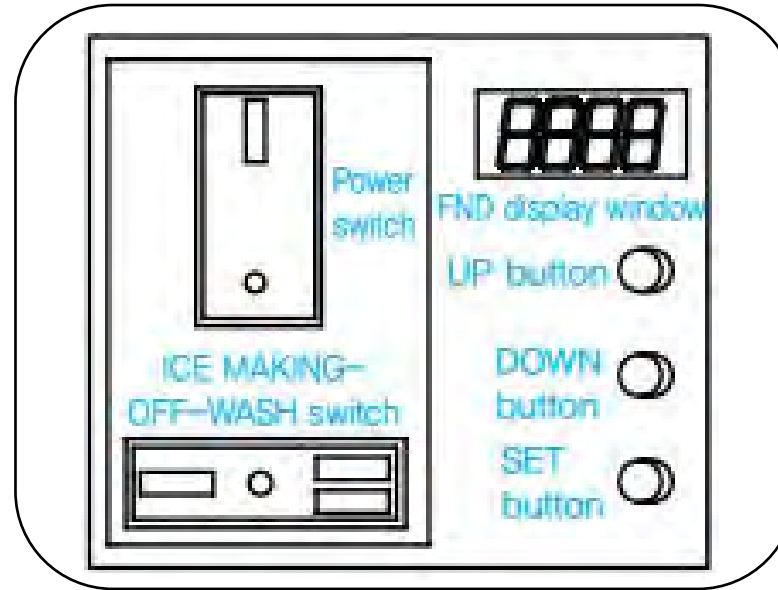


Ice will begin to enter the hopper after 3  
minutes of the compressor & condenser  
fan being energized.

You can begin to use the ice 10 minutes  
after that and the hopper will be full  
of ice after about 70 minutes.

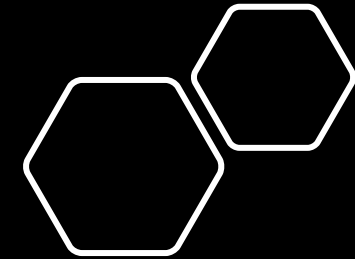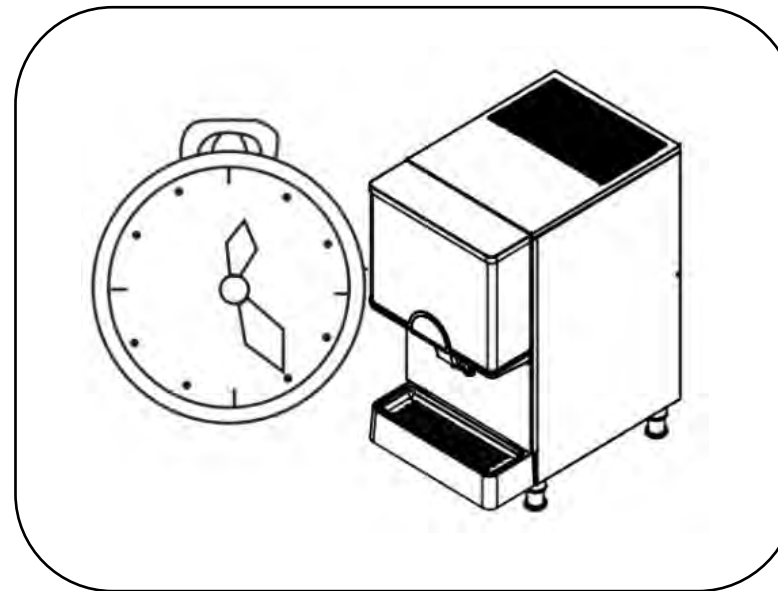

Proper Installation  
ID-0450

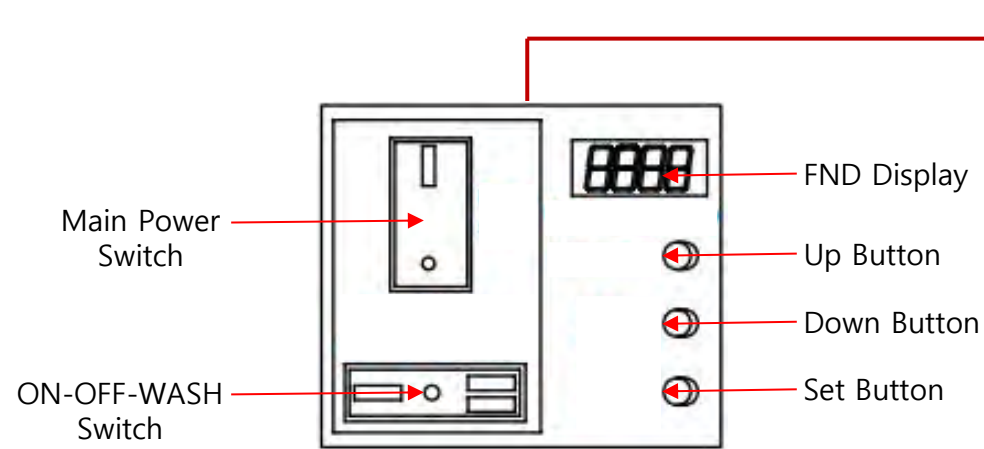

1) Forced Drain Function: (Must be used to prevent water from freezing in winter storage.) Please also use this function to drain water before cleaning any internal parts.

- Turn on the main power switch. Press the "DOWN" + "MODE" buttons simultaneously for 3 seconds on the FND panel. Water will then purge from the water sump for 30 seconds.

2) Automatic Drain Function:


- Turn on the main power switch. Press the "MODE" button until F. 5 is displayed on the FND.
- The 1st & 2nd digits displayed is the drain time (2 seconds) and is adjustable in 1 second increments, up to 99 seconds.
- The 3rd & 4th digits displayed is the drain interval (1 hour) and is adjustable in 30 minute increments from 0.5 to 9.5 hours

3) Initial Water Draining Function:


- Turn on the main power switch. Press the "MODE" button until F. 4 is displayed on the FND.
- The 1st & 2nd digits displayed is the drain time (30 seconds) and is adjustable in 1 second increments, up to 99 seconds.
- The 3rd & 4th digits displayed is the number of repetitions (3 times) and is adjustable from 1 to 9 times.

Error codes are also listed in the owner's manual.

Flexible Numeric Display  
(FND) on ID-0300

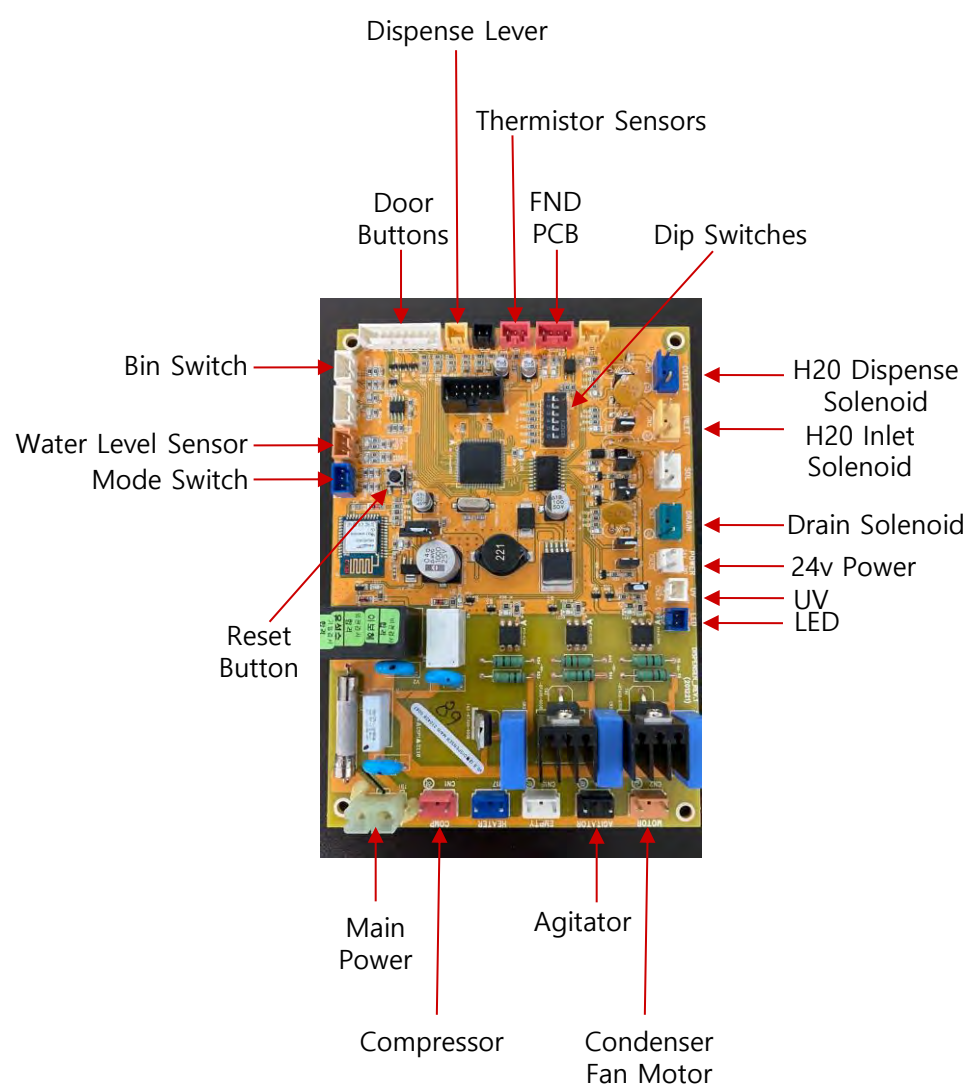

FND Board

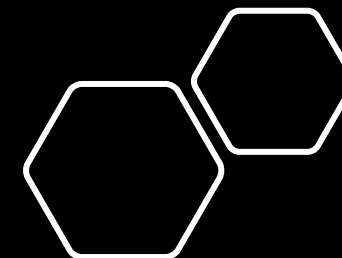

PCB connections are clearly marked and have LEDs to indicate to the technician when certain parts are powered.


By separating the main PCB from the FND, Ictro has managed to keep the cost of a replacement PCB lower than all its competitors!

ID-0450  
PCB & FND





Dip switches 5 & 6 have no function.

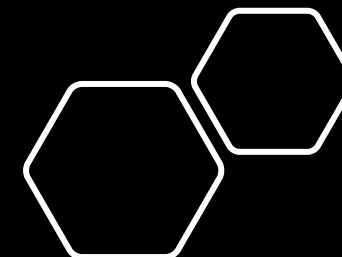


|     | Dip #1 | Dip #2                                             | Dip #3                                         | Dip #4                                                           |
|-----|--------|----------------------------------------------------|------------------------------------------------|------------------------------------------------------------------|
|     | Mode   | Er13 Sensing Temperature                           | Set high pressure sensing method               | Enable Safety                                                    |
| ON  | CVS    | Detection: 149°F, Release: 113°F                   | Use by connecting HPS                          | ID-0160 = Front Cover<br>ID-0450 = 2 <sup>nd</sup> Safety Switch |
| OFF | Normal | Detection: 136°F, Release: 122°F                   | Determine Er13 by condenser outlet temperature | Not Used<br>ID-0300                                              |
|     |        | Detection: 149°F, Release: 122°F<br>(Only ID-0450) |                                                |                                                                  |

CVS is a function used in Korean convenience stores, where the three front buttons (Ice, Ice + Water, Water) are all used exclusively as Ice buttons (Large, Medium, Small).

ID-0450  
PCB & FND

Front

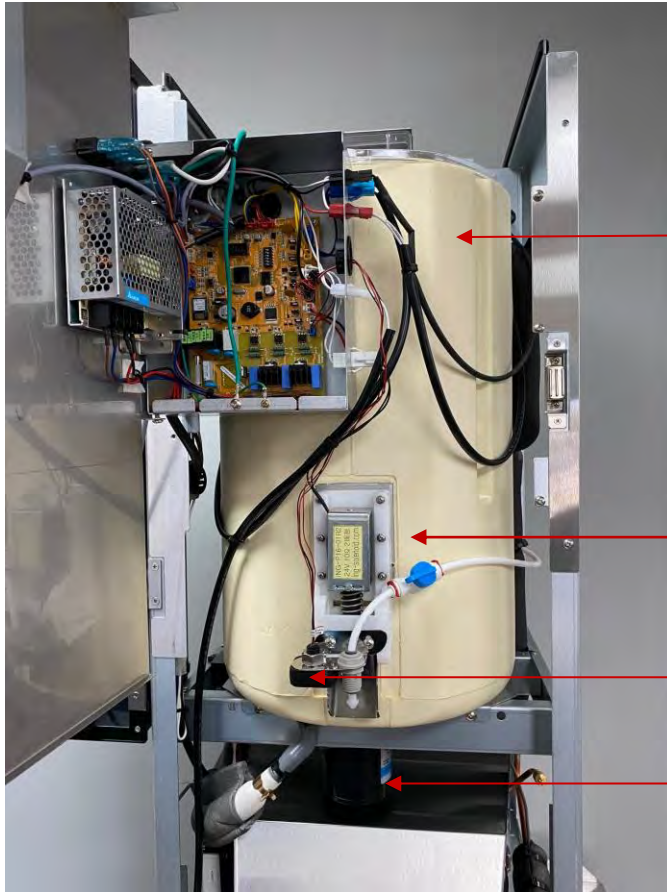

Ice Hopper




Ice Dispensing  
Solenoid

LED/UV Light

Ice Hopper  
Agitator Motor


Dispensing solenoid valve only opens when dispensing ice, preventing airborne bacteria from growing inside of the ice hopper!

Our dispensers also utilize **UV** light!

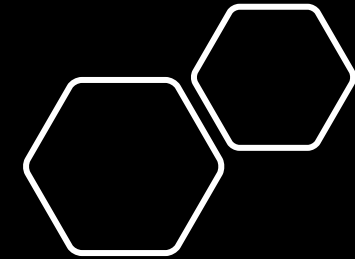


ID-0450 Exposed

Back

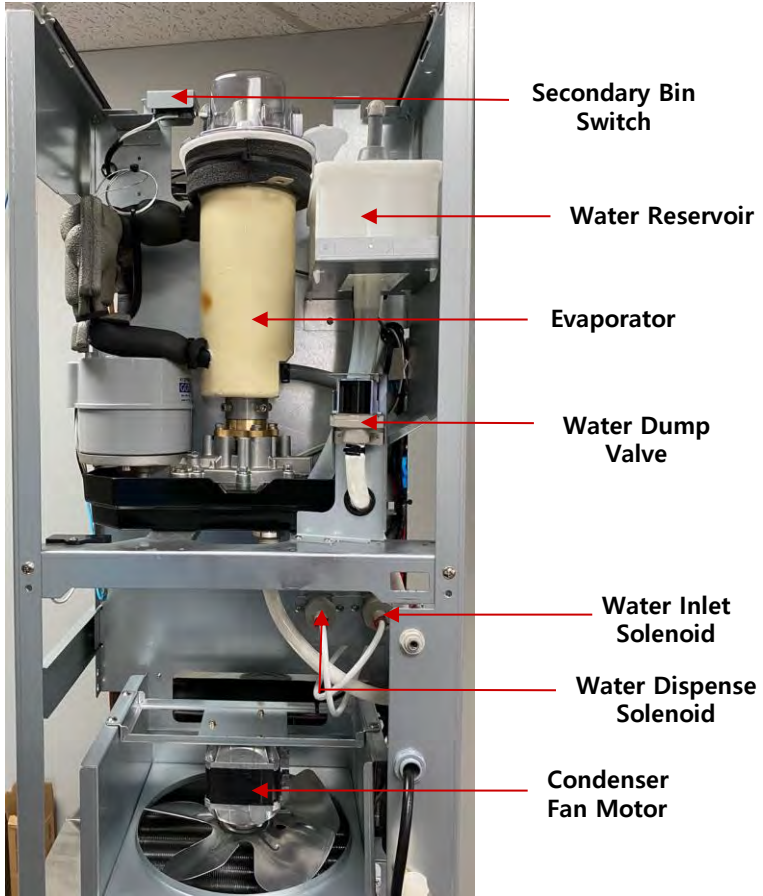



Easy access the condenser, fan motor, & more for easy service & diagnosis!

Condensers bring in air from the bottom and exhausts from the top.

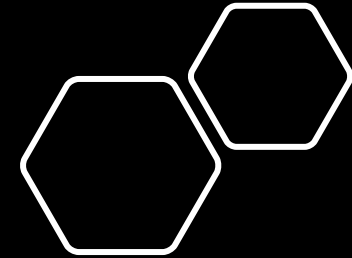


ID-0450 Exposed

Right Side

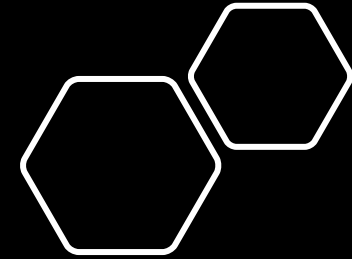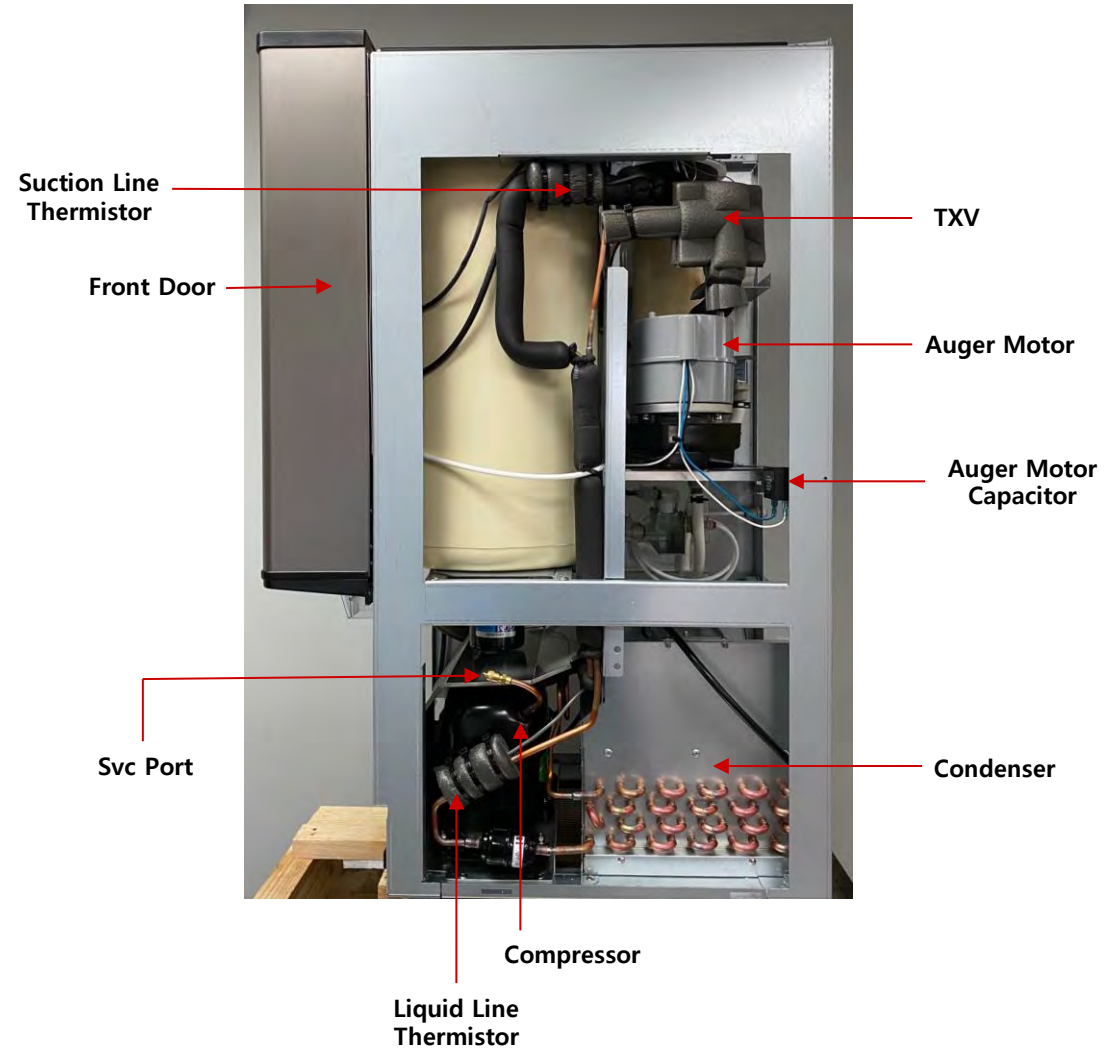


Easy access the other major components, such as the txv, gear motor, water reservoir, thermistors and more!

ID-0450 Exposed

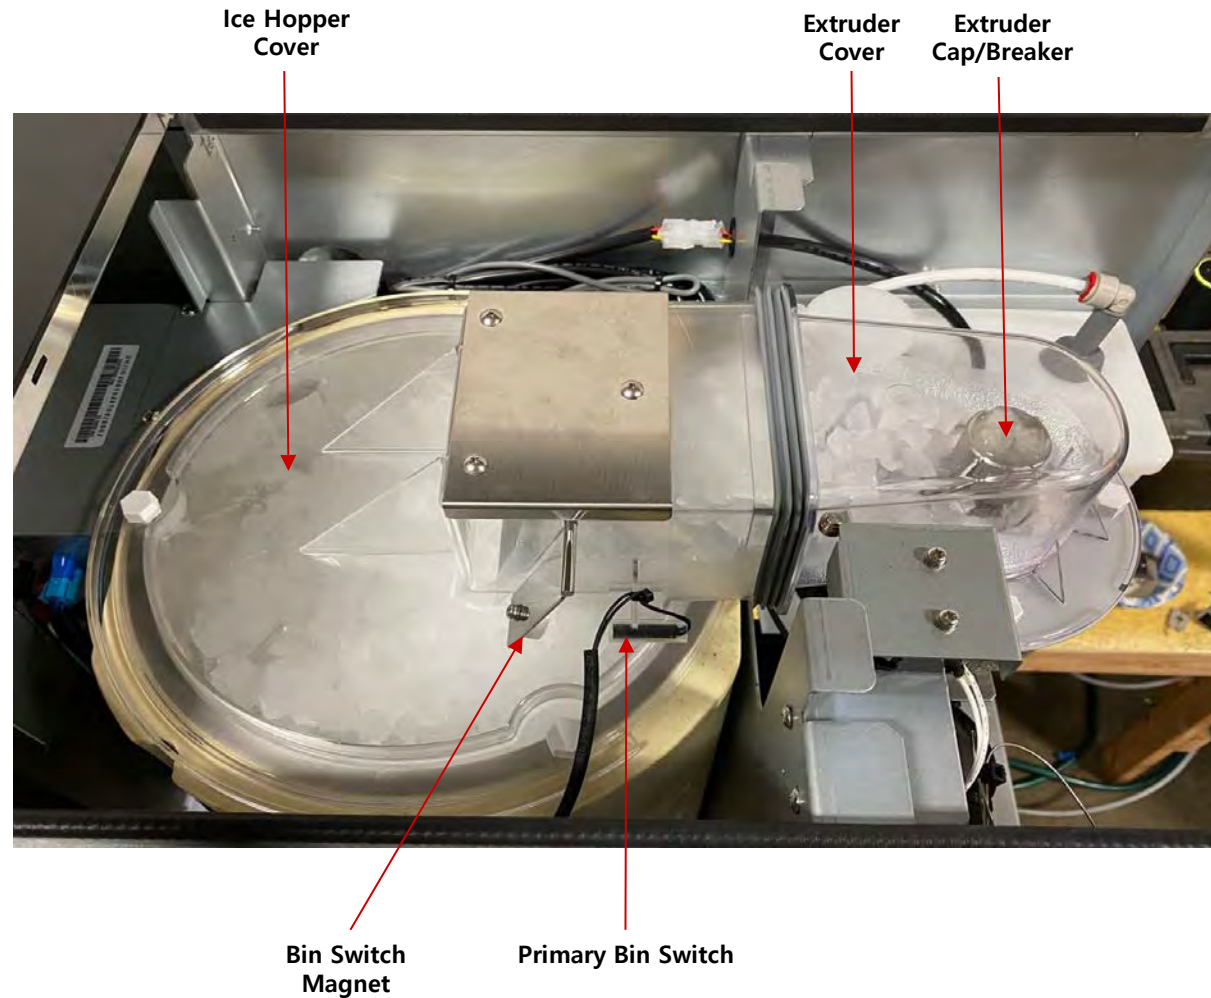

Here you can clearly see how the evaporator feeds ice up to the extruder cap/breaker and then pushes it to the front of the machine, where the hopper stores the ice for consumption.

The ice hopper uses a separate motor from the evaporator for agitation and dispensing.

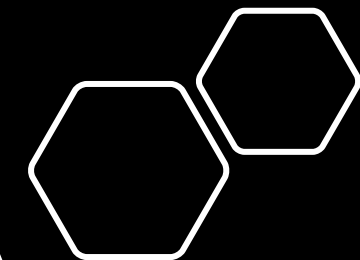

ID-0450 Exposed





Spiral circular cutting blade designed to reduce gearbox torque and provide greater durability.


Tapered flight reduces torque.

Spring loaded carbon/ceramic mechanical seal.




Pin cut spring insertion in bottom of flight.

Spline cut fits into reverse spline coupling on gear box shaft, which ensures no imbalance in bottom bearing.

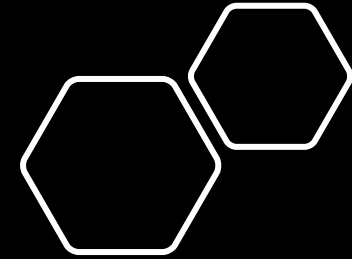

Extruder Heads  
& Bearing

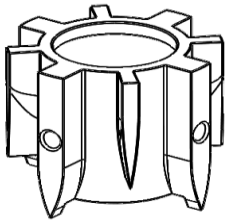


Nugget Extruder

## Nugget Extruder Head

- Carbon bearing is pressed inside of extruder head.
- No grease or maintenance to prevent major mechanical breakdowns.
- Simply check extruder/bearing & replace if required.



Extruder with Carbon  
Bearing Pressed Into Place

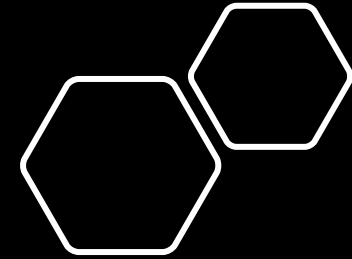


Extruder Heads  
& Bearing

Visually inspect all hex head bolts holding lower housing assembly to evaporator barrel for leaks.


Use caution during reassembly to ensure new bolts are cross tightened evenly.

Drains have been enlarged to prevent overflow & scale buildup on critical parts.

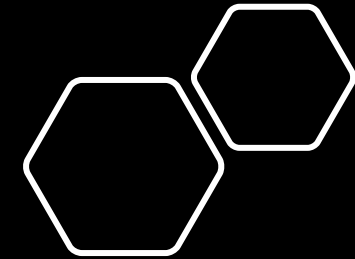


Maintenance & Leaks

Poor maintenance, leaking gaskets/bolts, or a plugged drain can destroy a machine: If bolts at the top extruder or lower housing assembly leak, scale can build up on the urethane insulation, the lower housing assembly, and/or the gear box and destroy those parts.

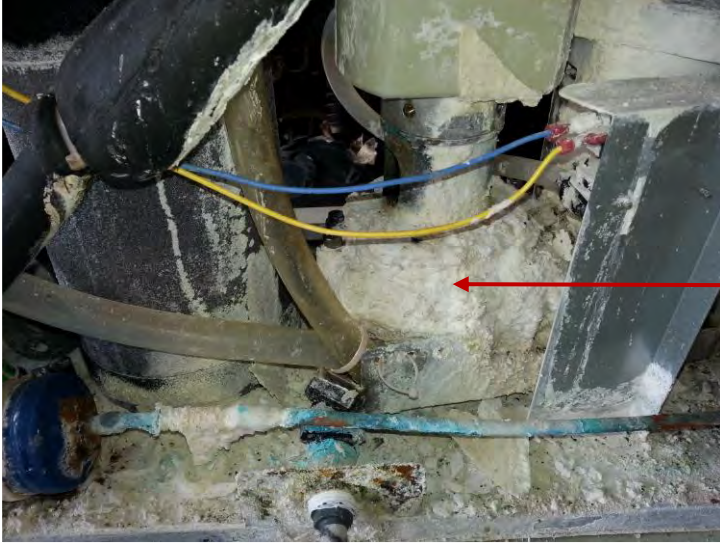

Should the drain pan's drain line become plugged, it will overflow and cause scale to greatly damage unit.



When removing bolts, new o-rings and/or new bolts with o-rings should be used. If bolts are not tightened properly (or o-rings damaged) the leaks above will occur.

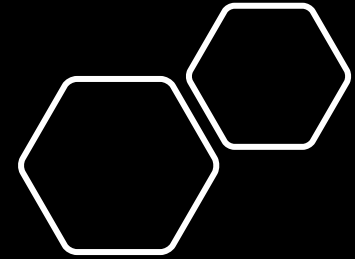

Maintenance & Leaks




# CIRCUIT DIAGRAM

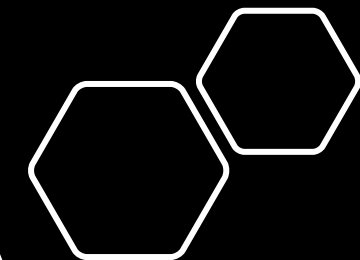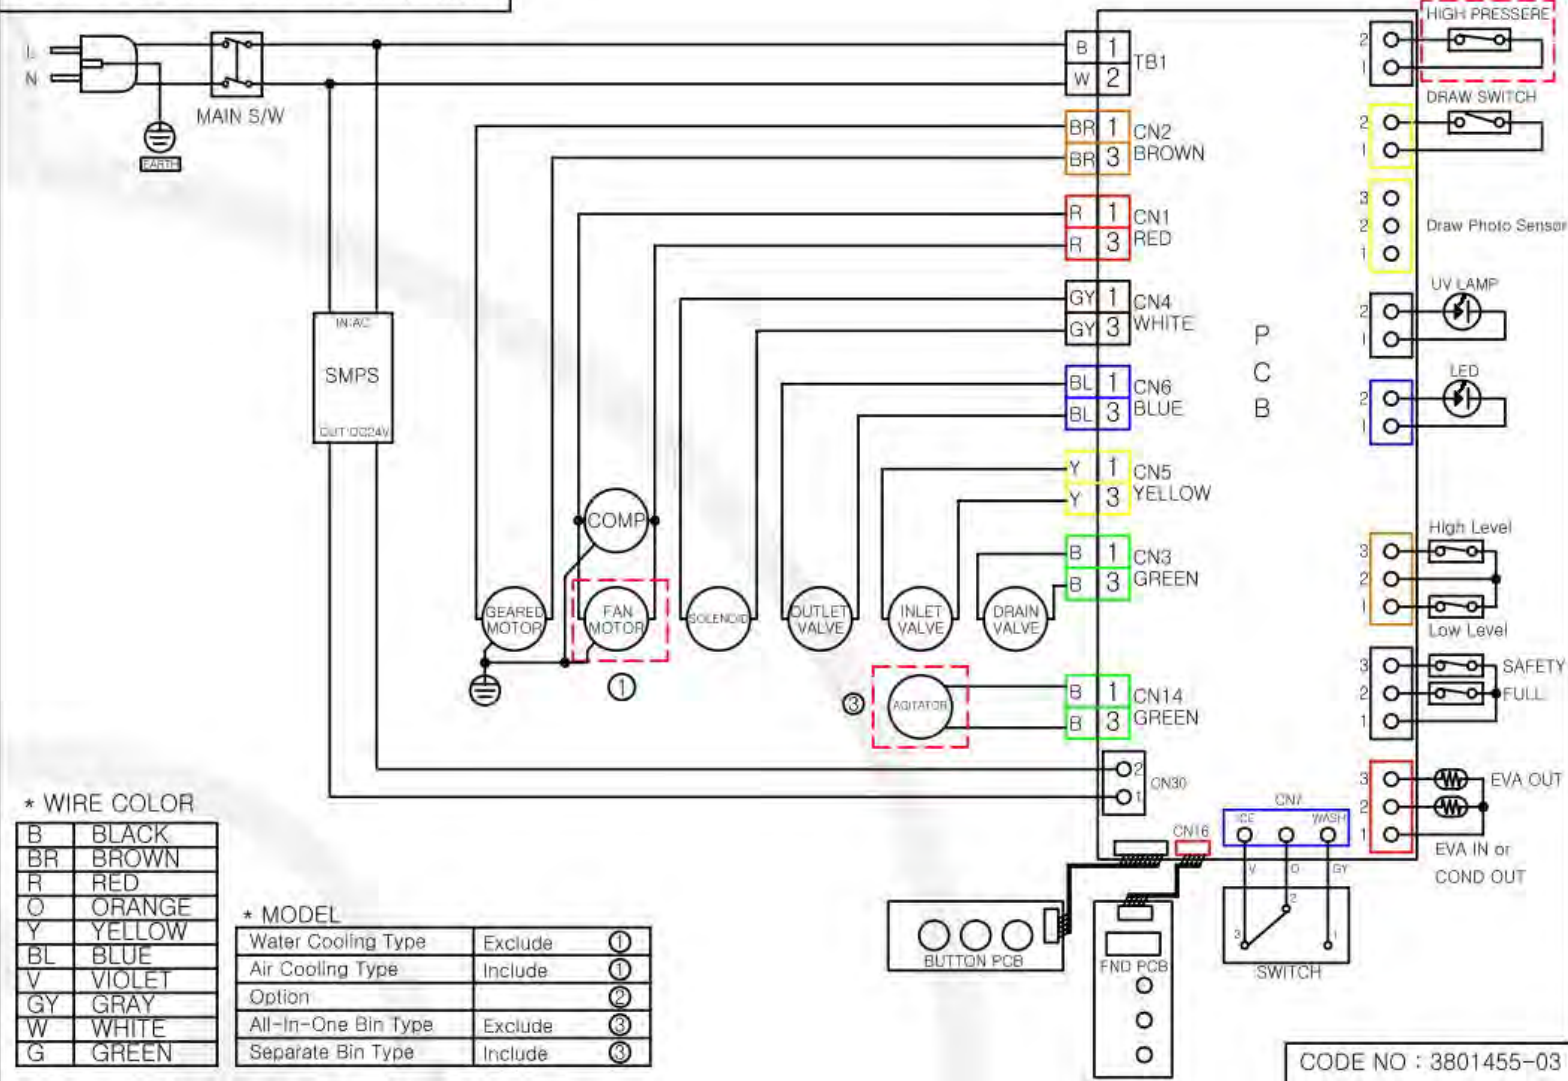


Wiring Diagram



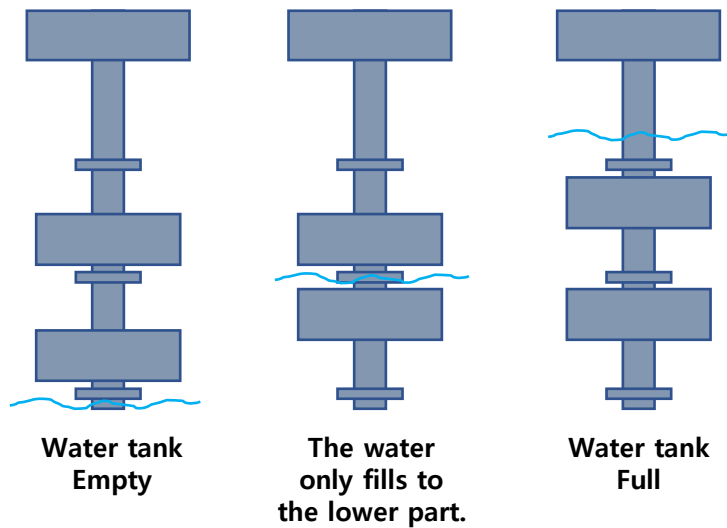


| Float Sensor            |                        | Water valve operation            | Physical state                          |
|-------------------------|------------------------|----------------------------------|-----------------------------------------|
| High water level sensor | Low water level sensor |                                  |                                         |
| 0(Close)                | 0(Close)               | ON                               | Water tank Empty                        |
| 0(Close)                | 1(Open)                | The current operation continues. | The water only fills to the lower part. |
| 1(Open)                 | 0(Close)               | The current operation continues. | No definition (Physically impossible)   |
| 1(Open)                 | 1(Open)                | OFF                              | Water tank Full                         |

Water valve operates separately according to the water level sensor

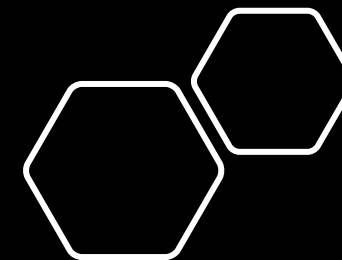


Dispenser Float Switch

| Item                                                                  | Contents                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|-----------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Initial power-up.<br>ICE-OFF-WASH switch is in<br>The 'Ice' position. | <ol style="list-style-type: none"> <li>1. Water inlet solenoid energized for 20 seconds for initial water reservoir fill.</li> <li>2. Dump solenoid energized for 30 seconds &amp; then water inlet solenoid energized for 10 seconds. (This occurs 3 consecutive times)</li> <li>3. Gear motor is energized.</li> <li>4. After 60 seconds of the gear motor being energized, the compressor &amp; condenser fan motor are both energized.</li> <li>5. Ice begins to enter the ice hopper after 3 minutes of the compressor being energized.</li> </ol> |
| Ice Hopper Full                                                       | <ol style="list-style-type: none"> <li>1. When bin switch opens for 2 consecutive seconds, the machine is recognized as being full and the compressor &amp; condenser fan motor are de-energized.</li> <li>2. Gear motor continues to run for 60 seconds &amp; is then de-energized.</li> </ol>                                                                                                                                                                                                                                                         |
| Ice Hopper Low                                                        | <ol style="list-style-type: none"> <li>1. When bin switch closes for 2 consecutive seconds, the machine returns to the ice making mode and the gear motor is energized.</li> <li>2. After 60 seconds of the gear motor being energized, the compressor &amp; condenser fan motor are both energized.</li> </ol>                                                                                                                                                                                                                                         |
| Water Inlet Solenoid                                                  | <ol style="list-style-type: none"> <li>1. Energized when low level/high level float switch is in the NC (down) position.</li> <li>2. De-energized when high level float is in the NO (up) position.</li> <li>3. Triggers error code (Er15) when the high-level float is not detected after operating for 60 seconds.</li> </ol>                                                                                                                                                                                                                         |
| Gear Motor                                                            | <ol style="list-style-type: none"> <li>1. Energized when the high-level float is detected.</li> <li>2. Stops after a 60 second delay when bin switch opens.</li> <li>3. After 1 hour of no operation, gear motor will energize for a 12 second agitation. This will continue every hour until the bin switch closes and normal operation resumes.</li> </ol>                                                                                                                                                                                            |
| Compressor                                                            | <ol style="list-style-type: none"> <li>1. Energized 60 seconds after the gear motor is energized.</li> <li>2. Stops immediately when the bin switch opens, indicating the ice hopper is full.</li> </ol>                                                                                                                                                                                                                                                                                                                                                |

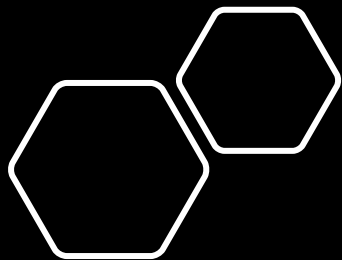


## Detailed Operation Sequence

| Item                                                  | Contents                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Dump Solenoid                                         | <ol style="list-style-type: none"> <li>1. Energized for 2 seconds after 1 hour of machine operation.</li> <li>2. This is repeated indefinitely until the power is turned off.</li> </ol>                                                                                                                                                                                                                                                                                           |
| Dispense Lever Operation                              | <ol style="list-style-type: none"> <li>1. Chose a dispensing option (ice, water, or ice + water) and place cup against lever to engage it.</li> <li>2. If dispensing lever is released and immediately engaged again, there will be a 2 second delay before any solenoids will activate, regardless of which mode is selected.</li> <li>3. Once the dispensing lever is disengaged, all operation stops immediately.</li> </ol>                                                    |
| Ice Dispensing Solenoid<br>(Ice Mode)                 | <ol style="list-style-type: none"> <li>1. Energized when the dispensing lever is engaged, and the N/O switch is closed.</li> <li>2. De-energized when the dispensing lever is released, and switch opens again.</li> <li>3. Maximum operating time is 20 seconds by default but can be changed.</li> <li>4. If ice hopper is full, the gear motor will also energize to dispense ice.</li> </ol>                                                                                   |
| Ice & Water Dispensing Solenoid<br>(Ice + Water Mode) | <ol style="list-style-type: none"> <li>1. Ice &amp; water solenoids are both energized simultaneously when the dispensing lever is engaged, and the N/O switch is closed.</li> <li>2. Maximum operating time of the ice solenoid is 5 seconds by default but can be changed.</li> <li>3. Maximum operating time of the water solenoid is 3 seconds by default but can be changed.</li> <li>4. If ice hopper is full, the gear motor will also energize to dispense ice.</li> </ol> |

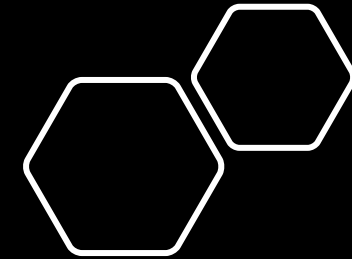


Detailed Operation  
Sequence

| Item                                    | Contents                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|-----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Water Dispense Solenoid<br>(Water Mode) | <ol style="list-style-type: none"> <li>1. Energized when dispensing lever is engaged.</li> <li>2. Stops when dispensing lever is disengaged.</li> <li>3. Maximum operating time is 5 seconds.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| Time Counter                            | <ol style="list-style-type: none"> <li>1. Gear Motor utilizes a counter to track the number of hours in active operation.</li> <li>2. At 10,000 hours, the LED of the current selected mode will blink for 5 seconds &amp; will continue the initial mode selection.</li> <li>3. At 11,0000 hours, the LEDs of all mode buttons will blink for 5 seconds each hour.</li> <li>4. To reset the counter, place dip switch 2 in the 'ON' position and press the reset button on the main PCB.</li> <li>5. When dip switch 2 is 'ON' the LEDs on all mode buttons will blink from left to right, and none of the dispenser functions will work, until dip switch 2 is placed back in the 'OFF' position.</li> </ol> |
| ICE → OFF                               | <ol style="list-style-type: none"> <li>1. Compressor stops immediately.</li> <li>2. Gear motor stop after a 60 second delay.</li> </ol>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| OFF → WASH                              | <ol style="list-style-type: none"> <li>1. Gear motor is energized for 5 minutes.</li> <li>2. Dump solenoid is energized for 1 minute.</li> <li>3. Water solenoid is energized until the high-level float sensor opens.</li> <li>4. Gear motor is energized for 1 minute.</li> <li>5. Dump solenoid is energized for 30 seconds.</li> <li>6. Steps 3-5 are executed 2 more times and the machine stops.</li> </ol>                                                                                                                                                                                                                                                                                              |

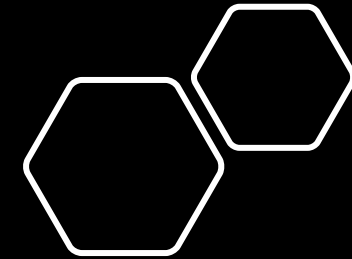

Detailed Operation  
Sequence

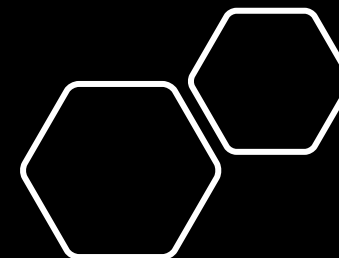

| Item                  | Contents                                                                                                                                                                                                                                                                                                                                                      |
|-----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Forced Drain          | <ol style="list-style-type: none"><li>1. Turn ICE-OFF-WASH switch to the 'OFF' position.</li><li>2. At the FND, press the 'Down' + 'Mode/Set' buttons simultaneously for 3 seconds.</li><li>3. Dump solenoid will energize for 30 seconds.</li></ol>                                                                                                          |
| Error Code Indication | <ol style="list-style-type: none"><li>1. When error codes 1, 6, 13, 14, 15, 16, &amp; 25 occur, and the machine stops, the LEDs of all mode buttons will blink sequentially until the issue causing the error has been fixed and the machine is reset by turning the ICE-OFF-WASH switch to the 'OFF' position and then back to the 'ICE' position.</li></ol> |
| Reset to Default      | <ol style="list-style-type: none"><li>1. Turn the ICE-OFF-WSH switch to the 'OFF' position.</li><li>2. At the FND, press the 'UP' + 'DOWN' + 'MODE/SET' buttons simultaneously for 3 seconds.</li><li>3. All timed settings will default back to their factory settings.</li></ol>                                                                            |

Detailed Function  
Description



## Setting Adjustments: Function Codes

### F.1 (Maximum Discharge Time)

Maximum operating time of the ice solenoid: 20-second default.  
(Adjustable from 5 seconds – 30 seconds, in 1 second increments)

### F.2 (Complete Removal Of Ice In Hopper)

ICE/OFF/WASH switch is set to OFF.  
Hold the ICE & WATER buttons simultaneously for 4 seconds, until they light solid.  
Ice solenoid will operate continuously when dispense lever is pushed.

### F.3 (Timed Ice Dispensing Function)

When either ICE or WATER + ICE is selected, ice is dispensed for a set time.  
This function does not work when the ICE/OFF/WASH switch is set to OFF.  
(Adjustable from 1 – 99 seconds, in 1 second increments)

### F.4 (Initial Water Purge)


Happens when ICE/OFF/WASH switch is first moved to ICE.  
First 2 digits indicates the total drain time: 30-second default.  
(Adjustable from off – 99 seconds, in 1 second increments)  
Last 2 digits indicates the number of flushes: 3-time default.  
(Adjustable from 1 – 9 times)

### F.5 (Periodic Drain Function)

Only operates when ICE/OFF/WASH switch is set to ICE.  
First 2 digits indicates the total drain time: 2-second default.  
(Adjustable from off – 9 seconds, in 1 second increments)  
Last 2 digits indicates the interval: 1 hour default.  
(Adjustable from 0.5 – 9.5 hours, in 30-minute increments)

### F.6 (WATER + ICE volume control)

First 2 digits indicates the total ice dispensing time: 5-second default.  
(Adjustable up to 99 seconds)  
Last 2 digits indicates the total water dispensing time: 3-second default.  
(Adjustable up to 99 seconds)

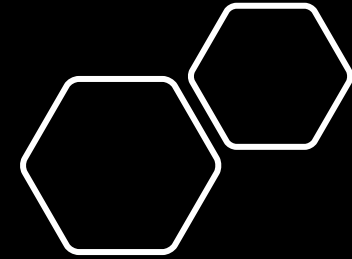

Detailed Function  
Description

## Setting Adjustments: Function Codes

### F.7 (UV Lamp Time Adjustment)

First 2 digits indicates the total time on: 3-minute default.

(Adjustable up to 99 minutes)

Last 2 digits indicates the total time off: 1-hour default.

(Adjustable up to 9 hours)

### F.8 (Service Notification Setting)

After 1,000 hours of use, the selected mode button blinks for 5 seconds: A\_1.0

After 11,000 hours of uses, all 3 mode buttons blink for 5 seconds: E\_11

### F.9 (Cumulative Run Time)

The FND displays the date format in YEAR, MONTH, DAY, and HOURS, from right to left.

The cumulative run time is displayed in hours.

(Example: 12 months = year, 30 days = month, 24 hours = day)

### F.10 (Temperature Unit Displayed)

Change temperature unit between Fahrenheit and Celsius.

### F.11 Liquid line thermistor temperature.

### F.12 Suction line thermistor temperature.

### F.13 (ICE+WATER Dispense Sequence)

A = ice and water dispensed sequentially

B = ice and water dispensed simultaneously


### F.14 (Wash Counter)

Counter will display number between 0 – 999.

### F.15 (Motor & Wash Reset Counter)

First 2 digits: Motor reset

Last 2 digits: Wash reset

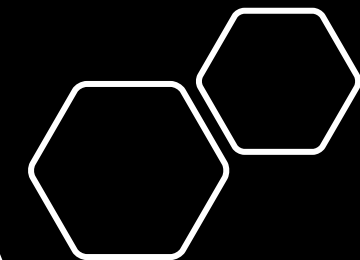

Detailed Function  
Description

## Setting Adjustments: Function Codes

**F.16** CVS Small Cup Ice Dispensing Time (seconds)


**F.17** CVS Large Cup Ice Dispensing Time (seconds)

**F.18** (Set Automatic & Manual Switching of Buttons)  
Last 2 digits indicates the standby time setting.

**F.19** Open for future function (N/A)

**F.20** (Agitation Timing)  
First 2 digits indicates the agitation intervals: 1-hour default, displayed as 1.0  
(Adjustable in 6-minute increments)  
Last 2 digits indicates the agitation time: 10-second default, displayed as 11  
(Adjustable in 1-second increments)

**Reset to default values:**  
Press all 3 of the FND buttons (UP, DOWN, & SET) simultaneously for 4 seconds.

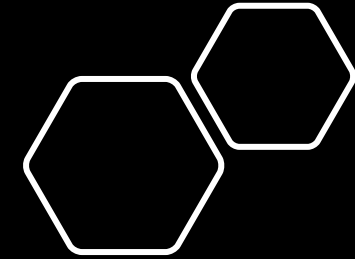


Detailed Function  
Description

# NOTICE


In case of an error, the front selection buttons (ICE-WATER-ICE & WATER) will light up alternatively from left to right.  
When this happens, open the door and press the 'SET' button on the FND to display the error code on the display screen.

| Display | Error Type                 | Cause                                                                                                       | Action to Take                                                                                                                                        |
|---------|----------------------------|-------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| Er01    | Evaporator Temp Error      | Evap temp is over 32°F after 30 minutes after ice making.                                                   | Check for refrigerant leak.<br>Check S/L thermistor.                                                                                                  |
| Er03    | Evaporator Temp Error      | Evap temp exceeds 30°F after 10 minutes of ice making.                                                      | Check for refrigerant leak.<br>Check S/L thermistor.                                                                                                  |
| Er06    | Thermistor Error           | Displayed when S/L thermistor is OPEN/SHORT.                                                                | Check S/L thermistor.                                                                                                                                 |
| Er07    | Thermistor Error           | Displayed when L/L thermistor is OPEN/SHORT.                                                                | Check L/L thermistor.                                                                                                                                 |
| Er13    | High Pressure Switch Error | Occurs when the condenser is dirty, fan motor is not running, or fan blade has broken.                      | Clean air filter/condenser.<br>Replace fan motor or broken fan blade.                                                                                 |
| Er14    | High Pressure Switch Error | Occurs when the high-pressure switch opens 3 times or more.                                                 | Check high pressure switch.<br>Check refrigerant charge.<br>Check air filter/condenser.<br>Check fan motor.                                           |
| Er15    | Water Supply Error         | When the water level sensor detects no water for 120 seconds.                                               | Check water supply.<br>Check water pressure.<br>Check water sensor.<br>Check water inlet solenoid.                                                    |
| Er16    | Water Level Sensor Bad     | When the water level sensor's lower/upper limits are not sensed 60 seconds after starting ice making cycle. | Check and/or replace water level float switch.<br>Check and/or replace dump valve.<br>Check and/or replace the PCB.                                   |
| Er20    | Cover Error                | Displayed when the extruder cover is open or secondary bin switch is open or bad.                           | Replace cover or secondary bin switch.                                                                                                                |
| Er25    | Gear Motor Restraint Error | L/L & S/L thermistor -4°F or less 3 times in a row.<br>Ice jam, scale buildup, or auger/agitator issue.     | Clear ice jam.<br>Check water supply.<br>Check motor & gear box.<br>Check for scale buildup.<br>Check auger/agitator.<br>Check L/L & S/L thermistors. |

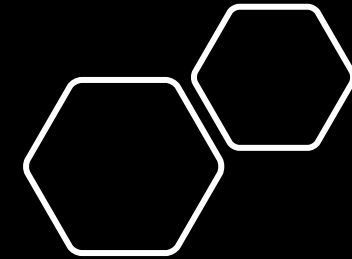


Service Fault Diagnosis  
ID-0450

| Operating status                                                          | What to check                                                                 |                                                                                                                                                                                                                                                                                                                                                         | Action                                                                                                                                                                                                                                                                                                                                                          |
|---------------------------------------------------------------------------|-------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Gear Motor and compressor run, but intermittently                         | 1) Pressure switch (HPS)                                                      | 1) Is the condenser and/or filter dirty?<br>2) Is the ambient or water temperature too high?<br>3) Is the condenser fan not spinning, slow, or have a broken fan blade? (Air-cooled)<br>4) Is the refrigerant overcharged?<br>5) Is the refrigerant line and components normal?<br>6) Is it a bad contactor?<br>7) Are the contactor connections loose? | 1) Clean air filter and/or condenser.<br>2) Place machine in cooler environment and check the water supply.<br>3) Replace the fan motor or fan blade after determining which is the issue.<br>4) Vacuum and recharge the refrigerant.<br>5) Clean and replace the dryer.<br>6) Check the connections and replace if defective.<br>7) Check and fix connections. |
| Gear Motor works, but the compressor does not run or runs intermittently. | 1) Compressor relay (PCB)                                                     | 1) Is there a poor connection?<br>2) Is the PCB sending power to the compressor?                                                                                                                                                                                                                                                                        | 1) Check the connections.<br>2) Replace PCB if defective.                                                                                                                                                                                                                                                                                                       |
|                                                                           | 2) Operation relay                                                            | 1) Is there a poor connection?<br>2) Is the relay blown?                                                                                                                                                                                                                                                                                                | 1) Check the connections and replace if defective.<br>2) Replace.                                                                                                                                                                                                                                                                                               |
|                                                                           | 3) Start/run capacitors, & OLP.                                               | 1) Bad parts?                                                                                                                                                                                                                                                                                                                                           | 1) Test and replace if necessary.                                                                                                                                                                                                                                                                                                                               |
|                                                                           | 4) Compressor                                                                 | 1) Are the connections loose?<br>2) Is the winding shorted or fused?<br>3) Is the overload prevention open?                                                                                                                                                                                                                                             | 1) Check and connect correctly.<br>2) Replace compressor.<br>3) Check for high temperature or over current. Ensure the OLP is not open. Cool compressor if necessary.                                                                                                                                                                                           |
|                                                                           | 5) Power Supply                                                               | 1) Is the circuit current ampacity low?                                                                                                                                                                                                                                                                                                                 | 1) Replace with correct breaker size.                                                                                                                                                                                                                                                                                                                           |
| Gear Motor and compressor work, but no ice is produced.                   | 1) Refrigerant line<br>2) Refrigerant restriction/bad part<br>3) Water supply | 1) Is there a refrigerant leak?<br>2) Check for restrictions<br>3) Is water being supplied to the evaporator?                                                                                                                                                                                                                                           | 1) Check the refrigerant for leaks with a leak detector, re-braze the leak and replace the dryer, evacuate and charge with refrigerant.<br>2) Replace parts containing blockage or restricting the flow of refrigerant.<br>3) Ensure the water reservoir is full.                                                                                               |

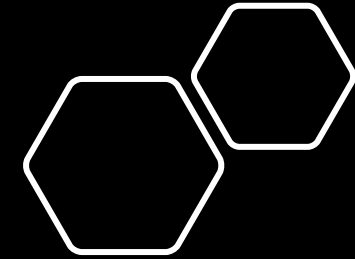

## Service Fault Diagnosis



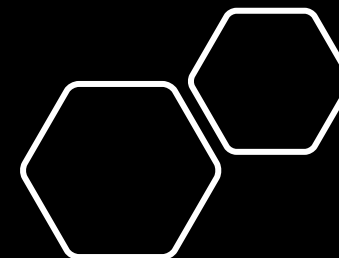

## Service Fault Diagnosis

| Operating status | What to check                     |                                                                                                                                                                                      | Action                                                                                                                                                                                         |
|------------------|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Low ice yield    | 1) Refrigerant                    | 1) Is there a refrigerant leak?                                                                                                                                                      | 1) Check for leaks with a leak detector, repair the leak and replace the dryer, evacuate and charge with refrigerant.                                                                          |
|                  |                                   | 2) Is the refrigerant line blocked?<br>3) Is the refrigerant under/overcharged?                                                                                                      | 2) Replace any clogged parts.<br>3) Recover, evacuate, and recharge with refrigerant.                                                                                                          |
|                  | 2) High-side pressure is too high | 1) Is the condenser and/or filter dirty?<br>2) Is the ambient or water temperature too high?<br>3) Is the condenser fan not spinning, slow, or have a broken fan blade? (Air-cooled) | 1) Clean the air filter and/or condenser.<br>2) Place machine in cooler environment and check the water supply.<br>3) Replace the fan motor or fan blade after determining which is the issue. |
|                  | 3) Expansion valve (TXV)          | 1) Is the low-side pressure too low or too high?                                                                                                                                     | 1) Replace if stuck open or closed.<br>2) Check that the bulb on the expansion valve is properly installed and replace it if necessary.                                                        |


| Operating status                            | What to check            |                                                                                                             | Action                                                                                                                                 |
|---------------------------------------------|--------------------------|-------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Abnormal noise                              | 1) Fan motor             | 1) Are the bearings worn?<br>2) Is the fan blade deformed or broken?<br>3) Is fan blade hitting the shroud? | 1) Replace motor.<br>2) Replace fan blade.<br>3) Check alignment and/or replace fan blade.                                             |
|                                             | 2) Compressor            | 1) Is the bearing worn or the cylinder valve broken?<br>2) Is the rubber bushing assembled correctly?       | 1) Replace compressor.<br>2) Readjust the bushing assembly position.                                                                   |
|                                             | 3) Refrigeration Line    | 1) Is it caused by contact with refrigerant line components?                                                | 3) Realign or replace if necessary.                                                                                                    |
|                                             | 4) Gear Box              | 1) Are the bearings or gears worn and damaged?                                                              | 1) Replace gear box.                                                                                                                   |
|                                             | 5) Evaporator            | 1) Are the auger bearings worn out?<br>2) Is there a scale inside the evaporator cylinder?                  | 1) Check & replace if necessary.<br>2) Disassemble the auger and related parts, descale and clean with descaling agent. (Periodically) |
| Water overflow from the sump(Overflow)      | 1) Water supply          | 1) Is the water supply pressure too high (above 80psi)?                                                     | 1) Install a water pressure reducing valve.                                                                                            |
|                                             | 2) Water supply valve    | 1) Does the water inlet solenoid valve close?                                                               | 1) Clean or replace the valve.                                                                                                         |
|                                             | 3) Water level sensor    | 1) Is connection bad or is the sensor reading properly?                                                     | 1) Check the connections and replace if defective.                                                                                     |
| Gear Motor 'MOTOR ERROR' flashes frequently | 1) Power supply          | 1) Is the voltage too high or too low?                                                                      | 1) Connect the power to the rated voltage.                                                                                             |
|                                             | 2) Ice making unit       | 1) Are the bearings (E-Head and Housing) or Auger worn?                                                     | 1) Replace bearing or auger.                                                                                                           |
|                                             | 3) Tachometer            | 1) Is motor rotation bad?                                                                                   | 1) Check the capacitor. 2) Replace the gear motor.                                                                                     |
|                                             | 4) Gear Motor or Gearbox | 1) Is the motor or gearbox rotation bad?                                                                    | 1) Check the capacitor. 2) Replace the gear motor.                                                                                     |

## Resetting the auger usage time counter:

When the auger usage time reaches 11,000 hours, the selected dispensing button will flash every 0.8 seconds.  
(for 5 seconds, 1 time on the dispensing selection that has been selected)

If this flash occurs, it is time for your machine's 11,000 hour preventative maintenance and a service agent should be called.  
To reset this auger usage time, the main power switch must be set to "OFF".

Next, set dipswitches 1 on the PCB to "OFF". Set the main power switch to "ON" and all function lamps will flash 5 times. Then,  
with the power still on, set dipswitch 1 back to the "ON" position and use machine normally.

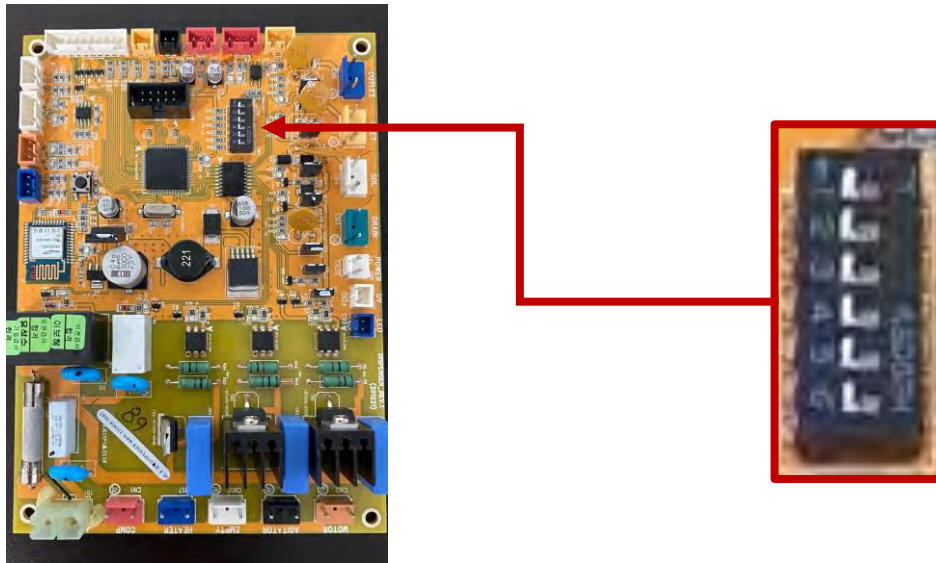

Resetting Time Counter

## Service for Refrigerant Lines

### ! Caution !

1. All parts and screws should be fixed securely before and after the equipment is serviced.
2. Since POE oil for R-404A refrigerant absorbs moisture from the air quickly, be careful to prevent water ingress when replacing or repairing the system.
3. Always replace the filter drier when repairing the refrigeration system.
4. When replacing or repairing parts in the refrigeration system, make sure that the parts and copper piping are not "open" for more than 15 minutes.

### (1) Refrigerant Recovery

When the right-side panel of the ice making unit is opened, there is an access valve on the low-pressure side of the compressor, and the service valve is used for refrigerant recovery, filling, and system vacuum. The refrigerant should be recovered in a safe container. Do not discharge into the atmosphere.

### (2) Evacuation and Recharge [R-404A]

1. Make sure to have manifold gauge, micron gauge, and vacuum pump. Ensure that the manifold hose connected to the vacuum pump is securely connected to the valve on the low-pressure side.
2. Turn on the vacuum pump. Take care that oil does not flow back from the vacuum pump.
3. Vacuum until 500 microns is reached. Vacuum time will depend on the capacity of the vacuum pump.
4. Close the low-pressure valve on the manifold gauge.
5. Remove the vacuum pump and connect the refrigerant cylinder. Please refer to the product nameplate for the correct refrigerant charge.
6. Using a scale, weigh in the system charge with R404A liquid refrigerant.
7. Disconnect manifold from the service valve of the system.
9. Replace service valve cap.



Service Port





Recovery & Charging  
Equipment

## Removal & Replacement of Ice Dispensing Solenoid

### ! Caution !

Before removing the ice dispensing solenoid, be sure to empty the ice hopper off any ice. Failure to do so will result with an uncontrollable flow of ice emptied out of the hopper.

1. Remove front panel to expose the ice hopper.
2. Disconnect the solenoid wire & LED/UV light wires from the PCB.
3. Remove the 6 fixing screws from the ice dispensing solenoid.
4. Pull the ice dispensing solenoid away from the ice hopper.
5. Perform the same steps in reverse order to reassemble.

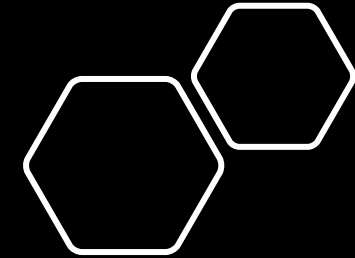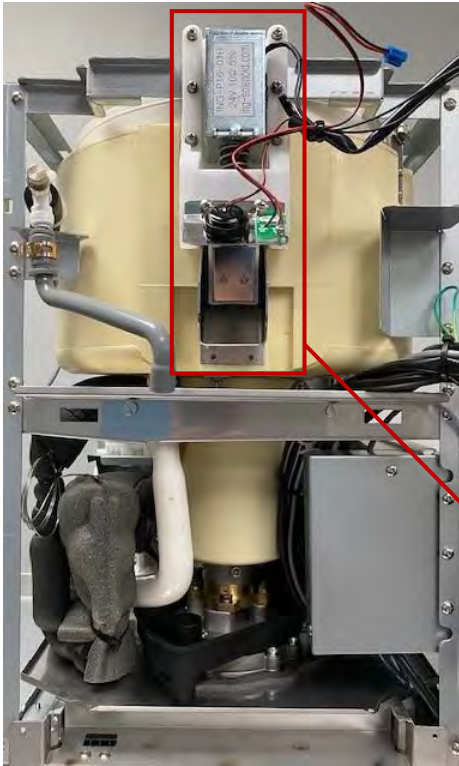

Disassembly ID-0450

## Removal and Replacement of Compressor

### ! Caution !

Replace the filter drier every time the sealed refrigeration system is opened.


1. Turn off the power switch and either turn off the circuit breaker or unplug the power cord from the outlet and remove the front & right-side panels, as well as the metal splash shield to access the compressor.
2. Remove the compressor terminal cover from the compressor and disconnect the compressor wiring.
3. Recover the refrigerant and store it in an approved container.
4. Braze out the discharge, suction and access pipe from the compressor using torches.



### ! Warning !

When servicing the refrigeration system, make sure that the torch flame does not touch any wires or parts.

5. Remove the bolts holding the compressor to its base and remove the compressor from the machine.
6. Assemble the new compressor by re-using the rubber grommets from the bad compressor.
7. Clean copper tubing with sandpaper on the discharge, suction and access lines.
8. Install the compressor in the fixed position and fasten it with the bolts.
9. Connect the discharge, suction and access tubes to the compressor.
10. Braze in the access, suction and discharge pipes (do not change this order). Flow 3-4 PSIG nitrogen gas during soldering.
11. Install a new dryer.
12. Check for leaks with 140 PSIG nitrogen gas and soap bubbles.
13. Weigh in refrigerant charge. Refrigerant type and quantity are determined by product nameplate.
14. Connect the compressor wire terminals by assembling them in the correct position. Replace the protective cover.
15. Assemble the panels, connect the power, turn on the circuit breaker, and turn on the power switch.

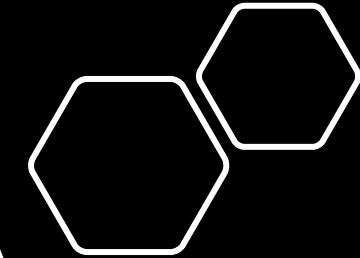

Disassembly ID-0450

## Removal and Replacement of Expansion Valve

### ! Caution !

Sometimes moisture in the refrigeration system exceeds the drier's capacity, causing the expansion valve to freeze. Whenever the refrigeration system is open, replace the drier and do not open the new drier until all repairs and part replacements are complete.

1. Turn off the power switch and the circuit breaker, unplug the power cord from the outlet, and then remove the right-side panel.
2. Recover the refrigerant and store it in an approved container.
3. Remove the sensing bulb from the suction line.
4. Remove the expansion valve cover and braze out the expansion valve.
5. Braze in new expansion valve while flowing 3-4 PSIG nitrogen gas.

### ! Warning !


**Wrap a wet cloth around the valve body to prevent it from heating up. (The body should not exceed 249°F when soldering.)**

6. Replace with a new dryer.
7. Check that there are no leaks with nitrogen gas at 140 PSIG and soap bubbles.
8. Weigh in refrigerant charge. Refrigerant type and quantity are determined by product nameplate.
9. Replace the sensing bulb onto the suction line, tighten it with a band, and wrap it completely with insulation material (Foam PE).
10. Wrap the expansion valve (TXV) with expansion valve cover (insulation material) to prevent any air gaps.
11. Assemble the panels, connect the power, turn on the circuit breaker, and turn on the power switch.



Sensing  
Bulb

Expansion  
Valve


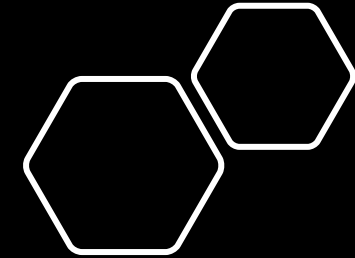


Disassembly ID-0450



## Removal and Replacement of Water Dump Solenoid



1. Turn off the power switch and the circuit breaker, unplug the power cord from the outlet, remove the left and/or rear panel, and close the valve on the water supply line.
2. Unscrew the 2 fixing screws to remove the splash shield to gain better access to the dump valve and hoses.
3. Remove the clamps and hoses from the dump valve.
4. Disconnect the terminals connected to the dump valve.
5. Remove the 2 screws to remove coil from the body and clean diaphragm if scaled.
6. Install the cleaned/new dump valve in its original position and assemble it to the bracket.
7. Connect hoses to drain valve and fix with clamp.
8. Open the valve on the water supply line.
9. Reassemble the panels in their correct positions, connect the power cord to the outlet, turn on circuit breaker, and turn on the main power switch.
10. Switch the ICE-OFF-WASH switch to the 'ice' position to ensure that the water drains well and check for leaks.

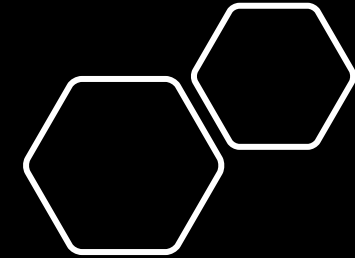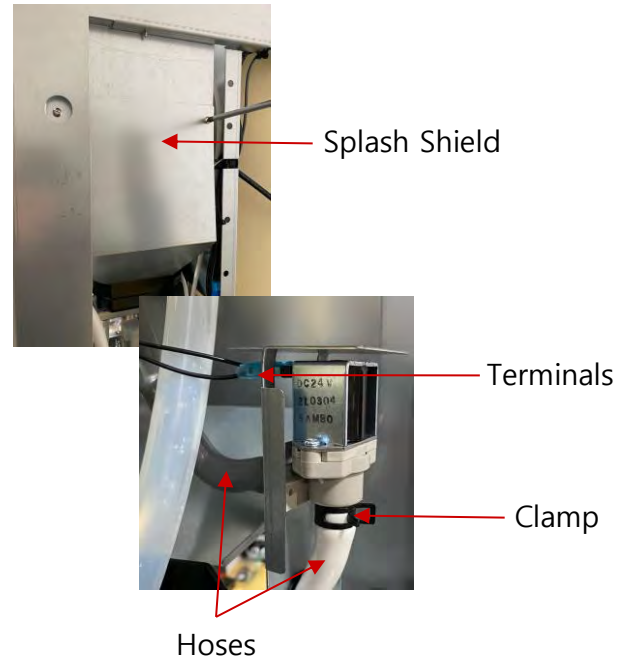

Disassembly ID-0450

## Removal and Replacement of Float Switch


1. Turn off the power switch and the circuit breaker, unplug the power cord from the outlet, remove the top and back panels, and close the valve on the water supply line.
2. Lift up on the water reservoir cover to unseat it from the reservoir.
3. Remove the float switch from the reservoir cover by simply pushing up on it from under the cover.
4. Reassemble the parts in reverse order from teardown.
5. Reassemble the panels in their correct positions, connect the power cord to the outlet, turn on circuit breaker, and turn on the main power switch.
6. Open the valve on the water supply line.
7. Switch the ICE-OFF-WASH switch to the 'ice' position to ensure that the water fills/drains well and check for leaks.

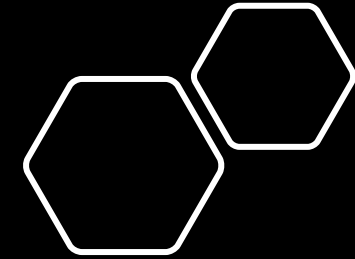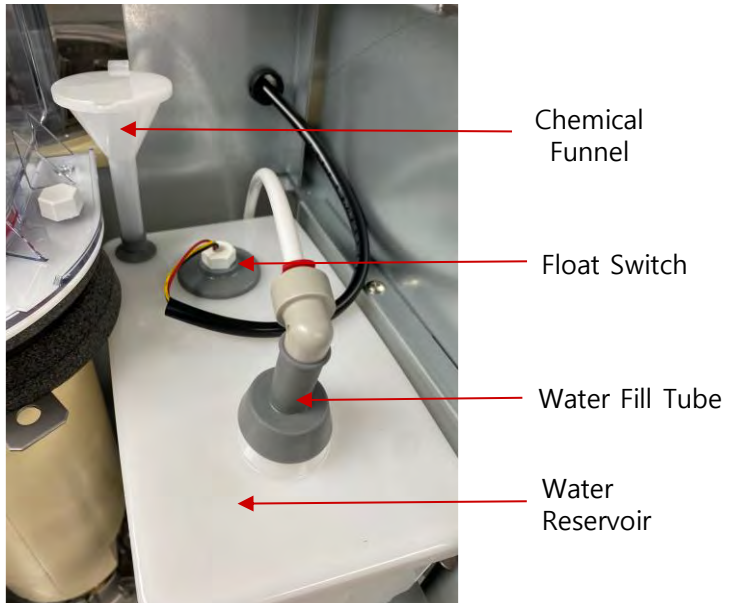

Disassembly ID-0450

## Removal and Replacement of Evaporator Assembly

1. Close the water supply and drain dispenser by using the forced drain function (when FND is on, press the DOWN and SET buttons simultaneously for 3 seconds).
2. Set main power switch to OFF and remove power cord from outlet. Then remove the top and back panels.
3. Remove the EXTRUDER cover by loosening the three, white thumbscrews and pulling up on the cover to remove it.
4. Cut cable tie and remove insulation just below the white nylon plate that the cover was attached to.
5. Loosen the hose clamp and remove the extruder plate to gain better access to the extruder fixing bolts.

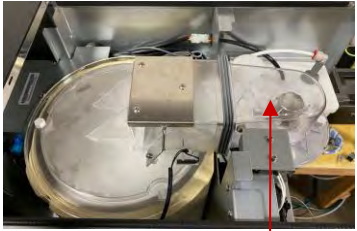

Remove the extruder cover



Remove insulation



Remove extruder plate

3 x M8 head fixing bolts



Extruder & Auger



### ▪ Extruding Head

1. Remove the three fixing bolts (M8) and lift the auger/extruder head out.
2. If the wear tolerance of the extruder exceeds 0.5mm (0.02") or if there are scratches, replace it.

### ▪ Auger

1. Lift the auger up.
2. If the coupling contact is worn or the blade is scratched, replace the auger.

**\* The mechanical seal is attached to the bottom of the auger.  
Replace the seal when it leaks at the bottom of the evaporator.**



Mechanical Seal Rotor

Disassembly ID-0450

## Removal and Replacement of Evaporator Assembly

### ▪ Evaporator

1. Recover the refrigerant and store it in an approved container.

Whenever the refrigeration system is open, replace the drier and do not open the new drier until all repairs and part replacements are complete.

2. Remove the sensing bulb from the suction line.
3. Braze out the copper pipe and expansion valve connections from the evaporator.
4. Disconnect the water hoses connected to the evaporator.
5. Remove the four bolts (M8) holding the evaporator cylinder to the housing and remove the evaporator by lifting it up, revealing the housing in full.

4 bolts M8  
(With mechanical seal stator inside)

Housing



Disassembly ID-0450

## Removal and Replacement of Housing, Mechanical Seal, & Gear Motor

### ▪ Housing & Mechanical Seal

The mechanical seal (carbon and spring) rest at the bottom of the auger shaft. The ceramic portion of the seal rests on top of the lower housing. If the contact surfaces of these two parts are worn or scratched, a leak will occur and must be replaced.

1. At this point the Auger should have already been removed from the evaporator and the mechanical seal can be removed from the bottom of the auger.
2. With the evaporator assembly separated from the housing, the ceramic portion of the seal can be removed from the bottom of the evaporator.
3. Remove the 4 bolts securing the housing to the gearbox.
4. Lift up on the housing to remove it and reveal the coupling.

### ▪ Gear Motor & Box

1. Loosen and remove the 3 fixing bolts (M8) that secure the gear motor and gearbox to the frame, to remove the entire assembly.
2. If you want to separate the housing from the box, you can disassemble it by loosening the 4 bolts at the bottom of the housing.
3. Removing the housing will gain access to the coupling at the bottom of the gearbox.

### ! Warning !

To prevent water leakage, do not scratch the surface of the O-ring, and care should be taken to prevent contamination between the mechanical seal stator and the rotor.



Evaporator

Housing



Coupling



Auger

Mechanical Seal




Disassembly ID-0450



## Removal and Replacement of Ice Hopper & Agitator Motor

### ▪ Ice Hopper & Agitator Motor


1. Close the water supply and drain it by forced drain function (when FND is on, press the DOWN and MODE buttons simultaneously for 3 seconds).
2. Dispense all ice in the Ice Hopper by using the Dispensing Lever on the front of the machine.
3. Set main power switch to OFF and remove power cord from outlet. Then remove the panels.
4. Separate the harness connected to the ice dispensing solenoid assembly, LED/UV light, primary bin switch and agitator motor.
5. Remove the ice hopper cover by loosening the 3 thumbscrews.
6. Remove the breaker bar and agitator assembly by lifting them both up and out from their respective locations.
7. Remove the ice base plate by rotating it clockwise until you can push on one end, so it tilts to one side. Then lift out.
8. Unscrew the 5 fixing screws to remove the splash shield over the compressor.

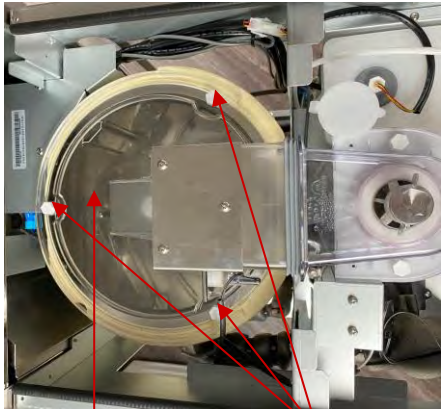


Hopper Cover  
Thumbscrews  
(3 total)



Ice Base Plate  
Breaker Bar  
Agitator Assy

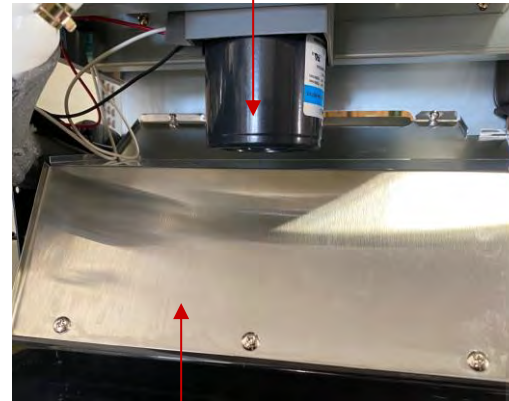

Agitator Motor  
Compressor Shield

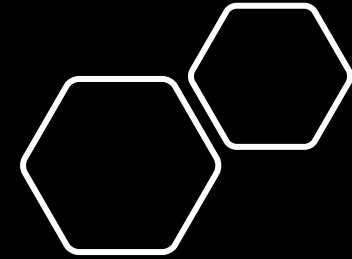


Disassembly ID-0450



## Removal and Replacement of Ice Hopper & Agitator Motor

### ▪ Ice Hopper & Agitator Motor (continued)

9. Unscrew the 4 fixing screws under the ice hopper fastening it to the frame and remove the ice hopper and agitator motor all as one piece.
10. Once removed, turn the ice hopper upside down to expose the agitator motor and loosen the 4 fixing screws to remove it.
11. Once the agitator motor is removed, the gear box can simply be lifted up to pulled away from the ice hopper.
12. Assemble the part in the reverse order of how it was disassembled.
13. Assemble the panels in the correct position, connect the power cord to the outlet, turn on circuit breaker, and turn on the main power switch.

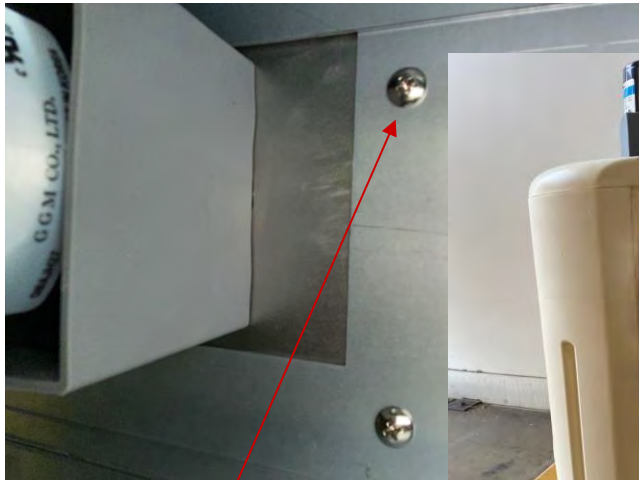

Hopper Fixing Screws  
(4 total)



Hopper Removed  
& Upside Down




Motor Fixing Screws  
(4 total)



Agitator  
Motor



Gearbox  
Removed

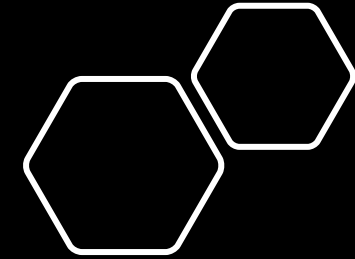

Disassembly ID-0450

## Suggested Maintenance Schedule

Maintenance intervals will vary with ambient & water conditions.  
These are only suggestions.

### DAILY

Clean These Items Daily



- Ice Chute - 2 parts
- Drip Trough
- Use a mild detergent.
- Rinse & dry after cleaning.
- Wipe exterior with a clean cloth & warm water.

Ice Chute

Water Trough


### WEEKLY

Clean These Items Weekly



- Air filter is located underneath the dispenser and can be pulled out from the front, just under the water trough.
- Clean air filter with water.
- Dry & replace after cleaning.

Air Filter

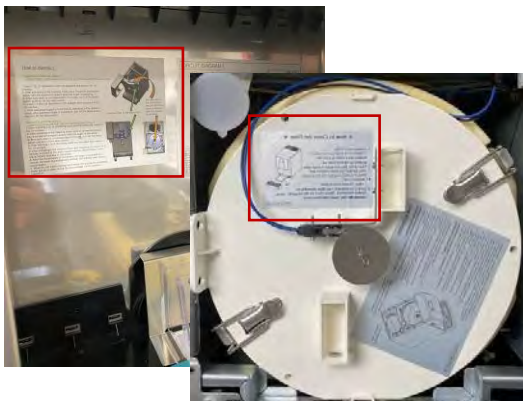


Cleaning instructions can also be found here:

ID-0160 – Hopper Cover

ID-0300 – Behind Door

ID-0450 – Behind Door

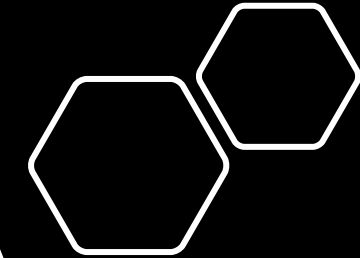

Maintenance Suggestions

# Suggested Maintenance Schedule

Maintenance intervals will vary with ambient & water conditions.  
These are only suggestions.

## EVERY 6 MONTHS

Clean These Items Every 6 Months

- Ice Hopper
- Evaporator, Auger, & Extruder
- Water Reservoir.
- Rinse & Dry After Cleaning.

(follow cleaning & sanitizing on 5-F)



## YEARLY

Inspect These Parts Yearly

- Water Dump Solenoid
- Water Inlet Solenoid
- Water Dispense Solenoid
- Water Supply/Drain Lines
- Wear/Cracks to the Mechanical Seal
- Auger/Bearing Clearances
- Wear/Cracks to the Housing Assy & Spline Coupling
- Wear & Cracks to O-Rings




Auger


Mechanical Seal



Dump Solenoid

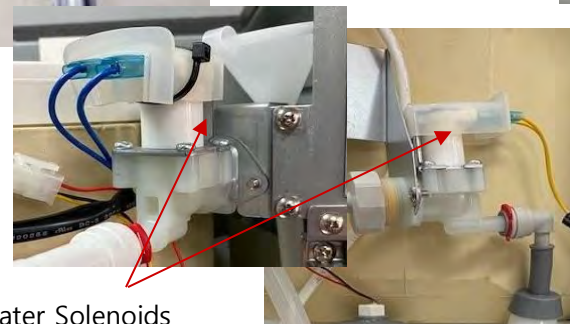

Water Solenoids

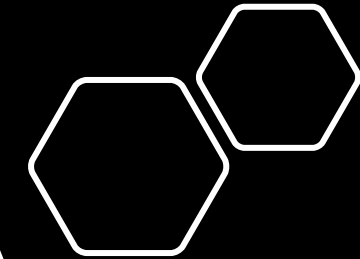

Maintenance Suggestions

## Suggested Maintenance Schedule

Maintenance intervals will vary with ambient & water conditions.  
These are only suggestions.

**EVERY 3  
YEARS**

### Preventative Maintenance - Technicians Only

- Inspect the inside of the evaporator cylinder for wear, cracks, etc.
- Inspect the auger for wear, cracks, etc. & replace if necessary.
- Inspect extruder for wear, cracks, etc.
- Replace the mechanical seal.
- Replace the housing o-ring.
- Inspect the coupling for wear, cracks, etc. & replace if necessary.
- Lift coupling from gearbox and inspect for wear, cracks, etc.



Auger

Mechanical Seal




Housing

Evaporator Cylinder

O-Ring (red)



Coupling

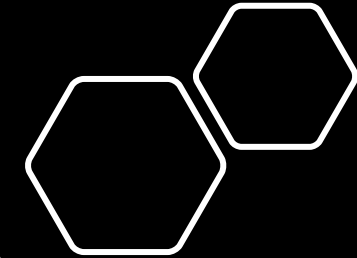

Maintenance Suggestions



## Preparation for Washing and Disinfection - Power switch set to 'ON' and operation switch set to 'OFF'

Dispense Ice



- Press the ICE & WATER buttons simultaneously for 3 seconds until both light up.
- Place a cup/bucket under ice chute and press dispensing lever to discharge ice until hopper is empty.



- Press the DOWN & SET buttons simultaneously for 3 seconds. Machine will enter the FORCED DRAIN feature for 30 seconds.

**In a large pitcher, mix 8oz of nickel safe, ice machine cleaner or sanitizer for every gallon of water. PLEASE OBSERVE THE CLEANING SOLUTION MIXING RATIO. FAILURE TO DO SO MAY RESULT IN CHEMICAL DAMAGE TO THE MACHINE.**


### Note:

Ice machine cleaners are used to remove mineral deposits such as lime marks. It cannot be used to remove scale or sticky mucus. It is recommended to proceed with cleaning first and then to sanitize. Do not mix chemicals together, doing so is **VERY** dangerous!

Cleaning Procedure

## Inside Product Cleaning - (after removal of top panel & power off)

Remove Cover

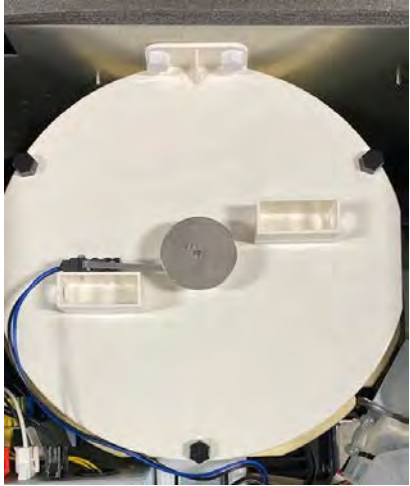

Remove Agitator




Remove Ice Base Plate



Clean Inside of Hopper



Clean Extruder Area

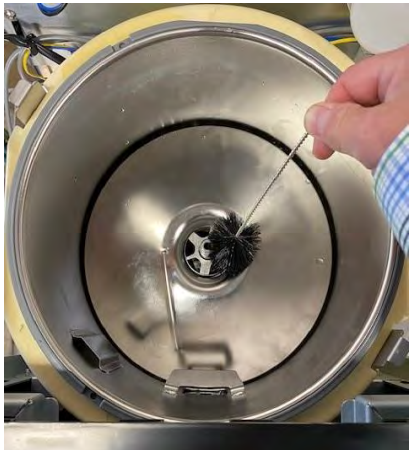


Rinse With Water



Replace Parts & Cover




Clean Air Filter

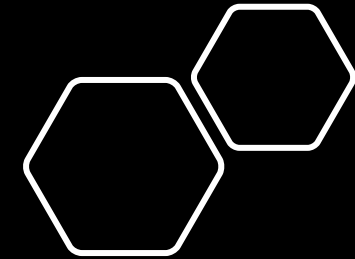

Cleaning Procedure




## Steps to use the WASH cycle:

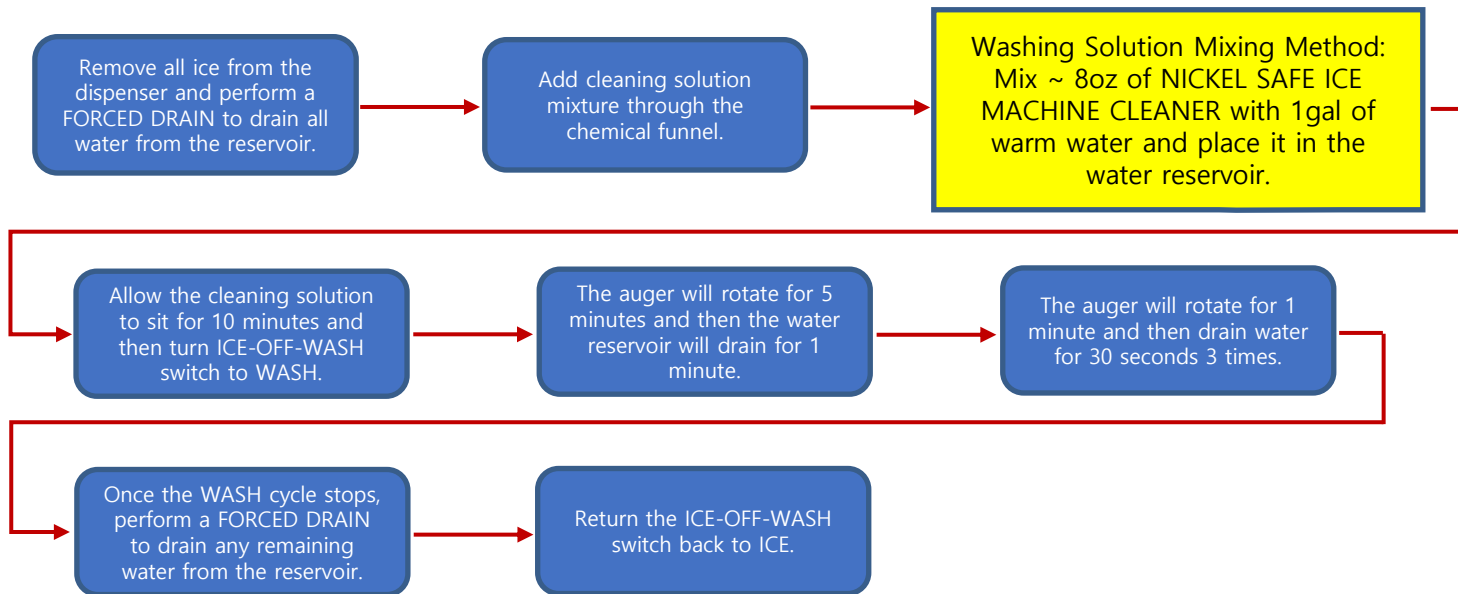

### <! Caution !>

- Do not use ammonia-based products as they may cause damage to the personnel or ice machine itself.
- Cleaning and sanitizing must be conducted in accordance with the instructions in the user manual.
- Always wear protective gloves and goggles to prevent skin or eyes from coming into contact with the cleaning solution.
- Do not use ice made with the cleaning or sanitizing solution. Make sure that no cleaning solution is left on any part of the ice maker and the ice hopper.

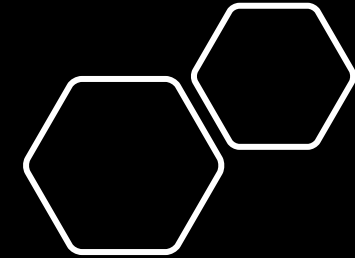


Cleaning Procedure


# Service Bulletin

#SB10122JM


ID-0450-AN PCB Failure

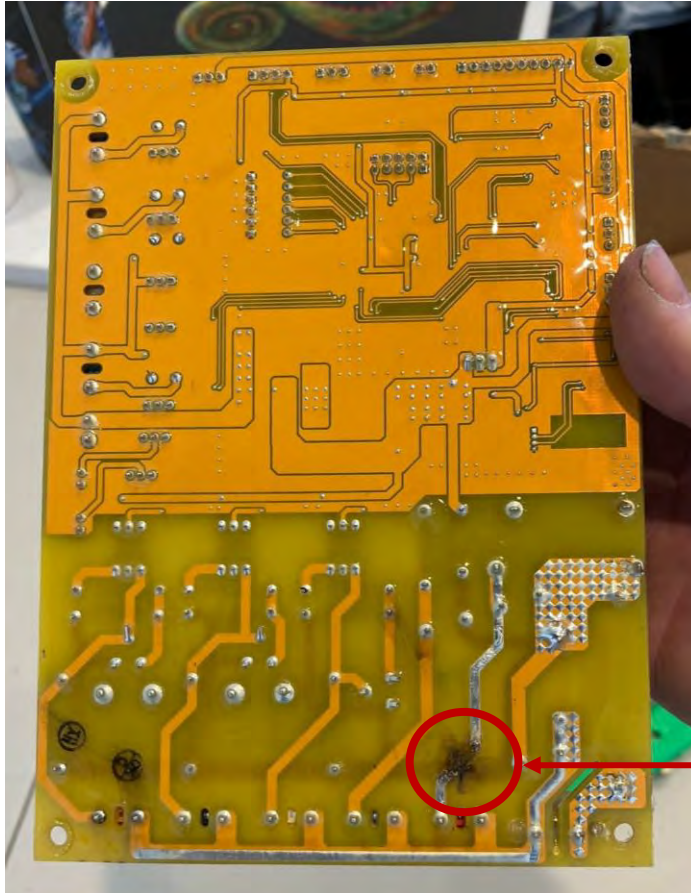


The symptoms of this type of failure that the PCB will have a burn mark on the back side, where the compressor plugs in at the corresponding front side. The customer complaint will be that the machine is not making ice And is displaying either Error Code 1 or 3 indicating a higher-than-normal evaporator temperature.

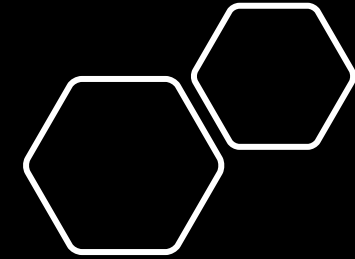


Service Bulletin

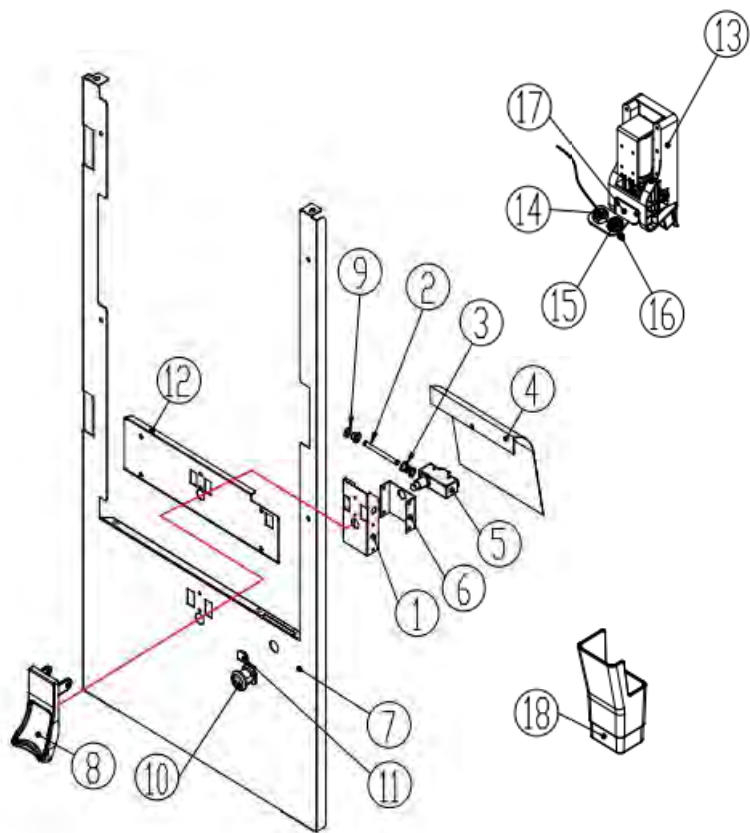


| NO | ITEMS                      | CODE      | Q'ty |
|----|----------------------------|-----------|------|
| 1  | BRACKET BASE SHUTTER LEVER | 301178400 | 1    |
| 2  | SHAFT SHUTTER LEVER        | 314043500 | 1    |
| 3  | POM BEARING                | 310006400 | 2    |
| 4  | FILM MICRO SWITCH          | 120001500 | 1    |
| 5  | MICRO SWITCH               | 355024200 | 1    |
| 6  | BRACKET MICRO SWITCH       | 301178500 | 1    |
| 7  | FRONT PANEL DOWN           | 317218700 | 1    |
| 8  | SHUTTER LEVER              | 309005801 | 1    |
| 9  | E-RING                     | 213001300 | 2    |
| 10 | LOCKER                     | 219003800 | 1    |
| 11 | LOCKER SUUPORT             | 301178201 | 1    |
| 12 | FRONT PANEL DOWN SUPPORT   | 317212250 | 1    |
| 13 | ASSY SHUTTER               | 427060000 | 1    |
| 14 | UV WATER PROOF MODULE      | 500001900 | 1    |
| 15 | BULKHEAD CONNECTOR         | 398017900 | 1    |
| 16 | WATER NOZZLE               | 233000400 | 1    |
| 17 | UV BRACKET                 | 301199750 | 1    |
| 18 | SPOUT                      | 318038700 | 1    |

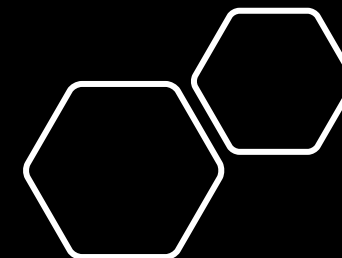


Parts Breakdown  
ID-0450

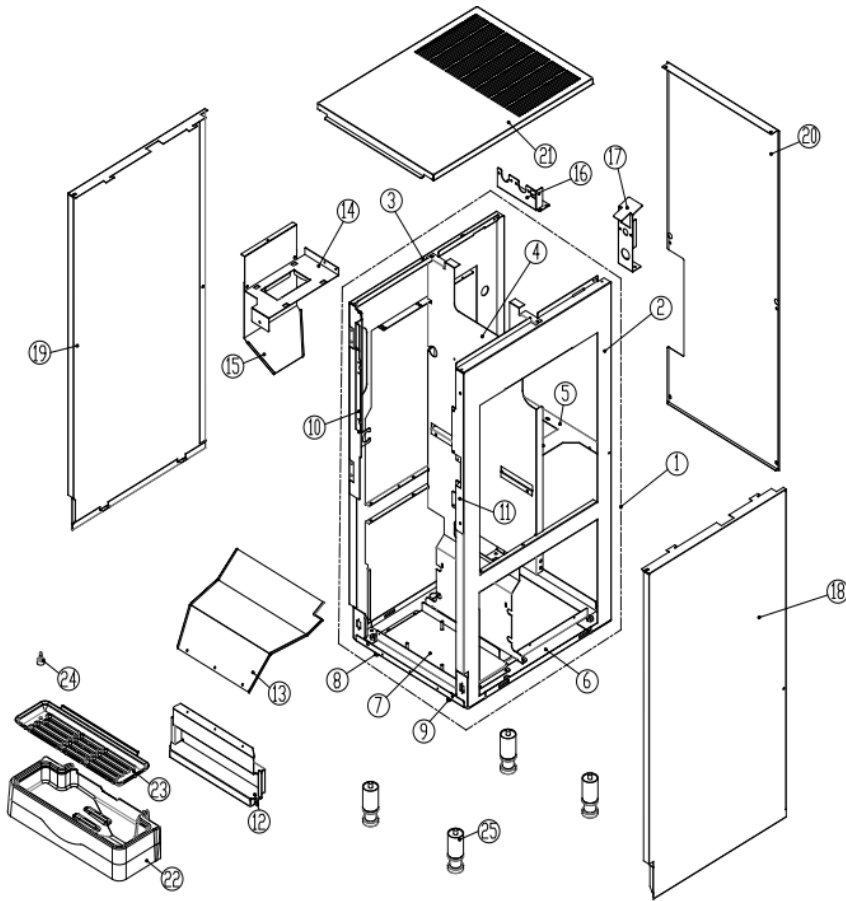


| NO | ITEMS               | CODE      | Q'ty |
|----|---------------------|-----------|------|
| 1  | ASSY ANGLE          | 444016410 | 1    |
| 2  | RIGHT SIDE ANGLE    | 332047110 | 1    |
| 3  | LEFT SIDE ANGLE     | 332047010 | 1    |
| 4  | MIDDLE SIDE ANGLE   | 332046900 | 1    |
| 5  | BRACKET AUGER MOTOR | 301202900 | 1    |
| 6  | BASE PLATE          | 332047200 | 1    |
| 7  | COMPRESSOR BRACKET  | 332046810 | 1    |
| 8  | GUIDE AIR FILTER L  | 332047400 | 1    |
| 9  | GUIDE AIR FILTER R  | 332047300 | 1    |
| 10 | FRONT PANEL SPASE L | 301203300 | 1    |
| 11 | FRONT PANEL SPASE R | 301203200 | 1    |
| 12 | BRACKET TOP DRAIN   | 301202200 | 1    |
| 13 | PLATE DRAIN GUIDE   | 317219100 | 1    |
| 14 | BRACKET WATER TANK  | 301202800 | 1    |
| 15 | DRAIN GUIDE PLATE   | 301203500 | 1    |
| 16 | DRAIN VALVE BRACKET | 301202100 | 1    |
| 17 | BRACKET DRAIN WATER | 301202000 | 1    |
| 18 | PANEL SIDE R        | 317219401 | 1    |
| 19 | PANEL SIDE L        | 317219301 | 1    |
| 20 | PANEL BACK          | 317219201 | 1    |
| 21 | TOP COVER           | 317217900 | 1    |
| 22 | DRAIN BOX           | 336029601 | 1    |
| 23 | SPLASH GUARD        | 336029702 | 1    |
| 24 | DRAIN FLOAT         | 336030100 | 1    |

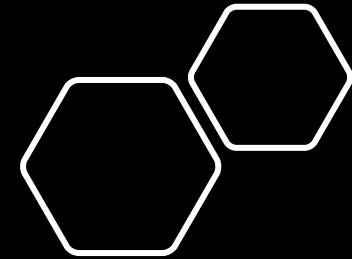

Parts Breakdown  
ID-0450

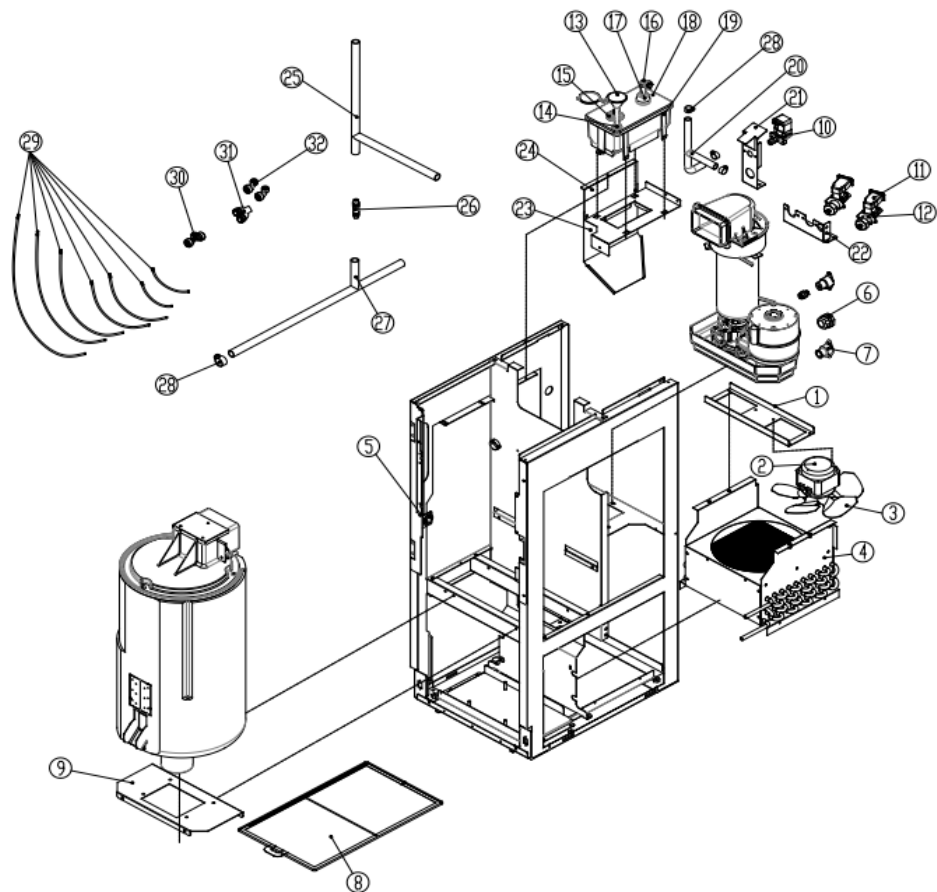


| NO | ITEMS                                  | CODE      | Q'ty |
|----|----------------------------------------|-----------|------|
| 1  | BRACKET FAN MOTOR                      | 301205600 | 1    |
| 2  | FAN MOTOR/EURO/82UL-4027               | 353035800 | 1    |
| 3  | FAN                                    | 308004700 | 1    |
| 4  | CONDENSOR ASSY (115V/60Hz)             | 411035310 | 1    |
| 5  | GROMMET BUSHING                        | 232003500 | 2    |
| 6  | CABLE GLAND                            | 227001200 | 1    |
| 7  | SOCKET PT3/4"                          | 215019000 | 1    |
| 8  | AIR FILTER                             | 640009000 | 1    |
| 9  | HOPPER SUPPORT BASE                    | 301202500 | 1    |
| 10 | WATER VALVE                            | 340029500 | 1    |
| 11 | WATER VALVE CAP                        | 319007900 | 2    |
| 12 | WATER VALVE                            | 340029400 | 2    |
| 13 | FUNNEL                                 | 318039300 | 1    |
| 14 | FUNNEL PACKING                         | 303037200 | 1    |
| 15 | ASSY WATER LEVEL SENSOR                | 722014500 | 1    |
| 16 | STEM ELBOW                             | 398015000 | 1    |
| 17 | RESERVOIR INLET                        | 319007801 | 1    |
| 18 | WATER RESERVOIR COVER                  | 654000400 | 1    |
| 19 | WATER RESERVOIR                        | 654000200 | 1    |
| 20 | MULTIPLE WATER HOSE                    | 229033602 | 1    |
| 21 | BRACKET DRAIN WATER SOL                | 301202000 | 1    |
| 22 | DRAIN V/V BRACKET                      | 301202100 | 1    |
| 23 | DRAIN GUIDE PLATE                      | 301203500 | 1    |
| 24 | BRACKET WATER TANK                     | 301202800 | 1    |
| 25 | HOSE DRAIN B                           | 229035300 | 1    |
| 26 | NIPPLE                                 | 398011401 | 1    |
| 27 | HOSE DRAIN A                           | 229035200 | 1    |
| 28 | BAND SPRING 17                         | 203003200 | 7    |
| 29 | PE TUBE(O.D 3/8")                      | 229013600 | -    |
| 30 | EQUAL TEE(1/4")                        | 398014300 | 1    |
| 31 | TWO WAY DIVIDER(1/4")                  | 398017000 | 1    |
| 32 | REDUCING ELBOW                         | 398013700 | 2    |
| 33 | STRAIGHT ADAPTOR                       | 398013400 | 2    |
| 34 | SOCKET TURB (1/4"), THREAD NPTF (1/8") | 215013500 | 1    |

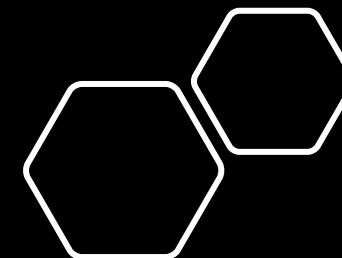


Parts Breakdown  
ID-0450




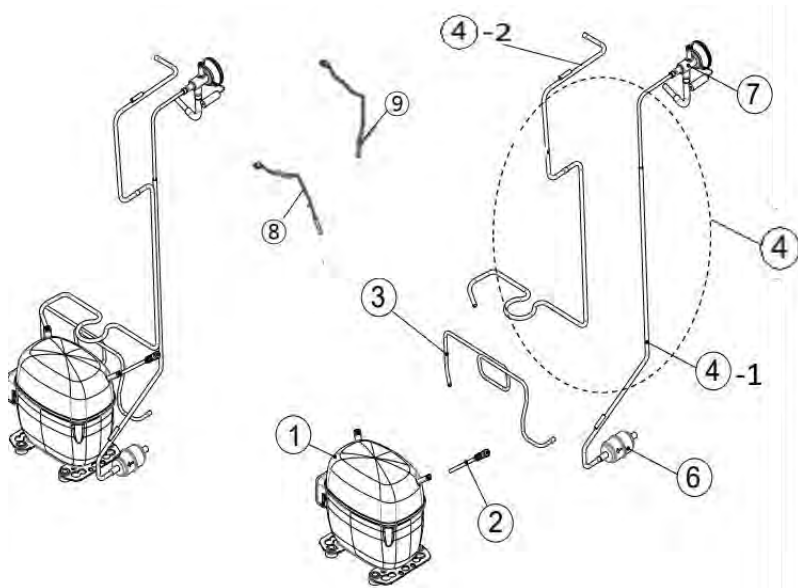


| NO  | ITEMS                   | CODE      | Q'ty |
|-----|-------------------------|-----------|------|
| 1   | COMPRESSOR              | 401023000 | 1    |
| 2   | CHARGE ASSY             | 459000400 | 1    |
| 3   | DISCHARGE PIPE ASSY     | 325158610 | 1    |
| 4   | SUCTION PIPE ASSY       | 325158910 | 1    |
| 4-1 | DRY-EXP PIPE            | N/A       |      |
| 4-2 | SUCTION PIPE            | N/A       |      |
| 6   | FILTER DRYER            | 372001300 | 1    |
| 7   | EXPANSION VALVE         | 340004500 | 1    |
| 8   | EVA SENSOR (YELLOW)     | 655008220 | 1    |
| 9   | CONDENSER SENSOR (BLUE) | 655008210 | 1    |

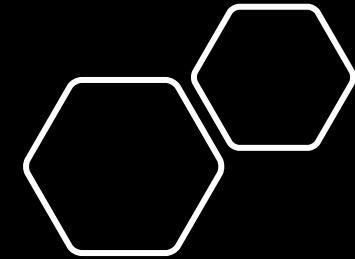


Parts Breakdown  
ID-0450

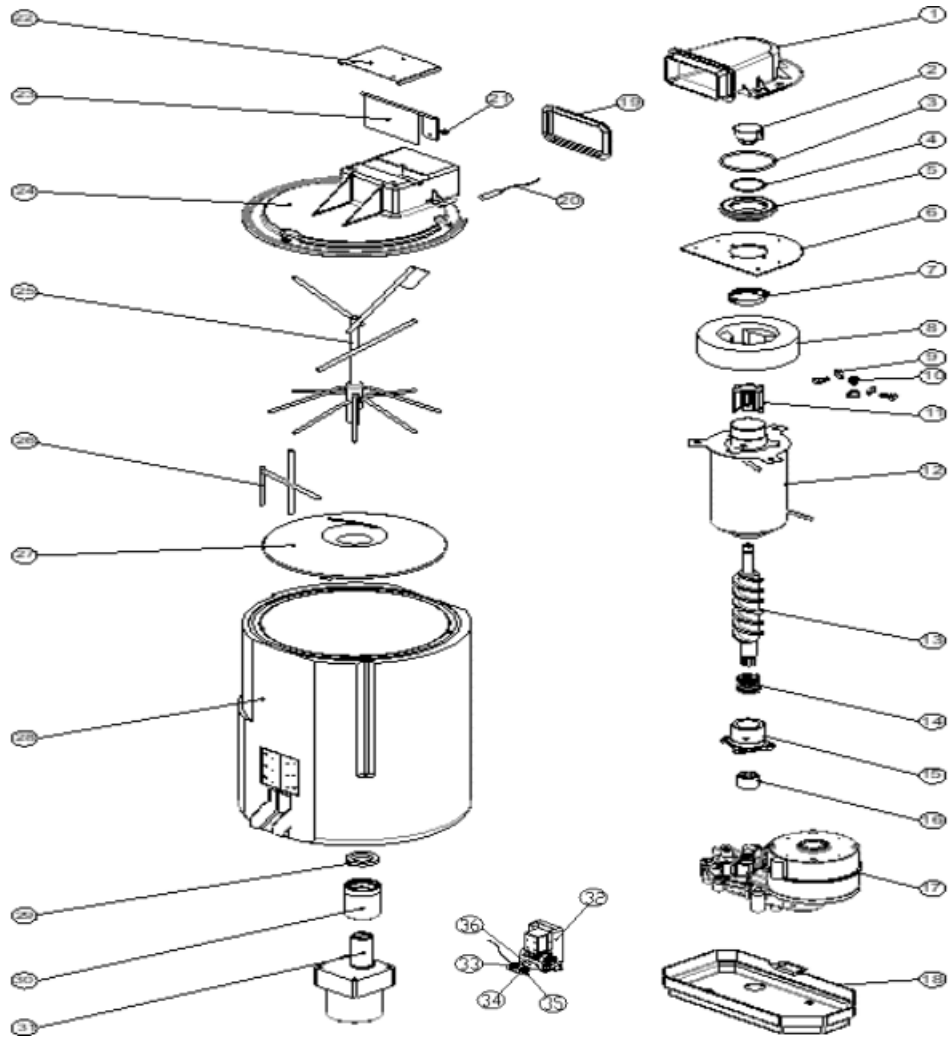


| NO | ITEMS                      | CODE      | Q'ty |
|----|----------------------------|-----------|------|
| 1  | SPOUT                      | 450000600 | 1    |
| 2  | IMPELLER ICE ASSY          | 390001500 | 1    |
| 3  | PACKING                    | 303040100 | 1    |
| 4  | O-RING                     | 303037500 | 1    |
| 5  | HOLD SPOUT                 | 395007800 | 1    |
| 6  | FLANGE SPOUT               | 301199500 | 1    |
| 7  | HOSE CLAMP 2"              | 229026710 | 1    |
| 8  | FOAM PE EVA TOP            | 306045400 | 1    |
| 9  | HEAD LOCKING WASHER        | 211008000 | 3    |
| 10 | CUTTER BOLT                | 214030500 | 3    |
| 11 | EXTRUDING HEAD ASSY        | 491000801 | 1    |
| 12 | EVAPORATOR FORM TOTAL ASSY | 409044310 | 1    |
| 13 | AUGER                      | 430005001 | 1    |
| 14 | MECHANICAL SEAL            | 303036900 | 1    |
| 15 | HOUSING ASSY               | 491000900 | 1    |
| 16 | SPLINE COUPLING            | 612000800 | 1    |
| 17 | AUGER MOTOR ASSY           | 406026400 | 1    |
| 18 | GEAR MOTOR DRAIN PAN       | 610035700 | 1    |
| 19 | PACKING SPOUT              | 303040400 | 1    |
| 20 | MAGNET SWITCH              | 355014200 | 1    |
| 21 | MOLDING MAGNET             | 322005600 | 1    |
| 22 | ICE CHUTE COVER            | 317219000 | 1    |
| 23 | ACTUATOR SHAFT ASSY        | 610035600 | 1    |
| 24 | HOPPER COVER               | 318041400 | 1    |
| 25 | AGITATOR ASSY              | 436003800 | 1    |
| 26 | MIXING BAR ASSY            | 436004200 | 1    |
| 27 | BASE PLATE                 | 610035400 | 1    |
| 28 | HOPPER FORM TOTAL ASSY     | 442009900 | 1    |
| 29 | REDENAR                    | 379003700 | 1    |
| 30 | BEARING POM                | 310007300 | 1    |
| 31 | AGITATOR MOTOR ASSY        | 406027610 | 1    |
| 32 | ASSY SHUTTER               | 427060000 | 1    |
| 33 | UV WATER PROOF MODULE      | 500001900 | 1    |
| 34 | BULKHEAD CONNECTOR         | 398017900 | 1    |
| 35 | NOZZLE WATER               | 233000400 | 1    |
| 36 | BRACKET UV LED             | 301199712 | 1    |

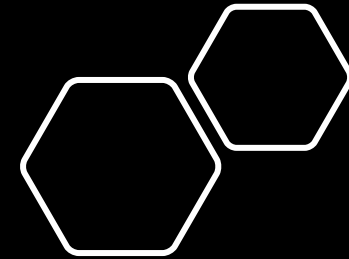

Parts Breakdown  
ID-0450

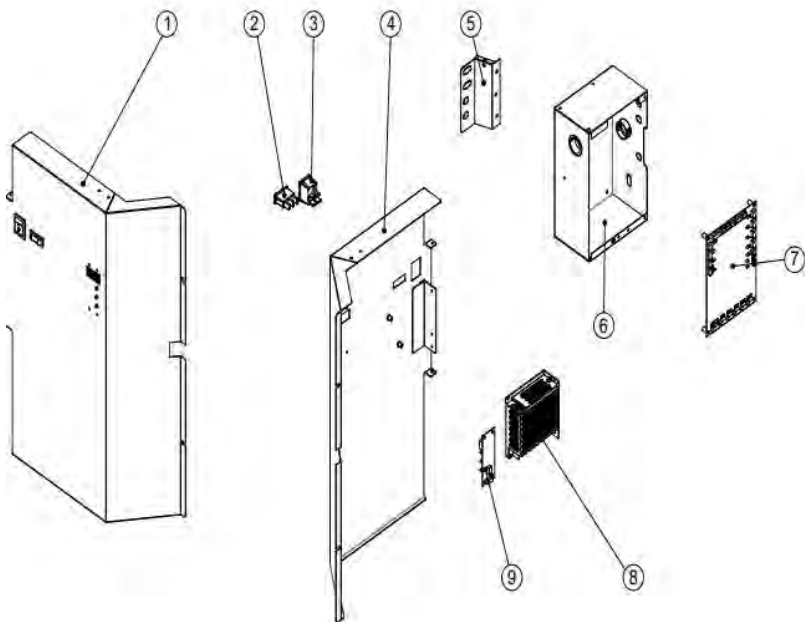

| NO | ITEMS                  | CODE      | Q'ty |
|----|------------------------|-----------|------|
| 1  | COVER CONTROL BOX ASSY | 374149500 | 1    |
| 2  | SWITCH 3L              | 355009800 | 1    |
| 3  | SWITCH                 | 355012400 | 1    |
| 4  | CONTROL BOX COVER      | 374149300 | 1    |
| 5  | CONTROL BOX BRACKET    | 301184900 | 1    |
| 6  | CONTROL BOX            | 374149400 | 1    |
| 7  | MAIN PCB               | 367015100 | 1    |
| 8  | SMPS                   | 629001300 | 1    |
| 9  | FND PCB                | 367013700 | 1    |

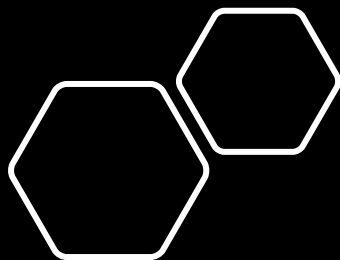

Parts Breakdown  
ID-0450

Thank You

