




30" FREE STANDING ELECTRIC RANGE CONVECTION

MODELS:

KFEG500ESS4 (Stainless)


COOKTOP PARTS

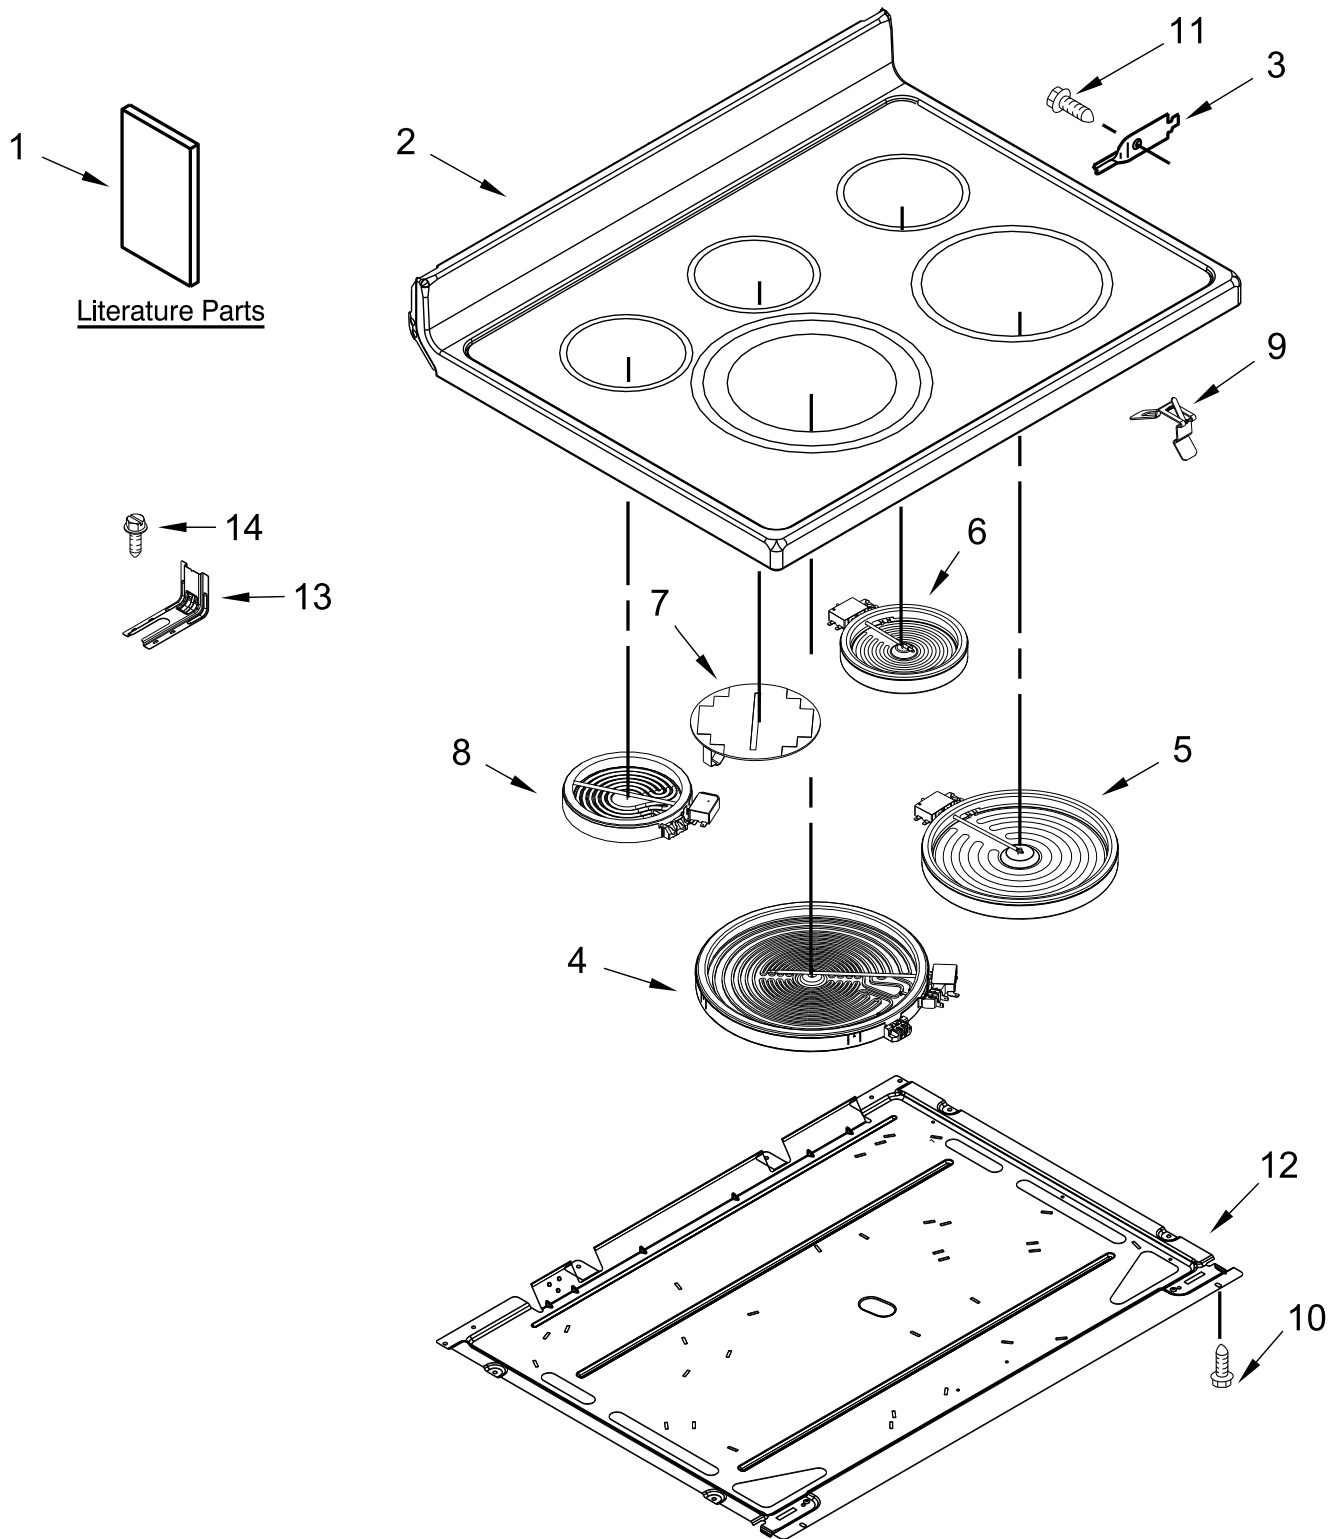

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W10248261	Element (1200W)	14	7101P485-60	Screw, Anti-Tip Kit
	W11509613	Use and Care Guide			(Right Rear)			
	W11489748	Quick Start Guide	7	W10799048	Element, Warm Zone			FOLLOWING PARTS NOT ILLUSTRATED
	W11393916	Tech Sheet (English)			(Center Rear)		W11454490	Harness, Main
2		Cooktop	8	W10342780	Element (1300W)		W11134550	Harness, Cooktop (Right)
	W10697352	Stainless			(Left Rear)			
3	3195060	Hinge, Cooktop	9	W10225448	Spring, Element		W11188424	Harness, Cooktop (Left)
4	W10711900	Element (3000W)	10	3196169	Screw		W11212183	Harness, Sensor
		(Left Front)	11	3196178	Screw		W11134592	Harness, Warm Zone
5	W10275048	Element	12	W10691223	Pan, Radiant Element			
		(3000/1400W)	13	W11379945	Bracket, Anti-Tip			
		(Right Front)						


CONTROL PANEL PARTS

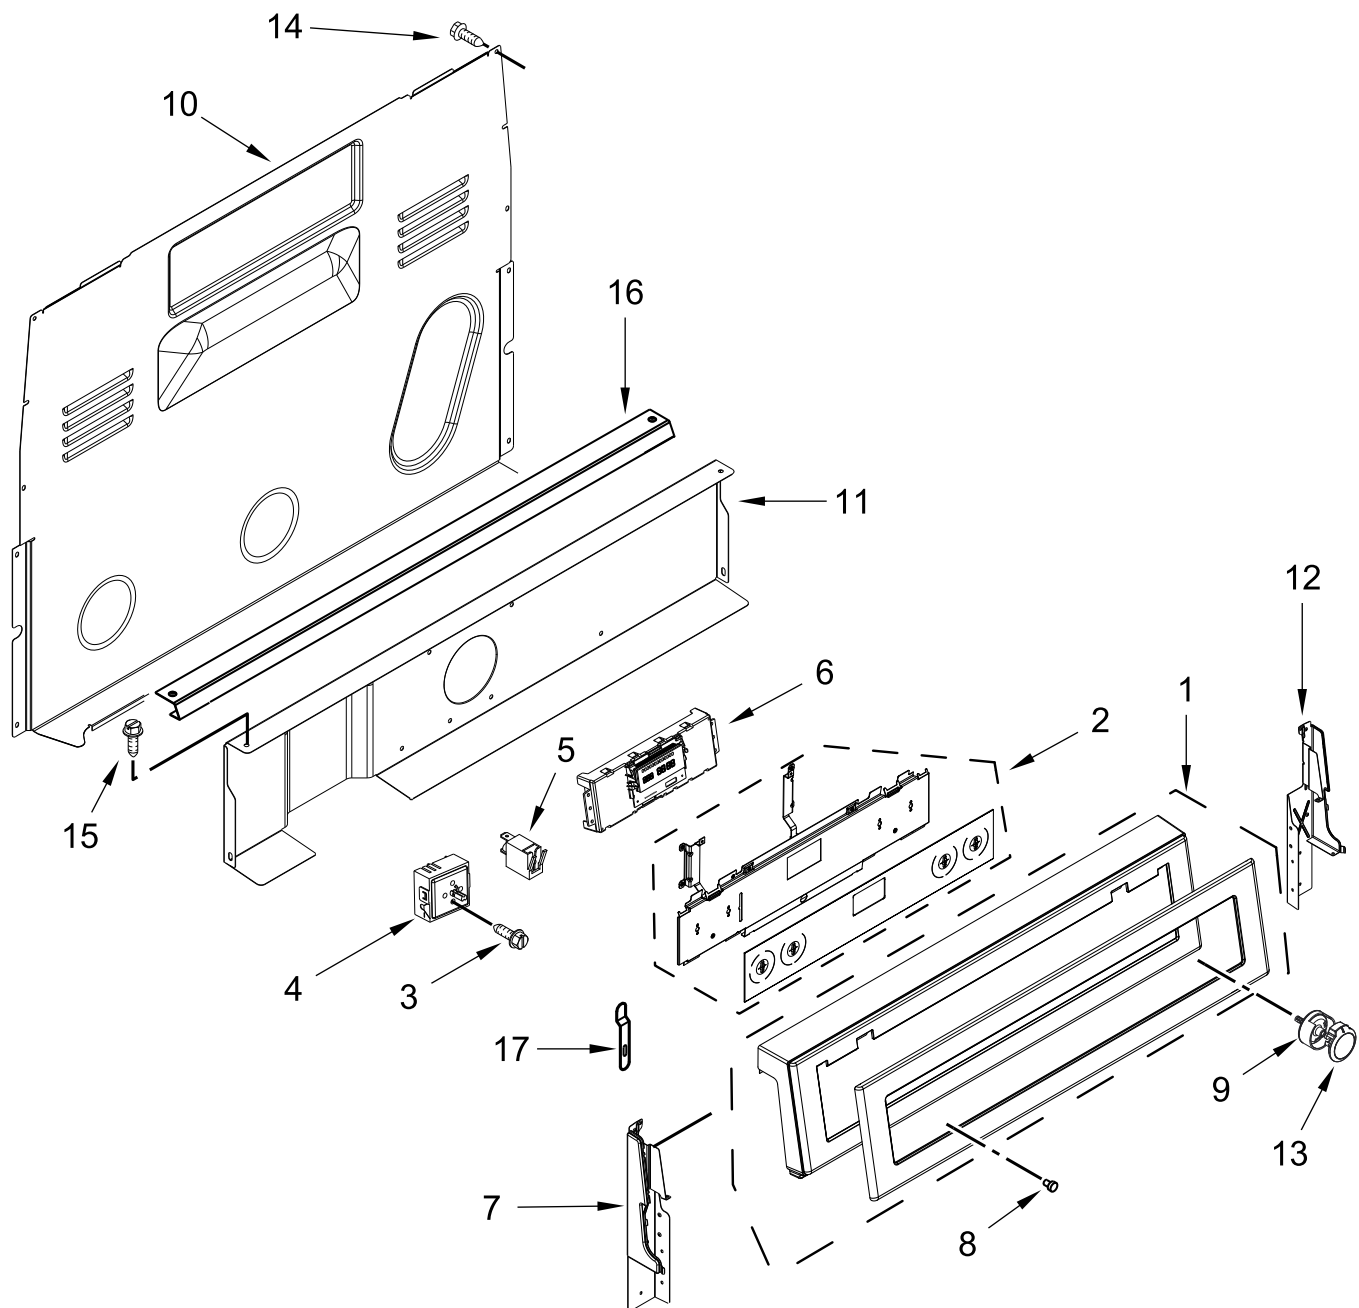

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console, Assembly	5	W10432504	Hot Surface Indicator	15	W10362924	Screw
	W10645848	Stainless	6	W10894863	Control, Maxwell	16	W10525121	Bracket, Console Mounting
2		Assembly, Active Overlay	7		Endcap			
	W10692149	Black		W10409002	Black (Left)	17	3196200	Clip, Spring
3	9780274	Screw	8	3196068	Lens, Indicator			
4	W10437092	Switch, Infinite (Left Front & Right Front)	9	W10645811	Bezel, Knob			
	W10437094	Switch, Infinite (Left Rear)	10	8272473	Cover, Upper Rear			
	W10578768	Switch, Infinite (Right Rear)	11	W10134247	Shield, Heat			
			12		Endcap			
				W10409003	Black (Right)			
			13		Knob			
				W10823535	Stainless			
			14	3196178	Screw			


CHASSIS PARTS

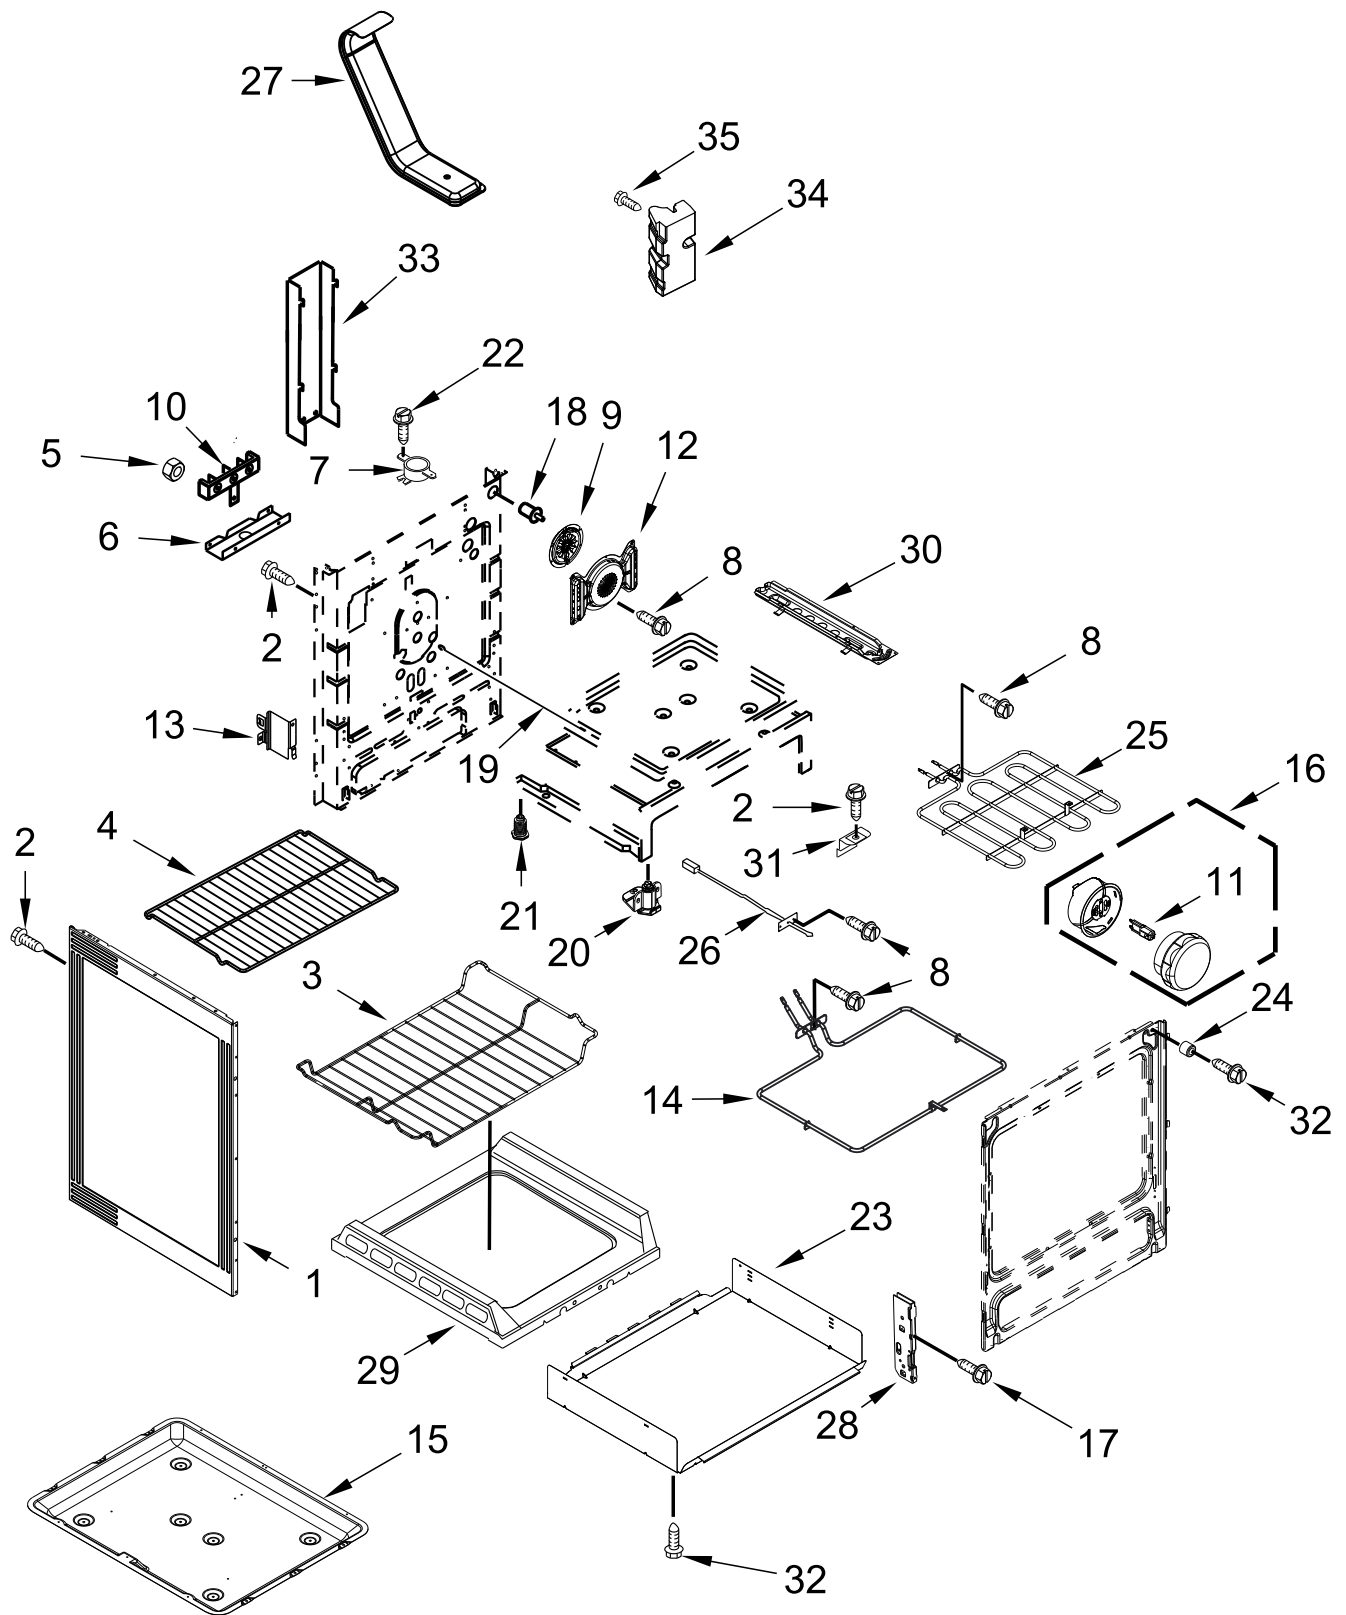

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Side	16	W11430367	Light Assembly	32	3196560	Screw
	W10162245	Black	17	W10031780	Screw	33	W10326122	Cover, Terminal Block
2	3196172	Screw	18	W10627802	Switch, Door	34	W10910404	Counterweight
3	W10289145	Rack, Oven (Gull-Wing)	19	W11370463	Rod, Door Switch	35	W11034869	Screw
4	W10531060	Rack, Oven	20	W10341186	Front Foot Assembly			FOLLOWING PARTS NOT ILLUSTRATED
5	3400029	Nut	21	W10058460	Foot, Leveling			
6	3186034	Bracket, Service	22	3196172	Screw	W10194393		Insulation, Wrap
7	3196548	Fuse, Thermal	23	W10726740	Shield, Heat	W10225524		Insulation, Back
8	W10362924	Screw	24	9758701	Spacer, Door	W10225523		Insulation, Bottom
9	W10756304	Assembly, Convection	25	W11095929	Element, Broil	4820F015-59		Insulation, Strap
10	W10245259	Block, Terminal	26	W10586204	Sensor			
11	W10571723	Bulb, Halogen 40 Watts	27	W10134285	Tube, Vent	W10281322		Kit, Bare Wire Adapter Block
12	W10346153	Baffle, Full Convection	28	W10289077	Receiver, Hinge			
13	W10273002	Bracket, Oven Support	29	W10774446	Bottom, Oven			
14	W10774342	Element, Bake	30	W10390007	Base Rail Assembly (Right)			
15	W11379357	Bake Pan		W10390008	Base Rail Assembly (Left)			
			31	W10035900	Support, Oven Bottom			


DOOR PARTS

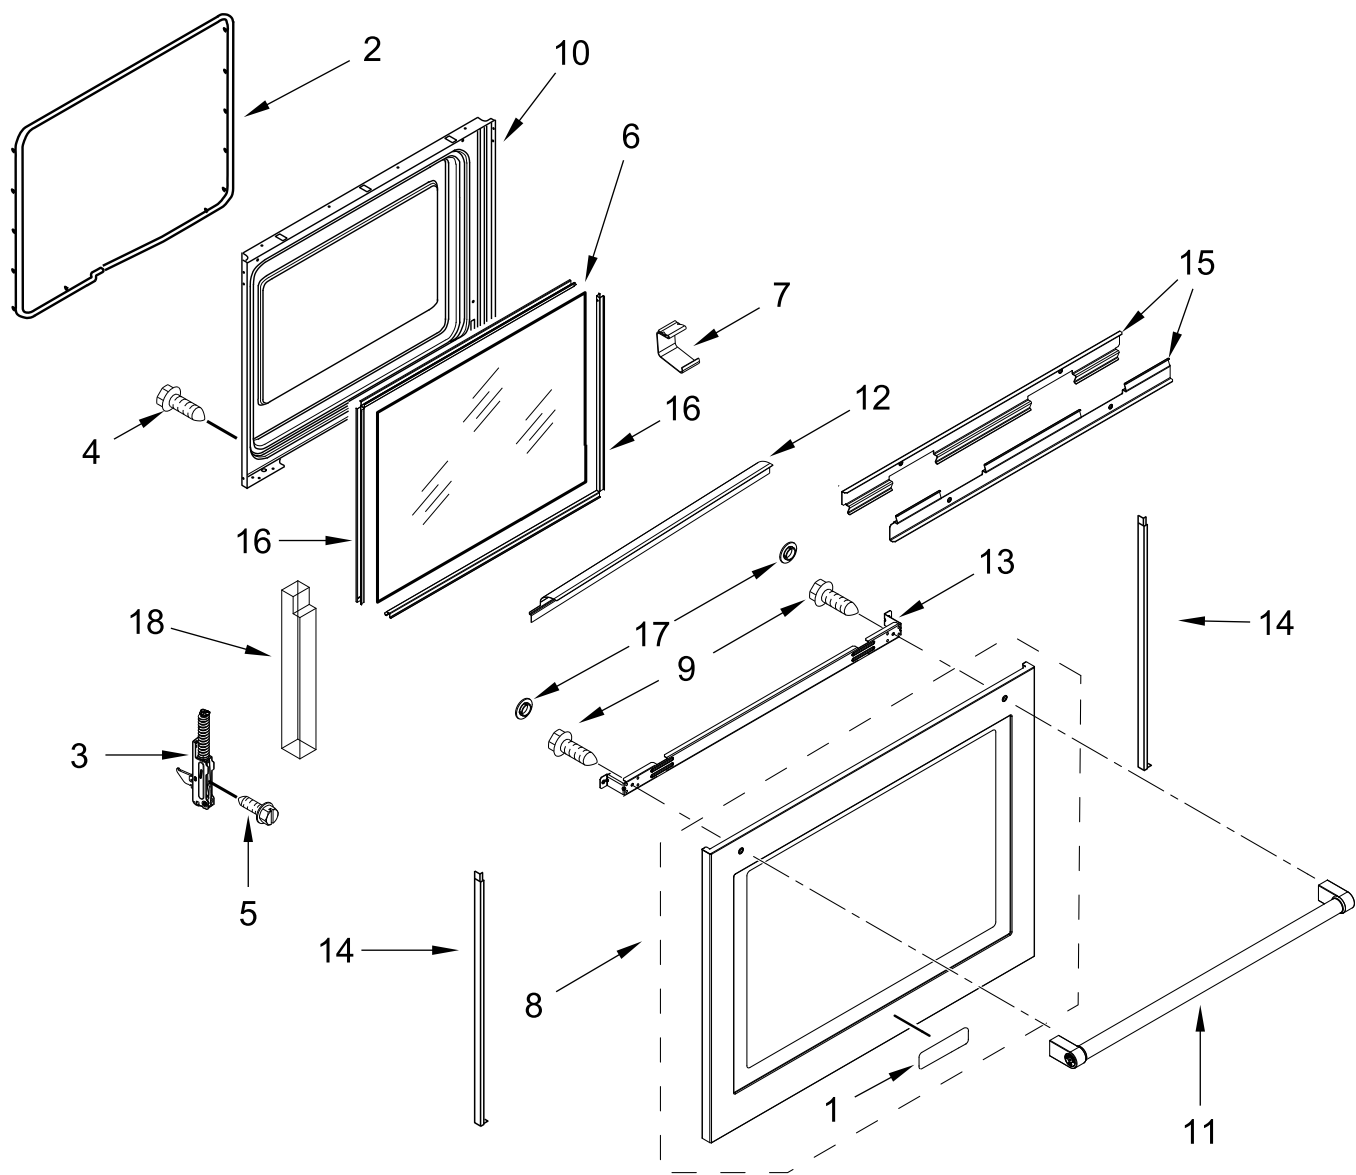

DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10518672	Badge	9	W10241367	Screw	15	W10813140	Rail, Horizontal Support
2	W10162385	Gasket, Door	10	W10826568	Liner, Door	16	W11379948	Glass Spacer
3	W10885519	Hinge, Door (Active)	11		Handle, Door	17	W10319024	Washer, Door
4	W10031790	Screw		W10551000	Stainless	18	W10766562	Insulation, Door
5	W10362924	Screw	12		Scoop, Door			
6	W11223202	Glass, Inner		W10613791	Black			
7	W10137382	Clip, Panel	13	W10541911	Bracket, Glass Upper Handle			
8		Glass Assembly, Outer Door	14	W10813139	Rail, Vertical Support			
	W10830225	Stainless						

DRAWER PARTS

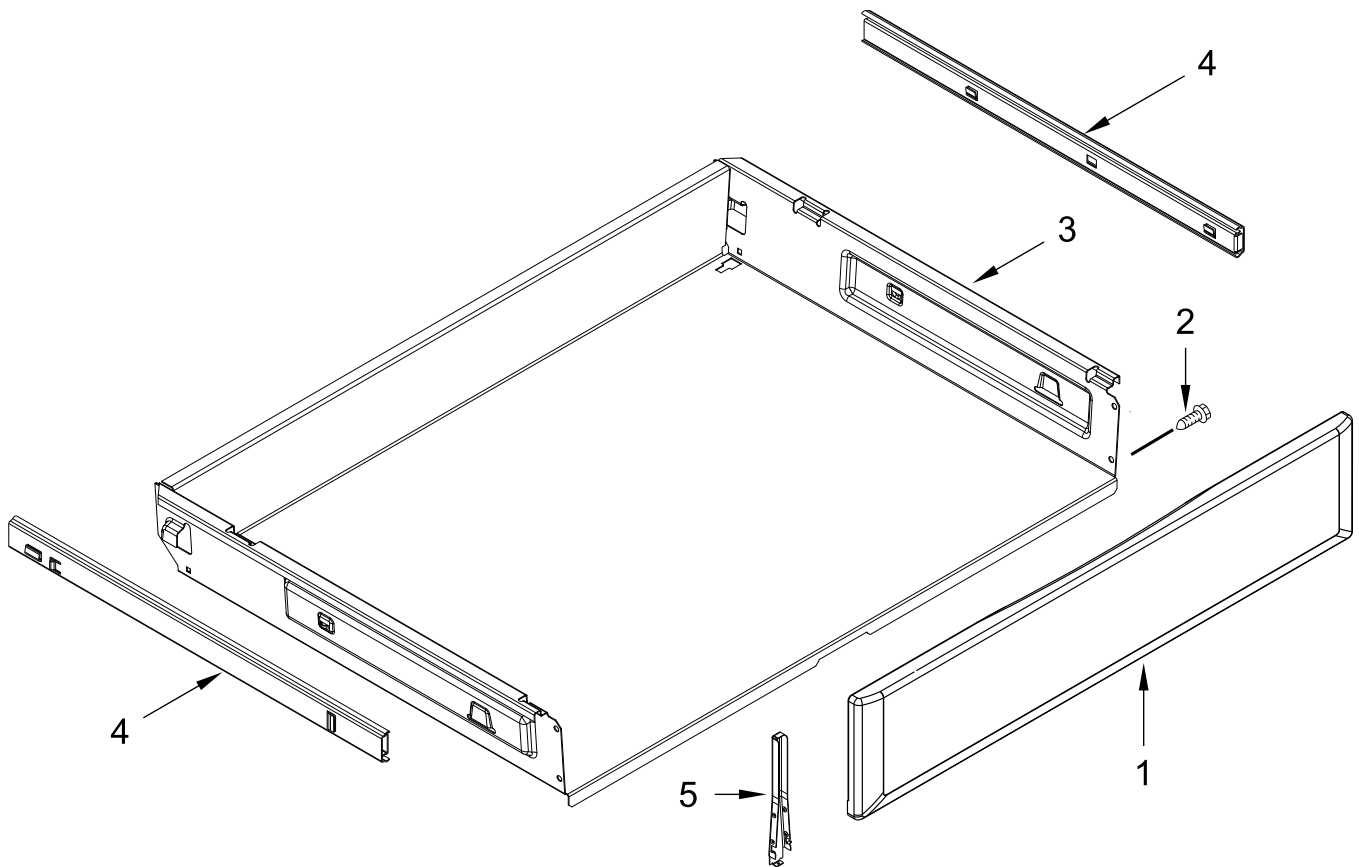

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W11190204	Stainless
2	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
5	W10318027	Bracket, Drawer

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	350938	Gray Primer
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355049	Wipes, Stainless Steel Cleaning
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	W10432019	Alt Cleaning Kit
	WA906B	Scraper, Cooktop
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	4396096RB	Griddle
	W10205524	Split Oven Rack
	W10289145	Rack, Oven (Gull-Wing)
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting