




ELECTRIC RANGE

MODELS:

KFEG500ESS7 (Stainless)


COOKTOP PARTS

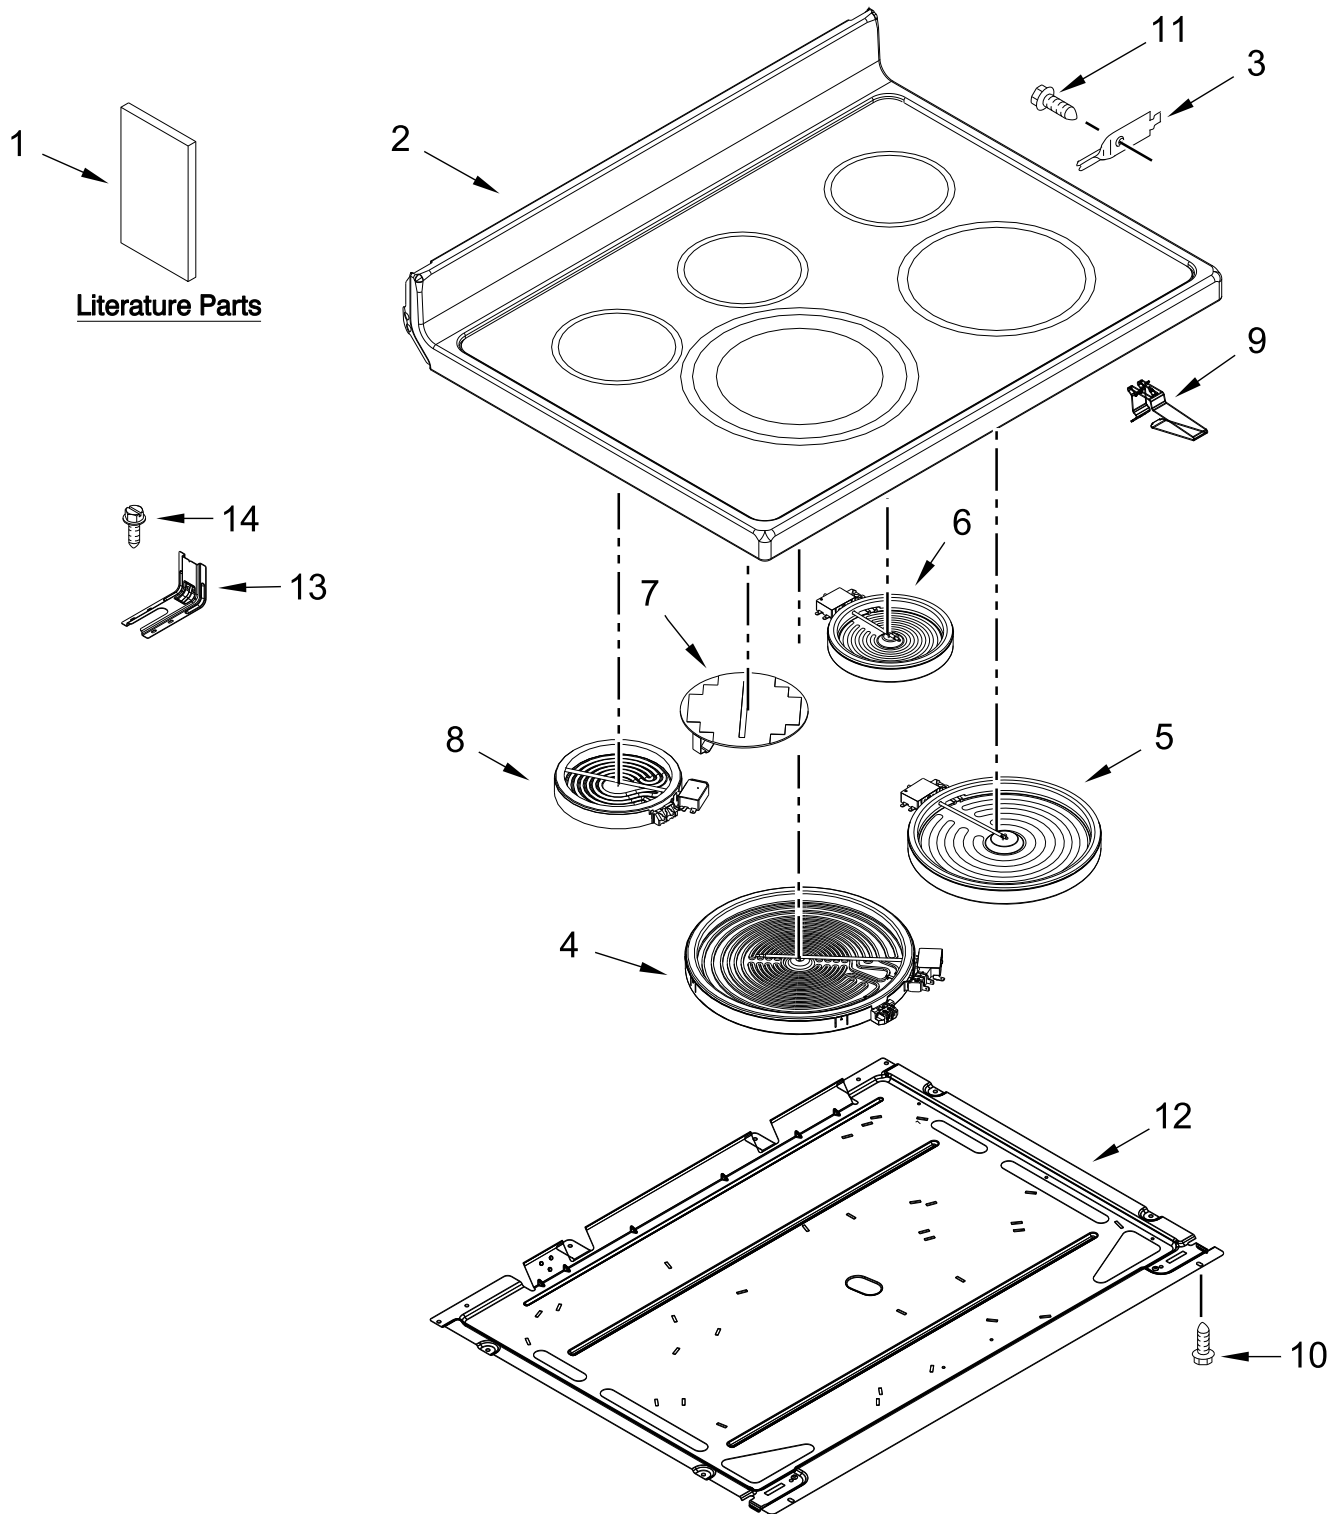

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	6	W10248261	Element (1200W)	14	7101P485-60	Screw, Anti-Tip Kit
	W11509613	Use and Care Guide			(Right Rear)			
	W11489748	Quick Start Guide	7	W10799048	Element, Warm Zone			FOLLOWING PARTS NOT ILLUSTRATED
	W11393916	Tech Sheet (English)			(Center Rear)		W11454490	Harness, Main
2		Cooktop	8	W10342780	Element (1300W)		W11134550	Harness, Cooktop (Right)
	W10697352	Stainless			(Left Rear)			
3	3195060	Hinge, Cooktop	9	W11600012	Spring, Element		W11188424	Harness, Cooktop (Left)
4	W10711900	Element (3000W)	10	3196169	Screw		W11212183	Harness, Sensor
		(Left Front)	11	3196178	Screw		W11134592	Harness, Warm Zone
5	W10275048	Element (3000 and 1400W)	12	W10691223	Pan, Radiant Element			
		(Right Front)	13	W11379945	Bracket, Anti-Tip			


CONTROL PANEL PARTS

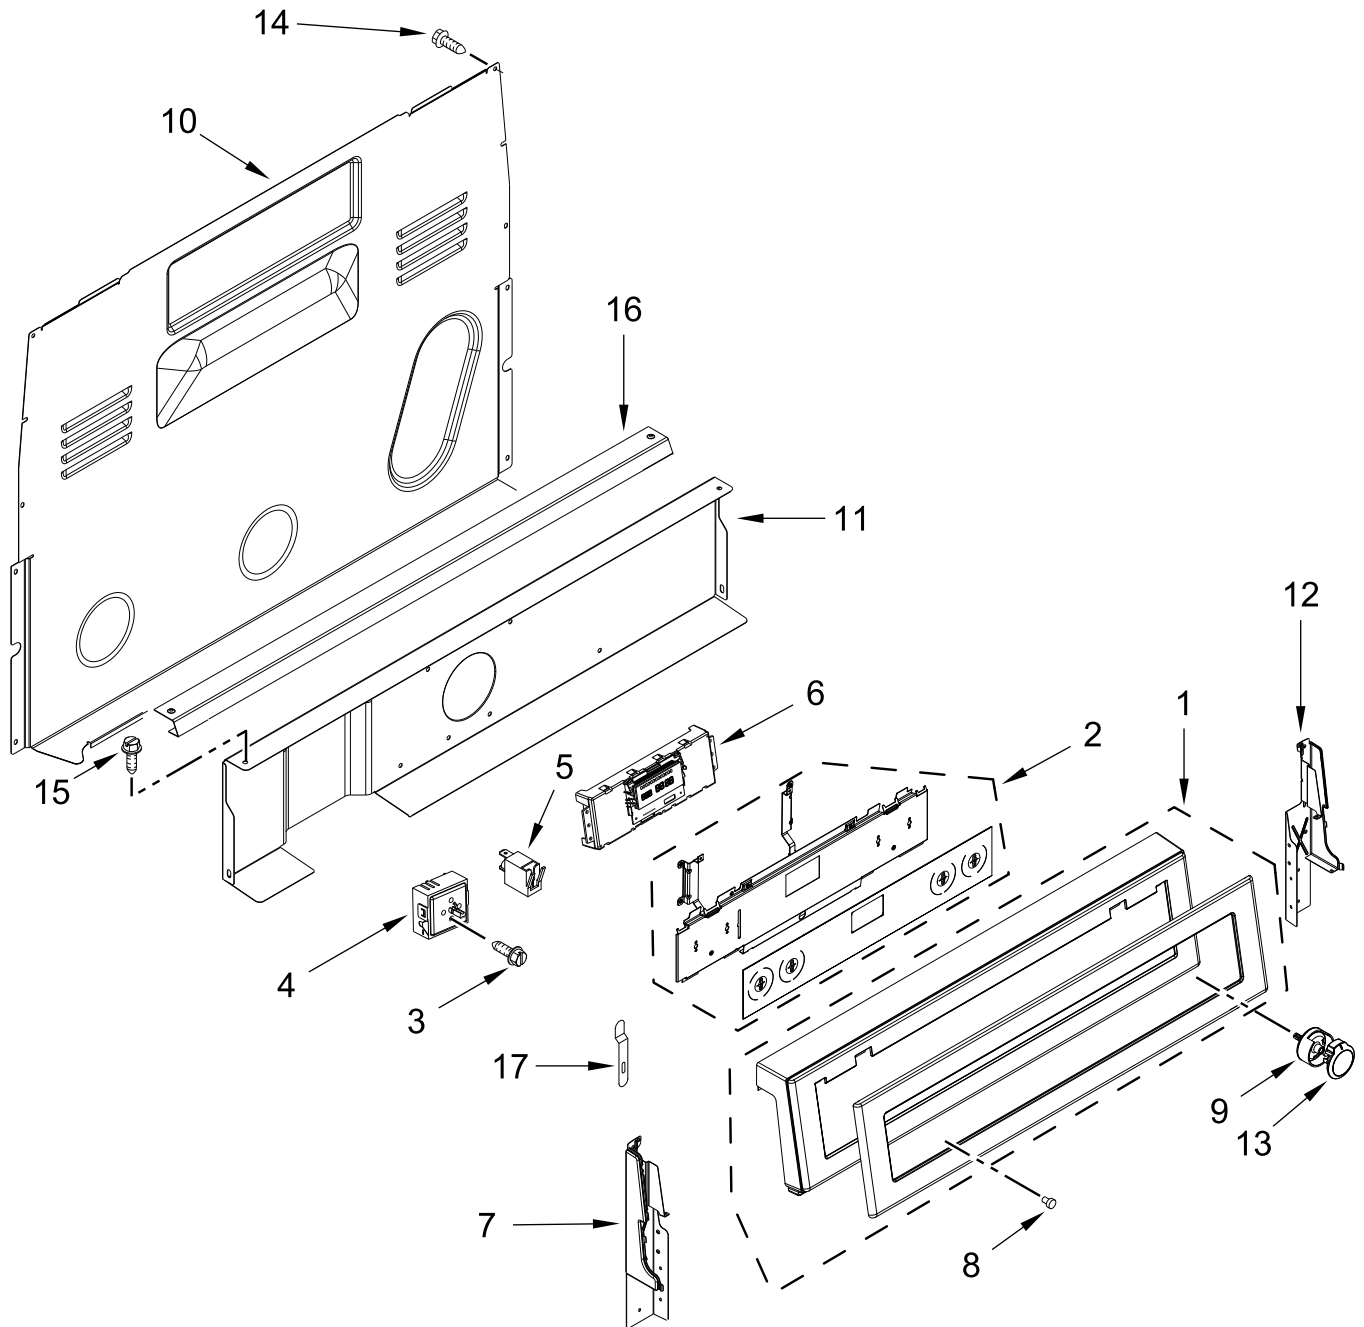

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Console, Assembly	5	W10432504	Hot Surface Indicator	15	W10362924	Screw
	W10645848	Stainless	6	W10894863	Control, Maxwell	16	W10525121	Bracket, Console Mounting
2		Assembly, Active Overlay	7		Endcap			
	W11527488	Black		W11404310	Black (Left)	17	3196200	Clip, Spring
3	9780274	Screw	8	3196068	Lens, Indicator			
4	W10437092	Switch, Infinite (Left Front and Right Front)	9	W10645811	Bezel, Knob			
	W10437094	Switch, Infinite (Left Rear)	10	8272473	Cover, Upper Rear			
	W10578768	Switch, Infinite (Right Rear)	11	W10134247	Shield, Heat			
			12		Endcap			
				W11404311	Black (Right)			
			13		Knob			
				W10823535	Stainless			
			14	3196178	Screw			


CHASSIS PARTS

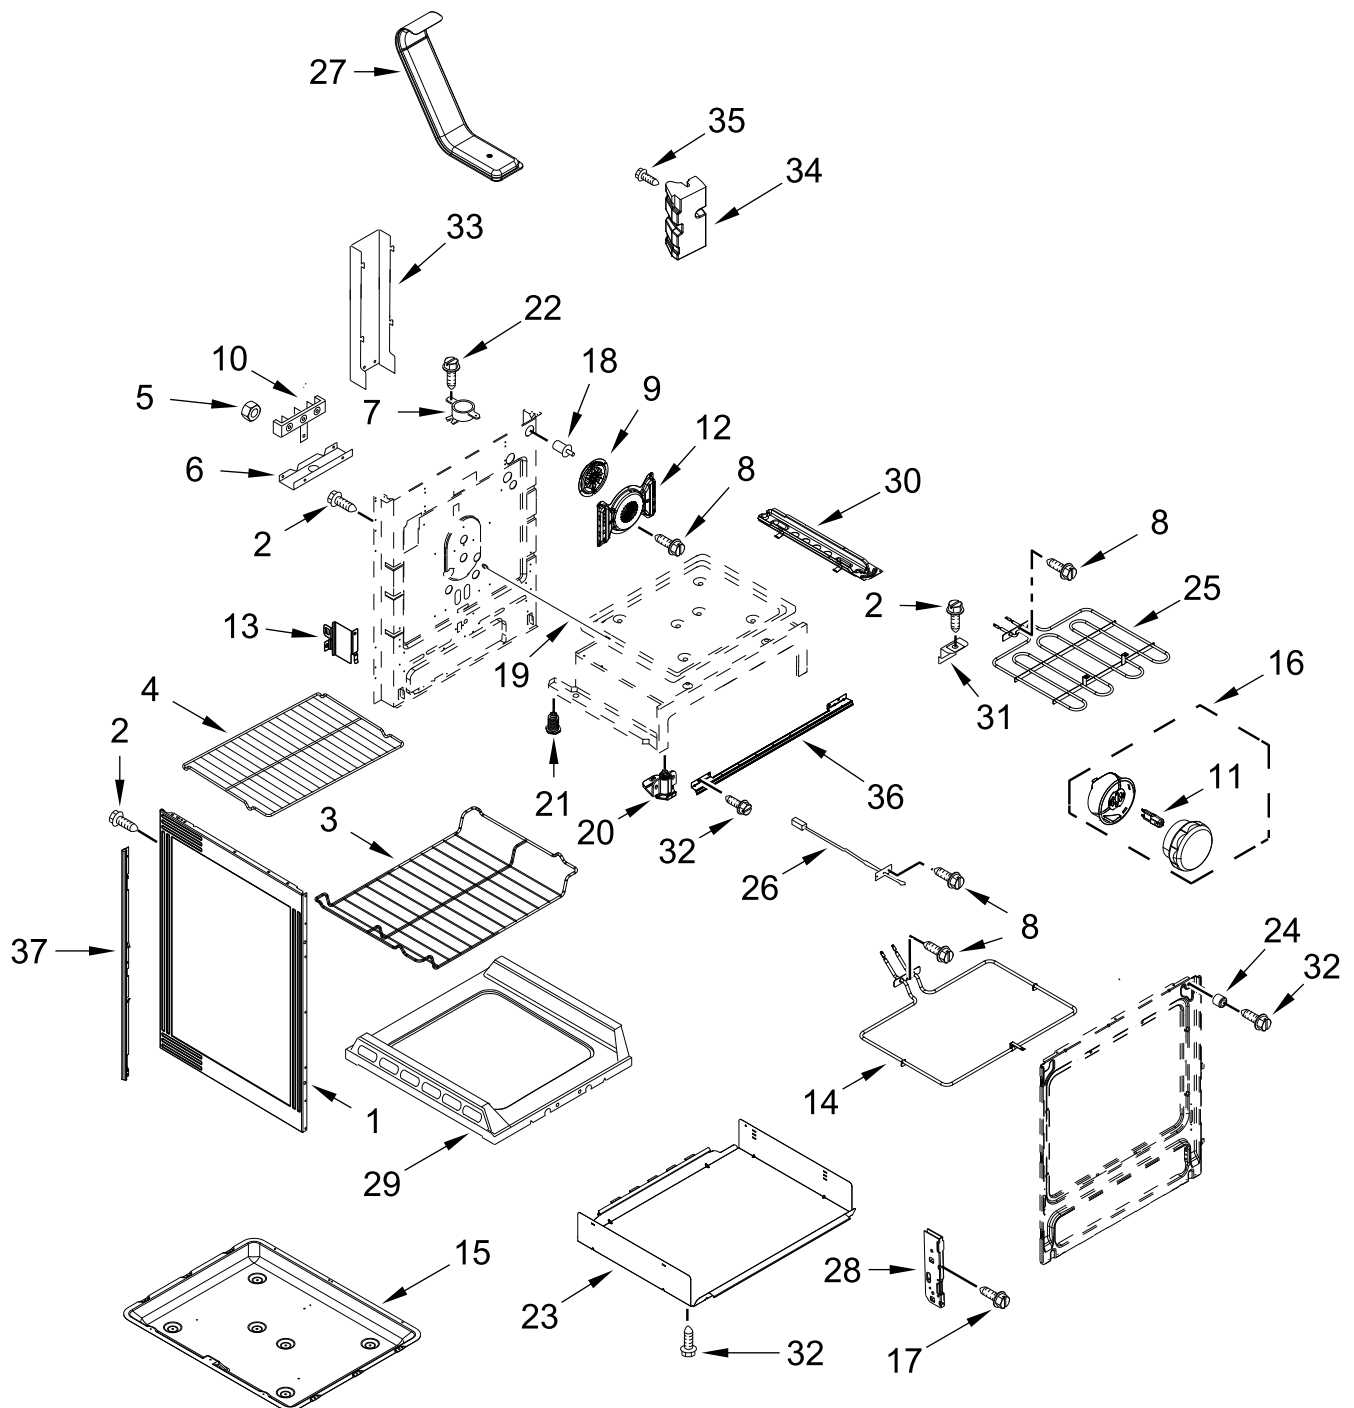

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Side	16	W11634772	Light Assembly	32	3196560	Screw
	W10162245	Black	17	W10031780	Screw	33	W10326122	Cover, Terminal Block
2	3196172	Screw	18	W11511828	Switch, Door	34	W10910404	Counterweight
3	W10289145	Rack, Oven (Gull-Wing)	19	W10273192	Rod, Door Switch	35	W11034869	Screw
4	W10531060	Rack, Oven	20	W10341186	Front Foot Assembly	36	W11620269	Bracket, Front Frame
5	3400029	Nut	21	W10058460	Foot, Leveling	37	W11510560	Barrier Rail, Rubber (Left and Right)
6	3186034	Bracket, Service	22	3196172	Screw			FOLLOWING PARTS NOT ILLUSTRATED
7	3196548	Fuse, Thermal	23	W10726740	Shield, Heat			
8	W10362924	Screw	24	9758701	Spacer, Door			
9	W10756304	Assembly, Convection	25	W11095929	Element, Broil			
10	W10245259	Block, Terminal	26	W10586204	Sensor	W10194393		Insulation, Wrap
11	W10571723	Bulb, Halogen 40 Watts	27	W10134285	Tube, Vent	W10225524		Insulation, Back
			28	W10289077	Receiver, Hinge	W10225523		Insulation, Bottom
12	W10346153	Baffle, Full Convection	29	W10774446	Bottom, Oven	4820F015-59		Insulation, Strap
13	W10273002	Bracket, Oven Support	30	W10390007	Base Rail Assembly (Right)	W10281322		Kit, Bare Wire Adapter Block
14	W10774342	Element, Bake		W10390008	Base Rail Assembly (Left)			
15	W11379357	Bake Pan	31	W10035900	Support, Oven Bottom			

DOOR PARTS

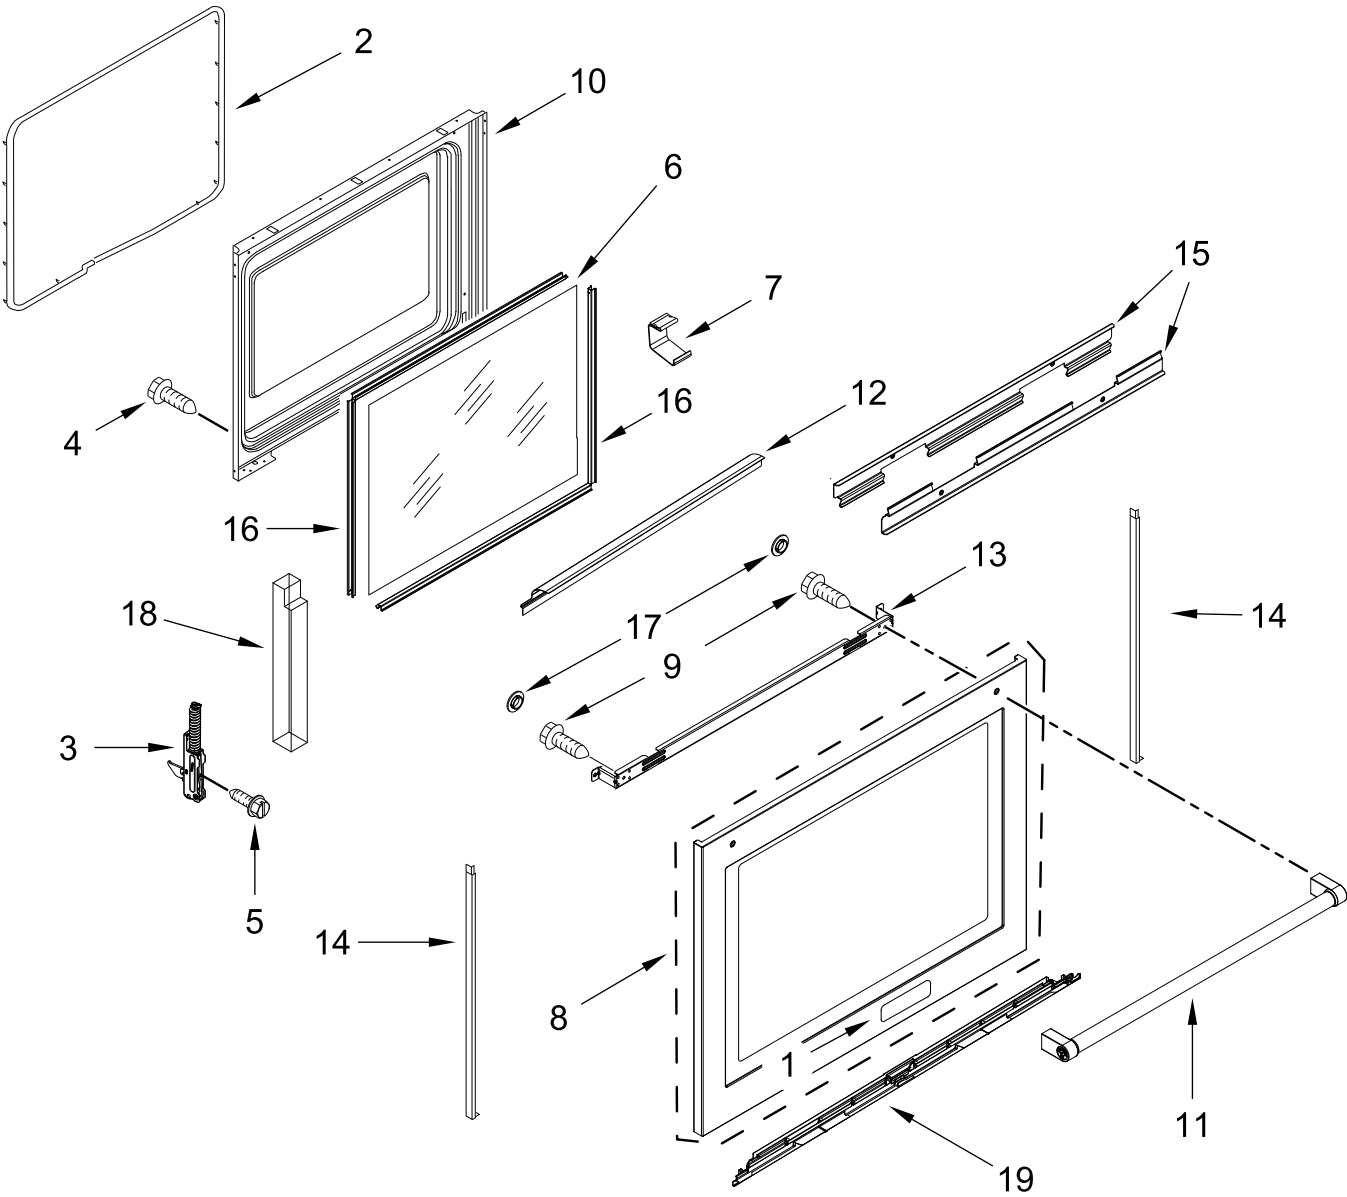


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10518672	Badge
2	W11491752	Gasket, Door
3	W10885519	Hinge, Door (Active)
4	W10031790	Screw
5	W10362924	Screw
6	W11223202	Glass, Inner
7	W10137382	Clip, Panel
8		Glass Assembly, Outer Door
	W10830225	Stainless
9	W10241367	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
10	W10826568	Liner, Door
11		Handle, Door
	W10551000	Stainless
12		Scoop, Door
	W10613791	Black
13	W10541911	Bracket, Glass Upper Handle
14	W10813139	Rail, Vertical Support
15	W10813140	Rail, Horizontal Support
16	W11379948	Glass Spacer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
17	W10319024	Washer, Door
18	W10766562	Insulation, Door
19	W11440161	Bottom, Door Cover

DRAWER PARTS

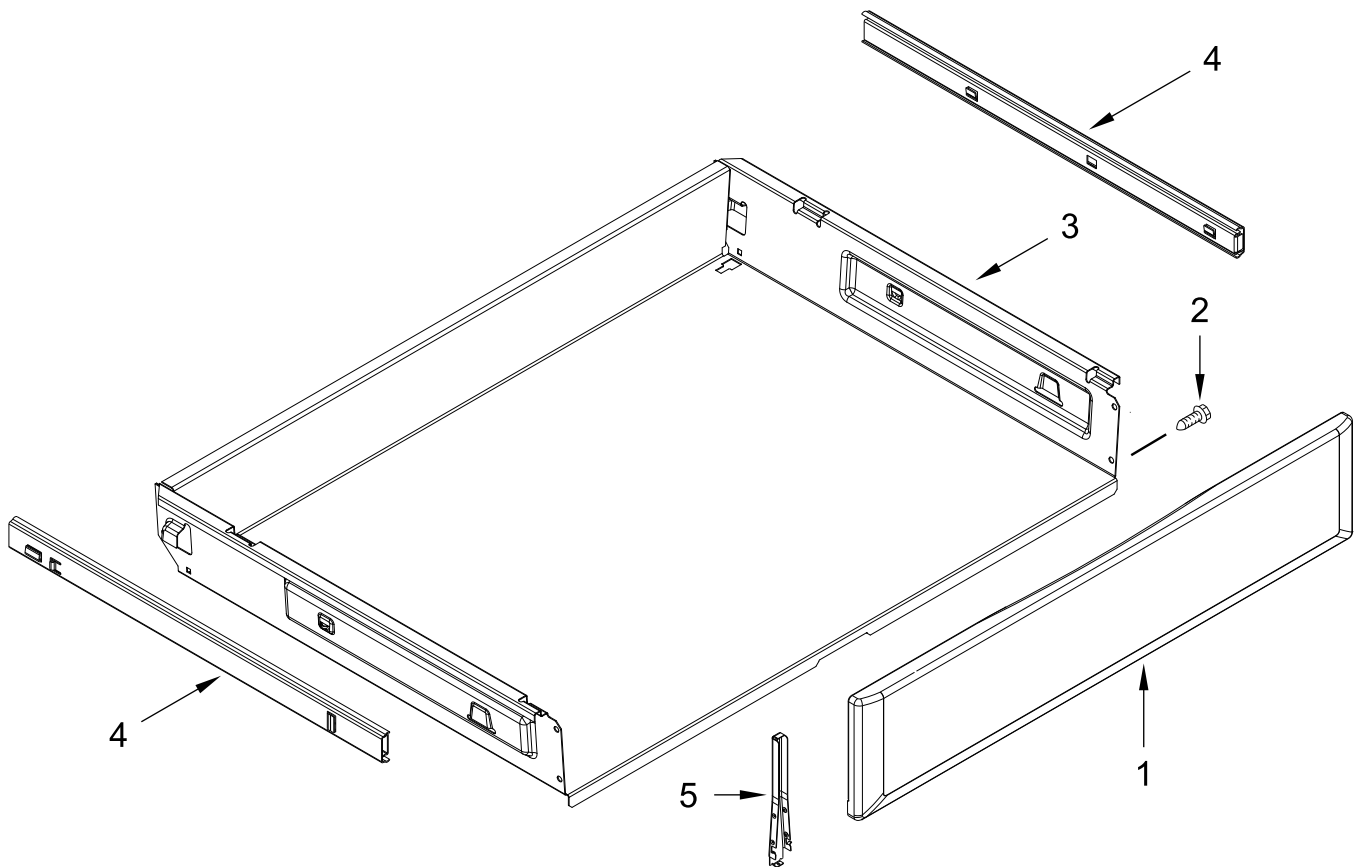

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Panel, Drawer
	W11190204	Stainless
2	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
3	W10688022	Drawer, Storage

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	W10441804	Slide, Drawer (Left)
	W10441805	Slide, Drawer (Right)
5	W10318027	Bracket, Drawer

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black
	350938	Gray Primer
	350942	White Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORIES

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	31605	Kit, Cooktop Care
	W10355051	Cleaner, Cooktop
	W10355016	Cleaner, Stainless Steel
	W10432019	Alt Cleaning Kit
	WA906B	Scraper, Cooktop
	4396096RB	Griddle
	W10205524	Split Oven Rack
	W10289145	Rack, Oven (Gull-Wing)
	4396923	Broiler Pan and Grid
	W10123240	Rack, Broiler Pan and Roasting