

Home › Maytag › MAYTAG MER4800PZ Freestanding Electric Range User Guide

MAYTAG MER4800PZ Freestanding Electric Range User Guide



MAYTAG MER4800PZ Freestanding Electric Range



Product Information

Specifications

- **Product Type:** Freestanding Electric Range
- **Control Type:** Knobs
- **Oven Light:** 40 W halogen bulb

Product Usage Instructions

Using Your Oven

To use your oven, follow these steps:

1. Select the desired oven function.
2. Set the temperature.
3. Press the Start button.
4. Once the set temperature is reached, place the food inside the oven and close the oven door.
5. (Optional) Enter the desired cooking time.
6. To cancel the function during or after the cooking time, you can use the Cancel button.

Note:

For more detailed instructions on specific functions, refer to the online Control Guide.

Using Your Range

Follow these instructions to use your range:

WARNING: Fire Hazard

- Turn off all controls when done cooking. Failure to do so could result in death or fire.
- The control knobs can be set anywhere between hi and lo. Push in and turn to the desired setting.

Oven Vent

The oven vent releases hot air and moisture from the oven and should not be blocked or covered. Blocking or covering the oven vent will affect cooking and cleaning results. Do not place plastics, paper, or other items that could melt or burn near the oven vent.

Oven Light

The oven light uses a 40 W halogen bulb. Before replacing, ensure that the oven and cooktop are cool and the control knobs are in the Off position.

To replace the oven light bulb:

1. Disconnect power.
2. Turn the glass bulb cover in the back of the oven counterclockwise to remove it.
3. Remove the bulb from the socket.
4. Replace the bulb, using tissue or wearing cotton gloves to handle it. Do not touch the bulb with bare fingers to avoid damage or decreasing its lifespan.
5. Replace the bulb cover by turning it clockwise.
6. Reconnect power.

Important: Do not use bulbs rated higher than 40 W.

Sabbath Mode

The Sabbath Mode sets the oven to remain on the bake setting until disabled. For guidance on usage and a complete list of models with Sabbath Mode, visit www.star-k.org or contact us using the information provided above.

Important Safety Instructions

When the range is in use or during the Self-Cleaning cycle (on some models), the entire cooktop area may become hot. Exercise caution and avoid contact with hot surfaces.

Aluminum Foil

Do not line the oven bottom with any type of foil or liner to avoid permanent damage to the oven finish. When using foil, do not cover the entire oven rack as air circulation is necessary for the best cooking results. Additionally, do not allow aluminum foil and meat probes to come into contact with heating elements.

Positioning Racks and Bakeware

To avoid permanent damage to the porcelain finish, do not place food or bakeware directly on the oven door or bottom.

Racks:

- Position racks before turning on the oven.
- Do not position racks with bakeware on them.
- Ensure that racks are level.
- To position a rack, pull it out to the stop position, raise the front edge, and then lift it out. Refer to the illustration in the user manual for guidance.

FAQ

- **Q: Where can I register my product and access warranty information?**

A: You can register your product and access warranty information by scanning the Photo Registration Card or QR code provided in the user manual.

- **Q: How do I use the Cancel button during cooking?**

A: To cancel a function during or after the cooking time, simply press the Cancel button.

- **Q: Can I use bulbs rated higher than 40 W for the oven light?**

A: No, it is important to use bulbs rated no higher than 40 W to prevent damage to the oven light and ensure safe operation.

- **Q: Can I use aluminum foil to line the oven bottom?**


A: No, lining the oven bottom with aluminum foil can cause permanent damage to the oven finish. It is recommended to avoid using foil in direct contact with heating elements as well.

- **Q: How should I position racks and bakeware in the oven?**

A: Position racks before turning on the oven and ensure they are level. Do not place bakeware directly on the oven door or bottom. Refer to the user manual for detailed instructions and illustrations.

PRODUCT REGISTRATION AND OWNER INFORMATION

YOUR QR CODE UNLOCKS

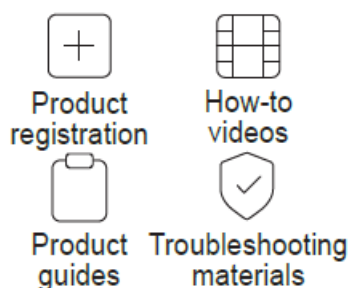

Product registration and warranty information, installation instructions, how-to videos, and additional accessories to get the most out of your product. If you purchased a smart appliance, your QR code will provide instructions on how to download the app and connect. You can access the full Installation, User Maintenance, and Operating Instructions, Warranty details, and more by visiting our website at **www.maytag.com/owners**, or in Canada at **www.maytag.ca/owners**. This may save you the cost of a service call. To receive a free printed copy of the information online, call us at 1-800-344-1274 (U.S.A.) /1-800-807-6777 (Canada) or write us at:

- **United States:**

Maytag Brand Appliances Customer eXperience Center 553 Benson Road Benton Harbor, MI 49022-2692

- **Canada:**

Maytag Brand Appliances Customer eXperience Centre 200-6750 Century Ave. Mississauga, Ontario L5N 0B7

Register to access warranty information and receive important notifications related to your product. Scan the Photo Registration Card or QR code to register your product.

OPERATING INSTRUCTIONS

WARNING:


To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

Using Your Oven

- Step 1. Select oven function.
- Step 2. Set the temperature.
- Step 3. Press Start.
- Step 4. Place food inside the oven once the set temperature is reached. Close the oven door.
- Step 5. (Optional) Enter time to cook.
- Step 6. The Cancel button can be used to cancel the function during or after cooking time.

NOTE: For more detailed instructions on specific functions, see the online Control Guide.

Using Your Range

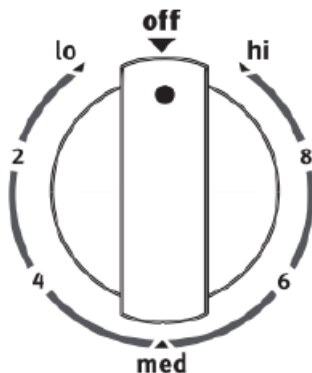

The control knobs can be set to anywhere between hi and lo. Push in and turn to the setting.

WARNING

Fire Hazard

- Turn off all controls when done cooking.
- Failure to do so could result in death or fire.

REMEMBER:

When the range is in use or (on some models) during the Self-Cleaning cycle, the entire cooktop area may become hot.

ALUMINUM FOIL

- **IMPORTANT:** To avoid permanent damage to the oven bottom finish, do not line the oven bottom with any type of foil or liner.
- For best cooking results, do not cover the entire oven rack with foil because air must be able to move freely.
- **IMPORTANT:** Do not allow aluminum foil and meat probes to contact with heating elements.


POSITIONING RACKS AND BAKEWARE

IMPORTANT:

To avoid permanent damage to the porcelain finish, do not place food or bakeware directly on the oven door or bottom.

Racks


- Position racks before turning on the oven.
- Do not position racks with bakeware on them.
- Make sure the racks are level.

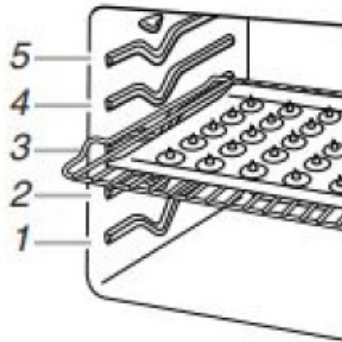

To position a rack, pull it out to the stop position, raise the front edge, and then lift it out. Use the following illustration as a guide.


Baking Layer Cakes on 2 Racks

For best results when baking cakes on 2 racks, use rack positions 2 and 4. Place the cakes on the racks as shown.

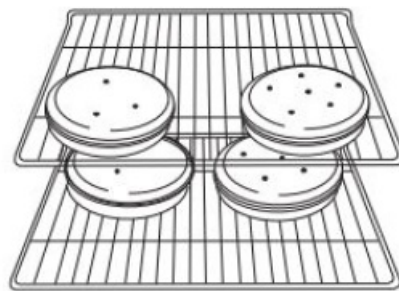

OVEN VENT

The oven vent releases hot air and moisture from the oven, and should not be blocked or covered. Blocking or covering the oven vent will cause poor air circulation, affecting cooking and cleaning results. Do not set plastics, paper or other items that could melt or burn near the oven vent.

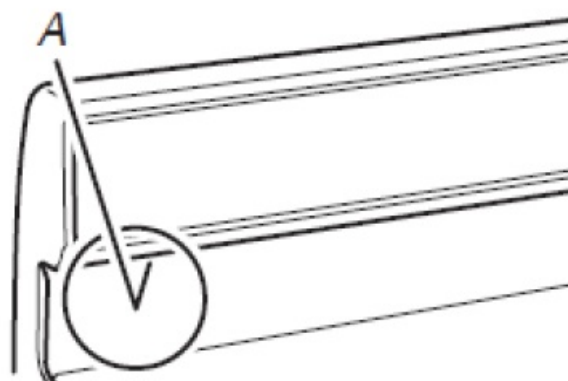

A. Oven vent

OVEN LIGHT

The oven light is a 40 W halogen bulb. Before replacing, make sure the oven and cooktop are cool and the control knobs are in the Off position.

To Replace:

1. Disconnect power.
2. Turn the glass bulb cover in the back of the oven counterclockwise to remove it.
3. Remove the bulb from the socket.
4. Replace the bulb, using tissue or wearing cotton gloves to handle the bulb. To avoid damage to or decrease the life of the new bulb, do not touch the bulb with bare fingers.
5. Replace the bulb cover by turning it clockwise.
6. Reconnect power.

IMPORTANT: Do not use lamps rated higher than 40 W.

SABBATH MODE:

- The Sabbath Mode sets the oven to remain on the bake setting until disabled.
- For guidance on usage and a complete list of models with Sabbath Mode, visit www.star-k.org or contact us as per the information provided above.

®/™ ©2023 Maytag. All rights reserved. Used under license in Canada. www.star-k.org.

Documents / Resources



MER4800PZ Freestanding Electric Range

User Guide · MER4800PZ Freestanding Electric Range, MER4800PZ, Freestanding Electric Range, Electric Range, Range

Published: December 17, 2023

Updated: December 18, 2023

Related Topics

Range

Electric Range

Freestanding Electric Range