



Prep Table LR-152		
Part number	Description	Notes
092635	Door Gasket	
105181	Shelf	
001585	Shelf Clips	
015124	Spring Cartridge	
015125	RH Cart. Brkt	
015130	RH Pivot Brkt	
015126	LH Cart. Brkt	
015129	LH Pivot Brkt.	
100436	Set of 4 Casters	
088608	Unit Cooler	
087671	Compressor	
107940	Thermostat - top of unit	
092528	Thermostat - bottom of unit	
092184	Cond. Motor	
092185	Cond. Blade	
001192	Pressure Control	
107957	TXV - top of unit	
088856	TXV - bottom of unit	
027228	Solenoid with coil	
083251	Receiver Tank	
	Freon, 134A	

Prep Table LR-192		
Part number	Description	Notes
092507	Door Gasket 27.688 x 19.5	
105182	Shelf	
001585	Shelf Clips	
015124	Spring Cartridge	
015125	RH Cart. Brkt	
015130	RH Pivot Brkt	
015126	LH Cart. Brkt	
015129	LH Pivot Brkt.	
100436	Set of 4 Casters	
088608	Unit Cooler	
087671	Compressor	
107940	Thermostat - top of unit	
092528	Thermostat - bottom of unit	
092184	Cond. Motor	
092185	Cond. Blade	
001192	Pressure Control	
107957	TXV - top of unit	
088856	TXV - bottom of unit	
027228	Solenoid with coil	
083251	Receiver Tank	
	Freon, 134A	

Prep Table LR-283		
Part number	Description	Notes
092507	Door Gasket 27.688 x 19.5	
111012	Door Gasket 21.125 x 19.5	
105182	Shelf	
105198	Shelf	
001585	Shelf Clips	
015124	Spring Cartridge	
015125	RH Cart. Brkt	
015130	RH Pivot Brkt	
015126	LH Cart. Brkt	
015129	LH Pivot Brkt.	
100436	Set of 4 Casters	
088608	Unit Cooler	
088855	Compressor	
107940	Thermostat - top of unit	
092528	Thermostat - bottom of unit	
092184	Cond. Motor	
092185	Cond. Blade	
001192	Pressure Control	
107957	TXV - top of unit	
088856	TXV - bottom of unit	
027228	Solenoid with coil	
083251	Receiver Tank	
	Freon, 134A	