


Parts Breakdown

Model BS-CN-2400 46787

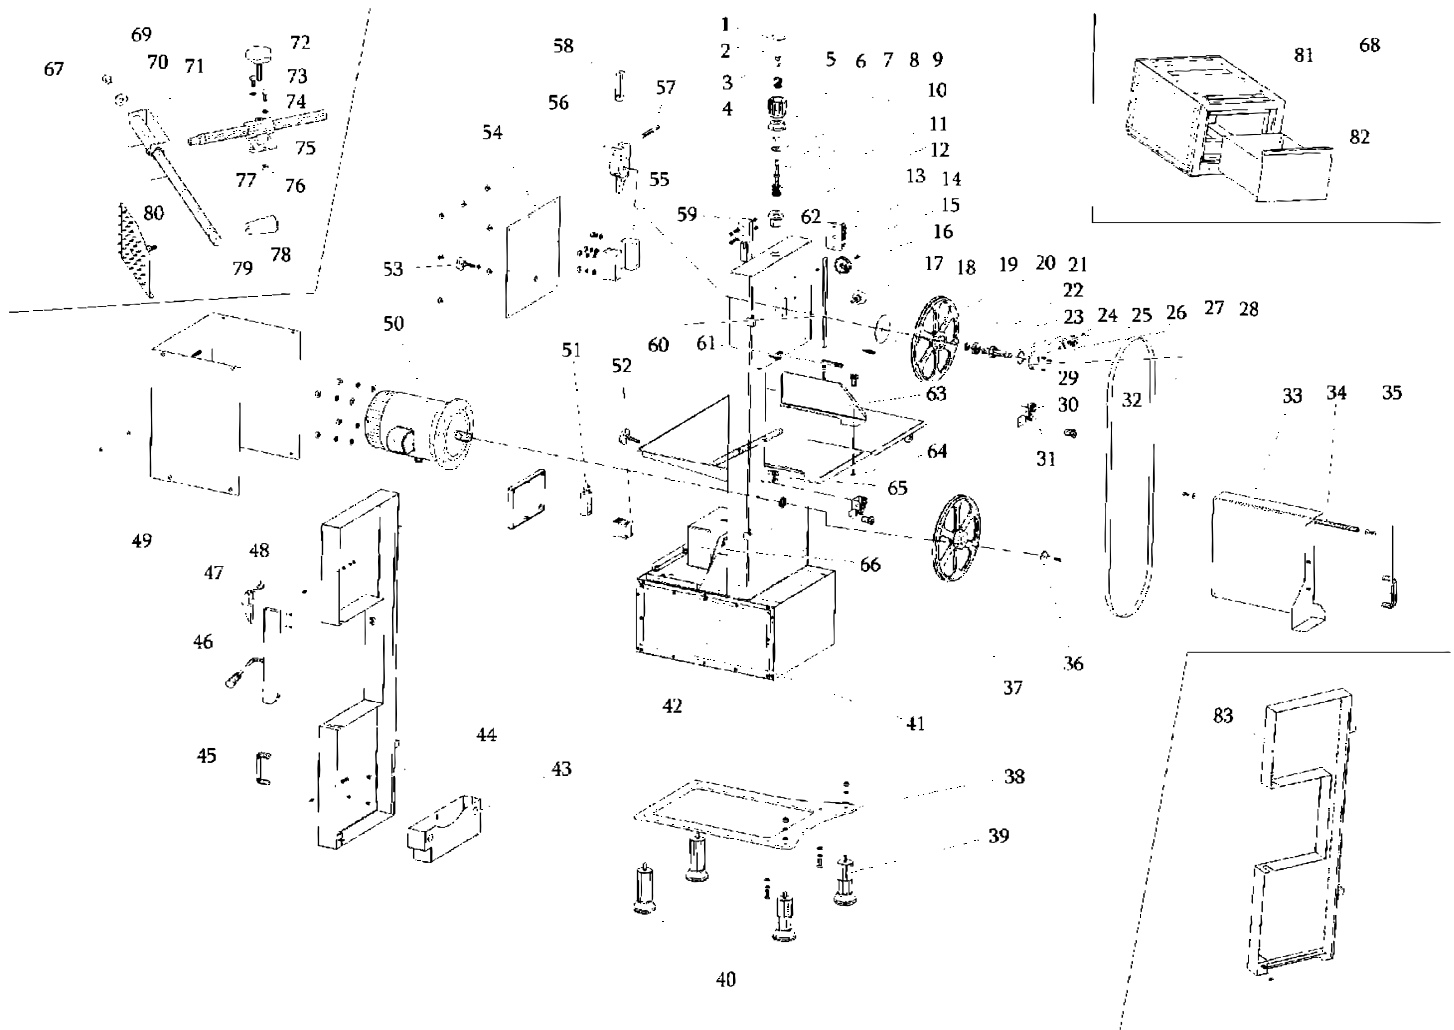

Parts Breakdown

Model BS-CN-2400 46787

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
AF384	Cover for 46787	1	AF412	Stand for 46787	29	AF440	Shaft for 46787	57
AF385	Nut for 46787	2	AF413	Cleaner 1 for 46787	30	AF441	Sliding Plate of Groove for 46787	58
AF386	Gasket for 46787	3	AF414	Cleaner 2 for 46787	31	AF442	Protection of Moving for 46787	59
AF387	Spring for 46787	4	AF415	Handle for 46787	32	AF443	Moving Guide Shaft for 46787	60
AF388	Adjusting Handle for 46787	5	AF468	Sliding Working Table for 46787	33	AF444	Guide Part for 46787	61
AF389	Sheath for 46787	6	AF469	Cover for 46787	34	AF445	Rubber Gasket for Switch for 46787	62
AF390	Round Ball for 46787	7	AF418	Bakelite Handle for 46787	35	AF479	Length Board for 46787	63
AF391	Lid Cover for 46787	8	AF419	Collar for Top Shaft for 46787	36	AF447	Tightening Screw for 46787	64
AF392	Tightening Shaft for 46787	9	AF470	Pulley 2 for 46787	37	AF448	Bending Board for 46787	65
AF393	Pin for 46787	10	AF421	Bottom for 46787	38	AF480	Support Frame of Motor for 46787	66
AF394	Spring for 46787	11	AF422	Adjusting Feet for 46787	39	AF450	Waste Setting (Selected) for 46787	67
AF395	Bushing for 46787	12	AF423	Non-Adjusting Feet for 46787	40	AF451	Hexagon Screw for 46787	69
AF396	Box of Switch for 46787	13	AF471	Seat for 46787	41	AF452	Big Gasket for 46787	70
AF397	Stop Button for 46787	14	AF472	Body for 46787	42	AF453	Seat of Transform for 46787	71
AF398	Start Button for 46787	15	AF473	Drawer for Waste for 46787	43	AF454	Star Handle for 46787	72
AF399	Locker for 46787	16	AF474	Door for 46787	44	AF455	Hexagon Screw for 46787	73
AF400	Handle of Locker for 46787	17	AF428	Protection for Saw for 46787	45	AF456	Fixing Stand for 46787	74
AF401	Retaining Plate for 46787	18	AF429	Shaft for 46787	46	AF481	Shaft for 46787	75
AF402	Pulley 1 for 46787	19	AF430	Protection for Saw for 46787	47	AF458	Nut for 46787	76
AF403	Shaft of Pulley for 46787	20	AF431	Shaft for 46787	48	AF459	Gasket for 46787	77
AF404	Sealing Ring for 46787	21	AF475	Back Cover for 46787	49	AF460	Handle for 46787	78
AF405	Bearing for 46787	22	AF476	Motor for 46787	50	AF461	Moving Shaft for 46787	79
AF406	Spacer for 46787	23	AF434	Microswitch for 46787	51	AF462	Clamping Plate 1 for 46787	80
AF466	Shaft for 46787	24	AF435	Contacting and Capacitor for 46787	52	AF482	Seat with Drawer for 46787	81
AF408	Collar for Shaft for 46787	25	AF436	Handle for 46787	53	AF483	Drawer for 46787	82
AF409	O Ring for 46787	26	AF477	Cover of Back for 46787	54	AF484	Cover for Door for 46787	83
AF410	Gland for 46787	27	AF438	Guiding Part for 46787	55			
AF467	Saw for 46787	28	AF478	Sliding Part for 46787	56			