



BUILT TO LAST BUILT TO LAST BUILT TO LAST BUILT TO LAST BUILT TO LAST BUILT TO LAST

Precision Mixers

BUILT TO LAST BUILT TO LAST BUILT TO LAST BUILT TO LAST BUILT TO LAST BUILT TO LAST

BUILT TO LAST BUILT TO LAST BUILT TO LAST BUILT TO LAST BUILT TO LAST BUILT TO LAST

Instruction Manual



V- Series Mixers

V-60 HD-60 V-80 V-80EL



INDEX

Mixer Overview ----- 04

Safety Guidelines ----- 05

Quick Start Guide ----- 06

Operating Instructions ----- 07-15

Capacity Chart ----- 11

Timer Instructions ----- 15

Troubleshooting ----- 16

Cleaning Instructions ----- 17

Preventative Maintenance ----- 18-21

Maintenance Log ----- 22


Warranty Information ----- 23-24



Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

Operating Instructions

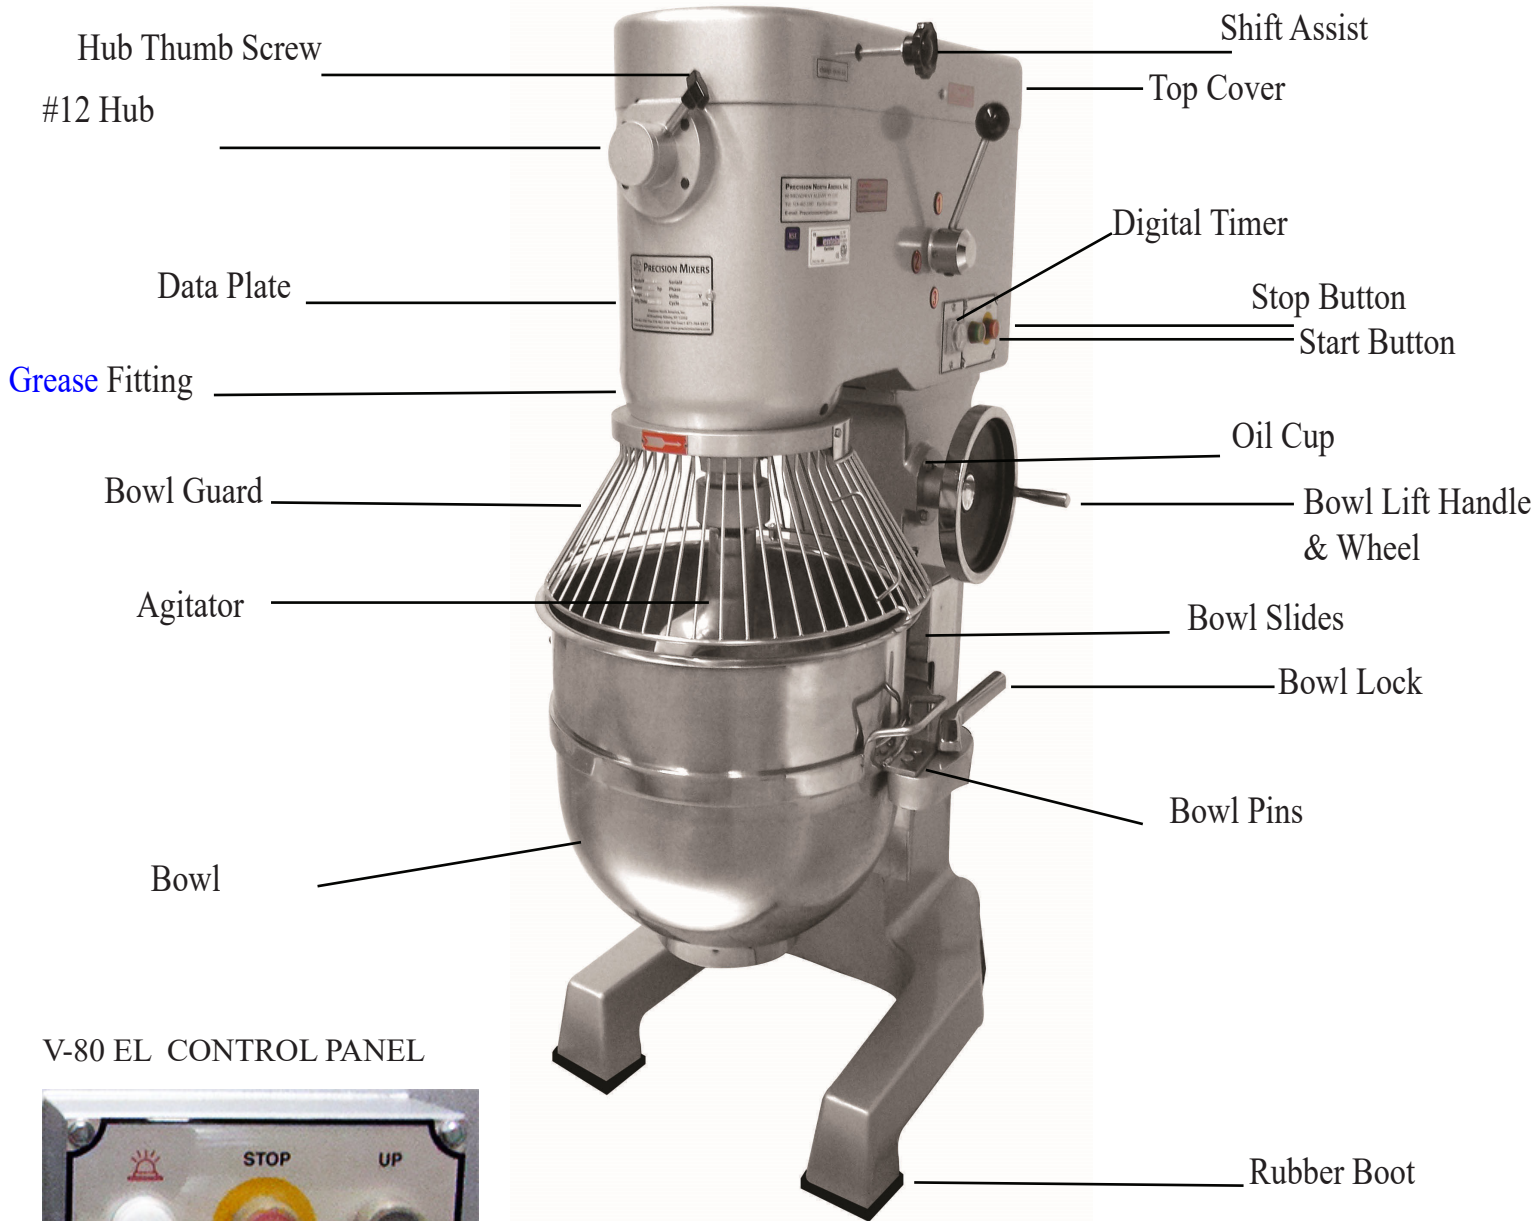

V-80 EL CONTROL PANEL





Operating Instructions

Safety Guidelines

Read the OPERATION MANUAL before operating the mixer.

WARNING

Disconnect power either through plug or breaker before cleaning or servicing the machine.

Always keep all hands, hair, clothing, and any loose articles away from moving parts.

Owners must ensure that anyone handling this equipment is at least 18 years old, properly trained, and have read and comprehended this handbook completely before allowing them to do so. This Manual alone does not replace proper training. Owners are responsible for ensuring that no unauthorized personal touch, clean, operate, or otherwise handle this equipment.

Do not operate this equipment if it, or the environment it is in, is not in good operating condition. Do not operate this equipment if there are parts missing.

Please see proper owners, operators, or trainers with any questions on how to operate or maintain this machine.

Precision North America Food Machinery, LLC is not responsible for any damages or harm done due to the negligence of the owners and operators of this machine. It is very important to follow safety guidelines and only use this machine for its intended use.



Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

Operating Instructions

Quick Start Guide

1. Place & Lock Bowl on Mixer While Bowl Arms are In the Down Position(pg. 3)
2. While Bowl is Still in the Down Position, Place Agitator onto Agitator Shaft
3. Put Ingredients in Bowl
4. Raise Bowl All the Way Up with the Crank Handle & Wheel OR Electric Up Button
5. Gently Close Safety Cage
6. Set Desired Mix Speed
7. Set Timer To Desired time
8. Press the Green Start Button To Start Mixing.



Operating Instructions Safety Cage

Bowl Guard in the open position



To open the safety cage, hold the handle and gently move cage to the left.

Bowl Guard in the closed position



To close the safety cage, hold the handle and gently move cage to the right

Do not force cage to open or close farther than it naturally would stop. Doing so can damage the safety switch mechanism and can prevent the mixer from starting.



Precision North America Food Machinery LLC.


60 Commerce Avenue, Albany, NY 12206

Operating Instructions

Bowl Lift

MANUAL LIFT

Raise Bowl

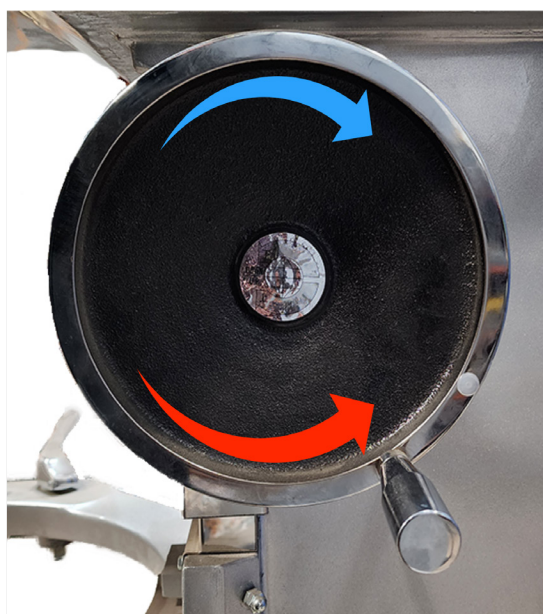

Lower Bowl

Raising the Bowl

Turn wheel counter-clockwise to lower the bowl. It is necessary to lower the bowl to change agitators, this also makes the bowl more accessible for filling. Please be sure to carefully lower bowl and to always have the bowl dolly sit under the bowl when lowering it. This will ensure bowl will not be lowered too far.,

Raising the Bowl

When raising the bowl turn wheel clockwise until it easily stops.

Push and Hold the Gray Up Button. Before lowering the bowl, be sure the locking bowl handles are not locked. Push and Hold the Gray Down Button to lower bowl.






Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

Operating Instructions

Bowl & Bowl Arm

To place bowl on mixer, lower the bowl arms down. place the bowl on the bowl arms by lining up the bowl pin holes to the pins

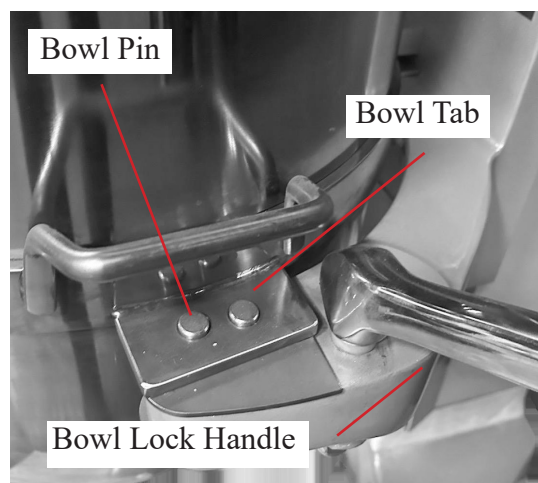

Pictured above: Bowl is NOT locked in

To lock bowl into mixer, pull bowl locks forward until they go over the bowl tabs.



Pictured above: Bowl IS locked in

**Make sure bowl is
locked before mixing**



Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

Operating Instructions

Agitators



The **Beater** is commonly used for thin batters, cakes, and mashing potatoes




The **WireWhip** is best for whipping cream and beating eggs.



The **Dough Hook** is best used for heavy bread dough.

When placing the agitator onto the agitator shaft, the bowl must be in the **down** position and the safety cage **open**. Slip the agitator up the shaft and turn it until the driving pin in the shaft reaches the L-shaped slot in the attachment

Agitator Should be Removed after each batch is completed. Failure to do so can cause agitator to get stuck.

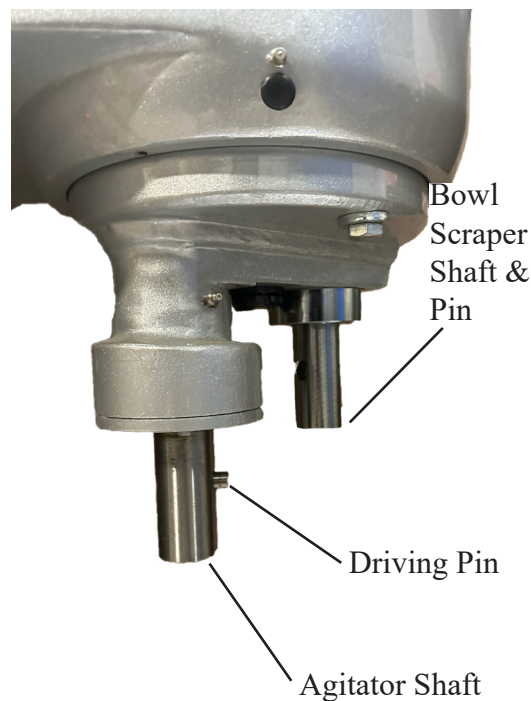



Operating Instructions

Adding Ingredients

WARNING

- Not Following the capacity chart and overloading may result in damages to the mixer. Any damage done due to overloading and not following the capacity chart will void the warranty.
- Make sure practice personal PPE and avoid inhaling any Flour and ingredient particles.
- Only add ingredients to bowl once it is on the mixer.

Capacity Chart

	Speed	Attachment	V-60	HD-60	V-80/(EL)
Cake (Sponge)		Paddle	45 lbs	-	90 lbs
Cake(Short)		Paddle	45 lbs	-	90 lbs
Cake(Pound)		Paddle	45 lbs	80 lbs	80 lbs
Cake(Cup)		Paddle	60 lbs	90 lbs	90 lbs
Cake(Layer)		Paddle	65 lbs	80 lbs	80 lbs
Cookies,Sugar		Paddle	40 lbs	-	60 lbs
Waffle Batter		Paddle	1/2 Bowl	1/2 Bowl	1/2 Bowl
Dough(pie)		Paddle	45 lbs	80 lbs	75 lbs
Dough(Bread or roll) 60% AR	1	Hook	50 lbs	90 lbs	80 lbs
Dough(Bread) < 60% AR	1	Hook	55 lbs	90 lbs	75 lbs
Dough(Pizza) 50% AR	1	Hook	70 lbs	80 lbs	75 lbs
Dough(pizza) < 50% AR	1	Hook	40 lbs	50 lbs	45 lbs
Dough(Donut) 65% AR	1	Hook	35 lbs	75 lbs	60 lbs
Icing(Fondant)		Paddle	26 lbs	-	66 lbs
Icing, shortening and sugar creamed		Paddle	45 lbs	60 lbs	60 lbs
Pasta		Hook	30 lbs	45 lbs	40 lbs
Mashed Poatoes		Paddle	40 lbs	50 lbs	45 lbs




Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

Operating Instructions

Mixer Speeds

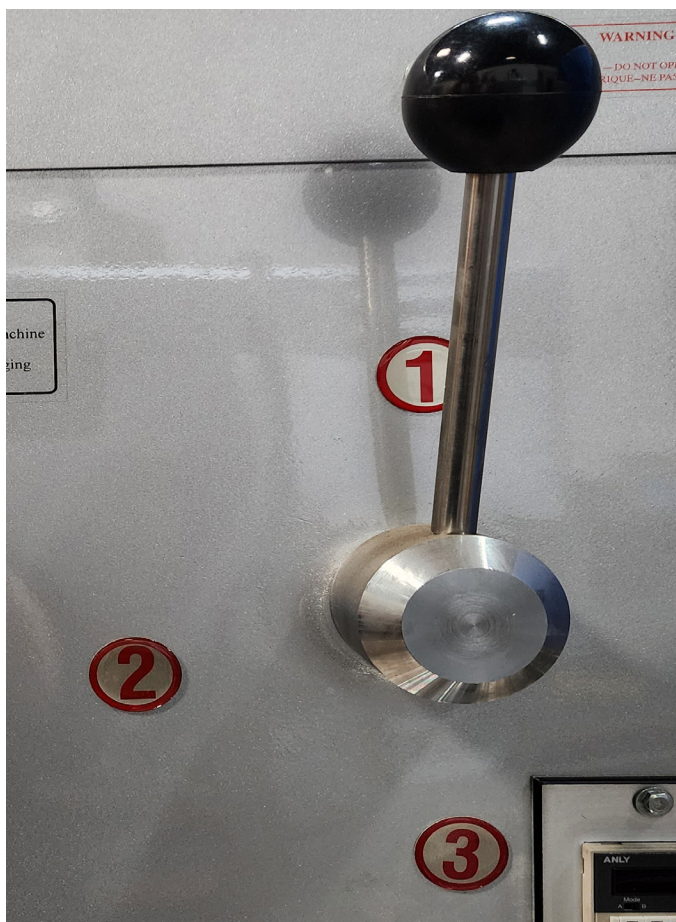

To change speeds, first turn off the motor, and then move the shifter handle to the desired speed.

Use **3rd speed** for fast, light work as whipping cream, beating eggs, and mixing thin batters.

Use **1st speed**, or slow speed, for heavy mixtures, like bread dough etc.

Also use this speed for the food chopper Hub attachment.

In many mixing operations, it is customary to begin in 1st speed, then change to a higher speed as the work progresses.

Never mix dough in 3rd speed. Pizza Dough should only be mixed in 1st speed.

Always turn off motor before changing speeds to avoid damaging gears



Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

Change Speed aid

Never change speeds while mixer is in operation!



NEW STYLE



OLD STYLE

Change speed aid is not used for every Shift! See Below..

The change speed aid is there in case the mixer will not shift into desired position. Our mixers are gear to gear drive and have no clutches or shims or spacers. Because of this the transmission will stop with the gears teeth lined up over or under each other. This condition will not allow the mixer to change speed. In the event this occurs the change speed aid will roll the gear box slightly and allow you to shift.

Old style Change speed aid has a big black knob. Depress this inward as you shift and it will allow shifting. This may take a few pumps.

New style has a green button and it electrically assists the gearbox. Push the button once and release it.




Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

Operating Instructions

Hub Attachments

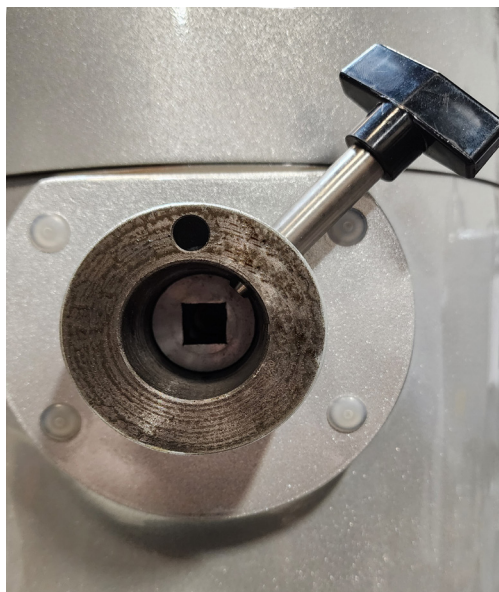

**NEVER mix
product in bowl
while using hub.**

To use attachment

- First make sure that mixer is off and not running.
- Remove the hub cover and thumb screw.
- Line up the attachment shaft to the Hub hole to insert.
- Twist thumb screw in and tighten until Attachment is secure.
- Be sure to lubricate attachment hub periodically with mineral oil.

Depending on attachment, use only the recommended speed.

Meat Grinder	Speed 1
Vegetable Slicer	Speed 1 or 2
Cheese Grater	Speed 1 or 2



Precision North America Food Machinery LLC.


60 Commerce Avenue, Albany, NY 12206

Operating Instructions

Timer Instructions

Instructions for the Operation of the Digital Timer for the Model HD-60 Precision Mixer

The Timer example below is set for 3 minutes

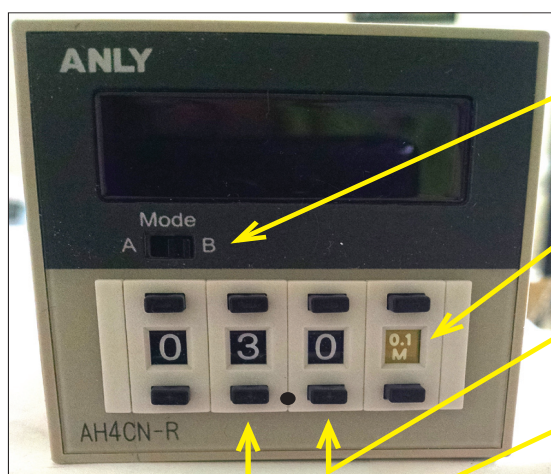

Always run the timer in the B Mode setting on your dial

Always leave the .1 M setting on your dial.

Set your Fractional Timer Minutes here. (.5) = 30 seconds

Set your Timer Minutes here. (Pictured is 3 Minutes)

The Timer example below is set for 3 minutes and 30 Seconds



The Timer example below is set for 12 minutes





Troubleshooting

Mixer wont turn on:

Check breaker, flip breaker off then on.

If mixer has a removable plug, unplug then plug back in.

Open then close cage.

Lower the bowl 4-5 inches and roll it back up.

Change the timer setting from seconds to minutes or hours.

Action

Try to start mixer

Try to start mixer

Try to start mixer

Try to start mixer

Try to start mixer

Other Troubleshooting

Action

Squeaky Noise and mixer mixing slow or not at all

Belts are loose or have slipped.
Adjust belts or call technician

Mixer wont change speed

Mixer may be inbetween gears. Use shift assist and try to move speed handle again. Call technician if not resolved.

Bowl lift hard to roll up or down

Bowl cup and/or slides need to be lubricated with mineral oil and/or cleaned.
Refer to PM instructions.

Grinding noise while mixing

Planetary may need to be greased.
Refer to PM instructions.

Agitator falls off shaft

Mixer may have been installed incorrectly. Contact electrician.

**Call your service provider or
Precision North America if you need
further technical assistance.**



Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

Preventative Maintenance

CLEANING

Machine should be kept clean- **Use mild soap and water (do not hose down)**


Use of any factory unauthorized cleaning solution may result in mixer paint and finish to be compromised.

NOTICE:

DISCONNECT THE ELECTRICAL POWER TO THE MACHINE AND FOLLOW LOCKOUT / TAGOUT PROCEDURES.

Any areas of the mixer that could come in contact with product during mixing should be cleaned at least daily. These areas include but are not limited to:


Safety Guard: Clean debris inbetween metal spokes of the cage as well as area where cage is attached. Ensure there is no product left in planetary area underneath where safety cage is connected. Doing so will ensure proper Safety Cage operation and sanitation.

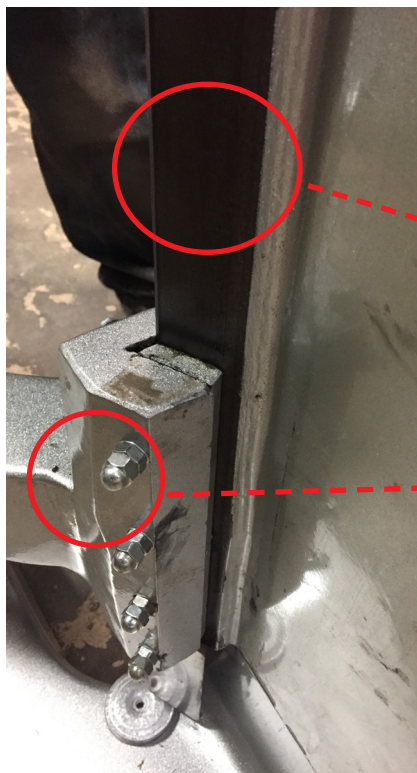

Bowl Slides

Bowl Arm

Bowl Slides: In the event product gets onto area where Bowl Arms either raise or lower the bowl, it could inhibit smooth operation. Clear debris and re apply Mineral oil if needed. (see Lubrication page for more detail)

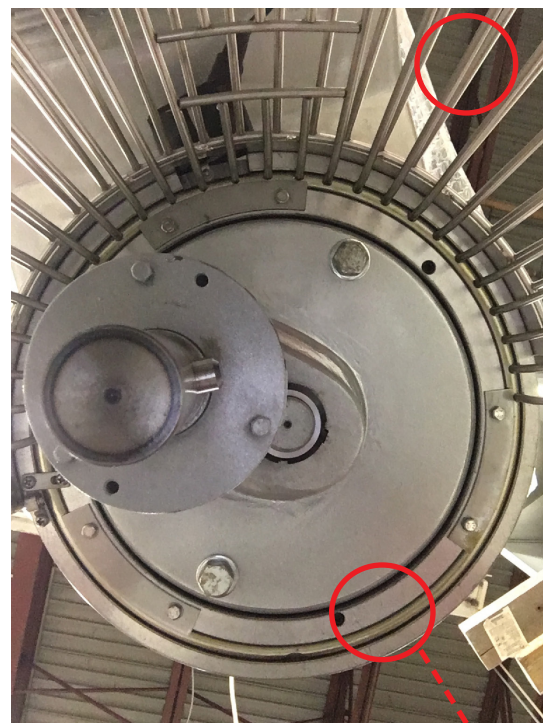

Spokes

Safety Cage Slide



Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206


Preventative Maintenance

LUBRICATION



- A **grease** fitting is provided for the planetary and should be lubricated after approximately 40 hours of use. (Food grade Lithium **grease**)

- Lubricate the rotating cage as needed with petroleum jelly or mineral oil only.

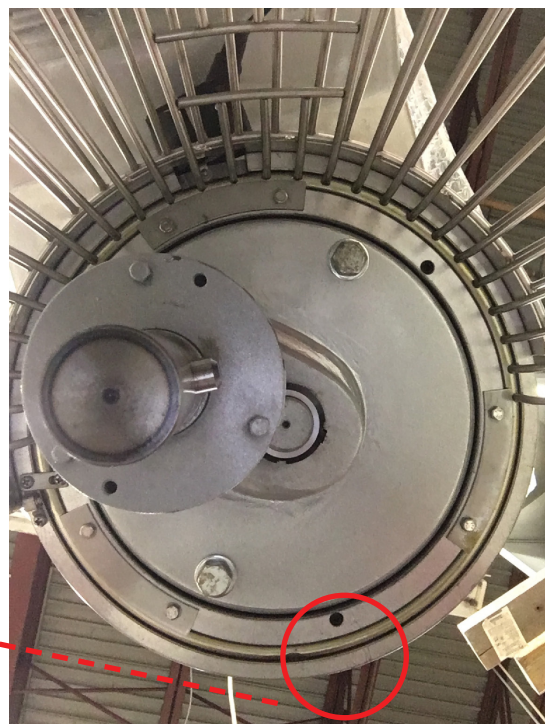




Precision North America Food Machinery LLC.
60 Commerce Avenue, Albany, NY 12206

Preventative Maintenance


LUBRICATION CONTINUED

Lubricate as needed NOT every time it's used.

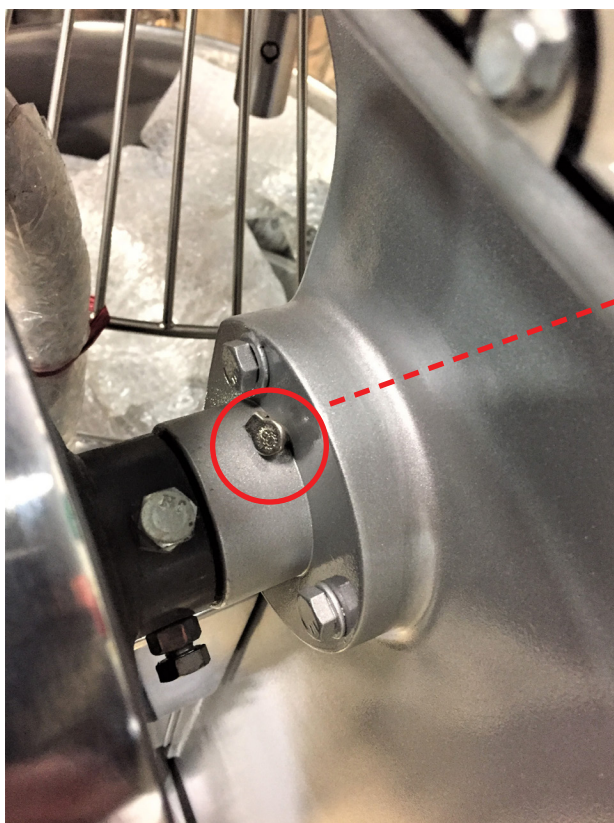

Fitting for lubricating the
hand crank (**Mineral Oil**).

Before applying mineral oil,
make sure bowl slides are
clear of debris. Apply two
small drops of mineral oil
to each slide weekly or as
needed.

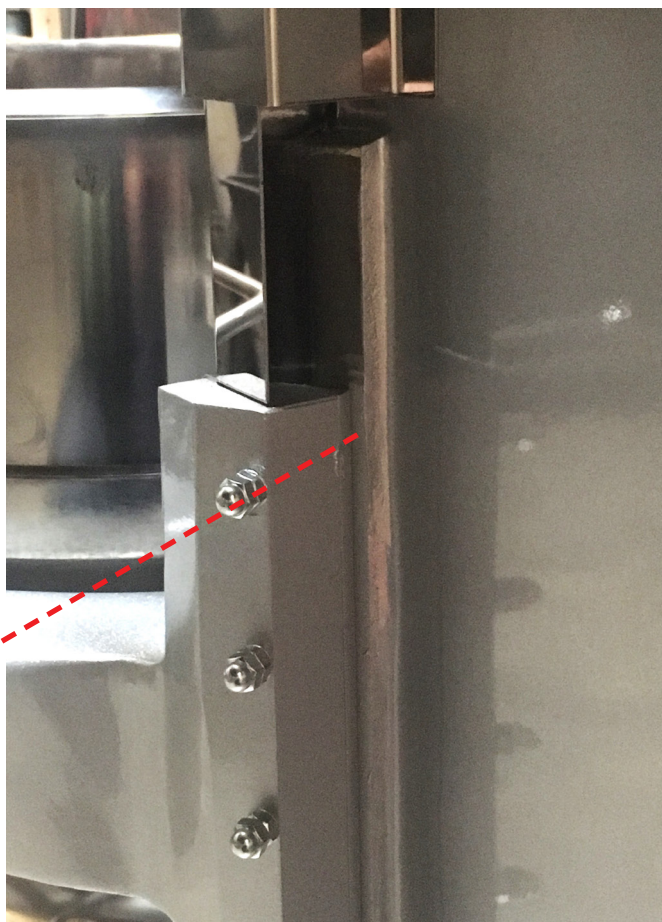



Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

Top cover removal

REMINDER!

Power must be disconnected or breaker turned off and properly locked and tagged out!

Old Style Black Knob



- Remove the change speed handle
- Use a 9/16" wrench to hold the lock nut
- And unscrew the black depression handle.
- Remove the lock nut
- Remove the (2) top cover screws (10 mm)
- Lift the cover from the shifting side and remove.
- Set cover aside

New Style Green Button



- Remove the (2) top cover screws (10 mm)
- Lift the cover
- Turn the cover sideways and balance on the front of the mixer




Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

Preventative Maintenance

Belt Replacement/ Tensioning

Belt replacement

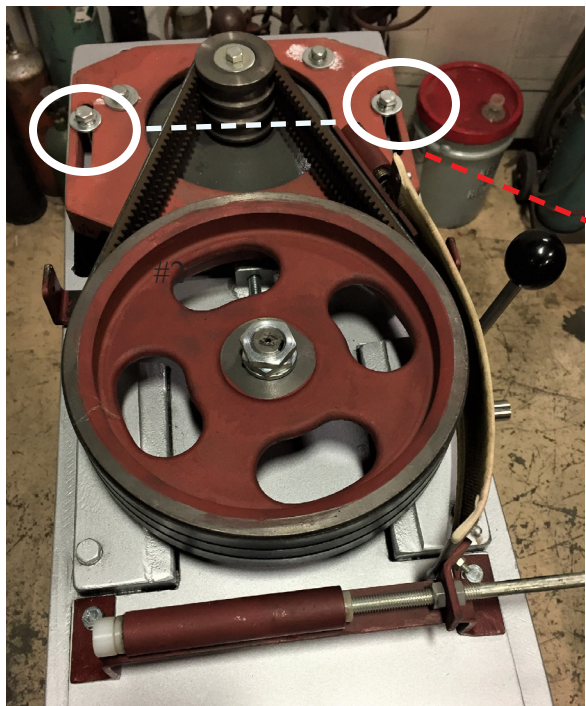


Belt tensioning is part of the preventive maintenance of the machines as this is a wear part. This can be done easily by almost anyone.

1. Remove the top cover (see above)
2. Loosen the (2) 9/16" bolts on the motor bracket.
3. Loosen the adjustment screw (9/16") located on the casting underneath the main drive sheave/pulley.
4. Pull belts off and replace.

Belt tensioning

1. Remove the top cover
2. Loosen the (2) 9/16" bolts on the motor Bracket
3. Turn the adjustment screw (9/16") located on the casting underneath the main drive sheave/pulley.

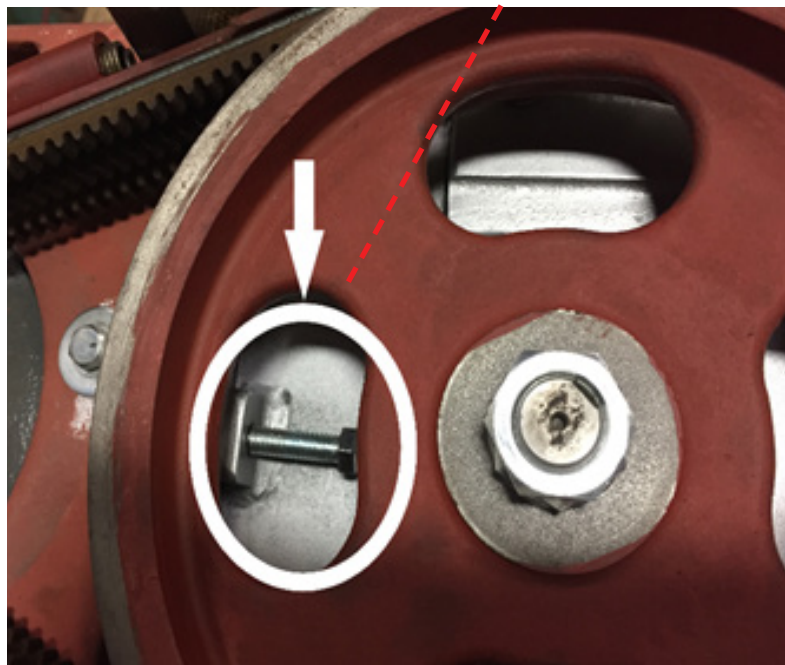

Note: Belts should have minimal deflection $\frac{1}{2}$ " to $\frac{3}{4}$ " deflection. A good rule of thumb is- you should be able to force your finger between the top (2) belts from the top down, but not be able to weave it through all (3).



Precision North America Food Machinery LLC.
60 Commerce Avenue, Albany, NY 12206

Maintenance Log

Model #: _____ Serial #: _____ Location: _____

Date	Maintenance Preformed	Completed By	Notes



Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

WARRANTY

ONE-YEAR PARTS & LABOR WARRANTY

Precision North America, LLC. warrants to the original purchaser of every new Precision Mixer and all parts thereof, to be free from defects in material and workmanship, under normal and proper use and maintenance service as specified by Precision N. America, LLC. and upon proper installation and start-up in accordance with the instruction packet supplied by each Precision mixer. Precision's obligation under this warranty is limited to a period of (1) year from the date of original installation, or 15 months after shipment date from Precision, whichever occurs first. Any parts covered under this warranty that are determined by Precision N. America to have been defective within (1) one year of original installation or fifteen (15) months after shipment date from Precision N. America, whichever occurs first, is limited to the repair or replacement, including labor charges, of defective parts or assemblies. The labor warranty shall include standard straight time labor charges only, as determined by Precision N. America.

ADDITIONAL 2 YEARS PART WARRANTY

In addition to the (1) one year warranty stated above, Precision N. America, LLC. includes an additional (2) two years warranty on the motor and complete drive train. Terms and conditions on the additional (2) two year parts warranty are the same as stated above, excluding labor.

EXTENDED WARRANTY ON PRECISION MODEL #HD-60

Precision North America, LLC. warrants to the original purchaser of every new Precision HD-60 an extended 6-year warranty on all gears and shafts in the planetary and transmission, parts only. Warranty applies to said parts if breakage is due to manufacturer's defect or customer error. Shipping and labor charges are not covered under this extended warranty. Customers Obligation Completed warranty card, along with original purchase receipt, must be on file with Precision N. America, LLC. To file your registration, simply complete warranty card and mail together with your invoice to Precision N. America, LLC., 60 Commerce Ave., Albany, NY 12206 Strong Recommendation. To avoid labor costs and down time for your mixer, we recommend that the customer perform scheduled maintenance on the HD-60. Maintenance includes planetary being greased a minimum of once every 12-months, and transmission oil changed a minimum of once every 5-years.

PERFORMANCE GUARANTEE

From the date of delivery, for 30-days, if your Precision HD-60 does not perform to your satisfaction, Precision will replace it with a new mixer brand of customer's choice. Customer is responsible for the difference in average retail cost between the mixers. Customer is responsible for all freight charges. Precision must be notified of any lack of performance and be able to view it at the customer's location.

WARRANTY CLAIMS

All claims for labor or parts must be authorized through Precision North America, LLC. All claims should include: model number, serial number, proof of purchase, date of installation, and all pertinent information supporting the existence of the alleged defect.

WARRANTY INFORMATION CONTINUED ON NEXT PAGE



Precision North America Food Machinery LLC.

60 Commerce Avenue, Albany, NY 12206

WARRANTY

WHAT IS NOT COVERED BY THIS WARRANTY

Precision N. America's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty.

NO CONSEQUENTION DAMAGES.

PRECISION N. AMERICA, LLC. IS NOT RESPONSIBLE FOR ECONOMIC LOSS; OR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, LOSSES OR DAMAGES ARISING FROM FOOD OR PRODUCT SPOILAGE CLAIMS WHETHER OR NOT ON ACCOUNT OF MACHINE MALFUNCTION.

WARRANTY IS NOT TRANSFERABLE.

This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. ANY SUCH ASSIGNMENT OR TRANSFER SHALL VOID THE WARRANTIES HEREIN MADE AND SHALL VOID ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IMPROPER USAGE.

PRECISION N. AMERICA, LLC. ASSUMES NO LIABILITY FOR THE PARTS OR LABOR COVERAGE FOR COMPONENT FAILURE OR OTHER DAMAGES RESULTING FROM IMPROPER USAGE OR INSTALLATION OR FAILURE TO CLEAN AND/OR MAINTAIN PRODUCT AS SET FORTH IN THE WARRANTY PACKET PROVIDED WITH THE MACHINE.

ALTERATION, NEGLIGENCE, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT, FIRE, FLOOD, ACTS OF GOD.

Precision N. America, LLC. is not responsible for the repair or replacement of any parts that Precision determines have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit, fire, flood, or act of God.

IMPROPER ELECTRICAL CONNECTIONS.

Precision N. America is Not RESPONSIBLE FOR THE REPAIR OR RE-PLACEMENT OF FAILED OR DAMAGED COMPONENTS RESULTING FROM ELECTRICAL POWER FAILURE, THE USE OF EXTENSION CORDS, LOW VOLTAGE, OR VOLTAGE DROPS TO THE MACHINE.

NO IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

THERE ARE NO OTHER WARRANTIES, EXPRESSED, IMPLIED OR STATUTORY, EXCEPT THE (1) YEAR LABOR & (3) THREE YEAR PARTS WARRANTY AS DESCRIBED ABOVE. THESE WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, INCLUDING IMPLIED WARRANTY AND MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. OUTSIDE U.S. This warranty does not apply to, and Precision N. America, LLC. is not responsible for, any warranty claims made on products sold or used outside the

WARRANTY Registration Card

Precision N. America, LLC.
Mail Card Immediately

This Card must be mailed
immediately after installation
date for warranty to be in effect.

Please Mail to:
Precision North America, LLC.
60 Commerce Ave.
Albany, NY 12206

Name _____ Mixer Model # _____ M/C # Machine Code _____
Type of Business _____ Business phone # _____
Address _____ City _____ State _____ Zip _____
Name of Power Company _____
This is to inform Precision N. America, Inc. that I, (owners name) _____
have had the above mixer installed in my place of business on (date) _____
The above warranties are in effect from this installation date, or 90 days after shipment from Precision,
whichever comes first.
Customer Signature _____

Precision North America, LLC. phone: 518-462-3387 fax: 518-462-3389 www.precisionmixers.com

IMPORTANT: Copy of sales receipt must accompany this warranty card for warranty to be valid

