




FSPW-SS, FSPWI-SS, BSW-SS, BSWI-SS, HSSW-SS, HSSWI-SS (For Series 04K or 05F)

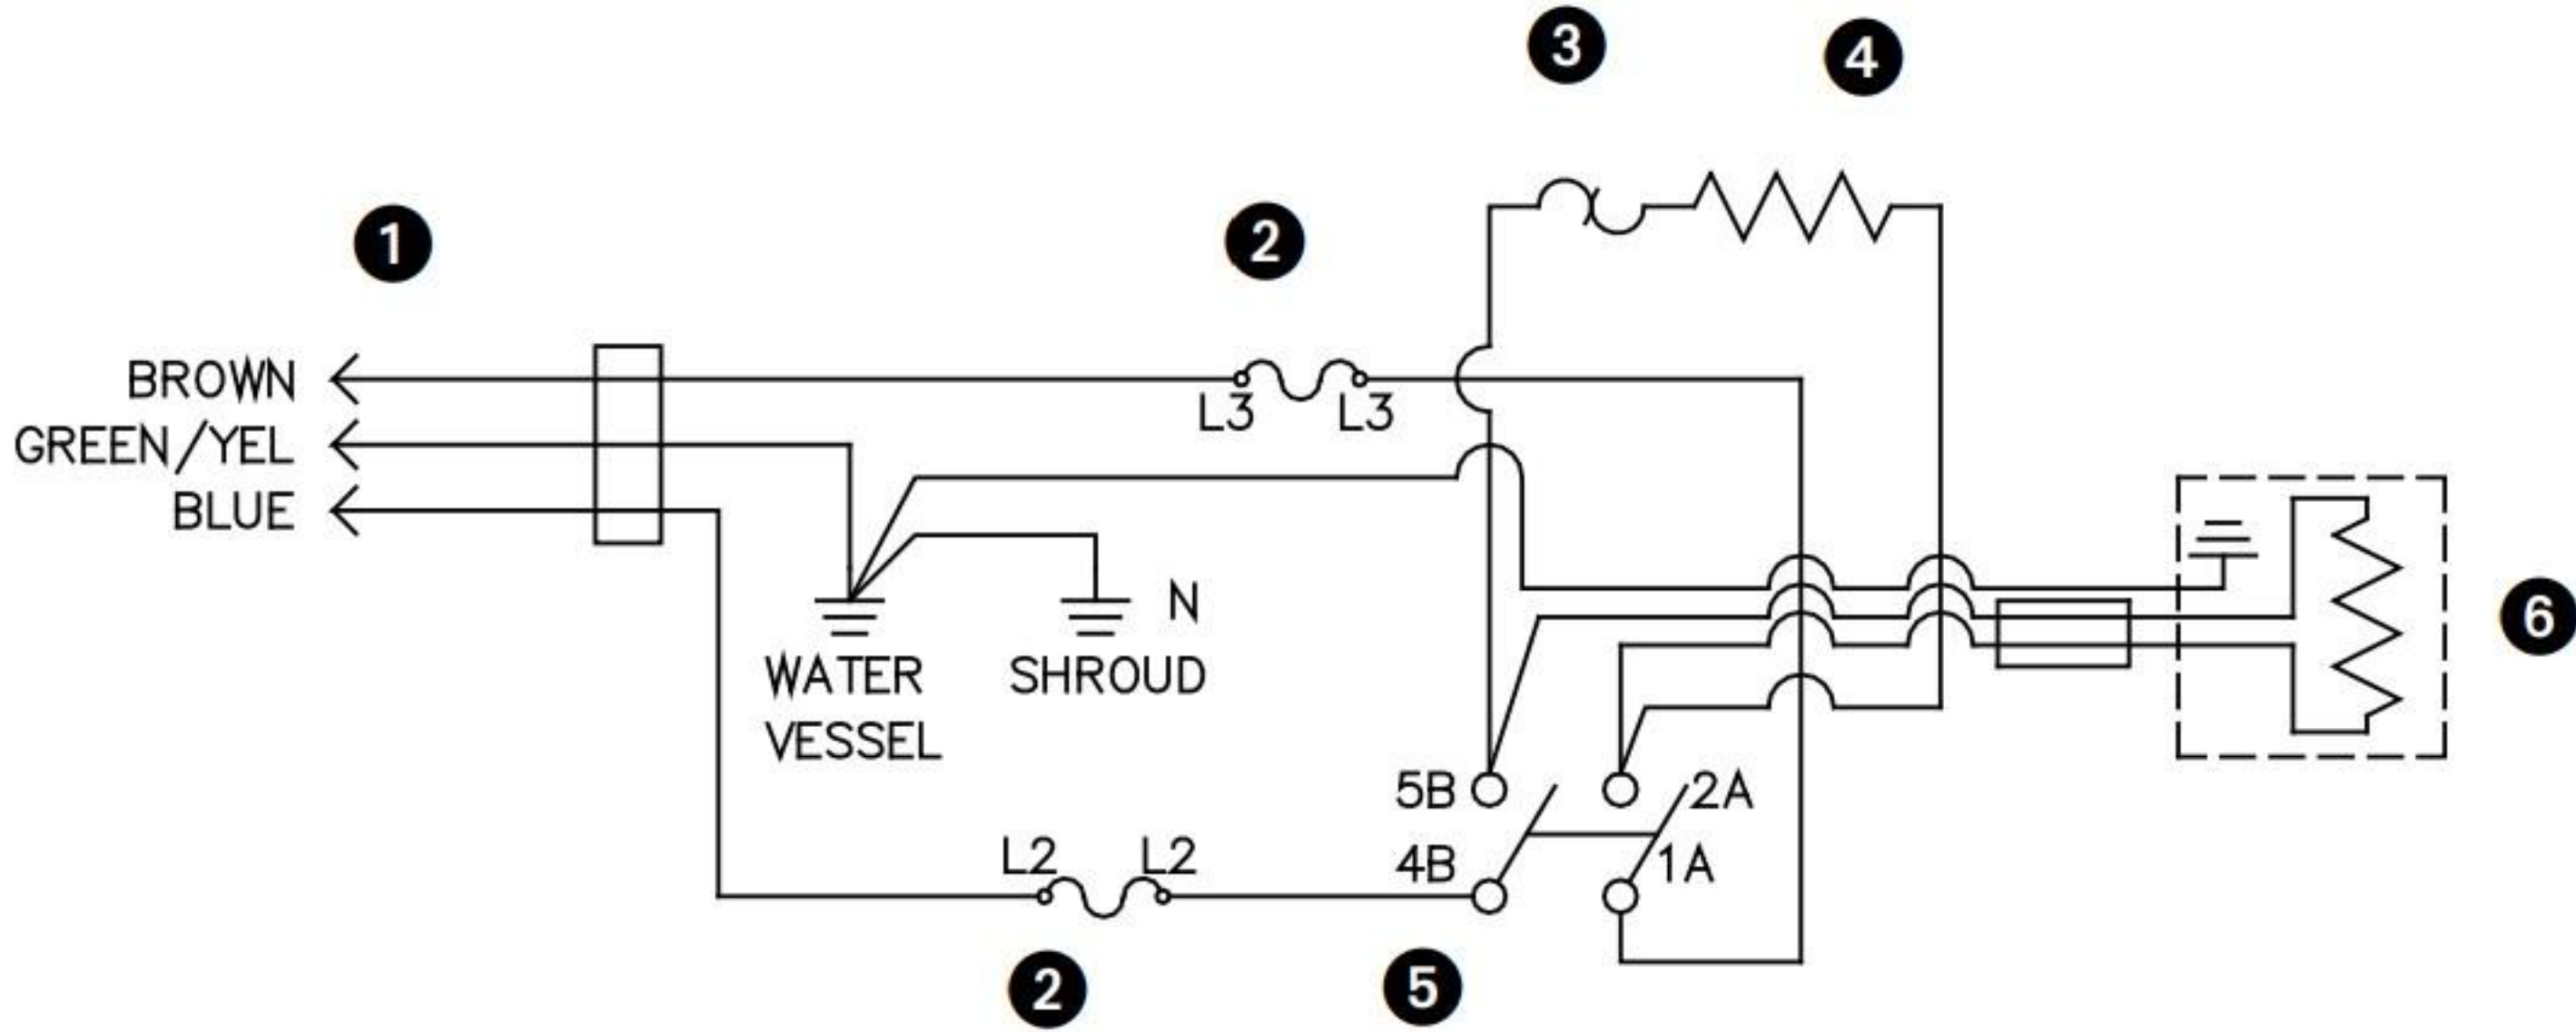


FS-SS, FSP-SS, BS-SS, FS-4SS (For Series 04K or 05F)

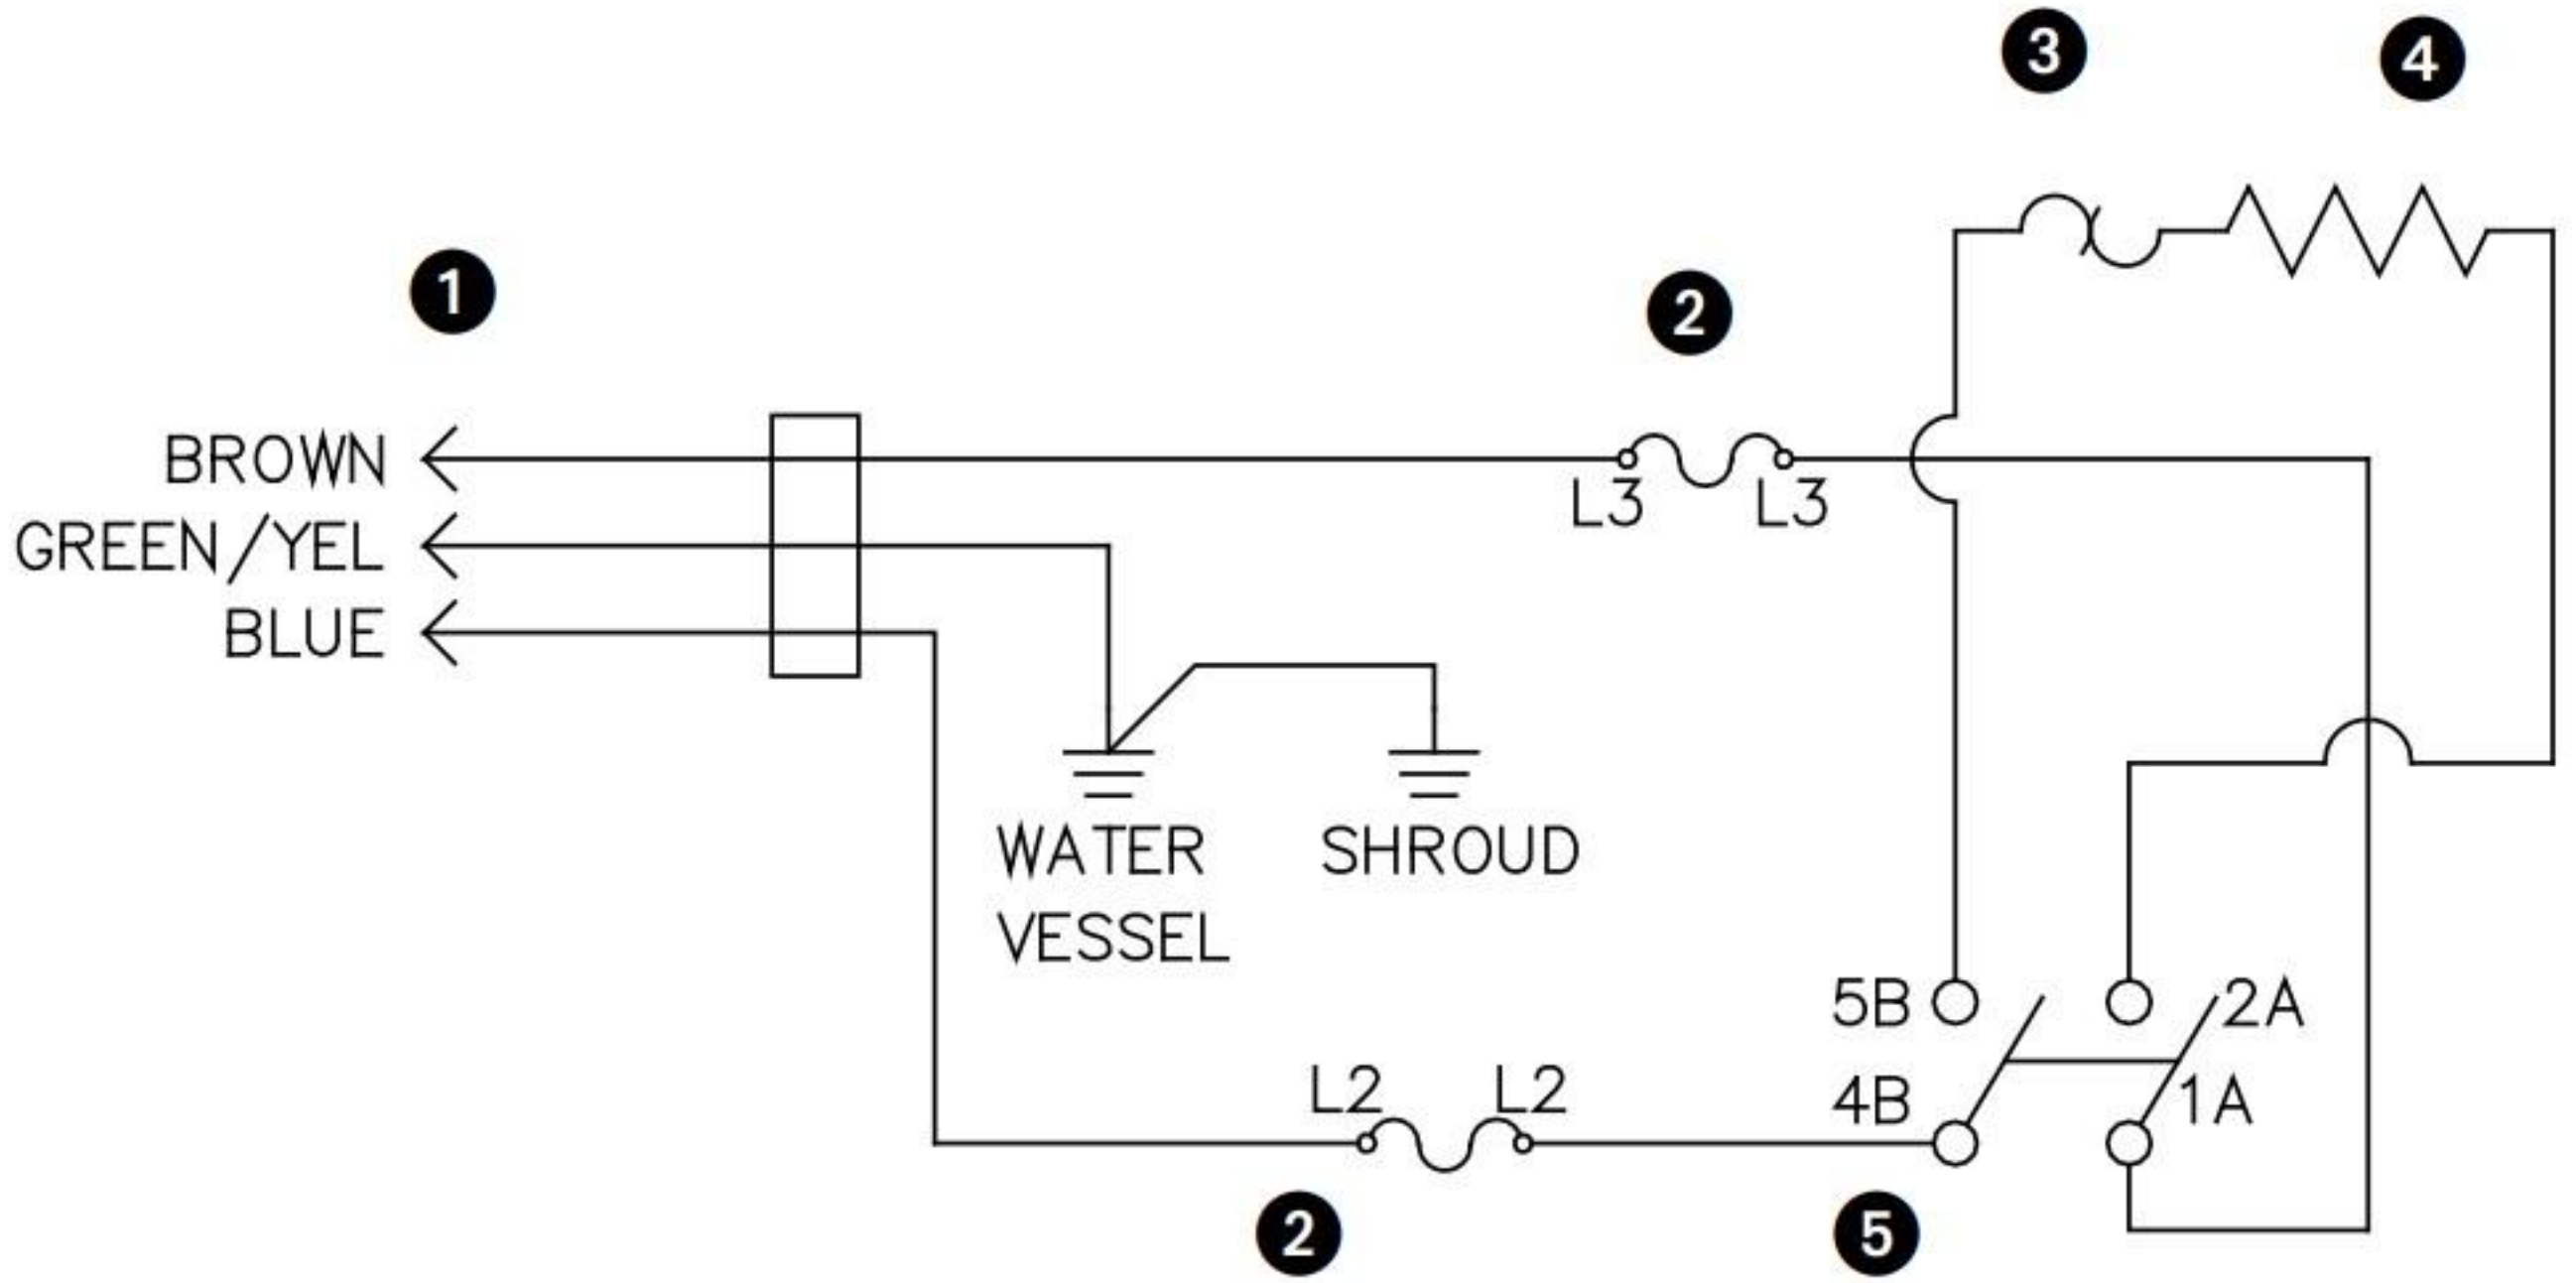


FSPW-SS, FSPWI-SS, BSW-SS, BSWI-SS, HSSW-SS, HSSWI-SS (For Series 03L)

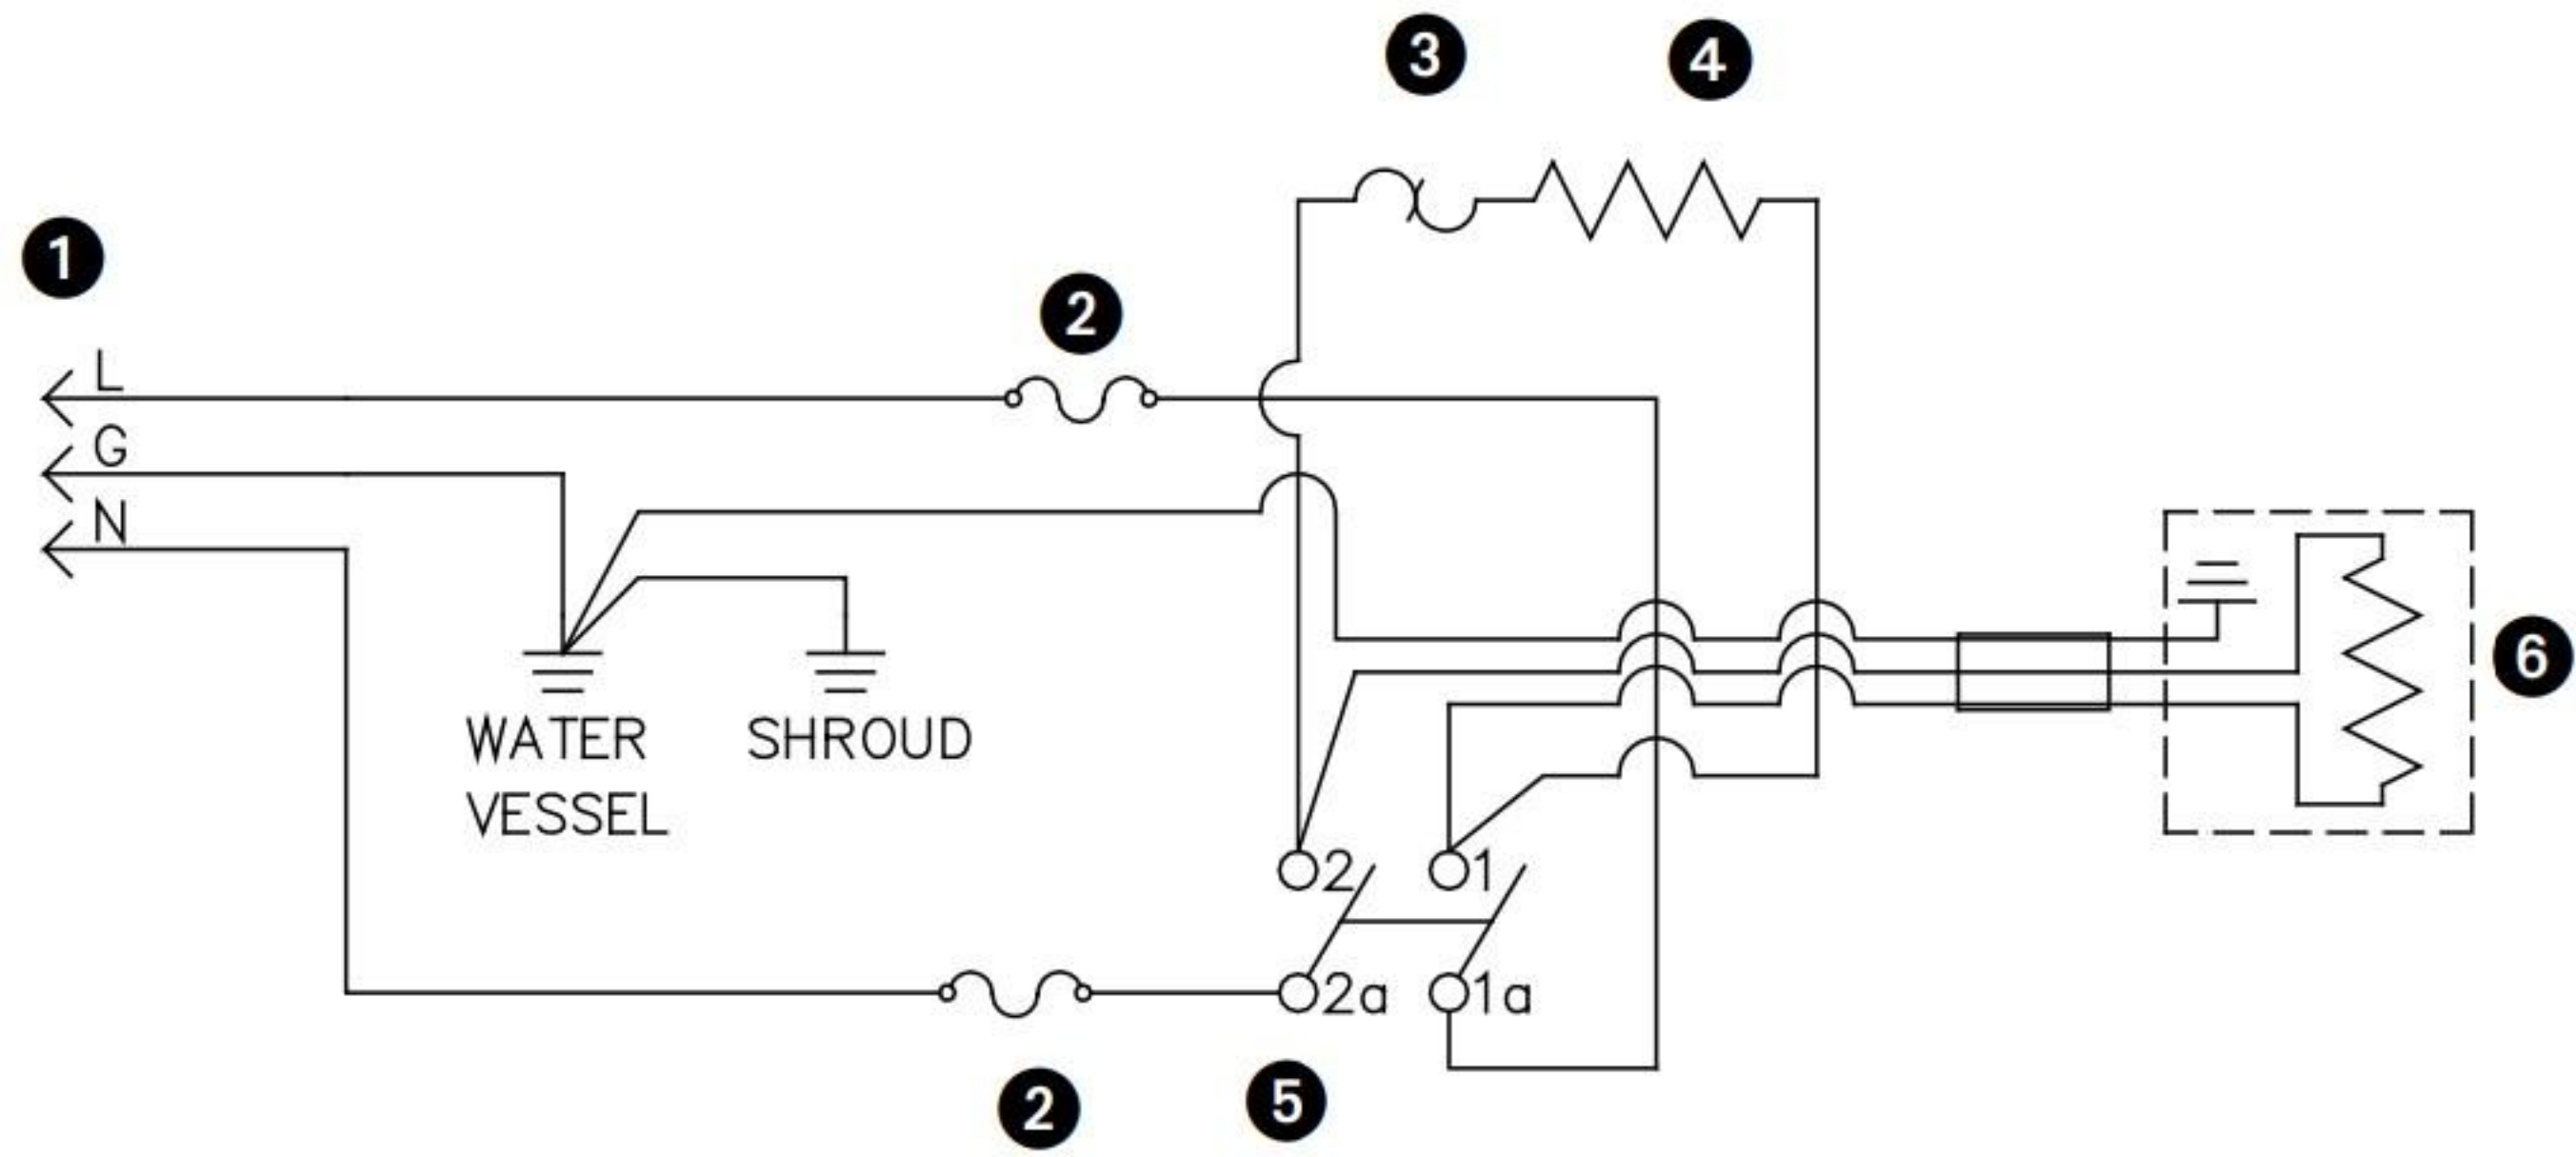


FS-SS, FSP-SS, BS-SS, FS-4SS (For Series 03L)

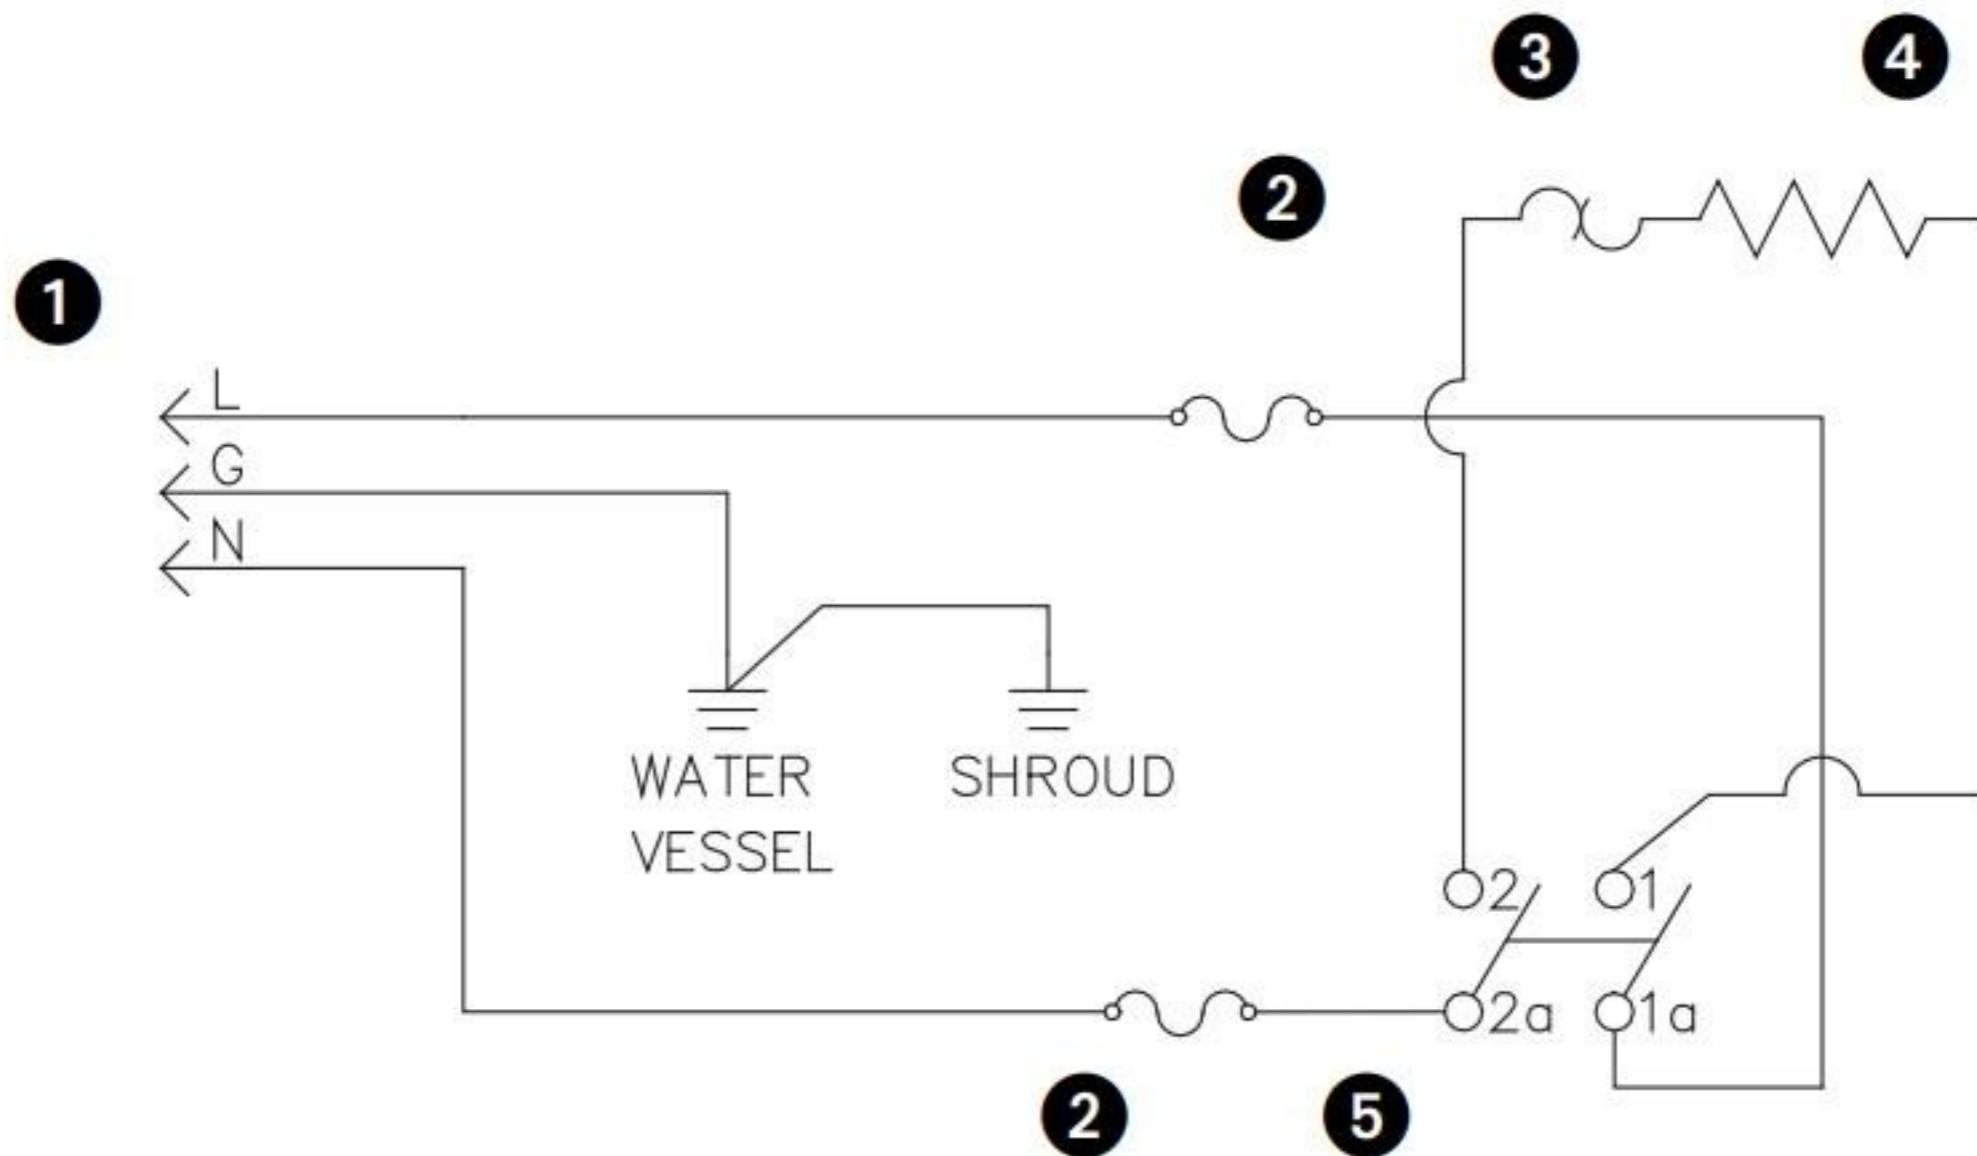


FSPW-SS, FSPWI-SS, BSW-SS, BSWI-SS, HSSW-SS, HSSWI-SS (For Series 04K or 05F)

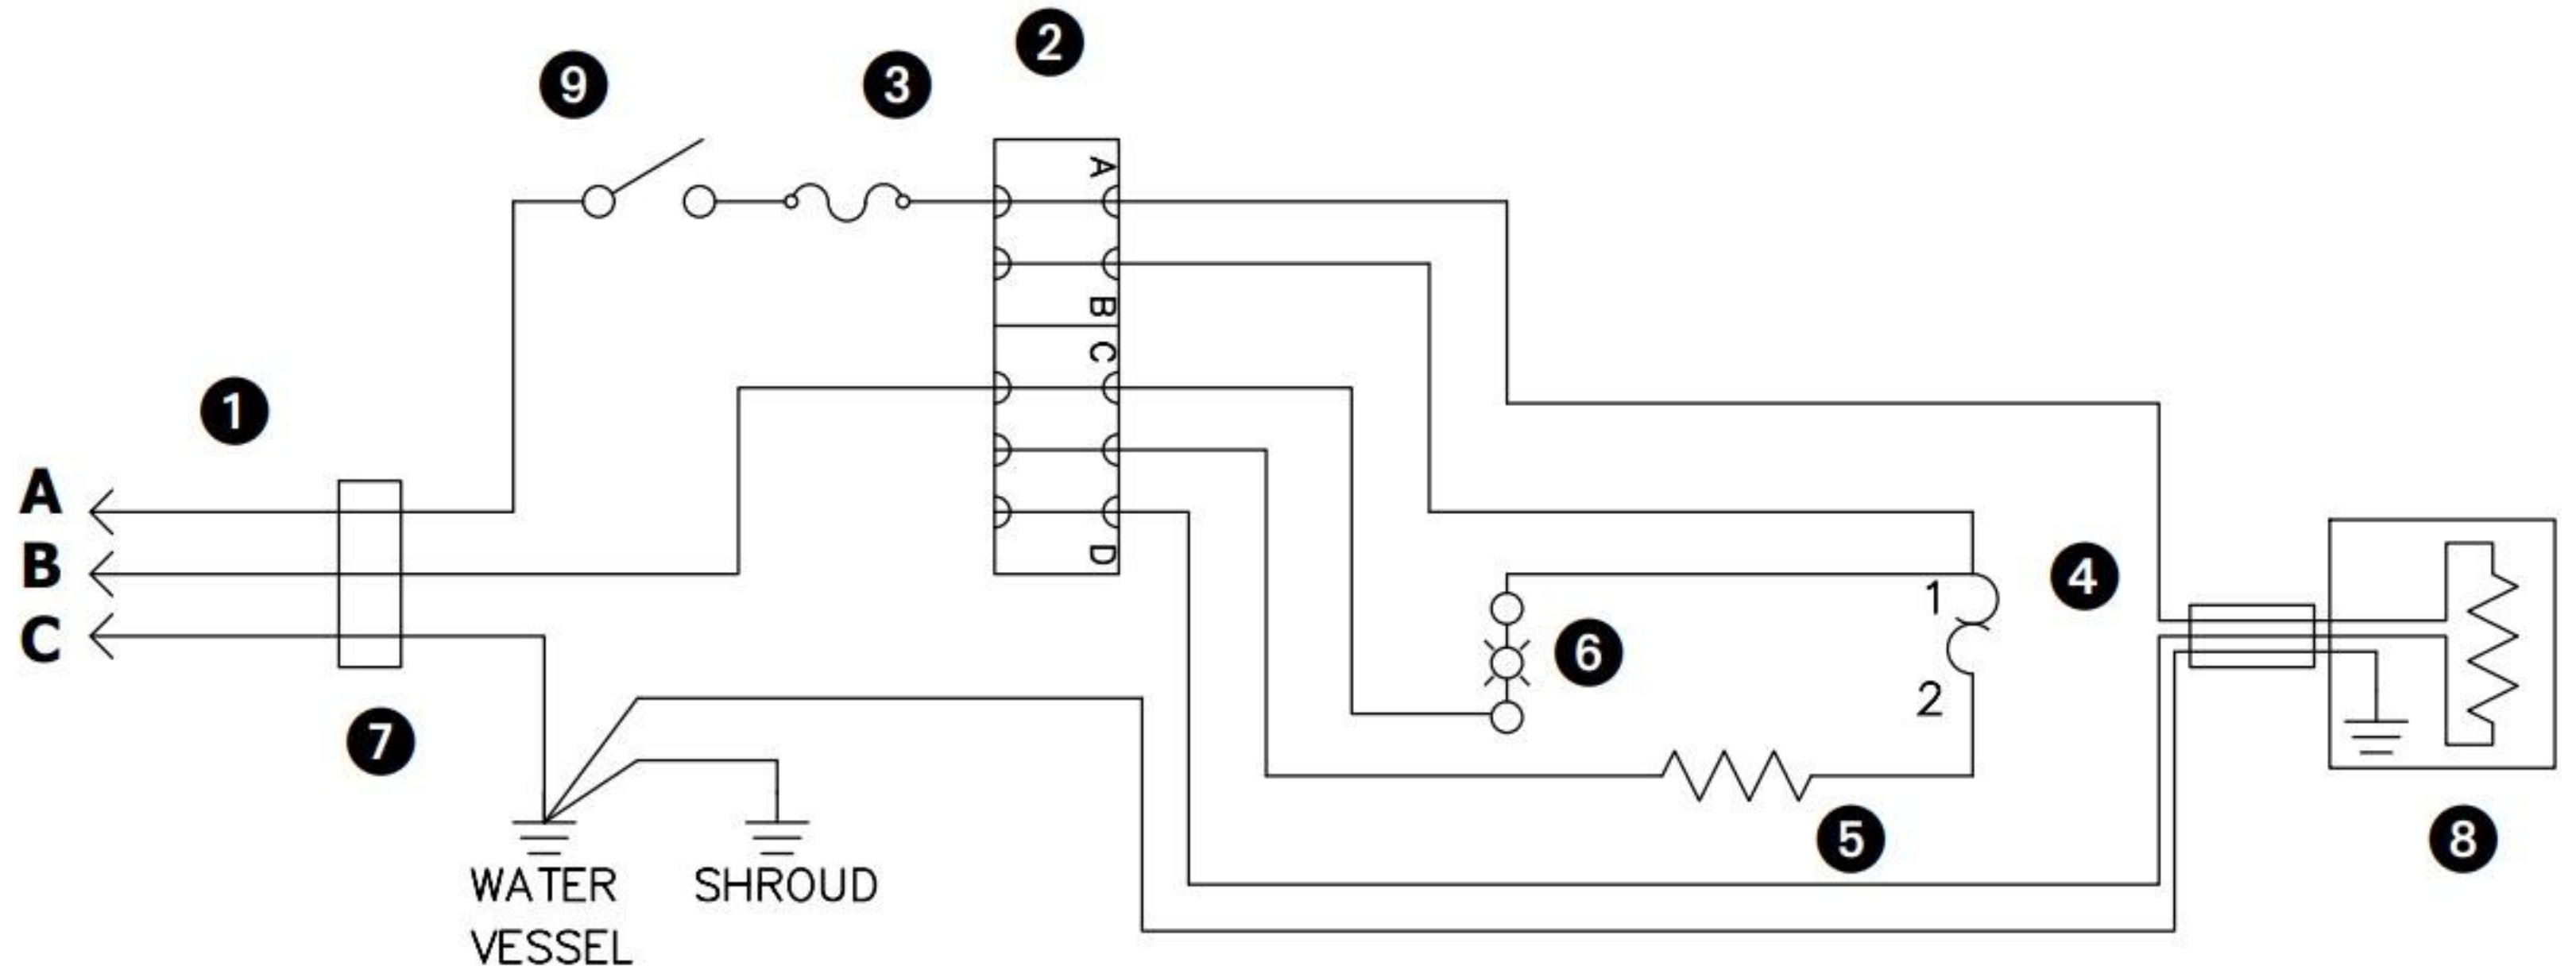

FS-SS, FSP-SS, BS-SS, FS-4SS (For Series 04K or 05F)

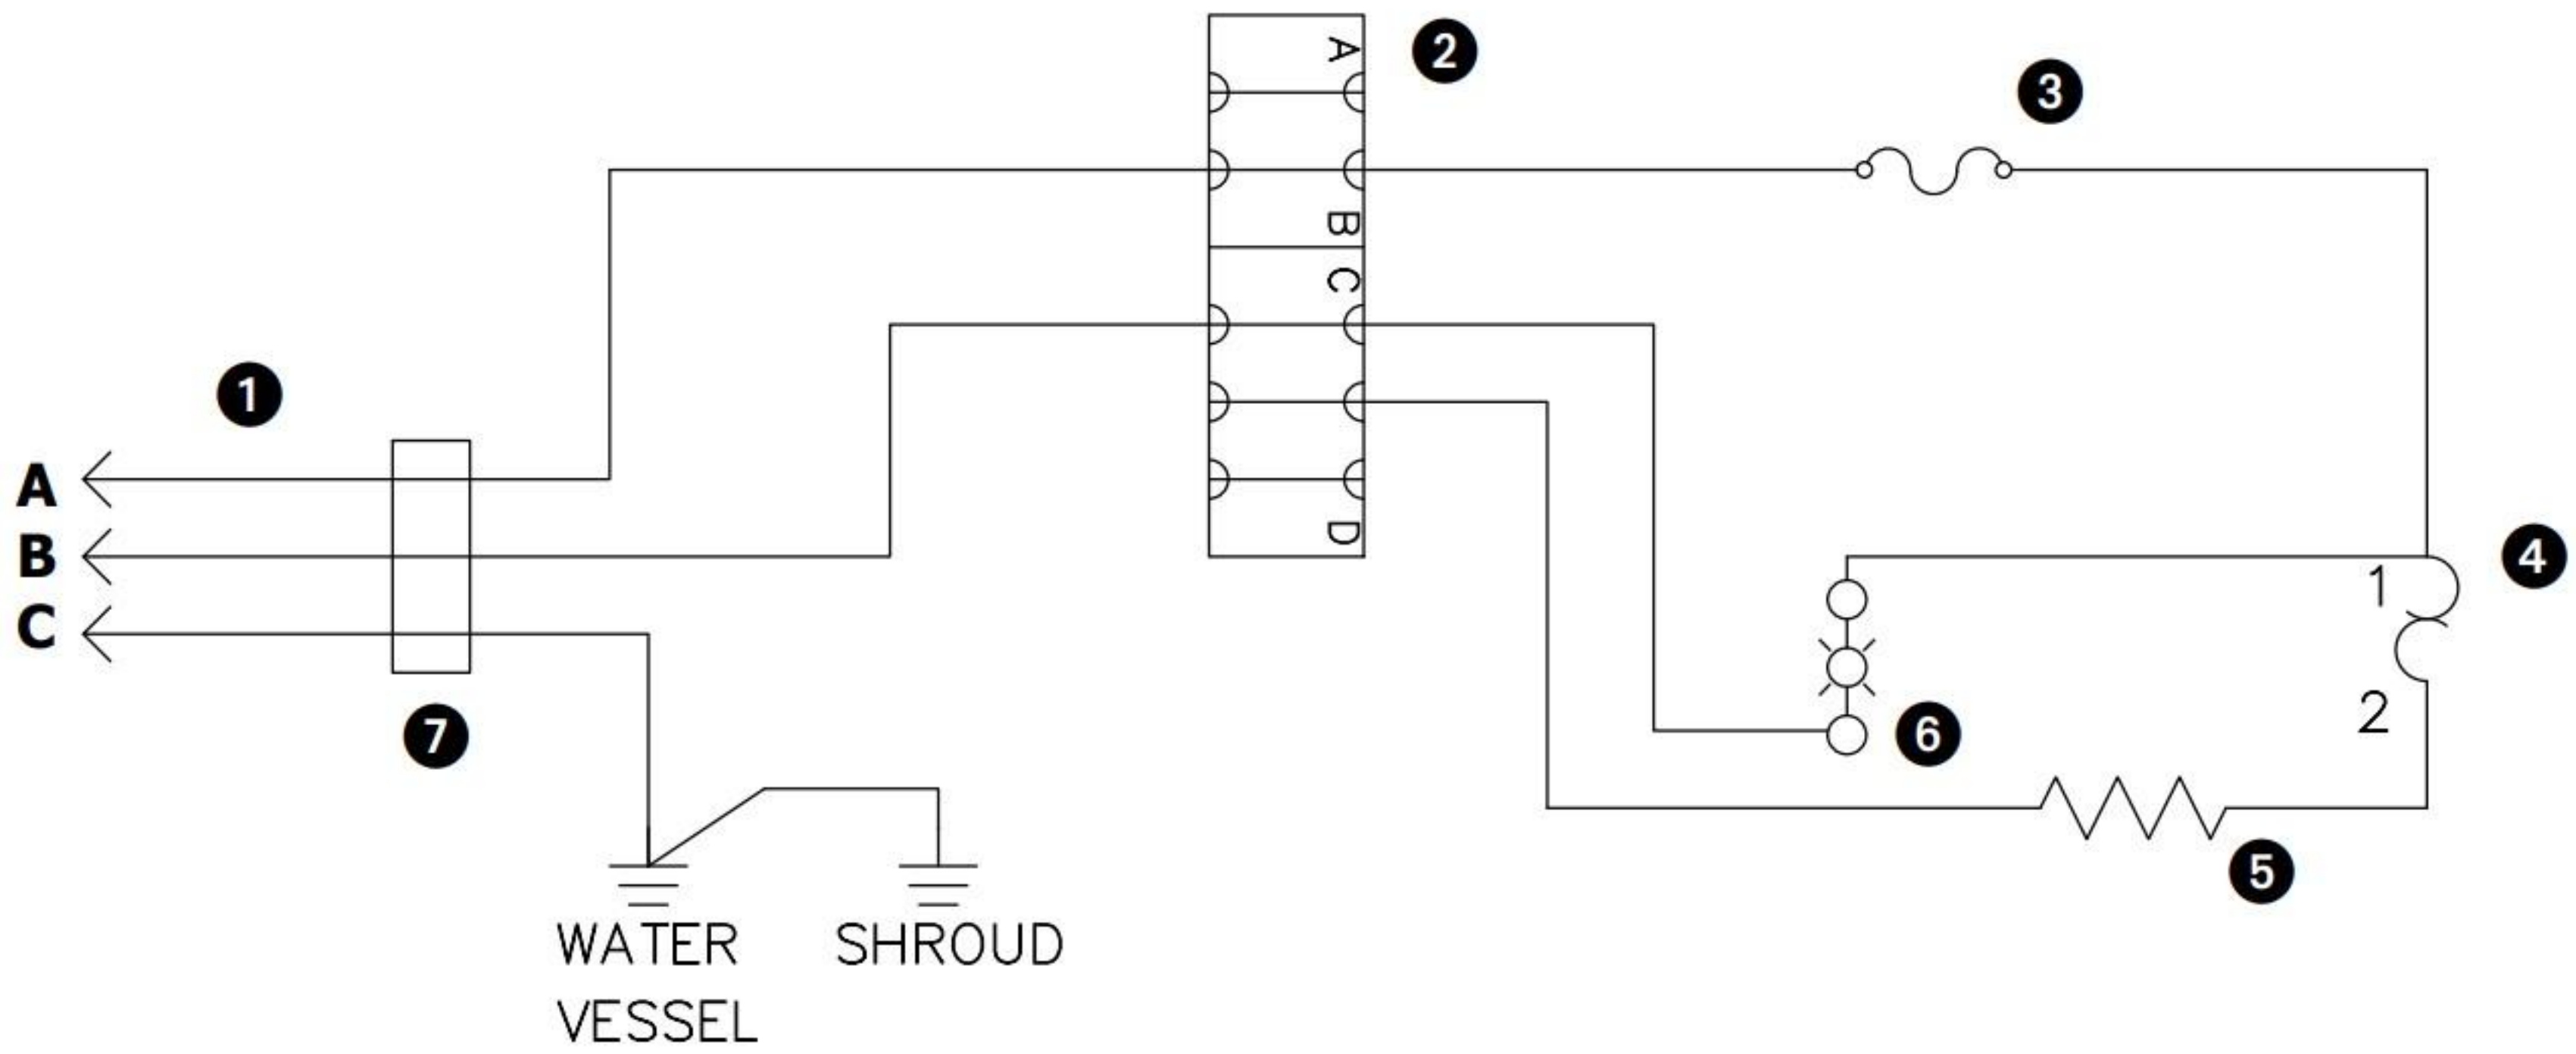

FSPW-SS, FSPWI-SS, BSW-SS, BSWI-SS, HSSW-SS, HSSWI-SS (For Series 03L)

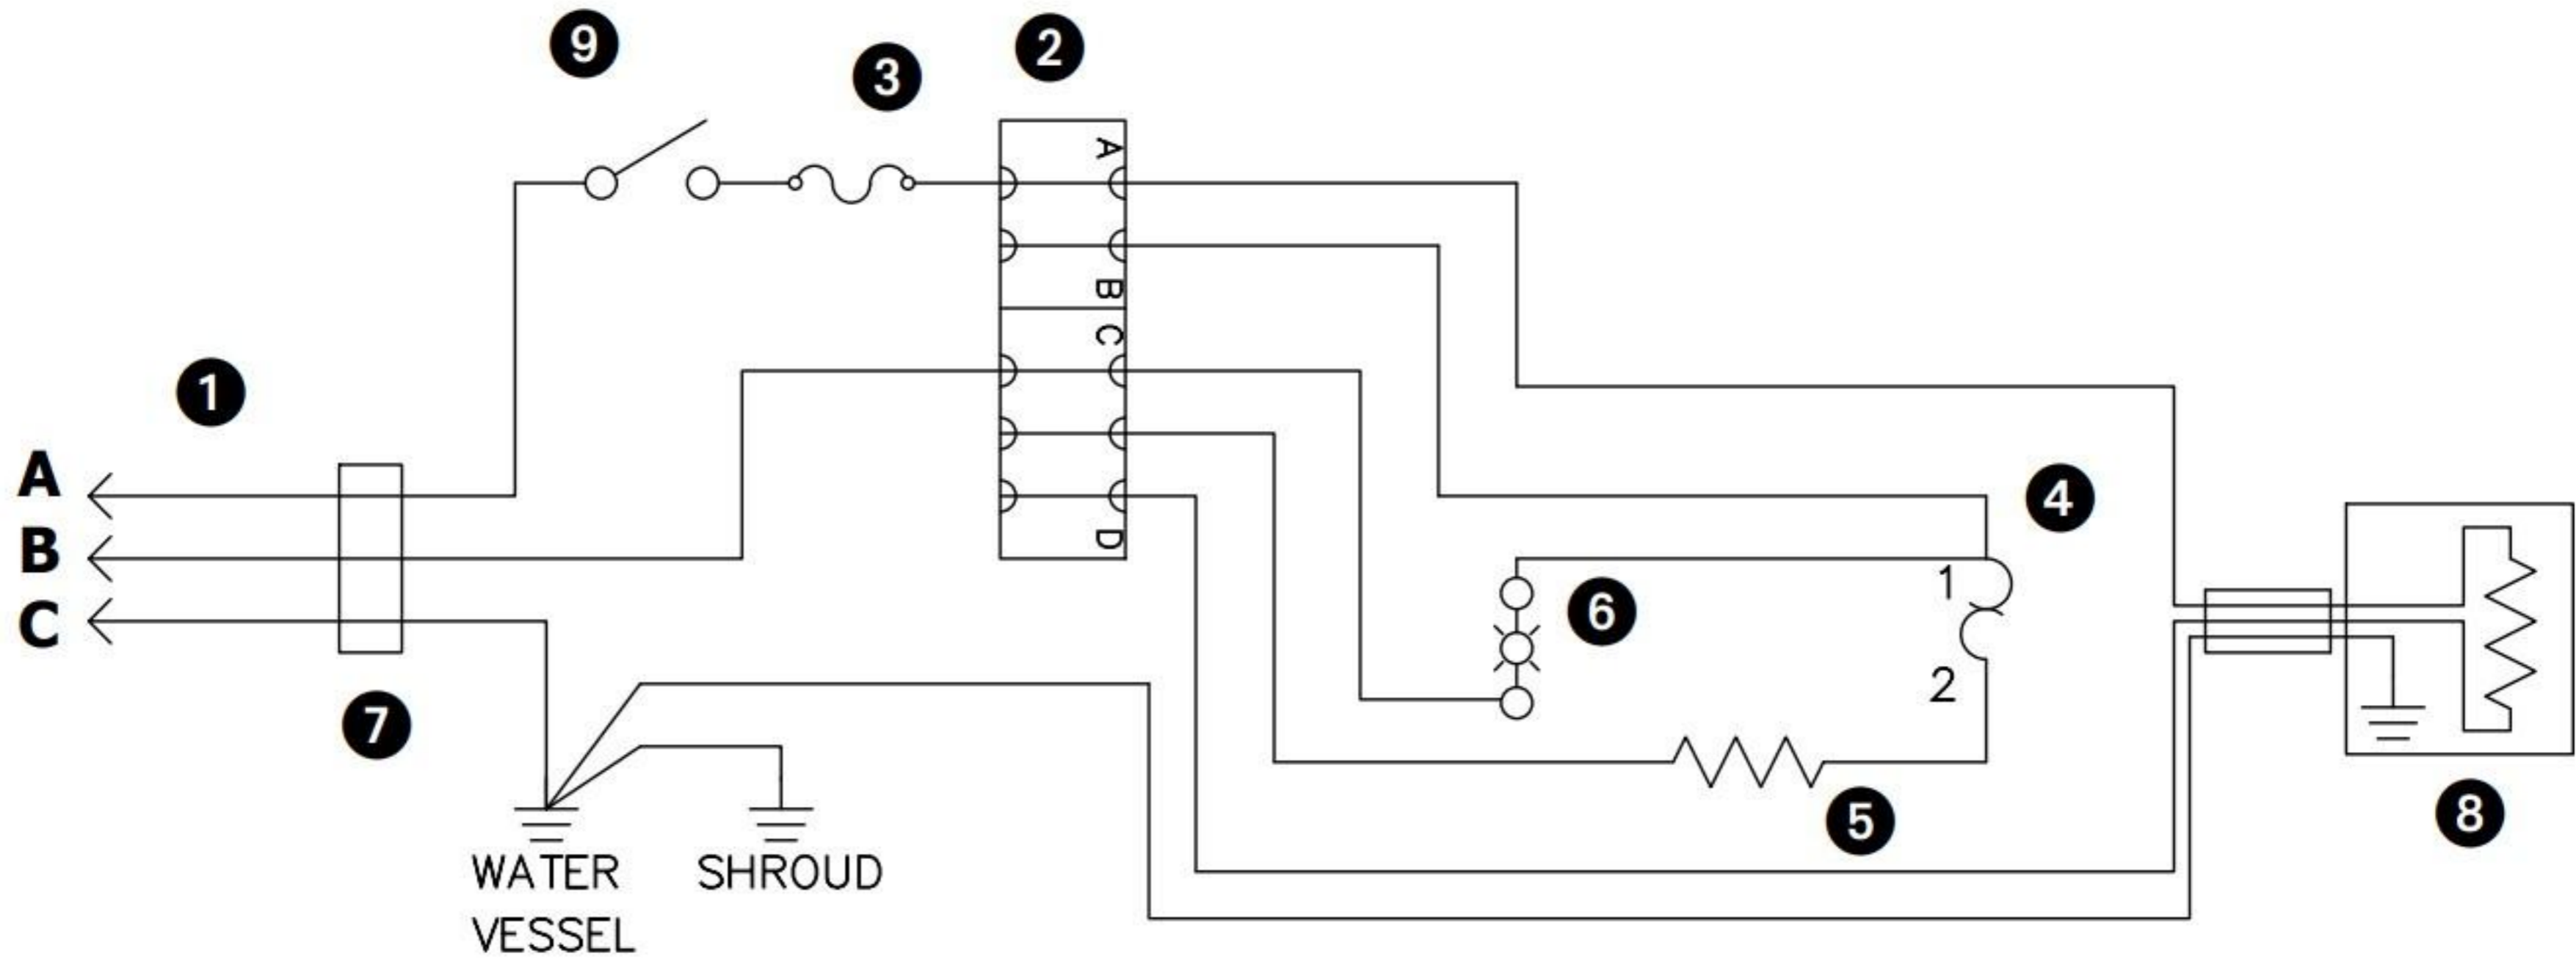

FS-SS, FSP-SS, BS-SS, FS-4SS (For Series 03L)

