



Star
Manufacturing
International Inc.

10 Sunnen Drive
St. Louis, MO 63143

Phone: (314) 781-2777
Fax: (314) 781-3636

Installation
and
Operating
Instructions

2M-Z3083 Rev. B 3/28/03

STAR-MAX GAS CHARBROILER MODELS

6015CBB

6024CBB

6036CBB

6048CBB

6115RCBB

6124RCBB

6136RCBB

6148RCBB



6048 CBB



SAFETY SYMBOL



This symbol is intended to alert the user to the presence of important operating and maintenance instructions in the manual accompanying the appliance.

RETAIN THIS MANUAL FOR FUTURE REFERENCE

NOTICE

Using any part other than genuine Star factory supplied parts relieves the manufacturer of all liability.

NOTICE

Star reserves the right to change specifications and product design without notice. Such revisions do not entitle the buyer to corresponding changes, improvements, additions or replacements for previously purchased equipment.

MAINTENANCE AND REPAIRS

Contact your local authorized service agent for service or required maintenance. Refer to the authorized service center listing provided with the unit. The Star Service Help Desk (1-800-807-9054) is available during normal business hours to answer any questions that may arise. Please have your model number and serial number for faster service.

GENERAL INSTALLATION DATA



CAUTION

This equipment is designed and sold for commercial use only by personnel trained and experienced in its operation and is not sold for consumer use in and around the home nor for use directly by the general public in food service locations. For equipment to be used by the general public, please contact the factory.

The Star-Max series gas charbroiler is equipped for the type of gas indicated on the nameplate mounted on the front panel. All units are shipped from the factory for use with natural gas. The unit can easily be converted for use with propane gas: see propane gas.

-IMPORTANT-

INSTALLATION: INSTALL IN NON-COMBUSTIBLE LOCATIONS ONLY! Clearance from non-combustible construction must be 6" from back and sides.

The installation of the Appliance must conform to the NATIONAL FUEL GAS CODE "ANSI Z223.1 - LATEST EDITION" AND ALL LOCAL GAS COMPANY RULES AND REGULATIONS.

IN CANADA INSTALLATION SHALL BE IN ACCORDANCE WITH THE CURRENT CAN/CGA-B149.1 NATURAL GAS INSTALLATION CODE OR CAN/CGA-B149.2 PROPANE INSTALLATION CODE AND LOCAL CODES WHERE APPLICABLE.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operating and maintenance instructions thoroughly before installing or servicing the equipment.

FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER FLAMMABLE VAPORS AND LIQUIDS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE. KEEP THE APPLIANCE AREA CLEAR AND FREE FROM COMBUSTIBLES.

This appliance, its pressure regulator and its individual shutoff valve must be disconnected from the gas supply piping system during any pressure testing of that system at test pressures in excess of 1/2 PSIG. This appliance and its pressure regulator must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 PSIG. For your protection, we recommend a qualified installing agency install this appliance. They should be familiar with gas installations and your local gas requirements. In any case, your gas company should be called to approve the final installation. In addition, there should be posted, in a prominent location, detailed instructions to be followed in the event the operator smells gas. Obtain the instructions from the local gas supplier.

LEVELING UNIT

This charbroiler is supplied with 4 feet which must be screwed into the body. Level unit by adjusting the (4) feet which have an adjustment of 1-3/4" for accurate and perfect line-up with other units.



CAUTION

DO NOT INSTALL WITHOUT ATTACHING FEET - DO NOT REMOVE FEET.

GAS INPUT TO CHARBROILER:

Models 6015CBB/6115RCBB	40,000 BTU/HR, NAT
	35,000 BUT/HR, PROP
Models 6024CBB/6124RCBB	80,000 BTU/HR, NAT
	70,000 BTU/HR, PROP
	40,000/35,000 BTU/HR/BURNER, NAT/PROP
Models 6036CBB/6136RCBB	120,000 BTU/HR, NAT
	105,000 BTU/HR, PROP
	40,000/35,000 BTU/HR/BURNER, NAT/PROP
Models 6048CBB/6148RCBB	160,000 BTU/HR, NAT
	140,000 BTU/HR, PROP
	40,000/35,000 BTU/HR/BURNER, NAT/PROP

GAS PIPING

Gas piping shall be of such size and so installed as to provide a supply of gas sufficient to meet the full gas input of the appliance. If the appliance is to be connected to existing piping, it shall be checked to determine if it has adequate capacity. Joint compound (pipe dope) shall be used sparingly and only on the male threads of the pipe joints. Such compounds shall be resistant to the action of L.P. gases. **WARNING:** Any loose dirt or metal particles which are allowed to enter the gas lines on this appliance will damage the valve and affect its operation. When installing this appliance, all pipe and fittings must be free from all internal loose dirt.

GAS PRESSURE REGULATOR

A convertible pressure regulator is provided with each charbroiler. It should be connected to the inlet pipe at the rear of the unit. The gas supply is then connected to it. It is shipped set for 6" water column manifold pressure for use with natural gas. Allow 6" clearance from back of unit to wall for servicing and installation.

CONNECTING GAS SUPPLY LINE

The gas inlet of the charbroiler is sealed at the factory to prevent entry of dirt. Do not remove this seal until the actual connection is made to the gas supply line.

MANUAL SHUT OFF VALVE

A manual shut off valve should be installed upstream from the manifold and within six feet of the charbroiler.

PROPANE GAS

This charbroiler is equipped with fixed orifice hoods and is shipped from the factory for use with natural gas. To convert to propane gas, install the burner orifice hoods supplied behind the front panel as follows:

1. Remove grill, radiants and burners.
2. Remove the burner orifice hoods and install the orifice hoods supplied.
3. Replace the burners, radiants, and grill.
4. Set manifold pressure to (10) inch water column. A 1/8" pipe plug on the burner manifold can be removed for attaching a pressure gauge. Remove the slotted, or hex-threaded plug from the pressure regulator. Invert the plug and re-install. The letters "LP" should now be visible on the plug. The regulator is now set for 10" (25.4 cm) water column. Attach the conversion label, supplied with the unit, close to the nameplate.

CHECKING FOR GAS LEAKS

Soap and water solution or other material acceptable for the purpose, shall be used in locating gas leakage. Matches, candle flame or other sources of ignition shall not be used for this purpose. Check entire piping system for leaks.

PILOT LIGHTING INSTRUCTIONS

The charbroiler is equipped with standing pilots and should be lit immediately after the gas is turned on.

1. Turn off main valve to unit and wait 5 minutes to clear gas.
2. Turn off all knobs and pilot valves.
3. Turn on main valve and light all pilots.
4. Turn burner knobs to desired setting.
5. To turn burners off, turn knobs off.

SHUTTING DOWN INSTRUCTIONS

1. Turn the burner valve knobs to the off position to turn burners off.

PILOT LIGHT REGULATION

The pilot lights on this broiler have been turned off at the factory. Adjust pilot light flames as small as possible, but high enough to light burner immediately when burner valve is turned on high.

BURNER OPERATION

To ignite burners, turn burner valve knob to "HI" position. Each burner is controlled by an individual high-low, on-off valve. An infinite number of broiling temperatures may be obtained by turning the burner valve knob to any position between high and low.

BURNER ADJUSTMENT

1. Turn burner valve knob to "HI" position.
2. Slowly decrease openings of air shutters to give a soft blue flame having luminous tips, then slowly increase openings to a point where the yellow tips disappear and a hard blue flame is obtained.

EXHAUST CANOPY

Open hearth broilers inherently create a good deal of heat and smoke and should be installed under an efficient exhaust hood with flame proof filters. A vertical distance of not less than 48" shall be provided between the top of the appliance and filters or any other combustible material.

AIR SUPPLY

Provisions for adequate air supply must be provided.

OPERATING INSTRUCTIONS

LIGHTING

When broiler is first lit, it will smoke until the preservation oils and impurities are burned off.

BROILING

Turn valves on and pre-heat unit on "HI" before attempting to broil. You will have to experiment with the grill settings and the valve settings for your particular meat products. We recommend that you set the grate at the full tilt position to start with. This position allows the grease to run down the grate into the grease tray, reducing flare ups. Check water pans frequently and add a sufficient amount of water when necessary. Hot water vapors rising from the water pans and through the combustion chamber helps reduce flare ups. Exercise care when using your broiler.

TILTING THE GRATE

Raise or lower the grate to the next step by lifting the grate at the back of the charbroiler where the grate rests. Use potholders or gloves to reposition.



CAUTION

CHARBROILERS ARE HOT! NEVER ATTEMPT TO CHANGE THE GRILL POSITION WHILE MEAT PRODUCTS ARE COOKING. FLARE-UPS CAN OCCUR UNEXPECTEDLY. TURN OFF THE CHARBROILER AND ALLOW IT TO COOL.

DO NOT PUT MORE THAN 5 POUNDS LAVA ROCK PER EACH BURNER.

ADJUSTING HEAT PATTERN

It is possible through this arrangement to have a high heat or searing section, while having a low heat finishing or holding section. For the searing operation, set the valves for the section at a position of "HI" or close to it. For holding or finishing, set the valves closer to the "LOW" position on the dial. You select the heat pattern you like, and set the valves accordingly.

CLEANING

Clean regularly. Remove grate section to sink for washing. Brush out carboned particles. Remove and wash water pan. Wipe exterior surfaces with detergent and a cloth. A non-abrasive cleaner can be used on caked areas.

WATER PAN


The water pan is located at the bottom of the unit and is easily removed from the front of the unit. Water should be added to the water pan and replaced as necessary. The water pan helps prevent flare ups and catches grease.

AIR INTAKES IN BOTTOM

Air for combustion enters from the bottom of the unit. Do not obstruct this area.

MAINTENANCE AND REPAIRS

Contact the factory or one of its representatives or a local service company for service or maintenance if required.

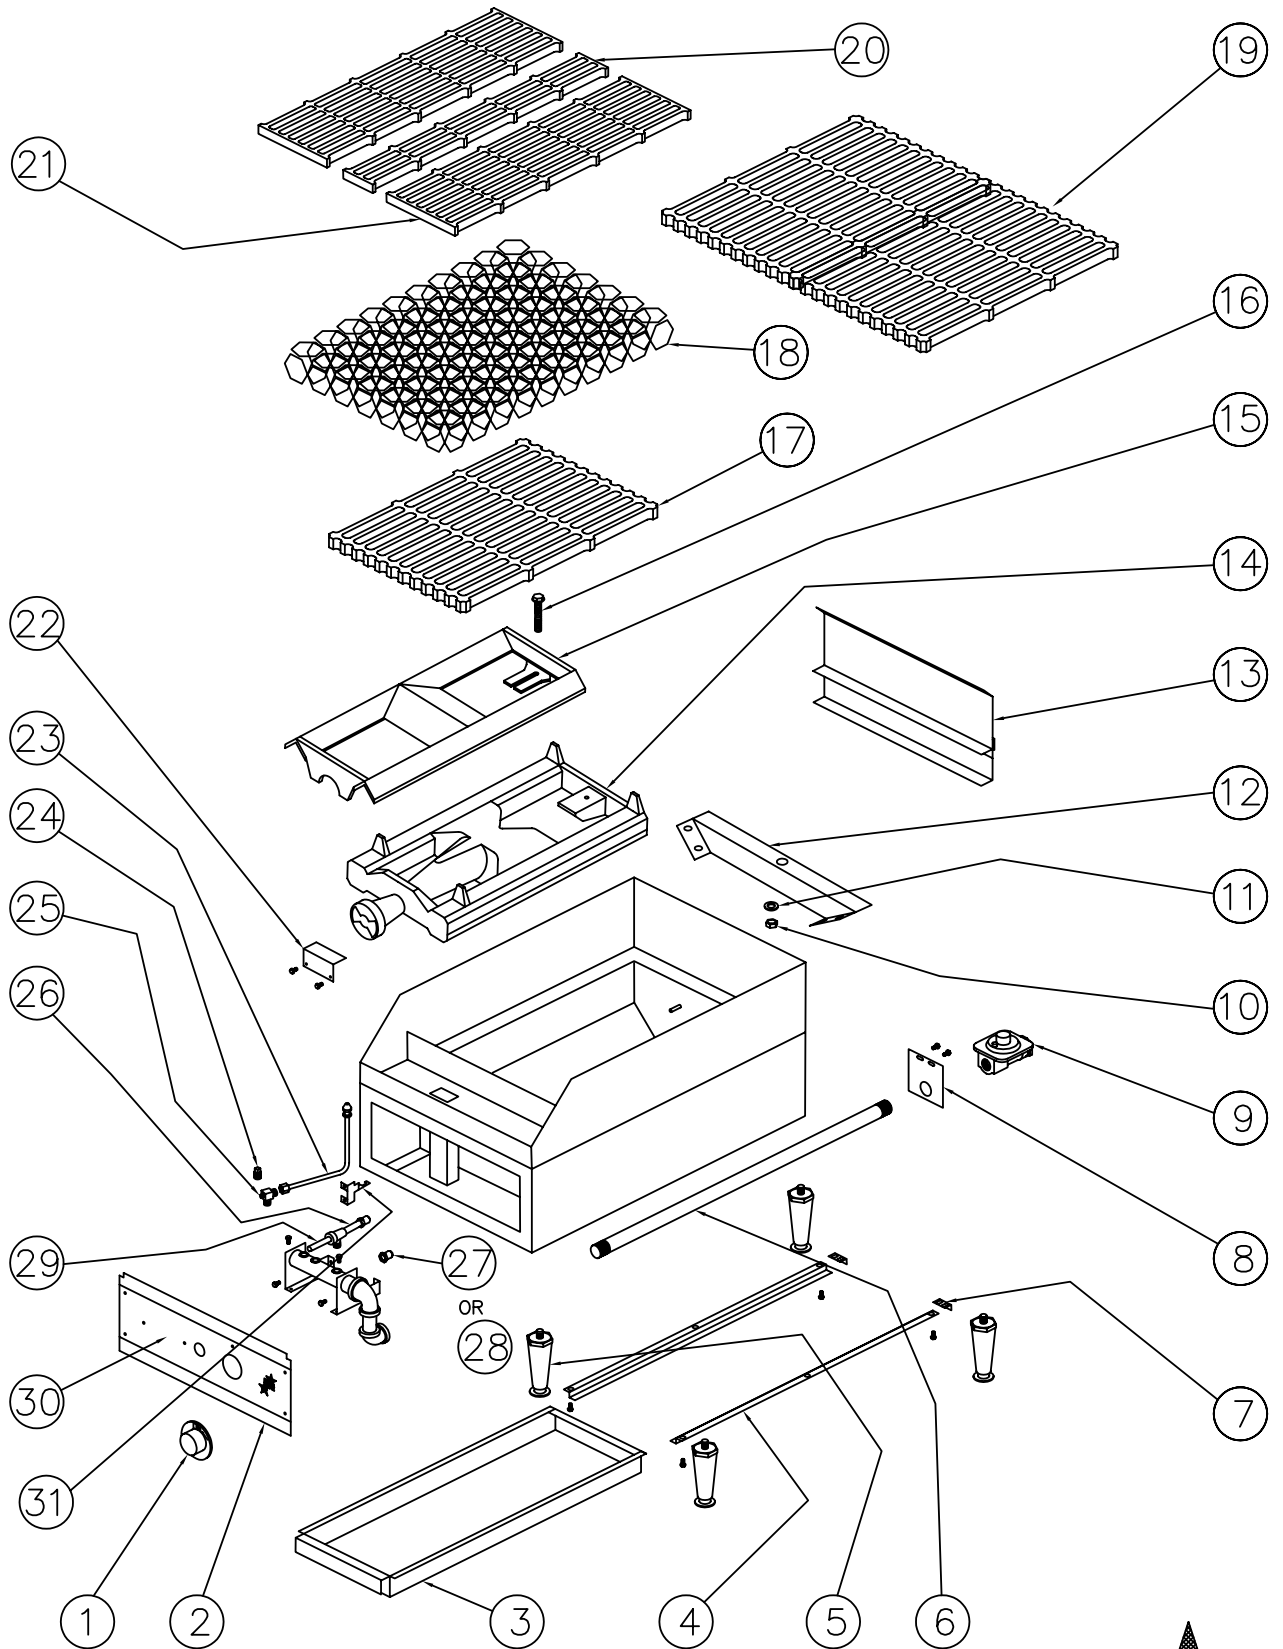

STAR MANUFACTURING INTERNATIONAL, INC.

MODEL 6015CBB, 6024CBB, 6036CBB, 6048CBB SK1713 08-02-99 DR: M.P.

PARTS LIST

EFFECTIVE 3/28/03 Rev. B

Updated 03-08-04 rb

6015CBB, 6024CBB, 6036CBB and 6048CBB
 MODEL Star-Max Gas Lava Rock Charbroiler-15", 24", 36", 48"

Key Number	Part Number	Number Per Unit	Description and Model Designation
1	2R-Z0934	1/2/3/4	KNOB-CONTROL ALL
2	H3-Z3097	1	FRONT PANEL 6015CBB
	H3-Z3024	1	FRONT PANEL 6024CBB
	H3-Z3098	1	FRONT PANEL 6036CBB
	H3-Z3099	1	FRONT PANEL 6048CBB
3	H3-T1026	1	GREASE DRAWER 6015CBB
	H3-Y7045	1/2	GREASE DRAWER 6024CBB/6048CBB
	H3-Y7044	1	GREASE DRAWER 6036CBB
4	G3-Y7047	2/2/2/4	SLIDE DRAWER ALL
5	2A-Z0314	4	LEG ALL
6	2K-Z3017	1	INLET PIPE ALL
7	H3-Z3082	2/2/2/4	DRAWER STOP ALL
8	H3-Z3020	1	INLET PIPE SUPPORT ALL
9	2J-Z3199	1	PRESSURE REGULATOR ALL
10	2C-6517	1/2/3/4	NUT 1/4-20 ALL
11	2C-Y9714	1/2/3/4	WASHER 1/4 ALL
12	H3-Z3100	1	BRACKET BURNER REAR 6015CBB
	H3-Z3041	1	BRACKET BURNER REAR 6024CBB
	H3-Z3101	1	BRACKET BURNER REAR 6036CBB
	H3-Z3102	1	BRACKET BURNER REAR 6048CBB
13	G3-624038	1	GUARD WELD ASSY 6015CBB AGA
	G3-624037	1	GUARD WELD ASSY 6024CBB AGA
	G3-624039	1	GUARD WELD ASSY 6036CBB AGA
	H3-648007	1	GUARD WELD ASSY 6048CBB AGA
14	2F-Z3035	1/2/3/4	BURNER ALL
15	2F-Z3036	1/2/3/4	DEFLECTOR ALL
16	2C-Z3154	1/2/3/4	BOLT 1/4-20 x 1 3/4 ALL
17	2F-Z3078	1/1/2	GRATE LAVA ROCK 15" 6015CBB/6036CBB/6048CBB
18	2F-Y7193	1/2/3/4	LAVA ROCK2 "8 LB" ALL
19	2F-Z3077	2/2/2	GRATE LAVA ROCK 24" 6024CBB/6036CBB/6048CBB
20	2F-Y8831	1	GRATE 3" 6015CBB
21	2F-Y8830	2/4/6/8	GRATE 6" ALL
22	H3-Z3040	1/2/3/4	BRACKET-BURNER FRONT ALL
23	H3-624219	1/2/3/4	TUBE-PILOT ASSY ALL
24	2P-1453	1	PLUG-PIPE ALL
25	2V-6671	1/2/3/4	VALVE-PILOT ALL
26	2A-Z3010	1/2/3/4	FITTING-ORIFICE ALL
27	2J-Z3032	1/2/3/4	ORIFICE NATURAL # 36 ALL
28	2J-Z3033	1/2/3/4	ORIFICE PROPANE # 50 ALL
29	2V-Y8832	1/2/3/4	VALVE-BURNER ALL
30	2M-Z3103	1	SIGN 15" CHARBROILER 6015CBB
	2M-Z3022	1	SIGN 24" CHARBROILER 6024CBB
	2M-Z3104	1	SIGN 36" CHARBROILER 6036CBB
	2M-Z3105	1	SIGN 48" CHARBROILER 6048CBB
31	H3-Z3196	1/2/3/4	BRACKET-PILOT ALL

IMPORTANT: WHEN ORDERING, SPECIFY VOLTAGE OR TYPE GAS DESIRED
 INCLUDE MODEL AND SERIAL NUMBER

PAGE 1
 OF 1

Some items are included for illustrative purposes only and in certain instances may not be available.



Star Manufacturing International, Inc.