


## 15 Bird Chicken Rotisserie Oven

Item Number(s): 40841

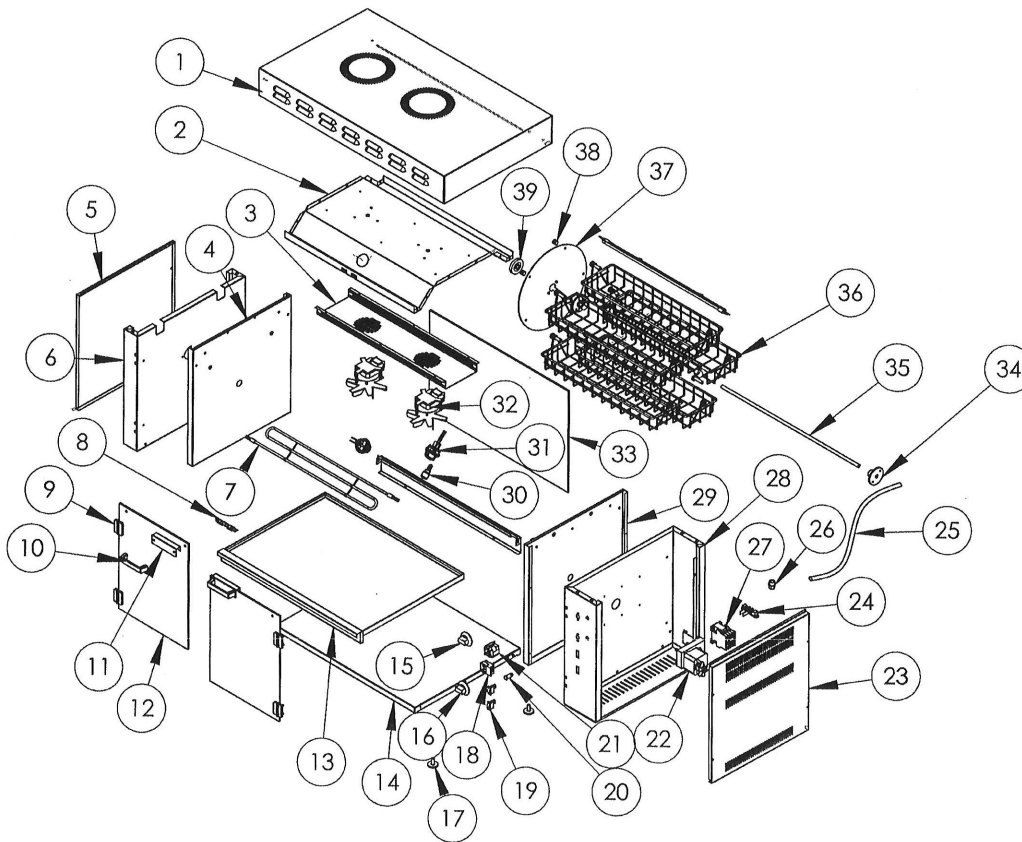

Callout	Part No.	Description	Callout	Part No.	Description
1.	N/A	Top cover assembly	21.	<a href="#">XCOA1003</a>	Timer
2.	N/A	Top cover insert	22.	<a href="#">XCGA0034</a>	Geared motor
3.	N/A	Fan motor cover	23.	N/A	Side cover panel right
4.	N/A	Left carousel support	24.	<a href="#">XFTA0002</a>	Terminal block
5.	N/A	Left cover side panel	25.	<a href="#">XSAA8030</a>	Power cord, 220V, NEMA 6-30p
6.	N/A	Left cover insert	26.	<a href="#">XCOA5012</a>	Cable restraint
7.	<a href="#">XCGA0031</a>	Element, 220V, 2500Watts	27.	<a href="#">XCOA5024</a>	Contactor
8.	<a href="#">XCGA0016</a>	Glass door magnet	28.	N/A	Right cover insert
9.	<a href="#">XCGA0010</a>	Door hinge	29.	N/A	Right carousel support
10.	N/A	Door handle	30.	<a href="#">XCOA1041</a>	Light bulb, 220V
11.	N/A	Door handler bracket	31.	<a href="#">XCOA1015</a>	Light holder
12.	<a href="#">XCGA0033</a>	Front glass door	32.	<a href="#">XCOA1021</a>	Fan and motor, 220V, left hand thread
13.	<a href="#">XCGA0006</a>	Drip tray	33.	<a href="#">XCGA0035</a>	Rear glass
14.	N/A	Base	34.	<a href="#">XCGA0005</a>	Carousel flange left
15.	<a href="#">XCOA1008</a>	Timer knob, Vollrath blue	35.	<a href="#">XCGA0032</a>	Main shaft
16.	<a href="#">XCOA1009</a>	Control knob (0-550°F) Vollrath blue	36.	<a href="#">XCGA0030</a>	Chicken griller basket
17.	<a href="#">XCOA1009</a>	Adjustable foot	37.	<a href="#">XCGA0012</a>	Carousel end plate
18.	<a href="#">XCOA1002</a>	Thermostat	38.	<a href="#">XCGA0003</a>	Basket retaining pin
19.	<a href="#">XWMA1004</a>	Rocker switch	39.	N/A	Carousel bearing right
20.	<a href="#">XAA0002</a>	Pilot light, 220V (red)			