


Unit Information

1.15 Amp.
 3 Speeds with Pulse Option
 RPM's 16000 22000 25000
 Low Med High
 Butterfly Agitator - soft ice cream
 Solid Agitator - hard ice cream
 Program timer prior or while in use.
 Mixer shuts off autoatically.

WARING® COMMERCIAL®

Single Spindle Drink Mixer
 with Programmable Timer

WDM120T

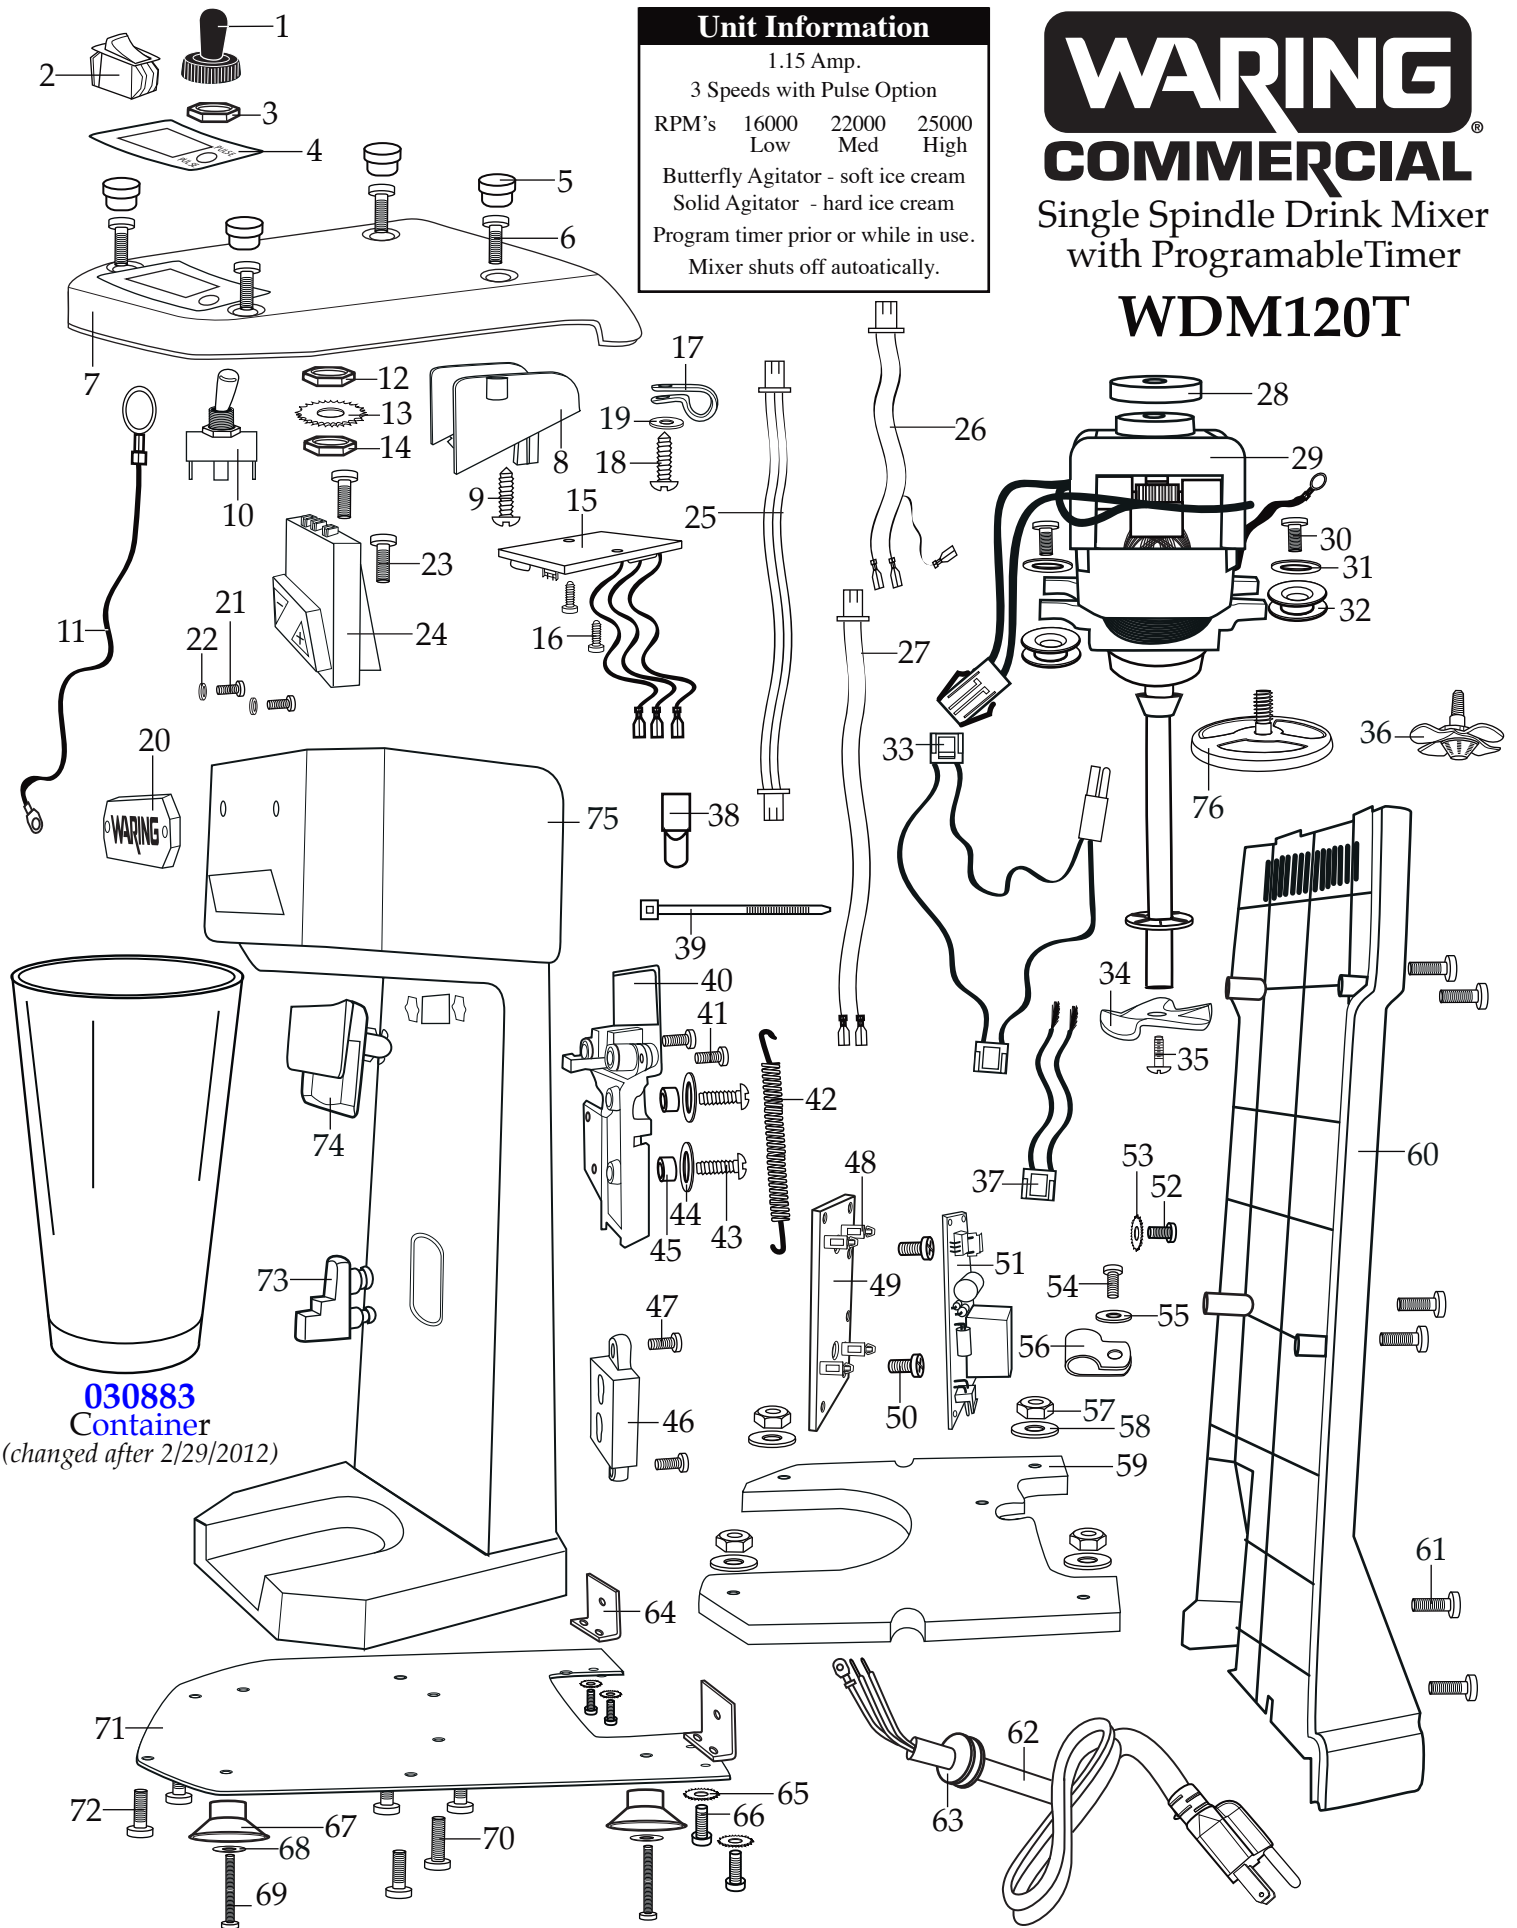

030883
 Container
 (changed after 2/29/2012)

Catalog/Model

WDM120T



Illustration #	Part #	Description
1	030682	Switch Boot
2	030683	Rocker Switch
3	016236	Hex Nut
4	030684	Switch Plate
5	030685	Hole Plug (4 required)
6	033901	Screw (4 required)
	030686	Screw (4 required)
7	034298	Top Housing with PC Holder
	034297	Top Housing
8	034300	PC Holder
9	033886	Screw
10	033899	Toggle Switch
11	034408	26.5" Green-Yellow Ground Lead
12	016236	Hex Nut
13	036351	Large Lock Washer
14	016236	Hex Nut
15	033889	PC Speed Control Board
16	033890	Screw (2 required)
17	030708	5/16 Clamp
18	033886	Screw
19	030702	Washer
20	030689	Name Plate
21	030691	Screw (2 required)
22	030690	Washer (2 required)
23	033901	Screw
24	036350	Timer Control
25	036355	Red-Black-Orange Lead Harness
26	036356	Black-Red-Red Lead Harness w/Terminals
27	036357	Black-Black Lead Harness w/Terminals
28	030694	Top Motor Mount
29	033893	Motor
30	033901	Screw (2 required)

Catalog/Model

WDM120T



Illustration #	Part#	Description
31	030696	Washer (2 required)
32	030697	Side Motor Mounts (2 required)
33	036353	Blue-White-Black Lead Harness
34	030716	Solid Agitator
35	029291	Solid Agitator Screw
36	029292	Butterfly Agitator
37	036354	Black-White Lead Harness
38	012409	Crimp Connector (2 required)
39	013731	Wire Ties (7 required plus 1 around rocker switch)
40	030699 031978	Actuator Switch with Switch Bracket and Metal Plate Actuator Switch with Switch Bracket
41	030700	Actuator Bracket Screw (2 required)
42	030701	Spring
43	030686	Actuator Switch Screw (2 required)
44	030702	Actuator Switch Washer (2 required)
45	030703	Actuator Switch Sleeve (2 required)
46	030704	Cup Support Locking Assembly
47	033901	Screw (2 required)
48	033881	Press Lock Stand Off (4 required)
49	034303	PCBA Holder
50	033901	Screw (4 required)
51	036352	Power Supply Board
52	033901	Screw (ground)
53	030707	Lock Washer (ground)
54	033901	Screw
55	030702	Washer
56	036039	1/4 Cord Clamp
57	033898	Hex Nut (4 required)
58	033897	Large Washer (4 required)
59	034306	Bottom Plate Weight
60	030705	Back Housing
61	033901	Screw (6 required)

Catalog/Model

WDM120T



Illustration #	Part #	Description
62	031985	Cord
63	031984	Strain Relief
64	033895	Bottom Plate Bracket (4 required)
65	030707	Lock Washer (2 required)
66	033969	Screw (2 required)
67	030719	Foot (4 required)
68	030696	Foot Washer (4 required)
69	030715	Foot Screw (4 required)
70	033969	Weight Plate Screw (2 required)
71	034307	Bottom Plate
72	033901	Screw (4 required)
73	030718	Cup Support
74	030717	Cup Actuator
75	036349	Front Housing
76	036627	Wheel Agitator

Parts of 030699

