

Installation and Operation Manual



RICE COOKER

Speciality Equipment

Gas-Fired, 3 Bay Model

RICE COOKER WS-GRC-60

**READ ALL INSTRUCTIONS BEFORE
INSTALLING AND USING THE APPLIANCE**

WOOD  STONE

WOOD STONE CORPORATION

1801 W. Bakerview Rd.
Bellingham, WA 98226 USA

Toll Free 800.988.8103

Tel 360.650.1111

Fax 360.650.1166



TABLE OF CONTENTS

Wood Stone Rice Cooker	3
Cautions & Warnings	4
Specifications	5
Specifications w/ Cart	6
Clearance, Venting, installation	7
Utility Specifications	8
Rice Cooker Components.	9
Basic Operation.	10
Cooking	11
Cleaning & Maintenance	12
Operational Sequence.	13
Troubleshooting.	14
Wire Diagram 120V	15
Wire Diagram 240V / 208V	16
Limited Warranty	17



**INSTALLATION AND OPERATION MANUAL
WOOD STONE GAS-FIRED RICE COOKER**

WS-GRC-60

PATENTED

ADDITIONAL COPIES AVAILABLE UPON REQUEST



WS-GRC-60 Rice Cooker



WOOD STONE GAS RICE COOKER INSTALLATION AND OPERATION INSTRUCTIONS

RETAIN THIS MANUAL FOR FUTURE REFERENCE

Additional copies of this manual are available.

For prompt responses to service/maintenance questions, call us at @ 1-800-988-8103.

IMPORTANT: Consult your local gas supplier for a statement outlining a procedure to be followed in the event you smell gas. Post the statement in a prominent location.

FOR YOUR SAFETY: Do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

ESURE DE SÉCURITÉ: Ne pas entreposer ni utiliser de l'essence ni autres vapeurs ou liquides inflammables à proximité de cet appareil ou de tout autre appareil.

IMPORTANT: It is recommended this equipment be installed, maintained and serviced by authorized professionals.

WARNING: Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.

AVERTISSEMENT: L'installation, le réglage, la modification, la réparation ou l'entretien incorrect de cet appareil peut causer des dommages matériels, des blessures ou la mort. Lire attentivement les instructions d'installation, de fonctionnement et d'entretien avant de procéder à son installation ou entretien.



IF THIS EQUIPMENT IS NOT PROPERLY INSTALLED A FIRE MAY RESULT. TO REDUCE THE RISK OF FIRE, FOLLOW THESE INSTALLATION INSTRUCTIONS. A MAJOR CAUSE OF APPLIANCE-RELATED FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES (AIR SPACES) TO COMBUSTIBLE MATERIALS. IT IS OF UTMOST IMPORTANCE THAT THIS APPLIANCE BE INSTALLED ONLY IN ACCORDANCE WITH THESE INSTRUCTIONS.

Please read this entire manual before you install the appliance. Failure to follow instructions may result in property damage, bodily injury or even death. Contact your local building or fire officials about restrictions and installation inspection in your area.

This product must be installed by a licensed plumber or gas fitter when installed within the Commonwealth of Massachusetts.


DO NOT THROW THIS MANUAL AWAY




The Wood Stone Gas-Fired Rice Cooker has been tested and approved by Intertek Testing Services and conforms to ANSI Z83.11; is certified to CSA 1.8 and CGA 2.17; and to NSF/ANSI 4.




Plan view

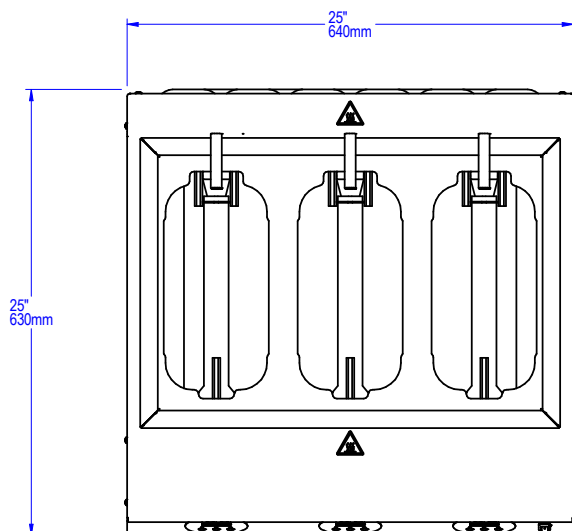


ISO view

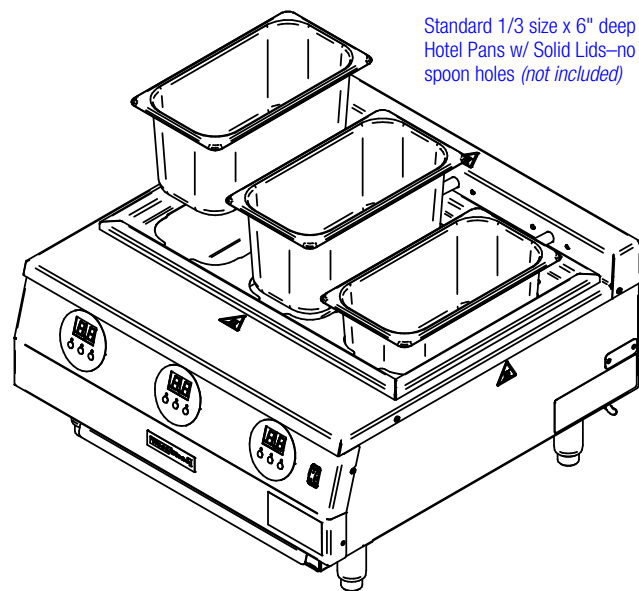

Front view

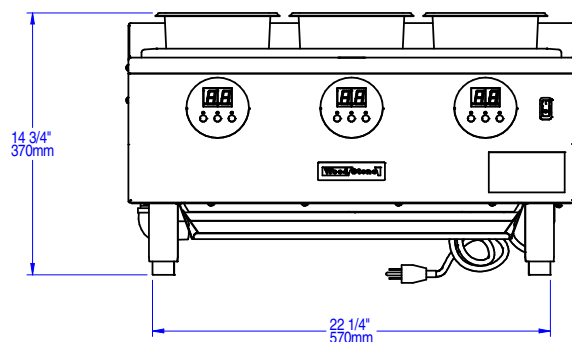

Side view

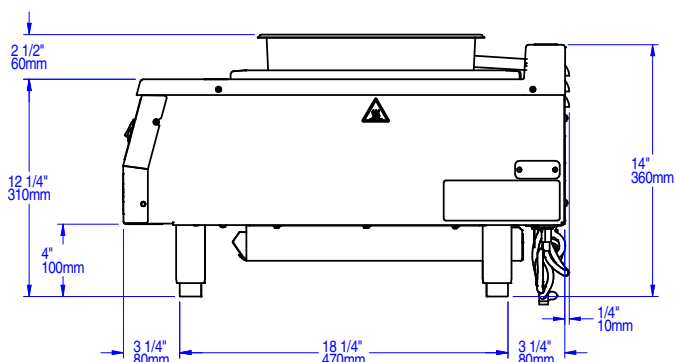

Unit weight: 77 lbs

UTILITIES SPECIFICATIONS *Refer to data plate when installing.*

Gas

3/4 inch FNPT gas inlet
33,000 BTU/hr Natural Gas (NG)
OR
33,000 BTU/hr Propane (LP)
Maximum gas inlet pressure
1/2 psi (14 inches W.C.)

Electrical


120 VAC, 0.5A, 50/60 Hz
Equipped with a NEMA 5-15P plug
208 VAC, 0.5A, 50/60 Hz
Equipped with an L6-20P plug
220-240 VAC, 0.5A, 50/60 Hz
Equipped with a BS 1363 10A plug

Venting


The Wood Stone Gas-Fired Rice Cooker must be vented with an exhaust hood in accordance with all relevant local and national codes, and in a manner acceptable to the authority having jurisdiction.




Plan view

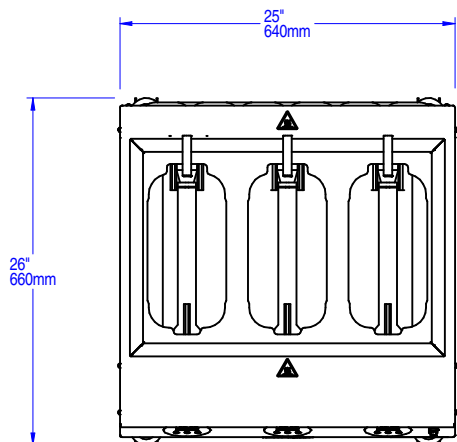


ISO view

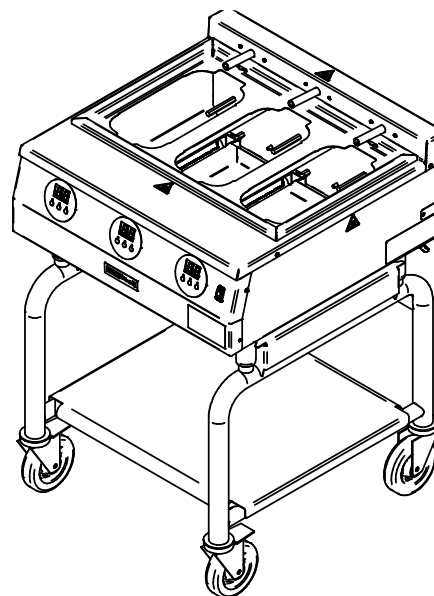

Front view

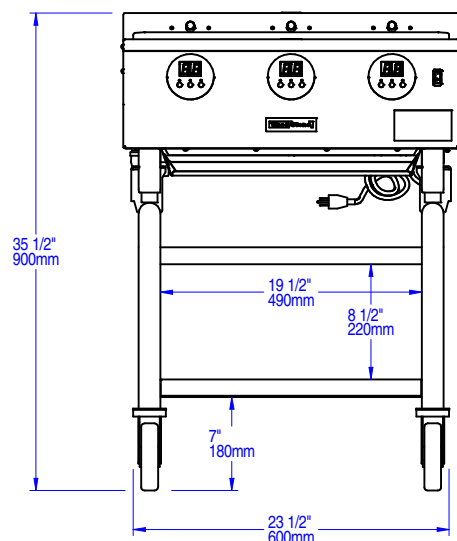

Side view

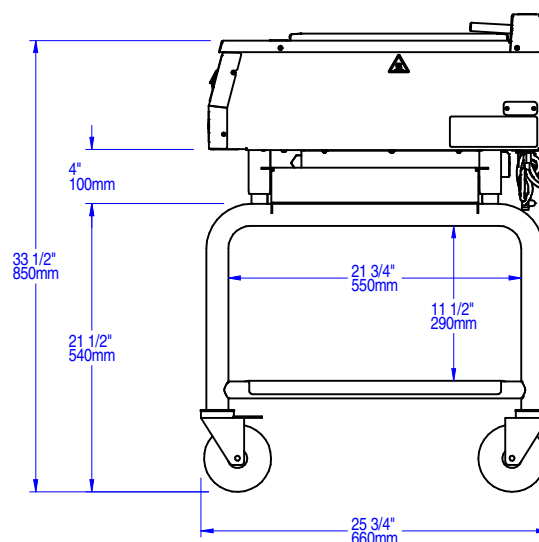

**Unit weight: 98 lbs
including stand**

UTILITIES SPECIFICATIONS *Refer to data plate when installing.*

Gas

3/4 inch FNPT gas inlet
33,000 BTU/hr Natural Gas (NG)
OR
33,000 BTU/hr Propane (LP)

Maximum gas inlet pressure

1/2 psi (14 inches W.C.)

Electrical

120 VAC, 0.5A, 50/60 Hz
Equipped with a NEMA 5-15P plug

208 VAC, 0.5A, 50/60 Hz
Equipped with an L6-20P plug

220-240 VAC, 0.5A, 50/60 Hz
Equipped with a BS 1363 10A plug

Venting

The Wood Stone Gas-Fired Rice Cooker must be vented with an exhaust hood in accordance with all relevant local and national codes, and in a manner acceptable to the authority having jurisdiction.



CLEARANCES


1. The Wood Stone Gas Rice Cooker must have a **minimum 1 inch clearance to combustible construction from sides and back, and 0 inch clearance to non-combustible construction from sides and back.**
2. This appliance may be installed on a combustible or non-combustible surface.
3. **Combustion air:** Combustion air flows into the Rice Cooker through an opening in the bottom panel. The Rice Cooker must be installed with the legs provided. **Do not block** the space between the appliance and the countertop.
4. Take care to install the rice cooker so it is not exposed to excessive heat from adjacent appliances such as range tops and griddles that can cause damage to the unit. Damage caused by exposure to excessive heat from adjacent appliances will not be covered under the WARRANTY.
5. Keep the rice cooker at least 153 mm (6 inches) away from any external heat sources (for example, range tops, griddles) to prevent heat damage to the unit. If necessary, appropriate shielding (by others) may be used to protect the unit from external heat. Damage to the rice cooker caused by external heat sources is not covered under the WARRANTY. **NOTE:** For two units stacked vertically on a double stand or otherwise, proper shielding must be used between the two units to protect the top unit from heat and moisture coming from the bottom unit.

VENTILATION

The Wood Stone Gas Rice Cooker must be installed under an exhaust hood in accordance with all relevant local and national codes and in a manner acceptable to the authority having jurisdiction.

INSTALLATION

Note: For proper operation, the unit must be level.

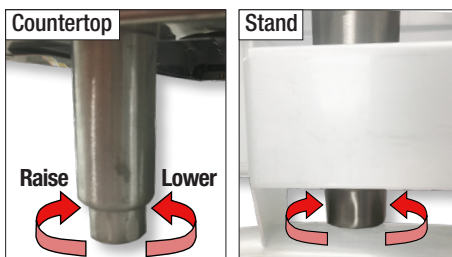

LEG ADJUSTMENT:


Using an adjustable crescent wrench, turn the bottom of the leg clockwise to raise, or counterclockwise to lower the unit. The leg has an adjustment from 19 mm–51 mm ($\frac{3}{4}$ "–2"). If the leg comes out, simply thread it back in counterclockwise.

MODELS WITH OPTIONAL STAND

IMPORTANT NOTICE FOR GAS CONNECTION TO MOVABLE APPLIANCES

When this appliance is installed with casters, it must be installed with the casters supplied, a connector complying with either ANSI Z21.69 or CSA 6.16 and a quick disconnect device complying with ANSI Z21.41 or CSA 6.9. It must also be installed with restraining means to guard against transmission of strain to the connector.

Utility hookups should be made in such a way as to allow mobility of the unit for service and maintenance purposes.

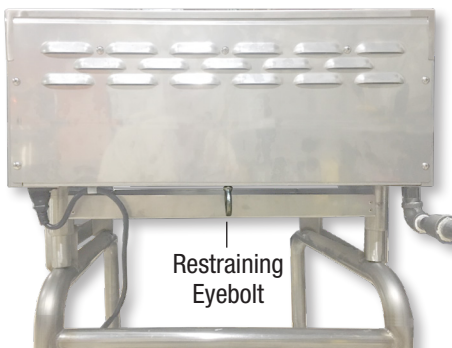

ATTENTION INSTALLER:

EQUIPMENT RESTRAINT MUST BE PROVIDED

Adequate means must be provided to limit the movement of the appliance without depending on the connector and the quick disconnect device or its associated piping to limit the appliance movement. Use the restraining eye bolt located at the rear of the cabinet to attach the restraining device(s) (see figure to left). Ensure that the length of the restraint is shorter than the length of the gas connector, so the chance of strain to the gas line is eliminated.

**GAS INFORMATION**

The Wood Stone Gas Rice Cooker is equipped with a 3/4 inch FNPT gas connection located at the rear of the appliance. The installer should provide an appropriate quick disconnect fitting for connection to the gas supply.

BURNER MANIFOLD PRESSURE

Model	Natural Gas (NG) model	Propane (LP) model
WS-GRC-60	3.7" W.C.	10.0" W.C.

BTU/HR INPUT RATE

Model	Natural Gas (NG) model	Propane (LP) model
WS-GRC-60	33,000 BTU/hr	33,000 BTU/hr

The Rice Cooker is equipped with a gas pressure regulator that is preset at the factory. This regulator is installed in the front compartment. If incoming gas pressure is less than 1/2 psi (14 inches W.C.), no additional regulator is required or recommended. If incoming gas pressure is greater than 1/2 psi (14 inches W.C.), an external regulator, by supplied others, must be installed on the gas line serving the appliance.

MINIMUM INCOMING GAS PRESSURE

Model	Natural Gas (NG) model	Propane (LP) model
WS-GRC-60	5.0" W.C.	11.0" W.C.

If you must convert the Rice Cooker to run on a different gas type, i.e. NG to LP, please contact Wood Stone to obtain the necessary parts and instructions.

ELECTRICAL RATINGS

Model	Voltage	Amperage
WS-GRC-60 120V (00)	120 VAC	.5 A

Model	Voltage	Amperage
WS-GRC-60 208V (01)	208 VAC	.5 A

Model	Voltage	Amperage
WS-GRC-60 220V-240V (02)	220-240 VAC	.5 A

The Rice Cooker is equipped with:

(120 V model): a NEMA 5-15P plug for use with a standard 120 VAC 15 A or 20 A outlet.

(208 V model): a L6-20P plug for use with a L6-20R outlet.

(220-240 V model): a BS 1363 10A plug for use with a BS 1363 Type G socket.

Electrical Grounding: This appliance must be electrically grounded in accordance with local codes, or in the absence of local codes, with the National Electrical code, ANSI/NFPA 70 or the Canadian Electrical Code, CSA C22.1 as applicable.


ELECTRICAL SUPPLY CORD AND GAS CONNECTION SHOULD BE ROUTED SO THAT THEY ARE NOT SUBJECTED TO THE HEAT COMING FROM THE RICE COOKER.




THE WOOD STONE GAS-FIRED RICE COOKER



Plan view

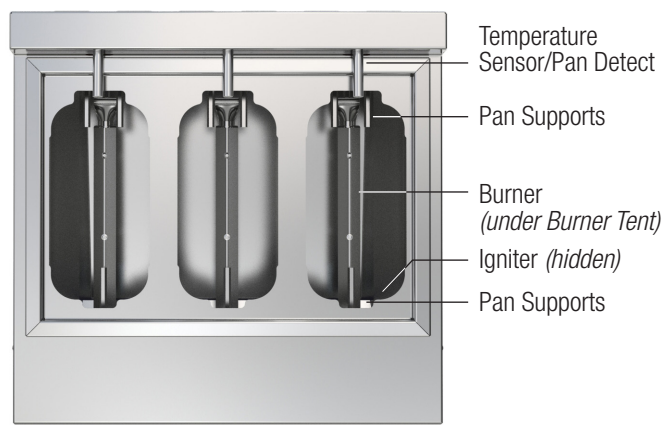

Bottom view from rear of unit

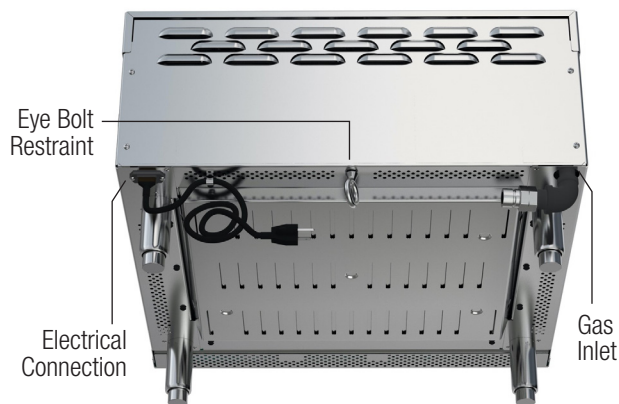


Recommended Standard 1/3 size Hotel Pans, 6" deep (by others)

- Vollrath 30362 *(highly recommended)*
- Winco SPJH-306
- Choice 4070369
- Libertyware 9136
- Challenger 12-0261
- Update NJP-336



THE FRONT CONTROLLERS

Each Bay has its own independent Control Panel, allowing for maximum flexibility. White or brown rice, or quinoa can cook simultaneously, and cooks can begin and end independently. It is not necessary to have all three pans in the unit to cook.

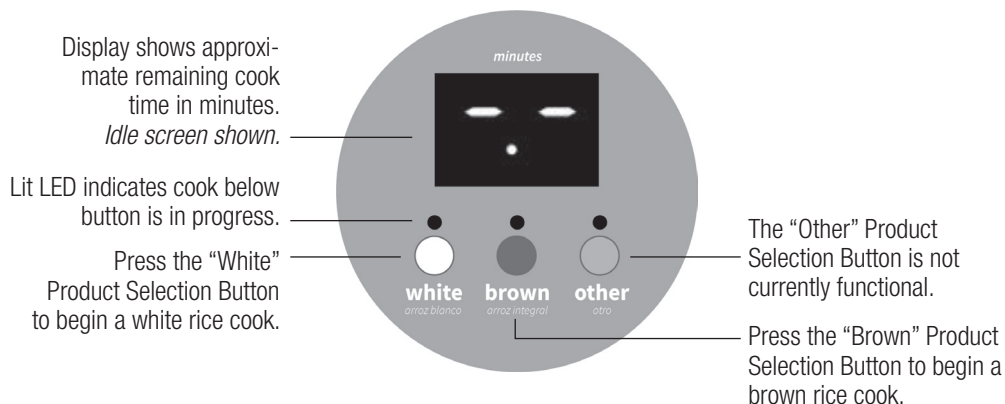

STOPPING A COOK

Pressing any of the buttons of the activated bay until an audible beep is heard (~2 seconds) will stop the cook.

If a pan is removed during cook, alert sounds for 4 seconds. If pan is returned to bay within these 4 seconds, cook continues. If pan is not returned to bay, the cook is cancelled and the unit returns to Idle mode (-.-).



COOKING PROCESS

The Rice Cooker has three independent cooking bays. White or brown rice (quinoa or other grains) can be cooked simultaneously. One, two or all bays can be utilized at any one time. Cooks can start regardless of when cooks are started in other Bays.



- 1 Add 8 cups of rice, either white or brown, to the pan.

Note: Measure accurately and consistently.



- 2 ☐ Start with 8 cups water (1:1 ratio), optionally adding water based upon taste profile, altitude or other preferences.

☐ If used, add oil after water so it floats on top, being careful not to drip oil outside the pan.

☐ Place solid lid on pan.

Note: The rice/water ratio may be adjusted depending upon your specific rice and desired characteristics of the finished product. See box below for minimum space requirement.




- 3 Place pan into unit carefully, to avoid spills into the burner wells.

EMPTY SPACE IN PAN:




- ☐ By following the recipe above, you will end up with **2.5 inches** of empty space at the top of the pan. This is considered the optimal amount.
- ☐ Leaving less than 2 inches, or more than 3 inches of empty space in the pan could cause the unit to operate incorrectly.

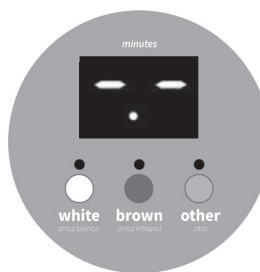

- 4 ☐ Turn the unit ON using the ON/OFF switch.

☐ Press the appropriate Product Selection Button on the Front Controller, either "White" or "Brown" depending upon the type of rice being cooked ("Brown" for quinoa).

Note: To stop a cook (for example, if the wrong Product Selection Button was pressed), press the Selection Button again for 2 seconds, and the unit will return to Idle mode (-.-).

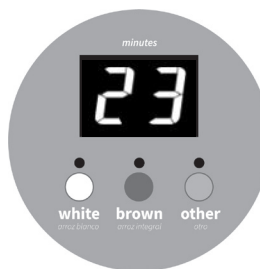


- ☐ The LED light above the rice indicator button will illuminate.
- ☐ The display will read, in minutes, the remaining approximate cook time.

Approx. Cook Times (dependent on altitude, type of rice & preference)

White Rice: ~23-30 min.

Brown Rice/Quinoa: ~33-40 min.

Note: If a pan is removed during cook, an alert sounds for 4 seconds. If pan is returned to bay within these 4 seconds, cook continues. If pan is not returned to bay, unit returns to Idle mode (-.-).

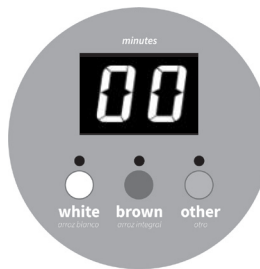

5 At the end of the cook:

- ☐ A single Beep Alert will sound at the end of the Cook cycle until the pan is removed.
- ☐ Removing the pan resets the unit back to Idle mode (-.-)

NOTE: The signal at the end of the cook cycle can be changed only by a qualified Service Technician.



DAILY CLEANING

TIP: Filling the Pan before placing it in the Rice Cooker greatly reduces the amount of debris buildup on the unit, making it much easier to keep clean.

DURING THE DAY

Pans and Solid Lids should be cleaned between uses using an approved mild detergent, hot water and sanitizing agent. Alternatively, these items can be cleaned in a dishwasher.


END OF DAY

CAUTION: Always consider the Cooker and its components to be very HOT. Use insulated gloves.

- ☐ The Well Cover should be lifted up and off for cleaning in a dishwasher or by hand.
- ☐ The two Bay Dividers can be lifted up and rotated off the pins for cleaning in a dishwasher or by hand.
- ☐ Wipe any debris from the Temperature Sensors.
- ☐ Wipe any debris from the Burner Tent and Burner Shield beneath the burner, avoiding the Burner.

See Plan View on pg. 5 for location of the Burner Tent.

- ☐ The Crumb Tray slides out from the front of the unit for cleaning in a dishwasher or by hand. Stubborn debris can be scraped off with a putty knife or scraper. Note the front flange is directed down.

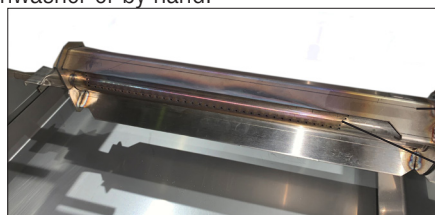

CAUTION: HOT
Wipe any debris from Burner Tent and Shield...
...avoiding the Burner itself.

CLEANING THE EXTERIOR CABINET

- ☐ All exposed surfaces of the unit should be wiped clean as necessary (or daily) using an approved mild cleaning solution.
- ☐ Be careful not to get excess liquid into the Switch or Control Panels.

DO NOT attempt to clean the Burners themselves.

Avoid contact with the Spark Igniter Assemblies when cleaning near the Burners to avoid accidental damage.


Never use a hose or sprayer to clean the unit.

Do not use excess liquid when cleaning the Control Panels.

Do not wrap Bay Dividers or Pan Frame with foil, as this will obstruct airflow and can damage the unit.



GAS RICE COOKER (GRC) BASIC SEQUENCE OF OPERATION
ADVANCED SEQUENCE OF OPERATION ON NEXT PAGE

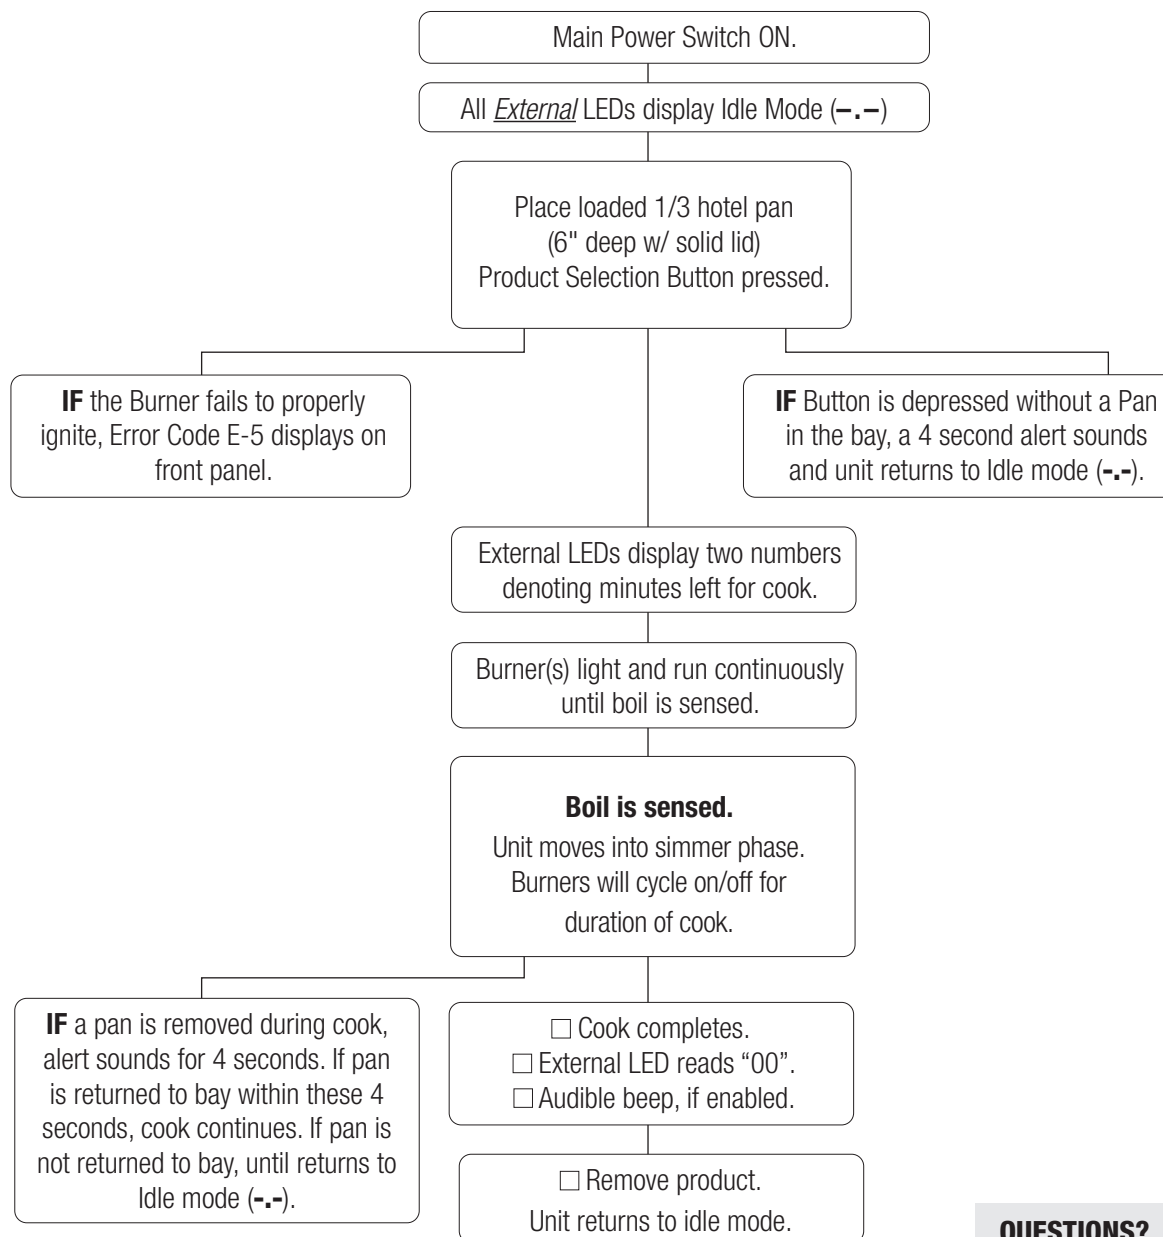

QUESTIONS?

Give us a call at **800.988.8103**

Our normal service hours are Monday through Friday, from 8am–5pm Pacific time. If calling after hours, follow the recorded instructions for emergency service and a Wood Stone technician will get back to you promptly.



MOST COMMON TROUBLESHOOTING ISSUES


Symptom	Possible Cause / Solution
The Rice Cooker does not turn ON	☐ Check that <i>both ends</i> of the Power Cord are securely plugged into a functioning electrical outlet, and securely plugged into the IEC connector on the Rice Cooker. ☐ Verify GFI outlet (if any) isn't tripped.
Burners do not light	Make sure the gas supply is connected to the Rice Cooker and turned ON. Note: If it isn't, an E-5 error will display. May occur after the gas line has been disconnected. Re-try ignition procedure.
Well Cover doesn't sit flush	Check that both Bay Dividers are installed and correctly resting on the pins. Incorrectly installed Bay Dividers can disrupt correct airflow, resulting in inconsistent rice quality and/or damage to the unit.
Burned product on bottom of pan	☐ Verify correct quantities of product and water are being added to pan. ☐ Thoroughly clean Temperature Sensor. The tips of the sensors must not have debris build-up. Good metal-on-metal contact is required for unit to operate properly. ☐ Oil, if used, should be added last. ☐ Rice not rinsed before cooking. ☐ Bottom of pan is dirty
Rice or grain underdone: hard	☐ Verify correct quantities of product and water are being added to pan. ☐ Verify Pan Lids are solid, i.e. do not have spoon holes. ☐ Verify the proper Product Selection Button was pushed for the cook.
Rice or grain overdone: soft / mushy	☐ Verify correct quantities of product and water are being added to pan. ☐ Verify the proper Product Selection Button was pushed for the cook.
Zone stops mid-cook and returns to idle mode	☐ Sensor dropped below minimum temperature. ☐ Water level too high.

If the appliance is not working properly after going through the above troubleshooting items, contact the Service Department at 800.988.8103. Our normal service hours are Mon.–Fri., 8am–5pm Pacific time. If calling after hours, follow the recorded instructions for emergency service and a Wood Stone technician will get back to you promptly.



Sheet: 1 of 1

Gas Rice Cooker
Wiring Diagram

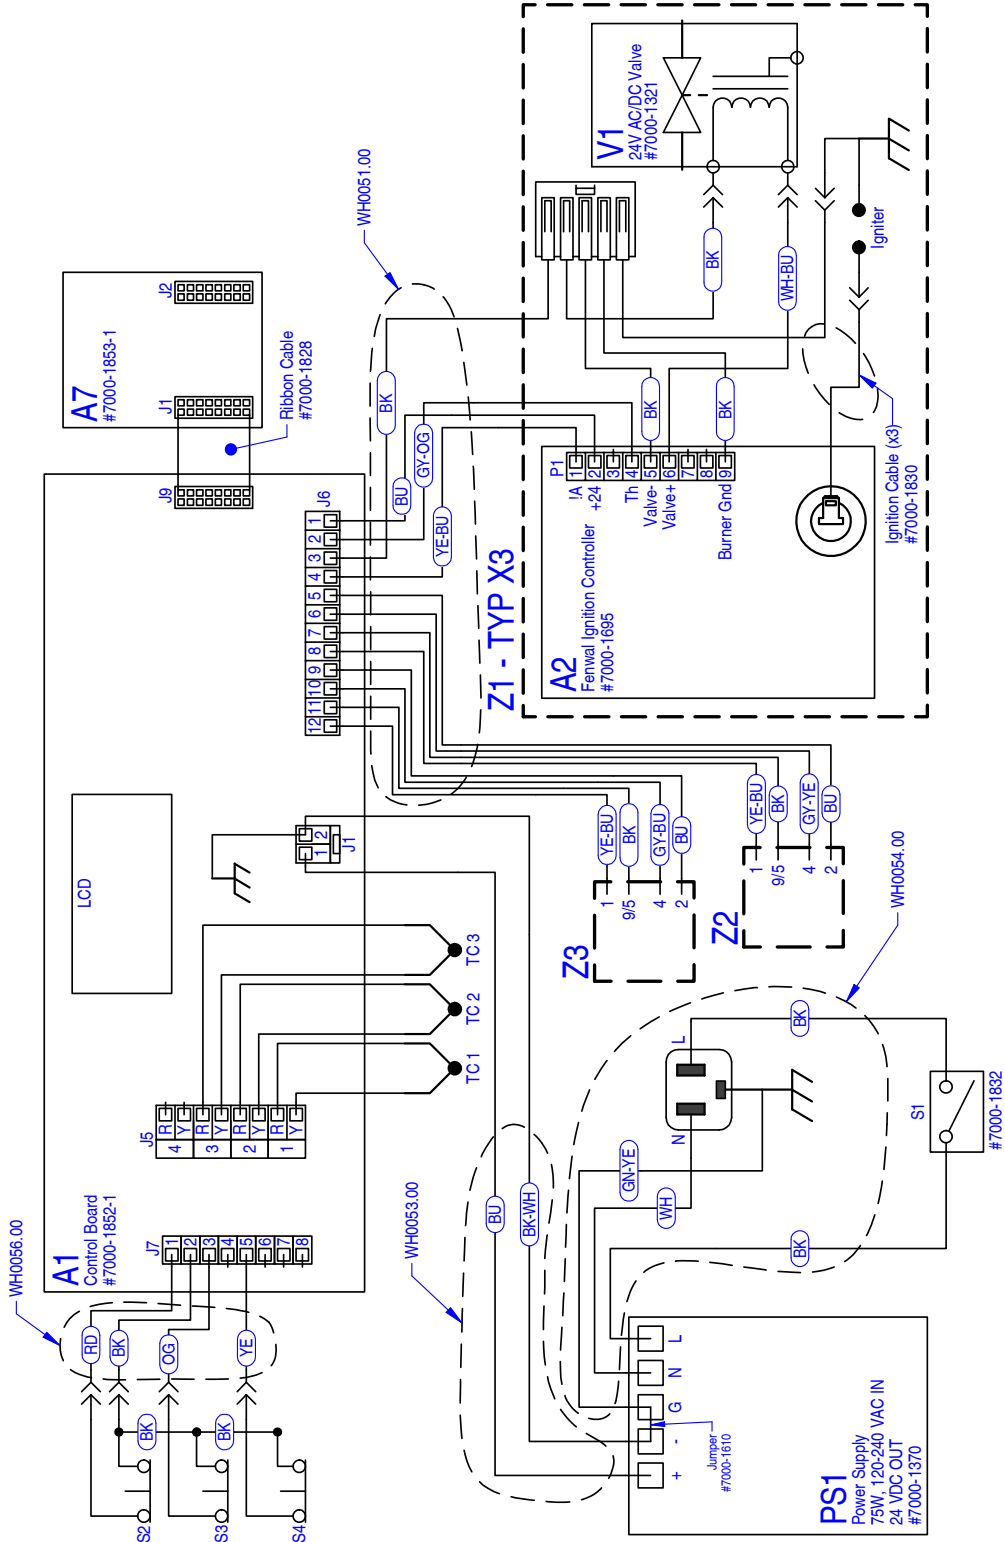


DIAG #: WD807 Rev. 1
DATE: 8/1/2019



Sheet: 1 of 1

GRC

Wiring Diagram - 240V / 208V

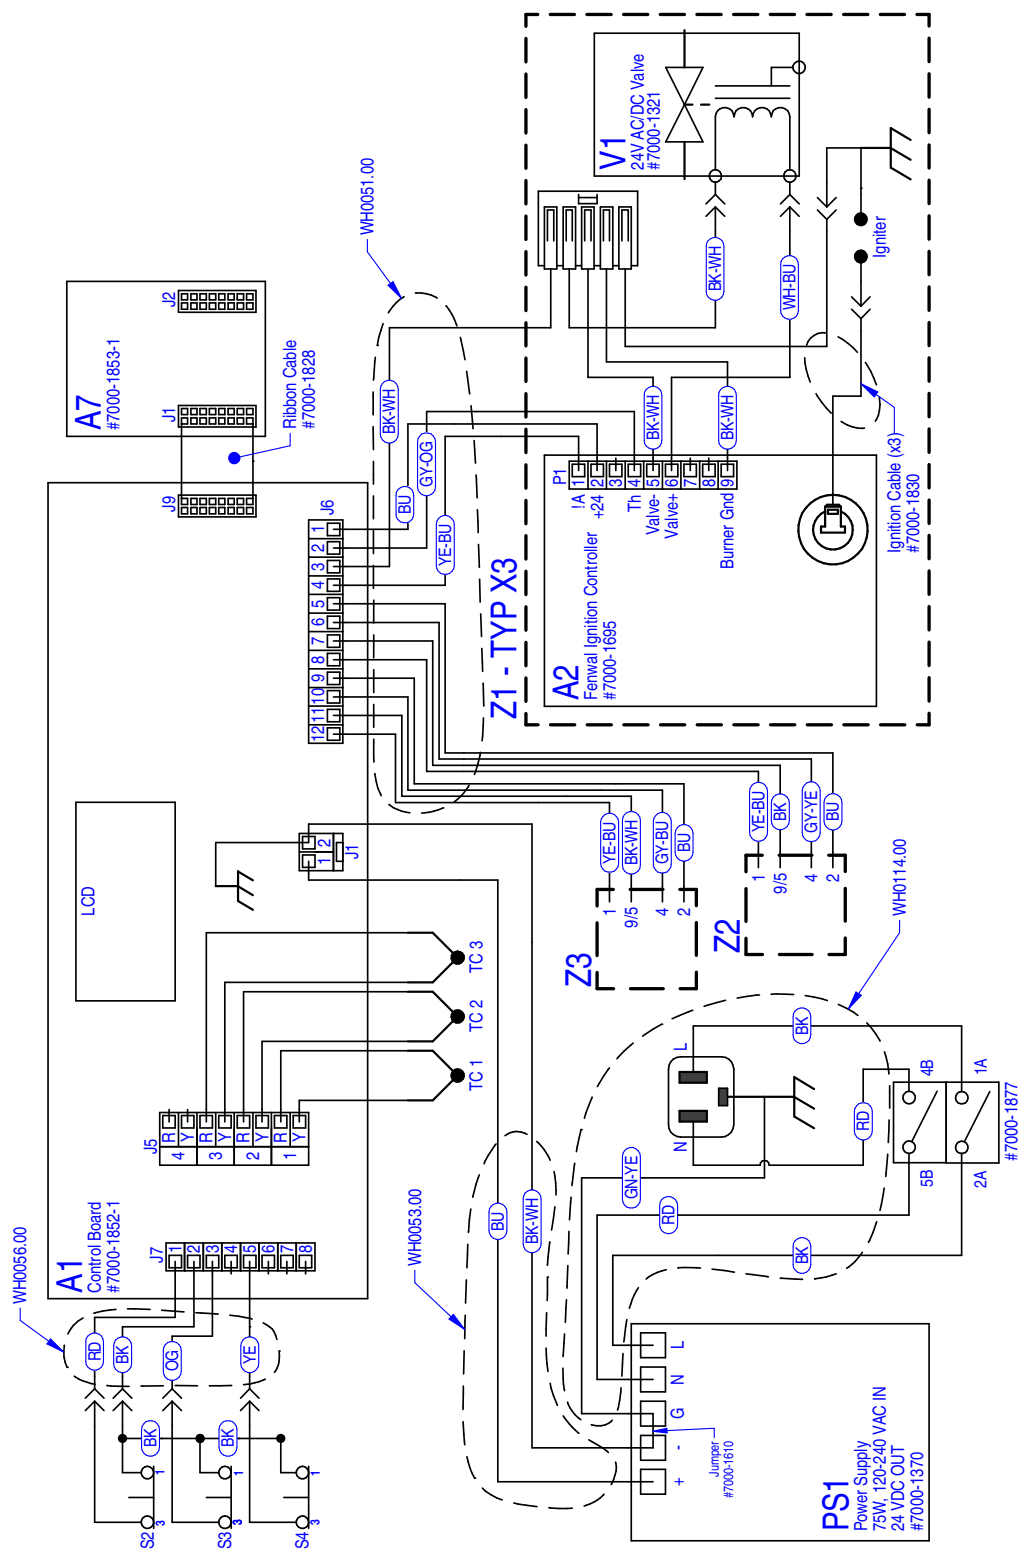

DIAG #: WD811 Rev. 0
DATE: 2/14/2024

WoodStone

Bellingham, WA +1(360)650-1111 www.woodstone-corp.com



**ALL WARRANTY SERVICE MUST BE PRE-APPROVED BY WOOD STONE
PLEASE CONTACT THE FACTORY FIRST.**

Wood Stone warrants its equipment to the original purchaser against defects in material or manufacture for a period of one year from the original date of purchase, subject to the following exclusions and limitations.

Please contact the factory first at 1.800.988.8103 or 1.360.650.1111, seven days a week. Our normal business hours are 8am to 5pm Pacific time Monday–Friday. If calling during non-business hours, follow the recorded instructions for emergency service and a Wood Stone technician will get back to you promptly.

EXCLUSIONS

The warranties provided by Wood Stone do not apply in the following instances:

1. In the event that the equipment is improperly installed. Proper installation is the responsibility of the installer; proper installation procedures are prescribed by the Wood Stone User Manual.
2. In the event the equipment is improperly maintained. Proper maintenance is the responsibility of the user; proper maintenance procedures are prescribed in the Wood Stone User Manual.
3. In the event that the failure or malfunction of the appliance or any part thereof is caused by abnormal use or is otherwise not attributable to defect in material or manufacture.
4. In the event that the appliance, by whatever cause, has been materially altered from the condition in which it left the factory.
5. In the event that the rating plate has been removed, altered or obliterated.
6. On parts that would be normally worn or replaced under normal conditions.

If any oral statements have been made regarding this appliance, such statements do not constitute warranties and are not part of the contract of sale. This limited warranty constitutes the complete, final and exclusive statement with regard to warranties.

This limited warranty is exclusive, and in lieu of, all other warranties whether written, oral or implied, including but not limited to, any warranty of merchantability or fitness for particular purpose or warranty against latent defects.

LIMITATIONS OF LIABILITY:

In the event of warranty claim or otherwise, the sole obligation of Wood Stone shall be the repair and/or replacement, at the option of Wood Stone, of the appliance or component or part thereof. Such repair or replacement shall be at the expense of Wood Stone with the exception of travel over 100 miles or two hours, overtime, and holiday charges which shall be at the expense of the purchaser. Any repair or replacement under this warranty does not constitute an extension of the original warranty for any period of the appliance or for any component or part thereof. Parts to be replaced under this warranty will be repaired or replaced at the option of Wood Stone with new or functionally operative parts. The liability of Wood Stone on any claim of any kind, including claims based on warranty, expressed or implied, contract, negligence, strict liability or any other theories shall be solely and exclusively the repair or replacement of the product as stated herein, and such liability shall not include, and purchaser specifically renounces any rights to recover, special, incidental, consequential or other damages of any kind whatsoever, including, but not limited to, injuries to persons or damage to property, loss of profits or anticipated profits, or loss of use of the product.

TO SECURE WARRANTY SERVICE:

Please contact the Service Department at 800.988.8103 or 360.650.1111 for warranty service.



NOTES.



This page intentionally left blank.