

# Operations Manual

Endurance X1 Manual Dough Press - Model #: DP1100G



**PROLUXE**  
WWW.PROLUXE.COM

Version: 122820

Congratulations on your selection of the Endurance X1 Manual Dough Press. Proluxe is a leading manufacturer of food preparation and cooking equipment designed for the most demanding commercial kitchens. Proluxe equipment is a result of the highest quality engineering and time-tested design.

This manual includes installation, operation, and maintenance procedures for your new Endurance X1 Dough Press. Please read this manual carefully and keep it with your machine for key to proper operation and lasting service.

## INSTALLATION

### Domestic

Use a separate 15 amp AC circuit. Only industrial extension cords with proper wire size should be used; size 16/3 wire for distance up to 25 feet, and size 14/3 for distance up to 50 feet.

### International

Use a designated 16 amp AC circuit. Only industrial extension cords with proper wire size (2.5 sq. mm) shall be used. Make sure there is a proper electrical wall outlet located within reach of the cord and plug attached to the press.

Then place the dough press in an area which allows for "swing clearance" of the lower platen. The lower platen of the press requires room in which to rotate and suggest a minimum of 36 inches of unobstructed space in front of the press shown in FIG. 1.

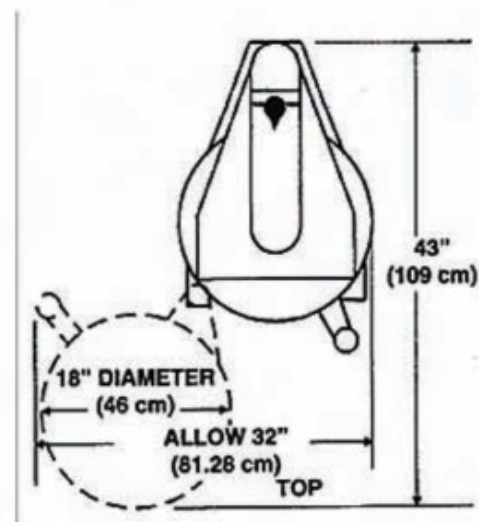


FIG. 1

### Limited Machine Warranty

Proluxe warrants this dough press machine, when operated under normal conditions, to be free from manufacturing defects in material and workmanship for a period of one year on parts and labor from the invoice date.

This warranty will be effective only when Proluxe authorizes the original purchaser to return the product to the factory in Perris, California freight prepaid and only when the product, upon examination, has proven to be defective.

This warranty does not apply to any machine that has been subjected to misuse, negligence or accident. Proluxe shall not be liable for the injury, loss or damage, direct or consequential, arising out of the use or the inability to use the product. No claim of any kind shall be greater in amount than the sale price of the product or part to which claim is made.

This is the sole warranty given by the company, it is in lieu of any other warranties, expressed or implied, in law or in fact, including the warranties of merchantability and fitness for a particular use, and is accepted such by the purchaser in taking delivery of this product.

## SPECIFICATIONS

Electrical:

120V/60Hz/1425W/11.9 Amps

Also available; specify when ordering:

- Voltage: 120/208/240
- Amps: 12.5/11.1/16.5
- Watts: 1500/2300/1500

Includes: 72" cord and NEMA approved plug.

Shipping Weight:

190lbs. (76kg.)

## INTERNATIONAL SYMBOLS

*Symboles internationaux*



Power Off  
*éteindre*



Power On  
*allumer*



Hot Surface  
*surface chaude*



Risk of Electrical Shock  
*Risque de choc électrique*



Protective Earth Terminal  
*Borne de terre de protection*



Caution - Warning  
*chaud - avertissement*

## SAFETY SUMMARY



### Warning

To reduce the risk of electrical shock, do not remove or open cover. No user-serviceable parts inside. Refer servicing to qualified personnel.

### Avertissement

*Pour réduire le risque de choc électrique, ne pas retirer ou couvercle ouvert Aucune pièce réparable par l'utilisateur, reportez-vous à du personnel qualifié.*



### Warning

In case of power cord damage, do not attempt to repair or replace the power cord. Please contact the manufacturer or the local distributor.

### Avertissement

*Pour une protection continue contre l'incendie et de choc électrique, remplacer avec le même type et calibre du fusible. Mis fusible supplémentaire nominale max 3A, 120 Vac.*



### Warning

For continued protection against fire and electric shock, replace with the same type

and rating fuse. Listed Supplemental Fuse rated max 3A, 120Vac.

### Avertissement

*Pour une protection continue contre l'incendie et de choc électrique, remplacer avec le même type et calibre du fusible. Mis fusible supplémentaire nominale max 3A, 120 Vac.*



### Caution Hot

Avoid touching hot surfaces while operating the machine.

### Attention à chaud

*Évitez de toucher les surfaces chaudes lorsque vous utilisez la machine.*




### Caution

When servicing or cleaning the machine, make sure that the power cord is removed from the wall socket.

During normal operation, the base of the machine must be installed or placed above the wall socket.

### Avertissement

*Lors de l'entretien ou du nettoyage de la machine, assurez-vous que le cordon d'alimentation est débranché de la prise murale.*

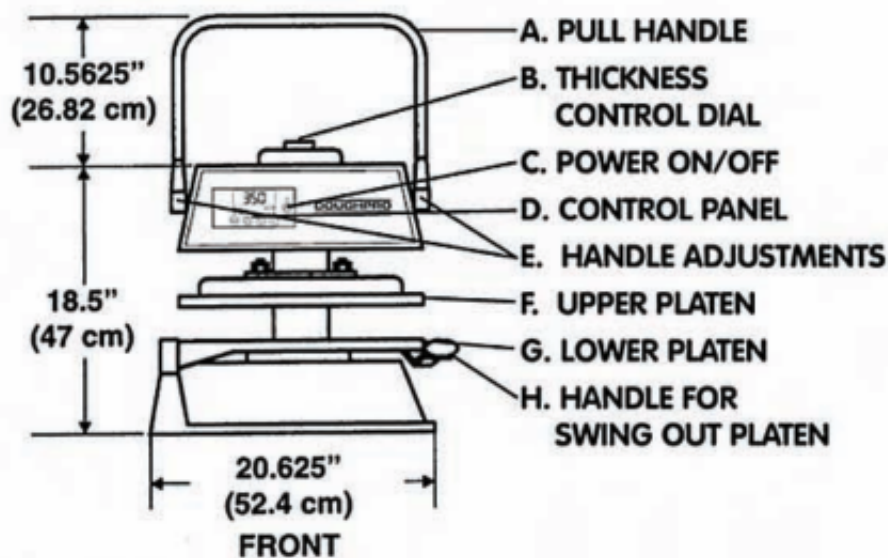

Familiarize yourself with the controls and operating mechanisms before using the Endurance X1.

Your dough press is equipped with a set of rubber mounting pads.

(A) Pull-down pressing handle for raising and lowering the upper platen. This action forces the closing of the platens.

If you would prefer a set of legs which would raise your machine off the table 4 inches. Please contact sales at [info@prolux.com](mailto:info@prolux.com) for a set. Shipping charges may apply.


(B) Thickness control dial.

(C) On/Off button. The green light above the button will illuminate when powered on.

## OPERATION TEMPERATURE & TIMER CONTROL

(D) Control Panel (See control board operations)

(E) Handle Adjustments (See tightening the pull-down handle)

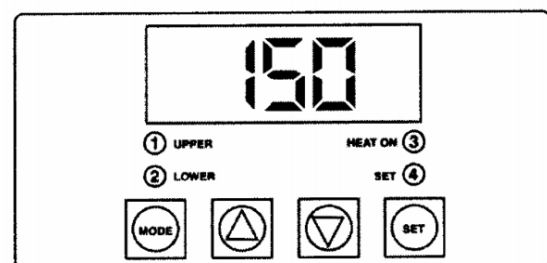

(F) Upper Platen

FIG. A

(G) Lower Platen

Solid State Controller

(H) Handle for lower swing out platen.

This controller has three (3) control features:

1. Temperature – May be set from 100°-425°F (38°-163°C)
2. Time – Time may be set from 1 second to 10 minutes.
3. Counter – Cycle counter counts the number of applications from 1 to 9999 (see additional Notes – Counter).
4. “2 Lower” (Fig. A) Refers to models using upper and lower heated surfaces.

## Controller Operation

### 1. Viewing the Modes of Operation:

To view the set points of temperature, timer and counter, press MODE button to view the desired mode of operation.

### 2. Changing Temperature:

Press MODE button until temperature is displayed.

Press and hold SET button while pressing the UP (↑) and DOWN (↓) arrow buttons to desired temperature setting.

### Fahrenheit/Celsius Conversion:

The temperature controller can be programmed to display either °F or °C. Press the MODE button until the temperature is displayed. Then push and hold the SET button for 10 seconds.

### 3. Changing Time:

Press MODE button until time is displayed. Press and hold SET button while pressing the UP (↑) and DOWN (↓)

arrow buttons to desired timer setting.

### 4. Resetting the Counter:

Press MODE button until the counter is displayed.

To reset the counter (# of cycles), simultaneously push UP (↑) or DOWN (↓) arrow buttons (approx. 5 seconds).

## PRESS OPERATION

### Pressing Dough:

For best results, your dough should be proofed before pressing, but it will also press directly out of your refrigerator. Flour is not required to press a crust and **should not** be dusted on any part of the machine.

1. Check to see if you have the correct type of electrical current or serious damage could occur.

2. Press the power button, the green light above will illuminate when powered on.

3. Set your desired temperature on the control panel by using FIG. A and the instructions above. We recommend a temperature of 150°F. Testing with your own dough may desire a different setting.

*Note: Heat is provided in the upper platen is only for purposes of enabling the dough to flow more rapidly in the pressing cycle. The heat IS NOT intended for baking.*

4. Set the thickness control which is located on top of the machine. You can adjust this control to your needs and requirements.

*Note: Diameter and thickness is determined through experimenting with your own dough and is a product of dough weight, temperature, pressing time, and thickness setting.*

5. Swing open the lower platen and apply a quick spray of a good water based food release on the lower platen.

6. Place your pre-portioned ball of dough in the approximate center of the lower platen. Add another light spray to the top of the dough ball.

7. Close the platen and pull the handle down to begin pressing.

8. Hold the handle down and the timer will actuate and, when the time cycle is completed. Pull the handle back to starting position and remove your product.

9. Remove the finished product by rotating the lower platen until you have proper space to remove your dough.

10. Remove the crust, place on a pan or peel, add toppings and bake.

## ADDITIONAL NOTES

Tightening the Pull-down Handle  
The pull-down pressing handle requires adjustment periodically to prevent it from

free falling. Whenever the handle becomes loose it can easily be tightened.

1. Using a 3/16" hex shaped Allen wrench, insert in key slot located on the right beneath the upper shroud.
2. Tighten until the press action of the handle becomes firm.

## RECOMMENDED SEASONING & CLEANING PROCEDURES

Before use you must properly season your platens to prevent your dough from sticking.

### Tools Required:

- Food release
- Soapy water solution
- Washcloth
- Paper towels

**DO NOT** use steel wool or harsh abrasives, it can cause costly damage.

1. Before cleaning make sure the unit is turned off.
2. Spray lower platen with approved food release/oil spray.
3. Wipe oil across lower platen with paper towel.
4. Wipe oil across upper platen.

5. Mix a warm dish soap and water solution.
6. Soak washcloth and wring to remove excess water.
7. Wipe lower and upper platen with damp cloth.

## PREVENTATIVE MAINTENANCE

Proluxe machines are relatively maintenance free. For a long lifespan, the following preventative maintenance should be followed:

### Daily Care:

1. Platens: Turn your machine off and allow to cool down before attempting to clean. These platens should only be cleaned with mild soap and warm water then wiped off with a clean, soft cloth or soft sponge.

2. Exterior surfaces: Wipe daily with mild soap and warm water will do the job quite nicely.

DO NOT use ice or cold water to cool the unit down. This can cause platen to warp.

### Piston Maintenance:

In order to ensure pop and trouble free operation of the press piston, it is important that the machine be lubricated once every

three months, under normal operation. High volume users may require more frequent lubrication.

Please follow these instructions:

1. Locate the grease port on the machine. Machines will pull down arms has a single grease port located below the upper head on the right side of the vertical post.
2. Place grease gun head against grease port and apply enough pressure to allow gun head to engage the grease port.
3. Squeeze handle of grease gun. This will force the grease into the piston.

The lubricant use must be USDA-H-I authorized for food machinery. This lubricant can be ordered through Proluxe, part # 110-002.

### Service Problems:

Contact our factory at (800) 624-6717 (U.S. only) or approved service agency. When contacting the factory for information, parts or service instructions, please provide the serial number of the machine be provided. This number can be found on the serial plate located on the rear of the machine.


| Problem                                                                                                                        | Cause                                                                                                                                      | Action                                                                                                                                                                                                                            | Ref # |
|--------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------|
| Power Button on Digital Controller face is depressed but doesn't turn on.                                                      | 1. Power cord is not plugged in.                                                                                                           | 1. Plug the power cord into wall receptacle and power button.                                                                                                                                                                     | 68    |
|                                                                                                                                | 2. Circuit breaker is tripped off in the site's breaker box.                                                                               | 2. Reset circuit breaker that the grill is plugged into. Depress Power Button to turn on.                                                                                                                                         | ----- |
|                                                                                                                                | 3. Transformer has taken an electrical surge and is damaged.                                                                               | 3. Replace Transformer after you check secondary side of transformer. If working properly, you should receive 12vdc.                                                                                                              | 91    |
|                                                                                                                                | 4. Check voltage on the secondary side of the Transformer. If you read 12VDC then you are receiving voltage to the controller.             | 4. Replace controller. Controller should be on once the power button is depressed.                                                                                                                                                | 85    |
|                                                                                                                                | 5. Possible blown fuse.                                                                                                                    | 5. Replace fuse.                                                                                                                                                                                                                  | 105   |
| Digital Controller's LED's are scrambled or randomly erratic. If when turning on, the display will first go to segment check   | 1. Possibly a component on the Digital controller is damaged.                                                                              | 1. Replace digital controller.                                                                                                                                                                                                    | ----- |
|                                                                                                                                | 2. Control needs to reset.                                                                                                                 | 2. While unit is on unplug unit, wait for 1 min. Then plug machine on again and depress the power button.                                                                                                                         | 85    |
| Digital Controller on startup goes through LED segment check (8888) then to version # and then loops back to the above reboot. | The relay driver on the digital control may be blown.                                                                                      | Replace digital controller.                                                                                                                                                                                                       | 85    |
| Digital display shows PROB. No heat on Upper Platen.                                                                           | Sensor lost it's continuity as shown on a multi-meter.                                                                                     | Disconnect prob that is open (no continuity as shown on a multi-meter. Must replace sensor (RTD). Do not cut and splice new sensor. Install new 2000 ohm RTD sensor to under side of heat platen and reconnect to the controller. | 41    |
| When depressing the tactile button on digital controller, nothing happens.                                                     | The tactile buttons under the overlay may be not close enough to activate. Same goes if the buttons are already pressed by overlay without | Carefully (no too much at one time to avoid fracturing the traces on the controller) tighten the nuts on the back of the                                                                                                          |       |

|                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                               |                                |
|----------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------|
|                                                                                                                      | depressing button.                                                                                                                                                                                                                                                                                                                                 | controller until button activate. Same goes in reverse if buttons are held down by the overlay.                                                                                                                                                                                                                                                                                               |                                |
| Digital display shows relay and particular zone is overheating. Beeper not functioning or intermittent beeper sound. | <p>1. The relay on the switched side is not opening to regulate temperature.</p> <p>2. Beeper on digital control board failed.</p>                                                                                                                                                                                                                 | <p>1. Replace the relay.</p> <p>2. Replace digital controller board</p>                                                                                                                                                                                                                                                                                                                       | <p>92</p> <p>85</p>            |
| If setpoint is reached but slightly off in temperature.                                                              | Offset may need to be calibrated and adjusted.                                                                                                                                                                                                                                                                                                     | Call (800) <a href="tel:624-6717">624-6717</a> ext. 129 for instructions.                                                                                                                                                                                                                                                                                                                     |                                |
| Heater platen overheating                                                                                            | If the relay (depending on the year of the model) on the coil side are receiving 12vdc indicates the controller is functioning properly. On the switching side of the relay, is there 120 vac going to the heater in question. If there is no voltage on the to the switching side of the relay to the heaters, the relay is not working properly. | Replace relay If the controller's heat-on LED is not lit indicating the controller is working properly.                                                                                                                                                                                                                                                                                       | 92                             |
| Dough not having same thickness across the press dough.                                                              | Adjust upper platen for level press                                                                                                                                                                                                                                                                                                                | Underneath the housing there is 4 stacked hex bolts sitting over the upper platen attached to the arm. The top bolts are called locking bolts. The 4 larger hex bolts below are adjustment bolts. Break free the 4 locking bolts. With an open end wrench adjust the bolts (1/8 turn at a time). After testing, tighten the locking bolts making sure not to move the larger adjustment bolts | <p>11</p> <p>And</p> <p>12</p> |


# Explosion View

Model #: DP1100G

**MASTER COPY**  
Date 06/01/18

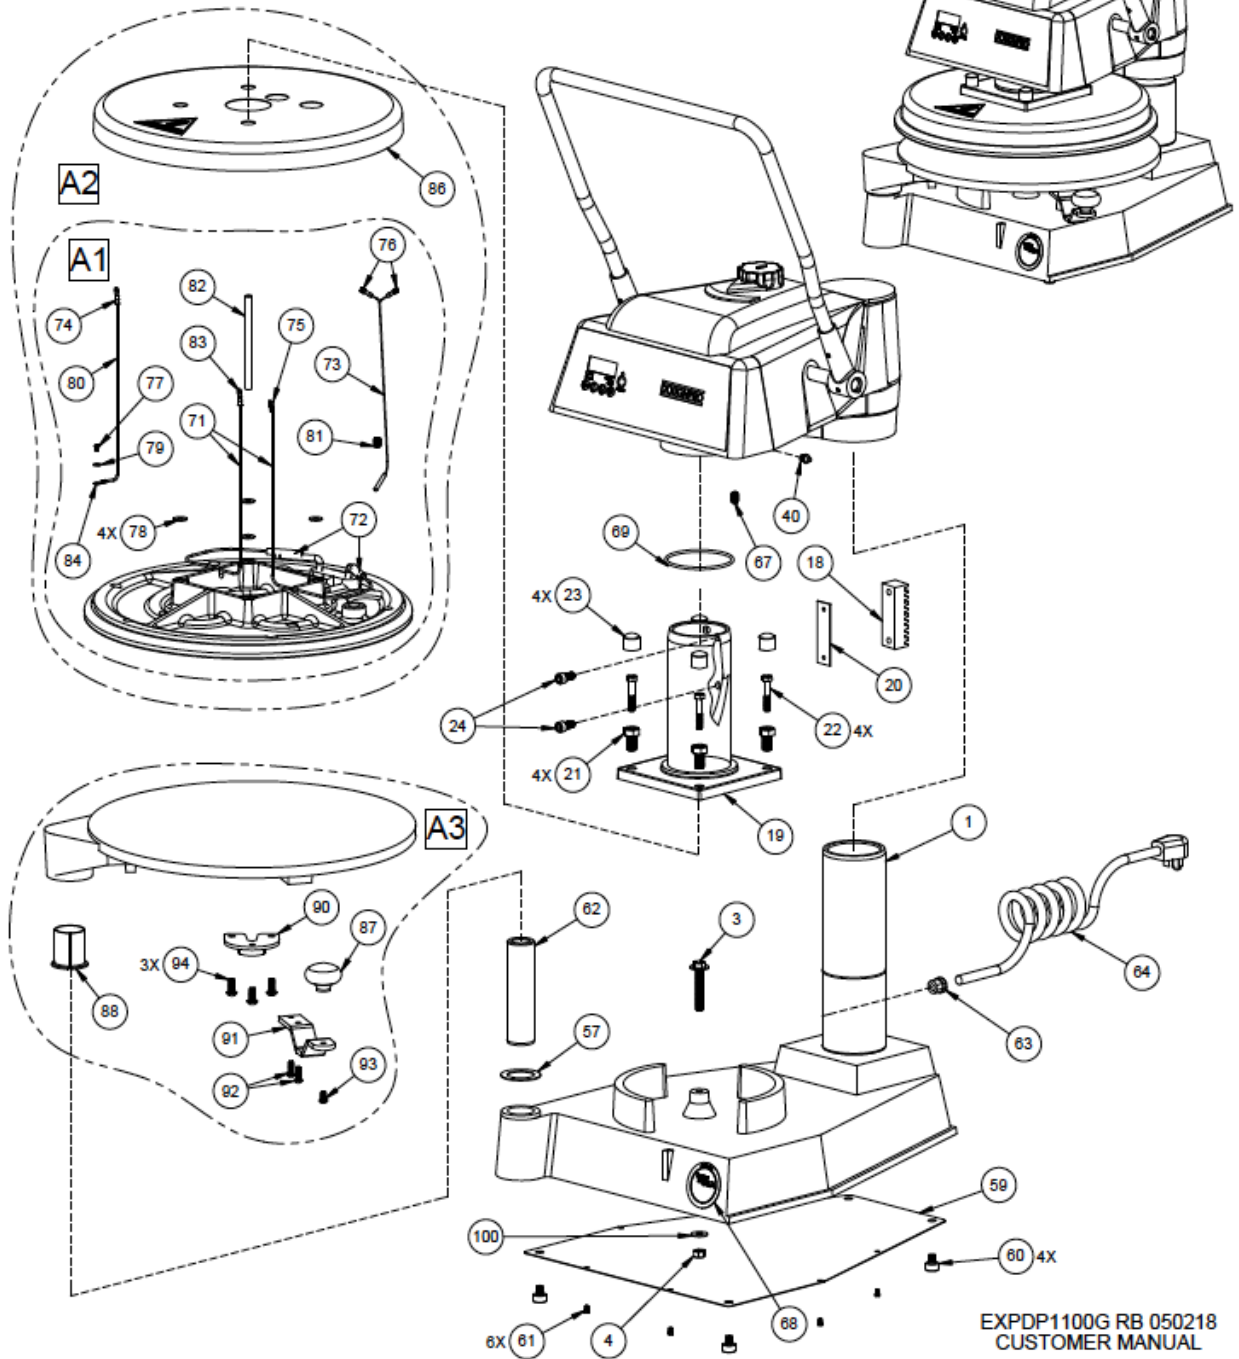

EXPDP1100G RB 050218  
CUSTOMER MANUAL

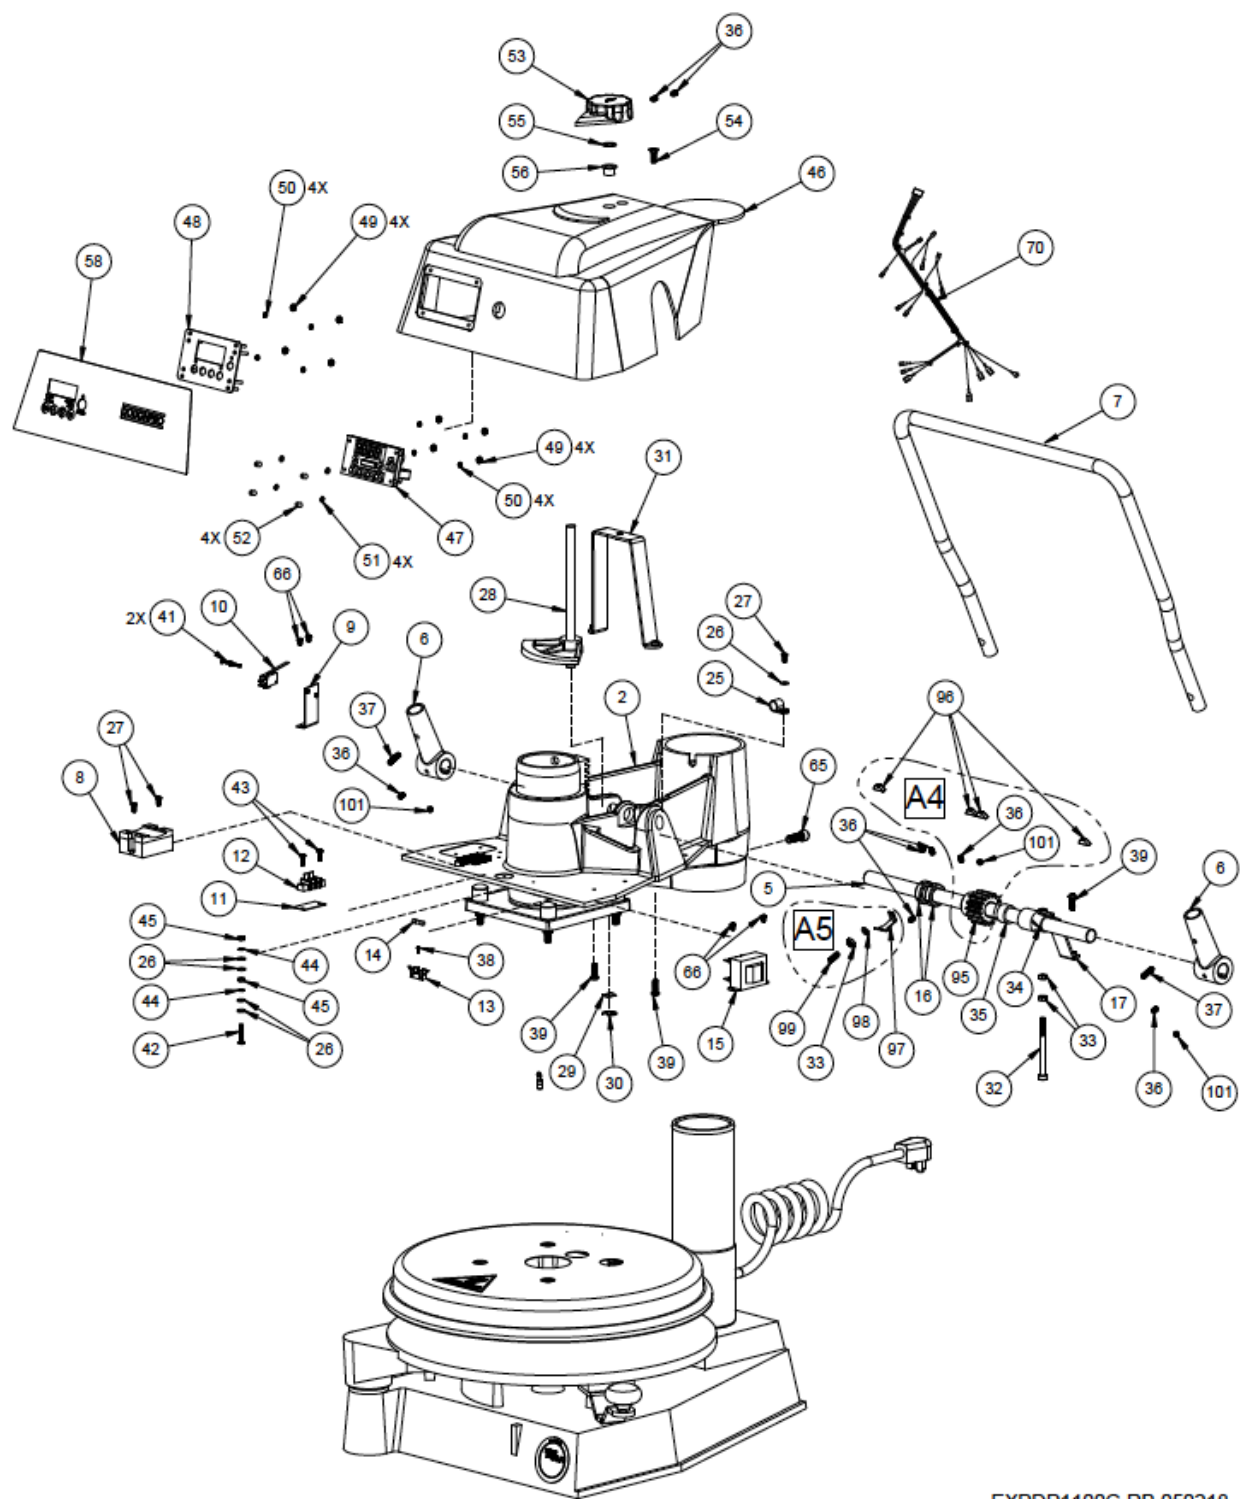

EXPDP1100G RB 050218  
CUSTOMER MANUAL

## Endurance X1 Part List - Model #: DP1100G

| ITEM # | DESCRIPTION                         | DP1100GB<br>240 ~ AC         | DP1100TGB<br>240 ~ AC        | QTY. |
|--------|-------------------------------------|------------------------------|------------------------------|------|
| 1      | BASE ASSEMBLY                       | <a href="#">110931101</a>    | <a href="#">110931101</a>    | 1    |
| 2      | ARM MACHINED                        | <a href="#">11010212101</a>  | <a href="#">11010212101</a>  | 1    |
| 3      | LOWER PLATEN STOP, ASSEMBLY         | <a href="#">110102130</a>    | <a href="#">110102130</a>    | 1    |
| 4      | NUT, HEX 3/8-16                     | <a href="#">NH3816</a>       | <a href="#">NH3816</a>       | 1    |
| 5      | GEAR BAR                            | <a href="#">1109361</a>      | <a href="#">1109361</a>      | 1    |
| 6      | HANDLE SOCKET                       | <a href="#">11016650</a>     | <a href="#">11016650</a>     | 2    |
| 7      | HANDLE, PRESSURE                    | <a href="#">1109390</a>      | <a href="#">1109390</a>      | 1    |
| 8      | RELAY, SOLID STATE                  | <a href="#">MPR90217</a>     | <a href="#">MPR90217</a>     | 1    |
| 9      | MICROSWITCH BRACKET                 | <a href="#">1101021213</a>   | <a href="#">1101021213</a>   | 1    |
| 10     | MICRO SWITCH                        | <a href="#">V15G31C25K</a>   | <a href="#">V15G31C25K</a>   | 1    |
| 11     | MARKER STRIP #2                     | <a href="#">MS6992</a>       | <a href="#">MS6992</a>       | 1    |
| 12     | BLOCK, TERMINAL ASSY 2 STAGE        | <a href="#">11096914</a>     | <a href="#">11096914</a>     | 1    |
| 13     | FUSE HOLDER 1 AMP                   | <a href="#">MPPF708</a>      | <a href="#">MPPF708</a>      | 1    |
| 14     | FUSE BUSS 1 AMP                     | <a href="#">MPPF701R</a>     | <a href="#">MPPF701R</a>     | 1    |
| 15     | TRANSFORMER                         | <a href="#">11096975</a>     | <a href="#">11096975</a>     | 1    |
| 16     | COLLAR, GEAR BAR                    | <a href="#">11013183</a>     | <a href="#">11013183</a>     | 2    |
| 17     | ASSEMBLY, TENSION STRAP             | <a href="#">11041663</a>     | <a href="#">11041663</a>     | 1    |
| 18     | RACK, GEAR                          | <a href="#">1109380</a>      | <a href="#">1109380</a>      | 1    |
| 19     | ASSEMBLY, PISTON                    | <a href="#">11018974</a>     | <a href="#">11018974</a>     | 1    |
| 20     | SHIM, GEAR RACK                     | <a href="#">110144120</a>    | <a href="#">110144120</a>    | 1    |
| 21     | BOLT, LEVEL ADJUSTMENT              | <a href="#">1109367</a>      | <a href="#">1109367</a>      | 4    |
| 22     | BOLT, HEX 5/16-18 X 1 3/4" GR5      | <a href="#">BH51618134G5</a> | <a href="#">BH51618134G5</a> | 4    |
| 23     | CAP, VINYL (ADJUSTMENT SCREWS)      | <a href="#">SC0687</a>       | <a href="#">SC0687</a>       | 4    |
| 24     | SCREW, SOCKET HEAD 3/8-16 X 3/4     | <a href="#">SSH381634</a>    | <a href="#">SSH381634</a>    | 2    |
| 25     | CLAMP, CABLE 3/8                    | <a href="#">CC38</a>         | <a href="#">CC38</a>         | 1    |
| 26     | WASHER, SAE #8                      | <a href="#">WSAE8</a>        | <a href="#">WSAE8</a>        | 5    |
| 27     | SCREW, PHILLIPS PAN HEAD 8-32 X 3/8 | <a href="#">SP83238</a>      | <a href="#">SP83238</a>      | 3    |
| 28     | CAM RAMP ASSEMBLY                   | <a href="#">1109310</a>      | <a href="#">1109310</a>      | 1    |

|               |                                        |                              |                               |             |
|---------------|----------------------------------------|------------------------------|-------------------------------|-------------|
| 29            | WASHER, WAVE .505 I.DX.750 O.D, X .045 | 5806282                      | 5806282                       | 1           |
| 30            | CLIP "E" RETAINING 1/2                 | MPSC240                      | MPSC240                       | 1           |
| 31            | BRACKET, HOUSING ASSEMBLY              | 110144130                    | 110144130                     | 1           |
| 32            | SCREW, SOCKET HEAD 1/4-20 X 3 1/4      | SSH1420314                   | SSH1420314                    | 1           |
| 33            | NUT, HEX 1/4-20                        | NH1420                       | NH1420                        | 3           |
| 34            | BUSHING, TENSION STRAP                 | 11018966                     | 11018966                      | 1           |
| 35            | BUSHING, SPACER                        | 11024369                     | 11024369                      | 1           |
| 36            | SCREW, SET 1/4-20 X 3/8                | SST142038                    | SST142038                     | 6           |
| 37            | SCREW, SET SOCKET HEAD 1/4-20 X 7/8    | SST142078                    | SST142078                     | 2           |
| 38            | SCREW, PHILLIPS PAN 2-56 X 1/4         | SP25614                      | SP25614                       | 1           |
| 39            | SCREW, BUTTON HEAD 1/4-20X3/4          | SB142034                     | SB142034                      | 3           |
| 40            | FITTING, ZERK 1/4-28                   | B792                         | B792                          | 1           |
| 41            | SCREW, ROUND HEAD 4-40 X 5/8 SLOTTED   | SR44058                      | SR44058                       | 2           |
| 42            | SCREW, PAN HEAD 8-32 X 1               | SP8321                       | SP8321                        | 1           |
| <b>ITEM #</b> | <b>DESCRIPTION</b>                     | <b>DP1100GB<br/>240 ~ AC</b> | <b>DP1100TGB<br/>240 ~ AC</b> | <b>QTY.</b> |
| 43            | SCREW, PAN HEAD PHILLIPS 8-32 X 1/2    | SP83212                      | SP83212                       | 2           |
| 44            | WASHER, INTERNAL TOOTH LOCK #8         | WLIT8                        | WLIT8                         | 2           |
| 45            | NUT, HEX 8-32                          | NH832                        | NH832                         | 2           |
| 46            | HOUSING MACHINED                       | 1101781542201                | 1101781542201                 | 1           |
| 47            | DIGITAL CONTROL                        | 11096905211                  | 11096905211                   | 1           |
| 48            | ASSEMBLY, CONTROL FACIA                | 11086027                     | 11086027                      | 1           |
| 49            | NUT, HEX 6-32                          | NH632                        | NH632                         | 8           |
| 50            | WASHER, INTERNAL TOOTH LOCK #6         | WLIT6                        | WLIT6                         | 8           |
| 51            | WASHER, STEEL                          | 311150019                    | 311150019                     | 4           |
| 52            | NYLON SPACER, 1/4 X .141 X 9/32 LONG   | 110969111                    | 110969111                     | 4           |
| 53            | KNOB, THICK/THIN MACHINED              | 1109309                      | 1109309                       | 1           |
| 54            | SCREW, SOCKET FLAT HEAD 1/4-20 X 3/4   | SF142034                     | SF142034                      | 1           |
| 55            | SHIM WASHER                            | WS12031                      | WS12031                       | 1           |
| 56            | BUSHING, FLANGE                        | 212NN01420000                | 212NN01420000                 | 1           |
| 57            | SHIM, LOWER PLATEN                     | 110379322055                 | 110379322055                  | 1           |
| 58            | OVERLAY, DIGITAL CONTROL PANEL         | ODP1100                      | ODP1100                       | 1           |
| 59            | COVER PLATE, BASE                      | 11010954                     | 11010954                      | 1           |

|               |                                               |                              |                               |             |
|---------------|-----------------------------------------------|------------------------------|-------------------------------|-------------|
| 60            | FEET, RUBBER                                  | RF209                        | RF209                         | 4           |
| 61            | BOLT, HEX 8-32 X 1/4                          | BH83214                      | BH83214                       | 6           |
| 62            | POST, LOWER PLATEN                            | 11015960                     | 11015960                      | 1           |
| 63            | CABLE STRAIN RELIEF                           | MPSS168                      | MPSS168                       | 1           |
| 64            | POWER CORD, 230 Vlt (BS-1363) UK Great Britan | DP149203                     | DP149203                      | 1           |
| 65            | SCREW, SOCKET HEAD 3/8-16 X 1                 | SSH38161                     | SSH38161                      | 1           |
| 66            | SCREW, PHILLIPS PAN HEAD 8-32 X 1/4           | SP83214                      | SP83214                       | 4           |
| 67            | DETENT, PLUNGER SPRING 3/8-16                 | MPSP134                      | MPSP134                       | 1           |
| 68            | DECAL USA STICKER                             | DPROUSA                      | DPROUSA                       | 1           |
| 69            | ORING, #2-28 N-70, PISTON                     | 238N70                       | 238N70                        | 1           |
| 70            | WIRE HARNESS                                  | 110560051                    | 110560051                     | 1           |
| 71            | WIRE, TGGT, 14GA. (HEATER)                    | 110069                       | 110069                        | 7 FT.       |
| 72            | TFE SHRINK TUBING                             | 110131                       | 110131                        | .33 FT.     |
| 73            | SENSOR ASSEMBLY                               | 110949110                    | 110949110                     | 1           |
| 74            | TERMINAL, RING #8                             | 1604                         | 1604                          | 1           |
| 75            | 14-16 GA #10 FORK TERMINAL INSUL.             | 1626                         | 1626                          | 1           |
| 76            | TERMINAL Q.D. 3/16 X 18/22GA.                 | 2280                         | 2280                          | 2           |
| 77            | SCREW, PAN HEAD 6-32 X 1/4                    | SP63214                      | SP63214                       | 1           |
| 78            | WASHER, SAE 5/16                              | WSAE516                      | WSAE516                       | 4           |
| 79            | WASHER, SAE #6                                | WSAE6                        | WSAE6                         | 1           |
| 80            | WIRE, TFE 14GA. GREEN                         | WTFE14G                      | WTFE14G                       | 3.08 FT.    |
| 81            | SCREW, SET 3/8-16 X 1/2                       | SST381612                    | SST381612                     | 1           |
| 82            | SLEEVING, PVC WIRE                            | OPVC1050                     | OPVC1050                      | 1.33 FT.    |
| <b>ITEM #</b> | <b>DESCRIPTION</b>                            | <b>DP1100GB<br/>240 ~ AC</b> | <b>DP1100TGB<br/>240 ~ AC</b> | <b>QTY.</b> |
| 83            | TERMINAL, FEMALE MOLEX                        | MPSQ100                      | MPSQ100                       | 1           |
| 84            | TERMINAL, RING #6                             | 1601HT                       | 1601HT                        | 1           |
| 86            | SHROUD, UPPER PLATEN                          | 1109336                      | 1109336                       | 1           |
| 87            | KNOB, SWING AWAY                              | 110017                       | 110017                        | 1           |
| 88            | FLANGED BUSHING MACHINED                      | 110102167                    | 110102167                     | 1           |
| 90            | PLATE, LOWER PLATEN LOCK ASSEMBLY             | 11030623                     | 11030623                      | 1           |
| 91            | HANDLE LOWER PLATEN                           | 1106301                      | 1106301                       | 1           |

|     |                                    |              |             |   |
|-----|------------------------------------|--------------|-------------|---|
| 92  | SCREW, BUTTON HEAD 1/4-20 X 3/4    | SB142034     | SB142034    | 2 |
| 93  | SCREW, BUTTON HEAD 1/4-20 X 5/8    | SB142058     | SB142058    | 1 |
| 94  | SCREW, BUTTON HEAD 5/16-18 X 3/4   | SB5161834    | SB5161834   | 3 |
| 95  | PINION GEAR ASSEMBLY               | 1109360      | 1109360     | 1 |
| 96  | KEYWAY, #9 3/16 X 3/4              | KW931634     | KW931634    | 4 |
| 97  | BRACKET, MICRO SWITCH              | 110200019    | 110200019   | 1 |
| 98  | WASHER, SPLIT LOCK, 1/4            | WL14         | WL14        | 1 |
| 99  | SCREW, SET 1/4-20 X 3/4 CONE POINT | SST142034CP  | SST142034CP | 1 |
| 100 | WASHER, SAE 3/8                    | WSAE38       | WSAE38      | 1 |
| 101 | SCREW, SET 1/4-20 X 1/4"           | SST142014    | SST142014   | 3 |
| 102 | MANUAL DP1100G                     | MDP1100G     | MDP1100G    | 1 |
| A1  | UPPER PLATEN WIRE ONLY             | 110074240PK  | 110074240K  | 1 |
| A2  | UPPER PLATEN COMPLETE ASSEMBLY     | 110074240PAK | 110074240AK | 1 |
| A3  | LOWER PLATEN ASSEMBLY              | 11015932PK   | 11015932K   | 1 |
| A4  | PINION GEAR ASSEMBLY               | 1109360K     | 1109360K    | 1 |
| A5  | KIT, MICRO SWITCH BRACKET ASSEMBLY | 110200019K   | 110200019K  | 1 |

## Warranty & Return Policy

Proluxe warrants all products manufactured by it against defects in workmanship or materials from the date of purchase for a period of 1 year on parts and labor. This warranty applies to only equipment purchased and used in the United States.

Warranty period shall begin when equipment ships. Warranty travel will only be covered for 60 miles.

ALL WARRANTY SERVICE CALLS MUST BE APPROVED BY PROLUXE. IF THIS PROCEDURE IS NOT FOLLOWED, WARRANTY SERVICE WILL NOT BE COVERED. WARRANTY SERVICE WILL BE

PAID ON STRAIGHT TIME, OVERTIME WILL NOT BE COVERED.

## EXCLUSIONS

### Wood & Gas Fired Ovens

Warranty applies to the main body of the oven being steel / refractory and insulation shall be free from defects in materials and workmanship for a period of four years from the date of purchase. The gas equipment shall be free from defects in materials and workmanship for a period of one (1) year from the date of purchase. Lifetime warranty against cracks on the oven floor.

## Special Order Equipment and Accessories

Cannot be canceled and are not returnable unless defective within the terms of this warranty.

In no event shall Proluxe be liable for consequential damages arising out of the failure of any of its products if operated improperly or caused by normal wear or damaged by operator abuse.

## Limited Lifetime Warranty on Heating Elements

If replacement is needed, Proluxe will send the new part at no charge but labor will not be covered unless the unit is still under the 1 year manufacturer warranty.

## RETURNED MERCHANDISE POLICY

Should it become necessary to return any of the company's products, the following instructions must be adhered to: First, contact our customer service department for approval and a return authorization number. Please have the serial number of your item available at that time. All merchandise must be shipped freight prepaid by customer or service agency. Subject to the inspection of the product by the company, a restocking charge of 20% of the Net purchased price paid to Proluxe will be assessed. Merchandise may not be returned for credit without prior written approval of Proluxe.

Collect shipments will not be accepted. No returns after 60 days of original shipment

date on machines. Purchased parts may not be returned after 30 days. If upon inspection by Proluxe or its authorized agent it is determined the equipment has not been used in an appropriate manner, has been modified, or has not been properly maintained, or has been subject to misuse, misapplication, neglect, abuse, accident, unauthorized modification, damage during transit, delivery, fire, flood, act or war, riot or act of God, then this warranty shall be deemed null and void.

## TERMS & CONDITIONS

1. Price List prices are suggested retail prices and are shown in U.S. Dollars.

2. Terms of Payment: 1% 10 days, NET 30 days.

3. New Accounts: Satisfactory credit information must be provided before open account status can be extended.

Unless agreed otherwise, all shipments will be made C.O.D., Cash in advance.

4. Pricing: Prices, specifications, model numbers, capacities and accessories are subject to change without notice.

5. Freight/Routing: Method of shipment will be determined by Proluxe unless otherwise advised by purchaser.

6. Damaged Claims: All merchandise shipped at purchaser's risk. Inspection must be made by purchaser at time goods are received. If goods are damaged, the PURCHASER shall request that the agent of the transportation

company make a written notation on the proper shipping documents immediately and then file a claim for damages.

*Note: Goods damaged in shipping are non-returnable.*

7. Returns: Machines may not be returned after 60 days. Purchased parts may not be returned after 30 days. A restocking fee of 20% will be assessed on non-warranty returns.

8. Taxes: Prices indicated herein DO NOT include State, Federal, Local or foreign taxes or duties, nor do they include fees, permits, insurance or other levies, all of which are the responsibility of the purchaser.

9. All orders are subject to acceptance by Proluxe.

10. Possession of this price list shall not be considered an offer to sell.