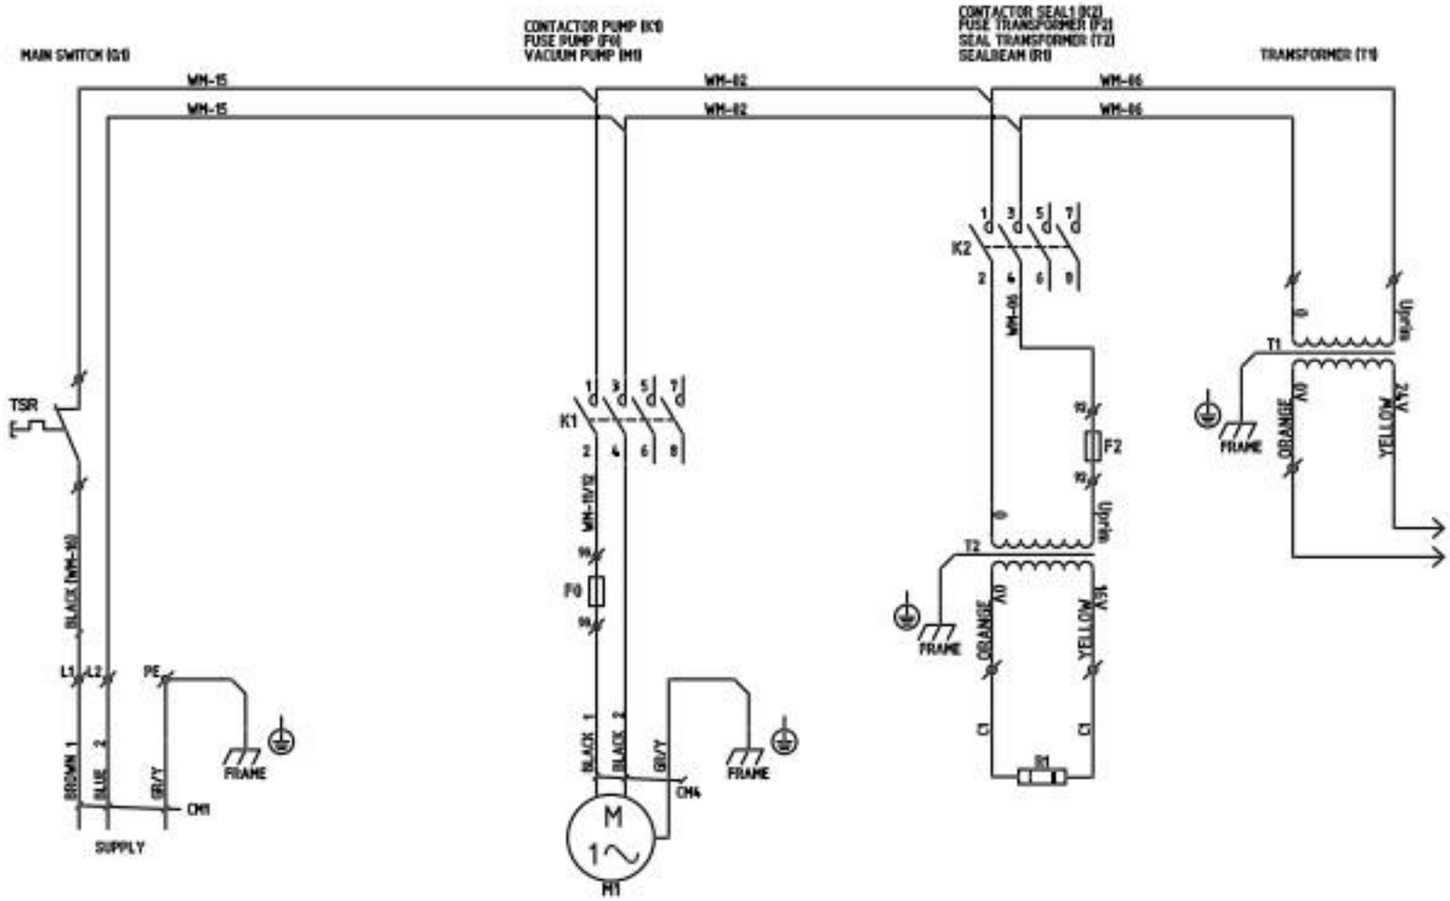
MAIN SWITCH (Q1)
CONTACTOR PUMP (K1)
FUSE PUMP (F0)
VACUUM PUMP (M1)
CONTACTOR SEAL1 (K2)
FUSE TRANSFORMER (F2)
SEAL TRANSFORMER (T2)
SEALBEAM (R1)
TRANSFORMER (T1)
WM-15
WM-02
WM-06
TSR
K1
K2
F0
F2
T1
T2
M
1~
M1
FRAME
ORANGE
YELLOW
BLACK (WM-16)
BROWN 1
BLUE
GR/Y
CM1
CM4
SUPPLY
PE
L1
L2

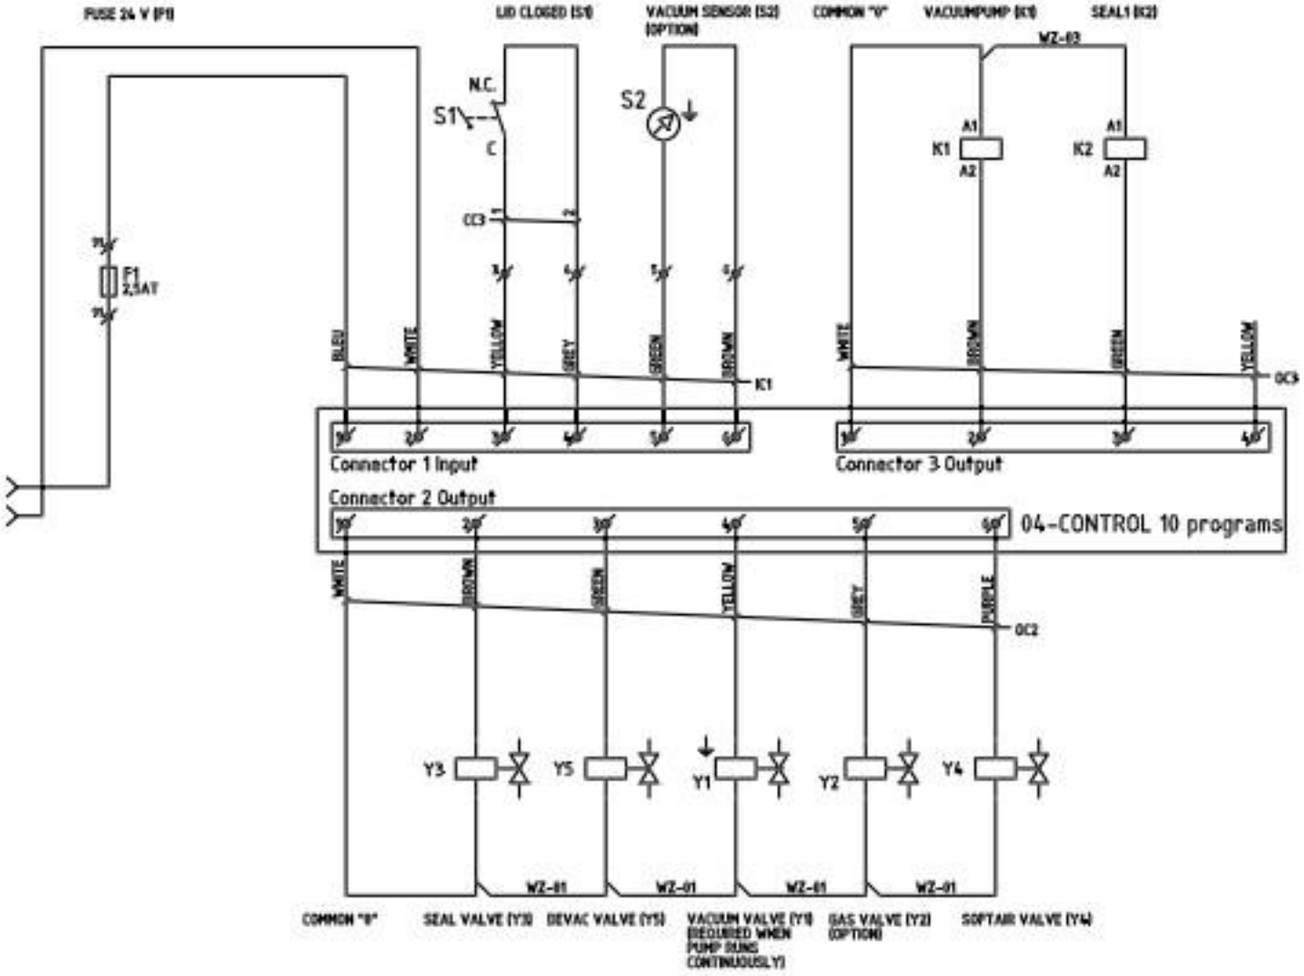
FUSE 24 V (F1)
LID CLOSED (S1)
VACUUM SENSOR (S2) (OPTION)
COMMON "V"
VACUUMPUMP (K1)
SEAL1 (K2)
WZ-03
N.C.
S1
S2
K1
K2
A1
A2
F1 2,5AT
BLEU
WHITE
YELLOW
GREY
GREEN
BROWN
OC3
Connector 1 Input
Connector 3 Output
Connector 2 Output
04-CONTROL 10 programs
PURPLE
OC2
Y3
Y5
Y1
Y2
Y4
WZ-01
COMMON "B"
SEAL VALVE (Y3)
DEVAC VALVE (Y5)
VACUUM VALVE (Y1) (REQUIRED WHEN PUMP RUNS CONTINUOUSLY)
GAS VALVE (Y2) (OPTION)
SOFTAIR VALVE (Y4)