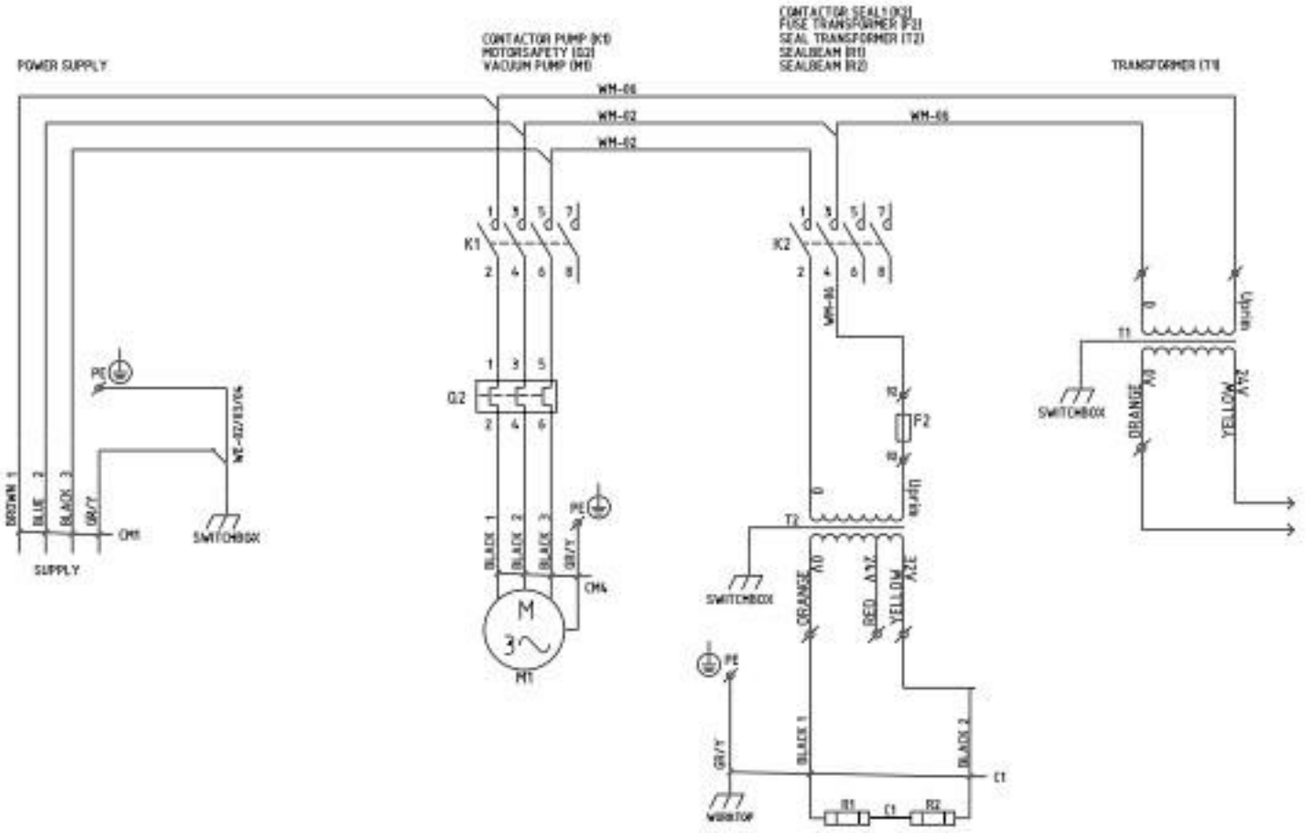
POWER SUPPLY
CONTACTOR PUMP (K1)
MOTORSAFETY (Q2)
VACUUM PUMP (M1)
CONTACTOR SEAL1 (K2)
FUSE TRANSFORMER (F2)
SEAL TRANSFORMER (T2)
SEALBEAM (R1)
SEALBEAM (R2)
TRANSFORMER (T1)
WM-06
WM-02
WM-05
K1
K2
Q2
F2
T1
T2
M1
SUPPLY
SWITCHBOX
ORANGE
YELLOW
BLACK 1
BLACK 2
BLACK 3
GR/Y
CM1
CM4
WZ-02/03/04
WZ-05
R1
R2
C1

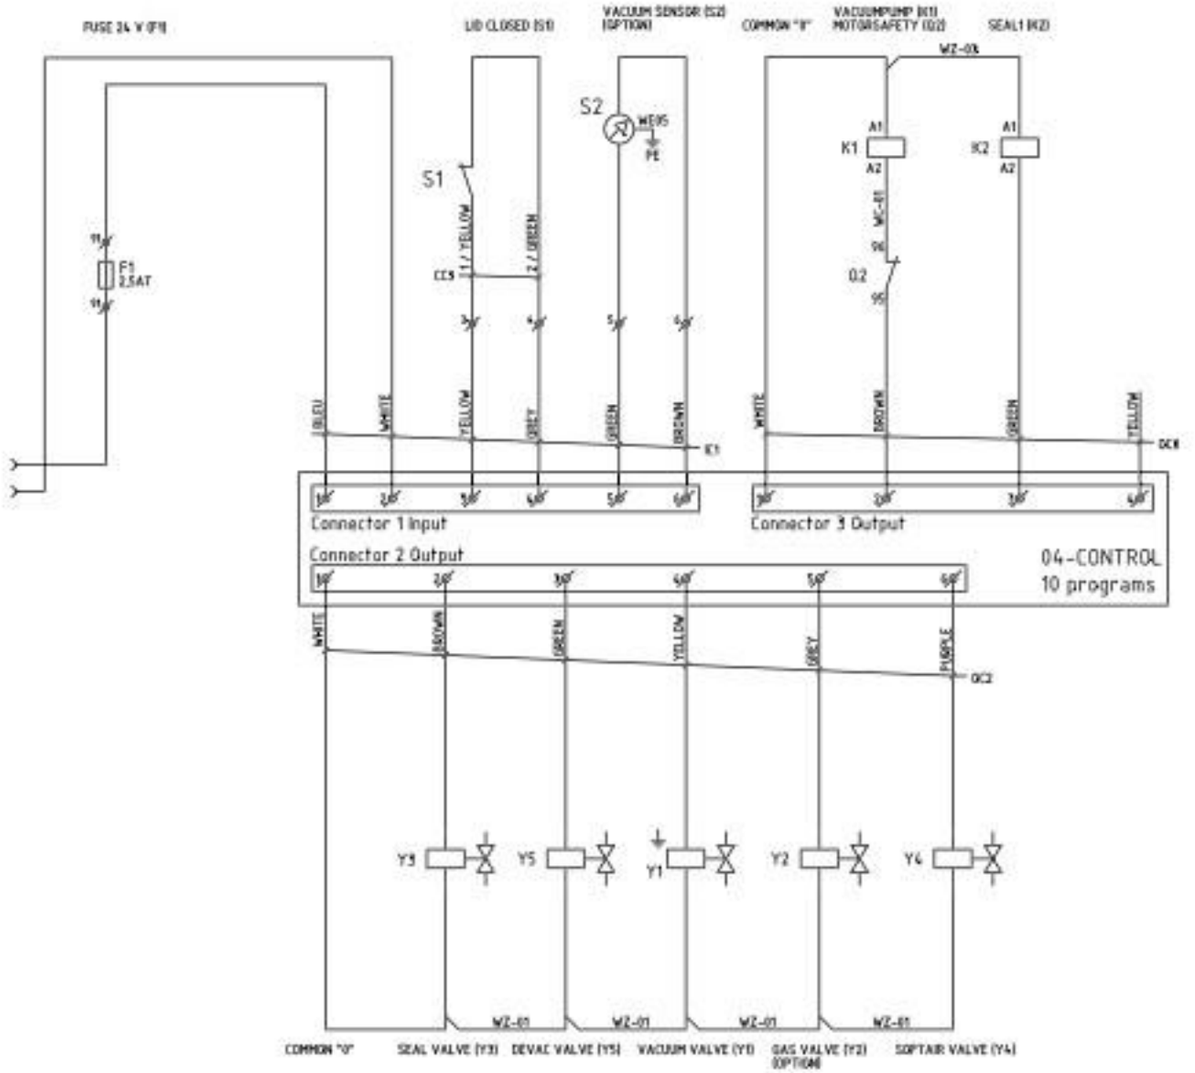
FUSE 24 V (F1)
LID CLOSED (S1)
VACUUM SENSOR (S2) (OPTION)
COMMON "0"
VACUUMPUMP (K1) MOTORSAFETY (Q2)
SEAL1 (K2)
WZ-06
S1
S2
WE05
K1
K2
Q2
F1 2,5AT
BLEU
WHITE
YELLOW
GREY
GREEN
BROWN
PURPLE
Connector 1 Input
Connector 3 Output
Connector 2 Output
04-CONTROL
10 programs
Y3
Y5
Y1
Y2
Y4
WZ-01
COMMON "0"
SEAL VALVE (Y3)
DEVAC VALVE (Y5)
VACUUM VALVE (Y1)
GAS VALVE (Y2) (OPTION)
SOFTAIR VALVE (Y4)