


ASSEMBLY INSTRUCTIONS

1. TURN BASE UPSIDE DOWN
2. PLACE AXLE BETWEEN AXLE MOUNT BRACKETS AND FASTEN BRACKETS TO BASE USING (4) BOLTS, LOCKWASHERS AND NUTS PROVIDED. (USING A SHARP KNIFE OR FILE CLEAN PAINT FROM INSIDE AXLE HOLE BEFORE INSTALLING AXLE.)
3. FASTEN LEGS TO BASE USING (4) BOLTS, LOCKWASHERS, AND NUTS PROVIDED. DO NOT TIGHTEN THE NUTS SECURELY AT THIS TIME.
4. MOUNT TWO LEG SUPPORT BRACKETS TO BASE UTILIZING TWO BOLTS IN AXLE MOUNT BRACKET. (DO NOT TIGHTEN NUTS SECURELY AT THIS TIME.)
5. BOLT LEG SUPPORT BRACKET AND LEG TIE STRIP TO EACH LEG USING (4) BOLTS, LOCKWASHERS, AND NUTS PROVIDED.
6. TIGHTEN ALL NUTS SECURELY AT THIS TIME.
7. PLACE A WHEEL ON EACH END OF AXLE. USE 5/16-18 HEX NUT TO HOLD WHEEL ON TO AXLE.
8. TURN CART RIGHT SIDE UP.
9. FASTEN HANDLE BAR BRACKETS AND HANDLE TO BASE USING BOLTS, AND NUTS PROVIDED. (HANDLE MUST BE IN PLACE BEFORE LAST BRACKET IS BOLTED IN PLACE.)

REVISIONS				
LET.	DESCRIPTION	DATE	BY	CAD

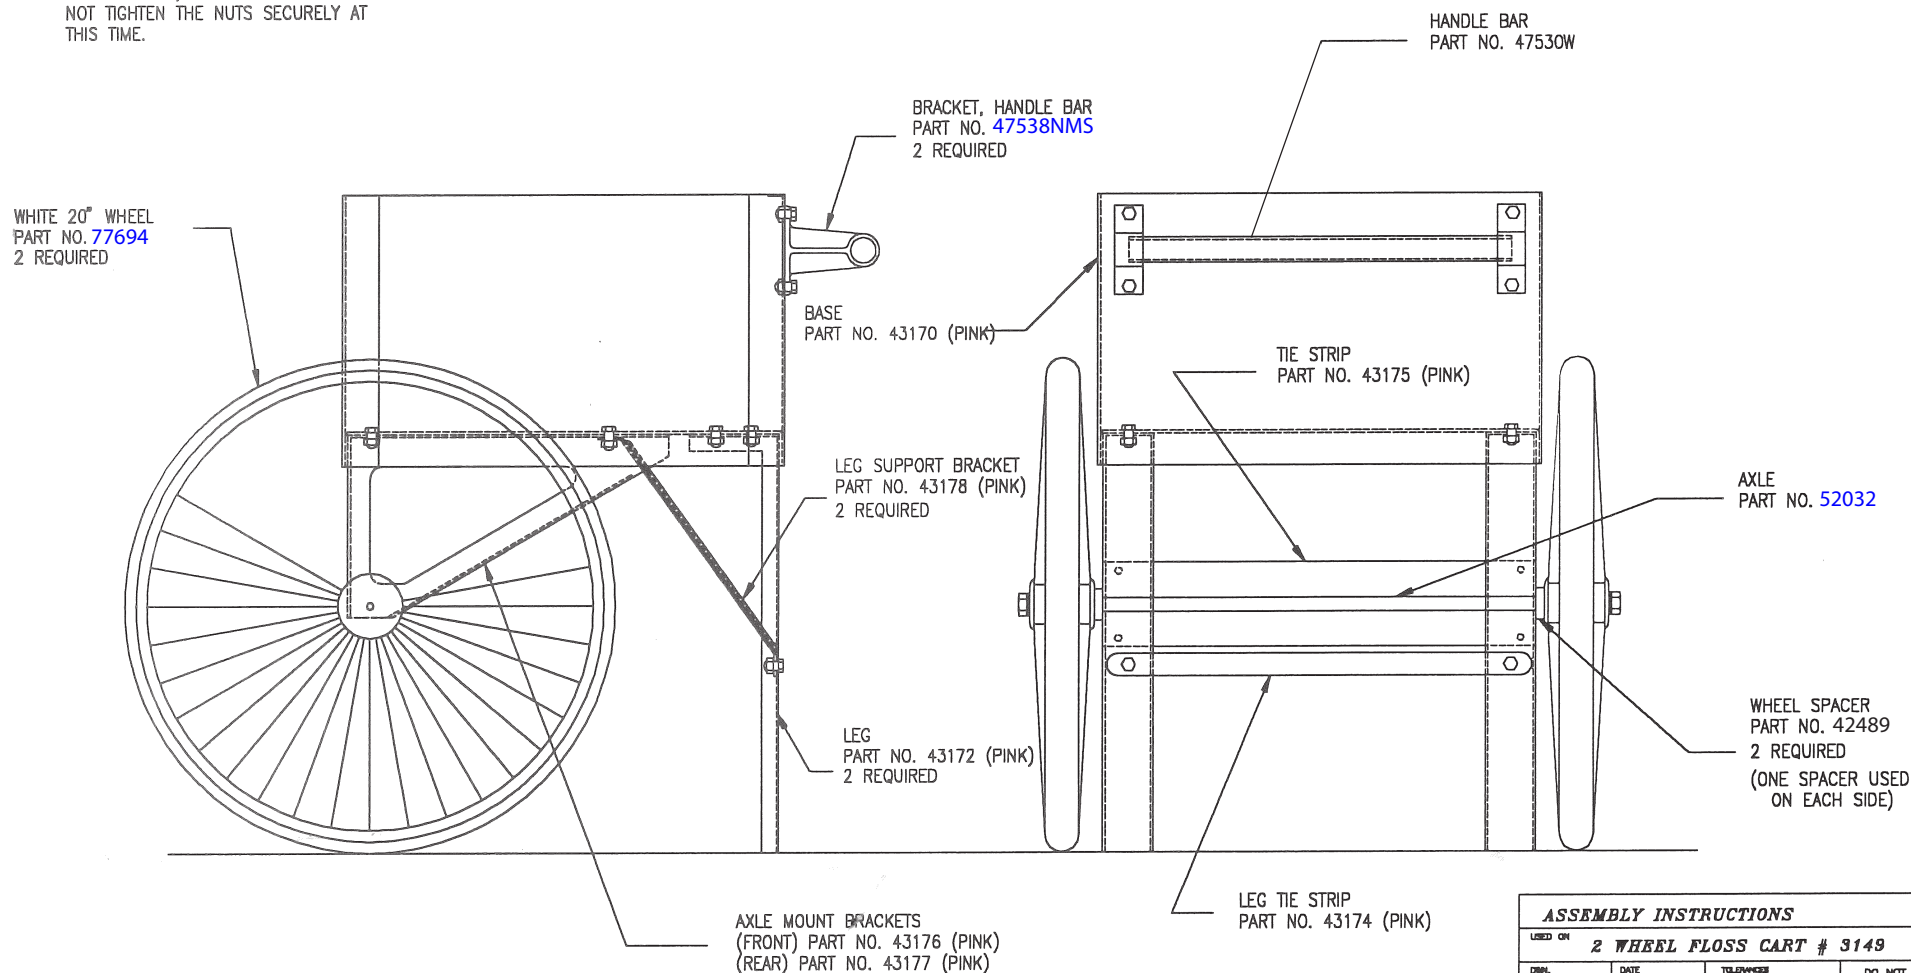

ASSEMBLY INSTRUCTIONS				
USED ON 2 WHEEL FLOSS CART # 3149				
DRN. NO.	DATE	3/24/04	TELEPHONE	DO NOT SCALE
APPROD.	DATE		TELEPHONE	DRAWING
SCALE	1/4" = 1"		PART NO. 43180	
GOLD MEDAL PRODUCTS CO.				43180