


FACTORY PARTS CATALOG RANGE

Frigidaire

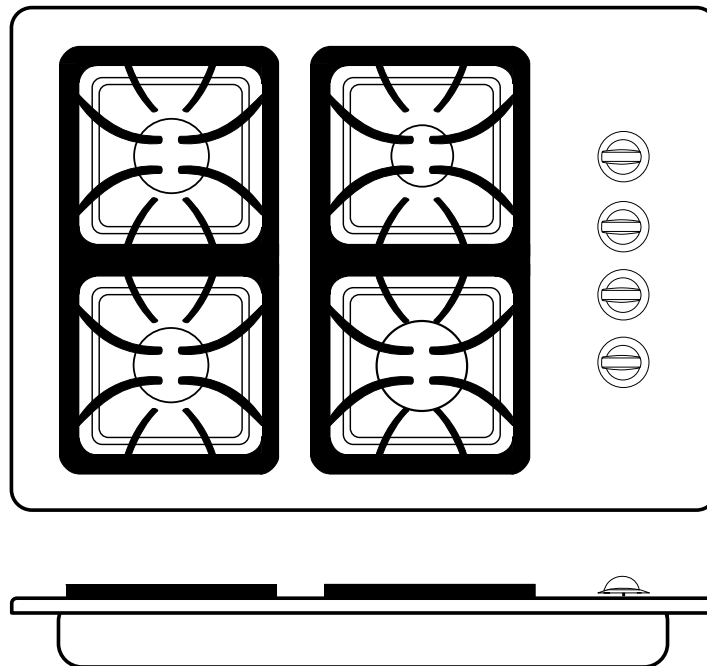

PRODUCT NO.	BASE MODEL NO.	FACTORY NO.	COLOR	MARKET
GLGC30S8ABB	GLGC30S8A	3775622381062	black	North America
GLGC30S8AQB	GLGC30S8A	3775624381042	bisque	North America
GLGC30S8ASB	GLGC30S8A	3775623381012	white	North America

WIRING DIAGRAM - # 318047105
OWNER'S GUIDE - # 318200657
INSTALLATION INSTRUCTIONS - # 318201450

Electrolux

ELECTROLUX HOME PRODUCTS, INC.
 P.O. BOX 212378, Augusta, GA 30917


Publication No.
 5995366332
 020220
 -EN/SERVICE /ECL
 377

GAS
COOKTOP

Model No.
GLGC30S8A

©2002 Electrolux Home Products, Inc.
 All rights reserved

COOK TOP

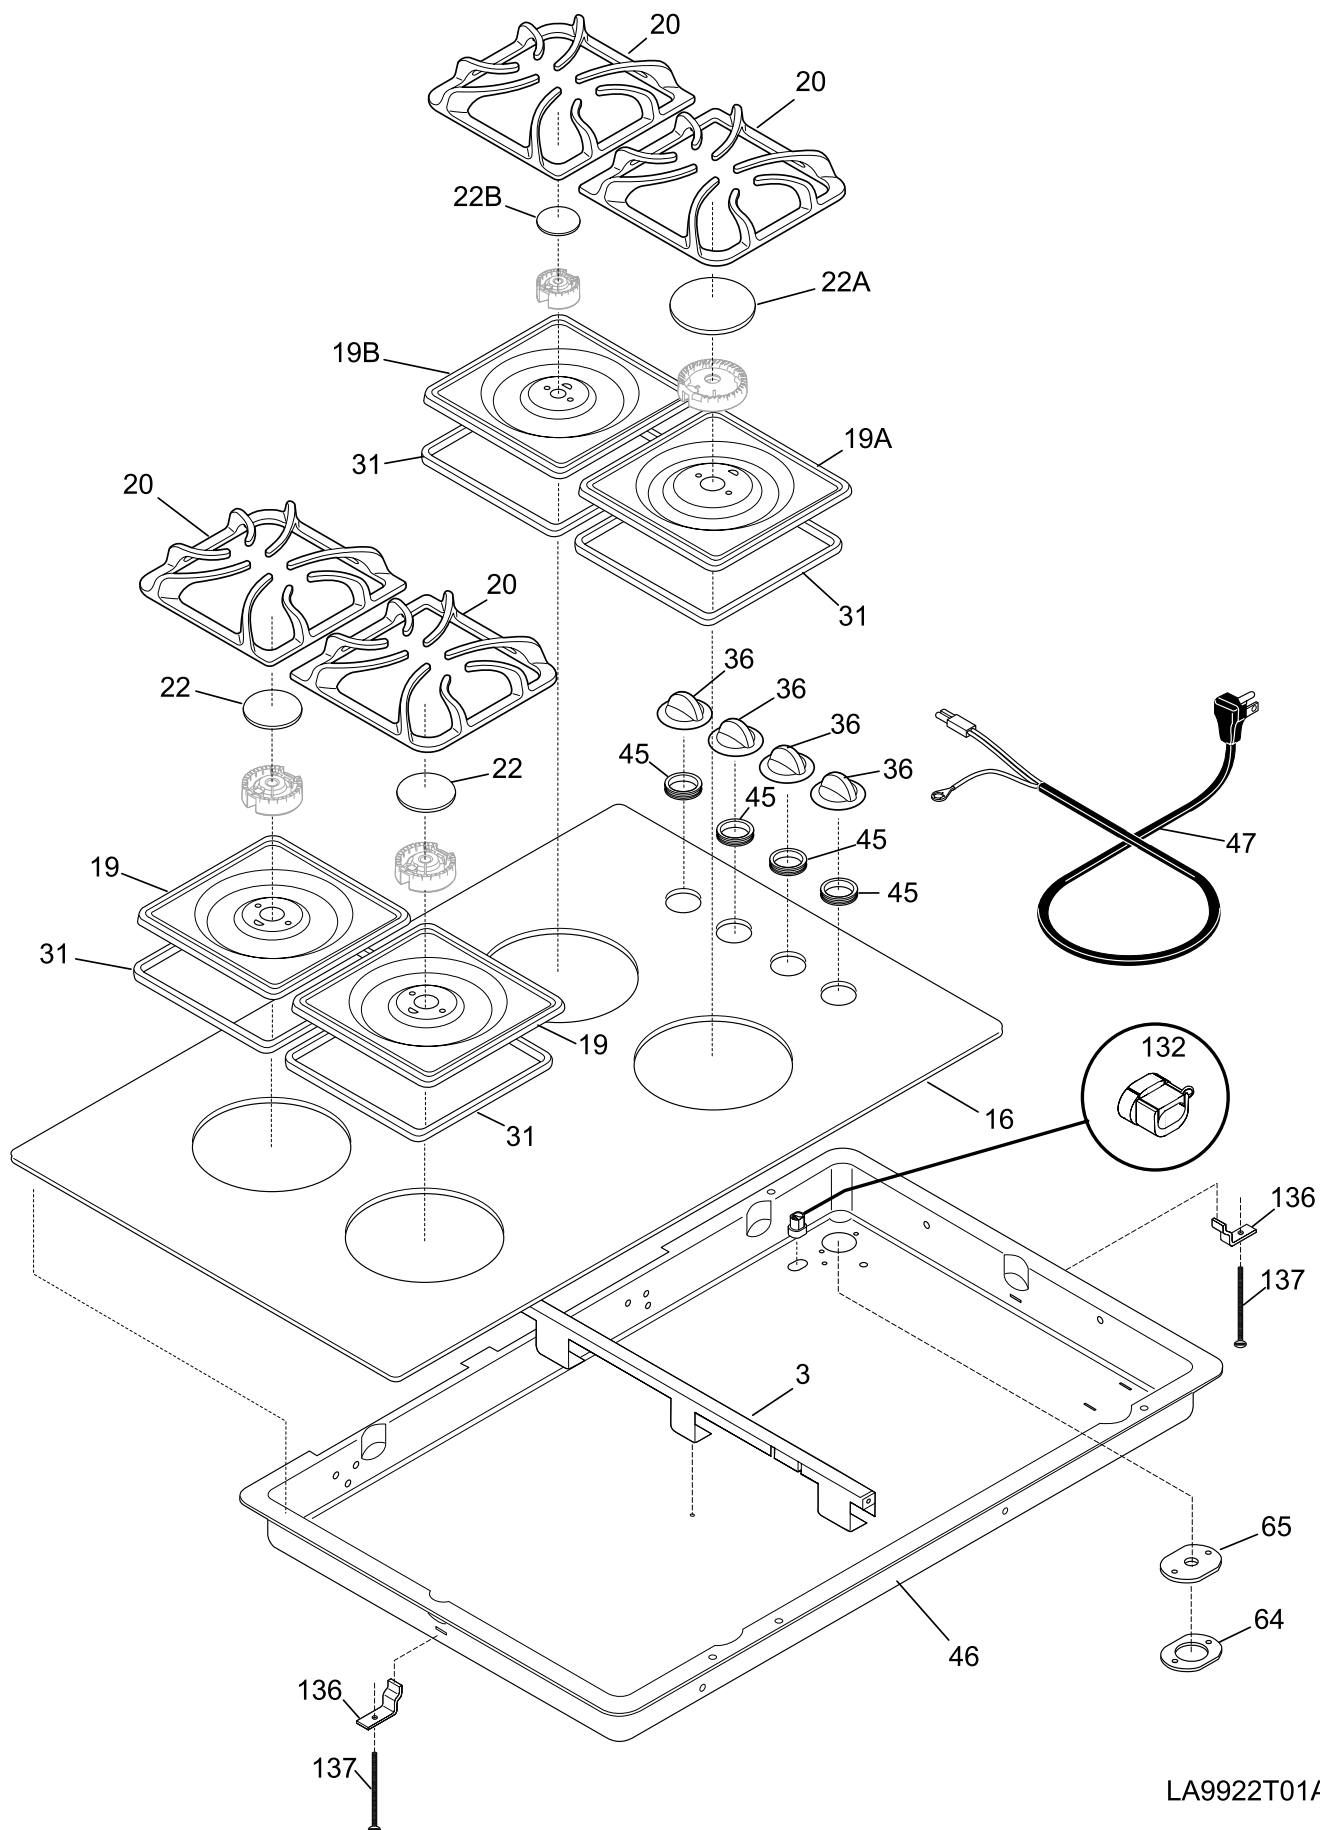


LA9922T01A

COOK TOP

A = GLGC30S8A (GLGC30S8ASB)
 B = GLGC30S8A (GLGC30S8ABB)
 C = GLGC30S8A (GLGC30S8AQB)

POS. NO	PART NO		DESCRIPTION
3	318171400	A B C	Support
16	318018530	A - -	Main Top,white
16	318018532	- B -	Main Top,black
16	318018531	- - C	Main Top,bisque
19	318168116	A - -	Pan,burner ,white ,medium
19	318168114	- B -	Pan,burner ,black ,medium
19	318168117	- - C	Pan,burner ,bisque ,medium
19A	318168126	A - -	Pan,burner ,white ,large
19A	318168124	- B -	Pan,burner ,black ,large
19A	318168127	- - C	Pan,burner ,bisque ,large
19B	318168106	A - -	Pan,burner ,white ,small
19B	318168104	- B -	Pan,burner ,black ,small
19B	318168107	- - C	Pan,burner ,bisque ,small
20	318120104	A - -	Grate,grey ,(4)
20	318120103	- B -	Grate,black ,(4)
20	318120108	- - C	Grate,brown ,(4)
22	318076411	A - -	Cap,burner ,grey ,medium LF & LR
22	318076410	- B -	Cap,burner ,black ,medium LF & LR
22	318076414	- - C	Cap,burner ,brown ,medium LF & LR
22A	318076421	A - -	Cap,burner ,grey ,large RF
22A	318076420	- B -	Cap,burner ,black ,large RF
22A	318076424	- - C	Cap,burner ,brown ,large RF
22B	318076400	- B -	Cap,burner ,black ,small RR
22B	318076401	A - -	Cap,burner ,grey ,small RR
22B	318076404	- - C	Cap,burner ,brown ,small RR
31	318053901	A B C	Gasket,burner pan
36	318196140	A - -	Knob,control ,white
36	318196141	- B -	Knob,control ,black
36	318196142	- - C	Knob,control ,bisque
45	318146220	A B C	Bushing
46	5303307897	A B C	Burner Box
47 #	5303303991	A B C	Cord,electric power
64	5303304033	A B C	Bracket,retainer
65	5303304032	A B C	Seal,rubber
132	3201437	A B C	Strain relief
136	5303935029	A B C	Support
137	5303323138	A B C	Screw,10-24x1/2
*	5303211311	A B C	Screw,8 x 0.500
*	5303311532	A B C	Screw,6-32 x 1/4" ,back
*	5303323140	A B C	Screw,ground ,10-32 x 0.375
*	5304403558	A B C	Screw,10-16 x 0.250

BURNER

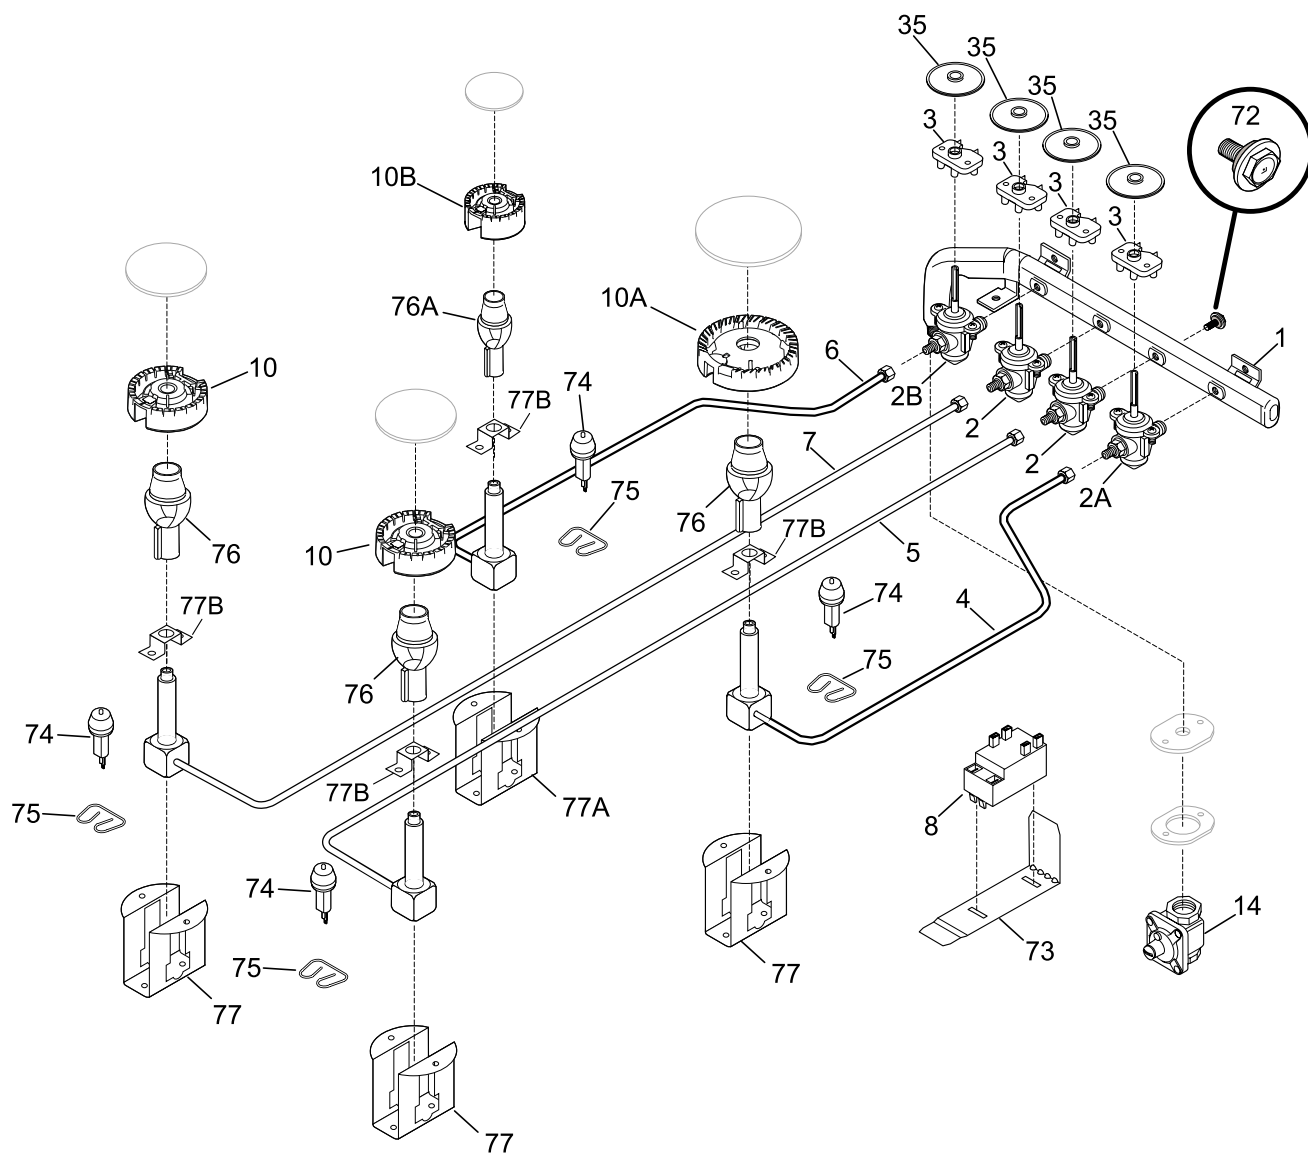


LA9922B02-2

BURNER

A = GLGC30S8A (GLGC30S8ASB)
 B = GLGC30S8A (GLGC30S8ABB)
 C = GLGC30S8A (GLGC30S8AQB)

POS. NO	PART NO		DESCRIPTION
1	318177003	A B C	Manifold Pipe
2 #	318087040	A B C	Valve,top burner ,13000 BTU
2A #	318087001	A B C	Valve,top burner ,5000 BTU
2B #	5303935042	A B C	Valve,top burner ,2-position ,9100 BTU
3 #	316032002	A B C	Switch,ignitor
4 #	318167703	A B C	Tube,burner ,RF
5 #	318167700	A B C	Tube,burner ,LF
6 #	318167702	A B C	Tube,burner ,RR
7 #	318167701	A B C	Tube,burner ,LR
8 #	316135701	A B C	Module,spark
10 #	318148001	A B C	Burner,top ,9100 BTU ,medium LF & LR
10A#	318148002	A B C	Burner,top ,13000 BTU ,large RF
10B#	318148000	A B C	Burner,top ,5000 BTU ,small RR
14 #	5308007974	A B C	Regulator,pressure
35	318146300	A B C	Bushing
72	5303323141	A B C	Screw,valve mtg ,1/4-20 x 5/16
73	318024201	A B C	Bracket,spark module
74 #	318148700	A B C	Ignitor,top burner
75	318148800	A B C	Clip,electrode
76 #	318167801	A B C	Tube,mixing ,medium & large
76A#	318167800	A B C	Tube,mixing ,small
77	318112010	A B C	Bracket,burner mtg ,medium & large
77A	318112000	A B C	Bracket,burner mtg ,small
77B	318180900	A B C	Bracket,burner tube
* #	318127410	A B C	LP Conversion Kit
*	5303211311	A B C	Screw,8 x 0.500
*	5303307980	A B C	Screw,8-32 x 0.437

WIRING DIAGRAM

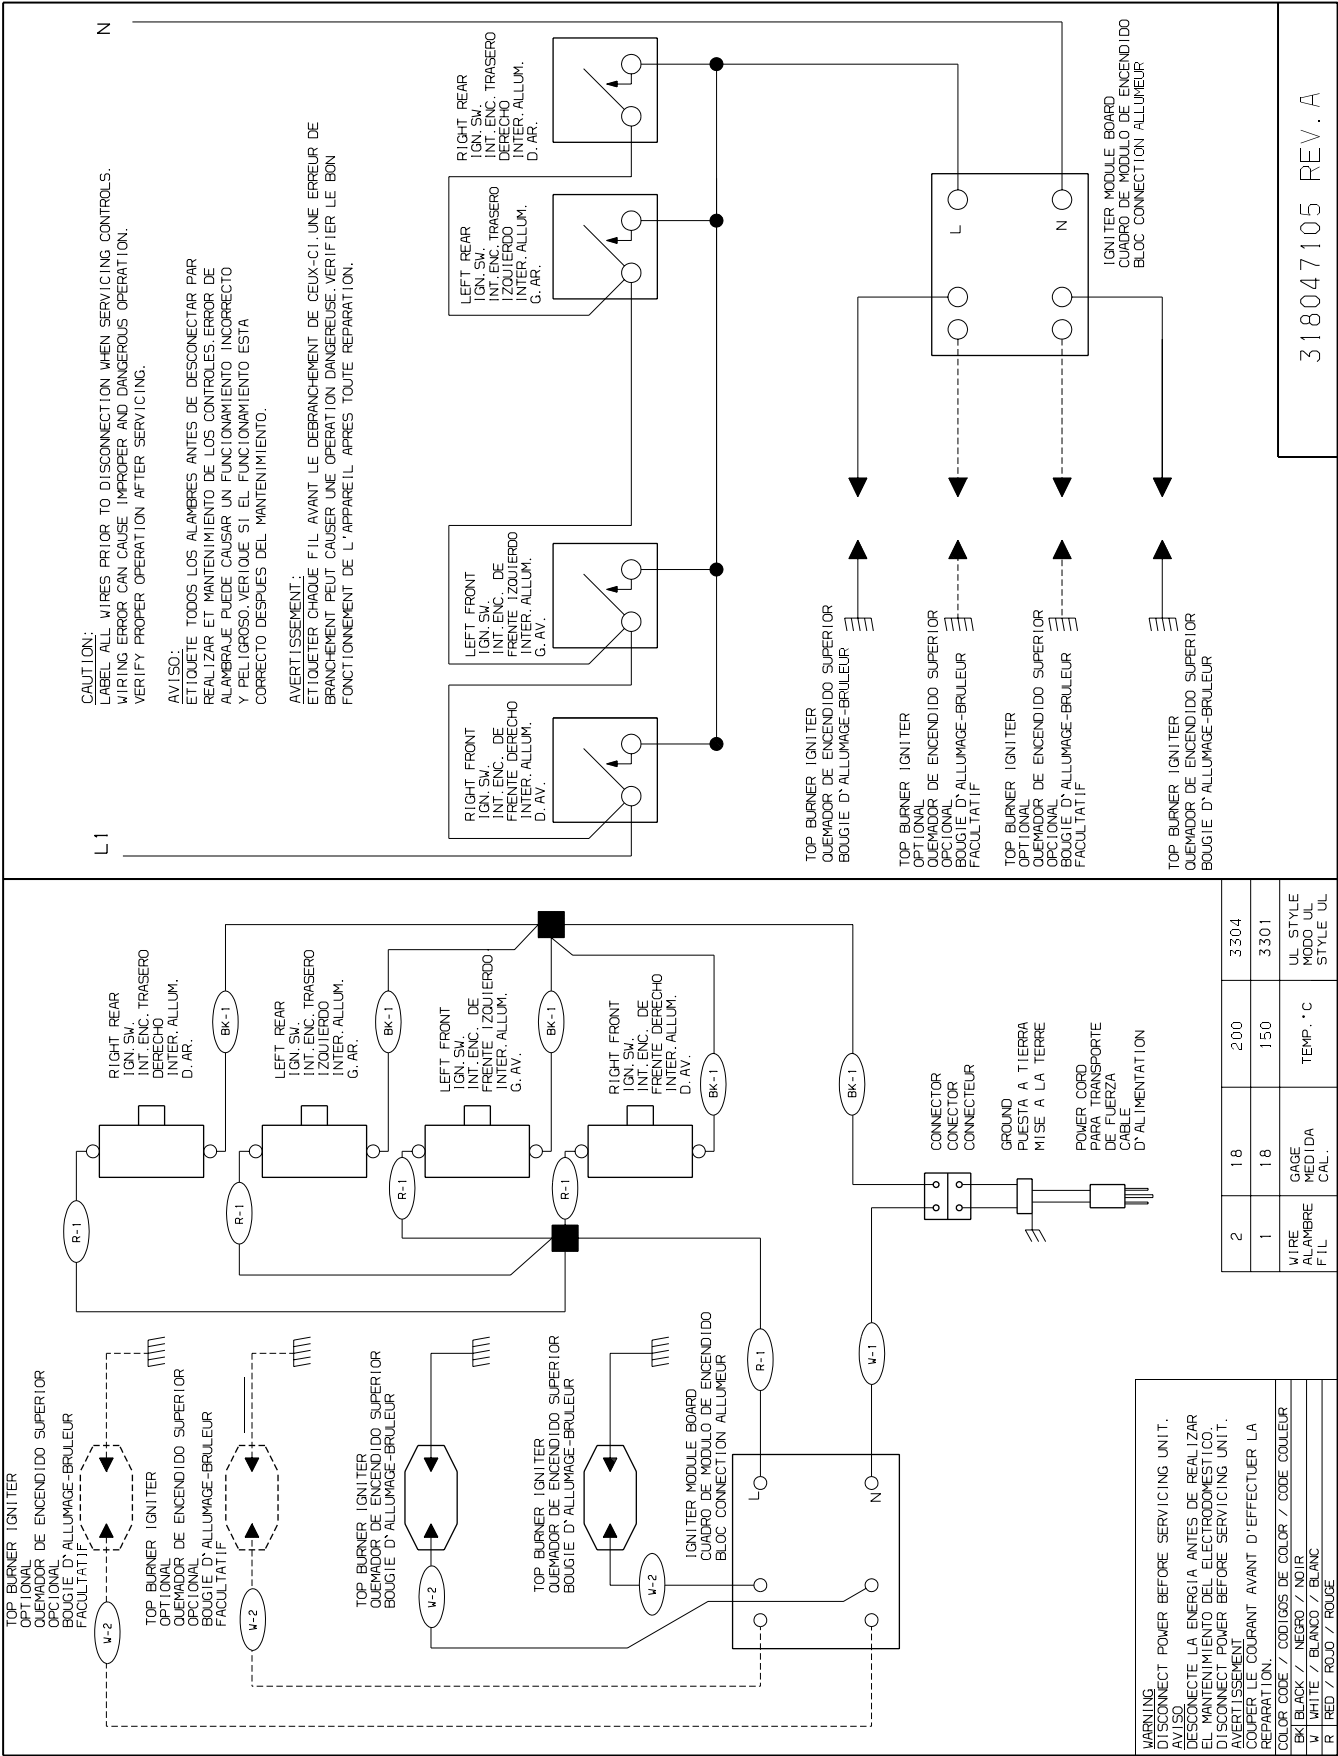

318047105 REV. A