


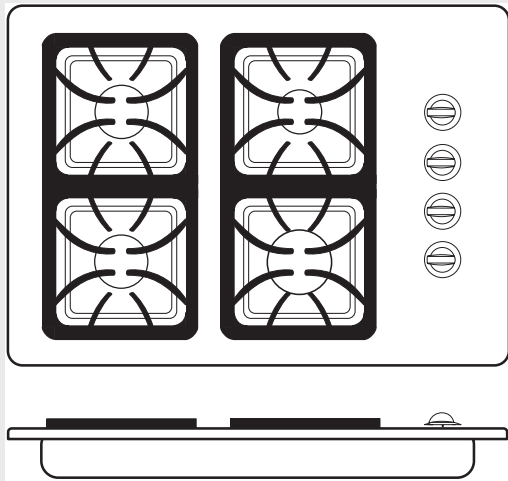

Frigidaire

Factory Parts Catalog

Product No.	GLGC30S8CBB	GLGC30S8CQB	GLGC30S8CSB
	3775622383062	3775624383042	3775623383012
Series	30" gas	30" gas	30" gas
Color	black	bisque	white
Market	North America	North America	North America
Wiring Diagram	318047111	318047111	318047111
Owner's Guide	318200657	318200657	318200657
Installation Instructions	318201450	318201450	318201450

 **Electrolux**

[318047111](#)

ELECTROLUX HOME PRODUCTS, INC.
P.O. Box 212378, Augusta, GA 30917


Publication No.
5995421020
04/11/04
(EN/SERVICE/ECL)
377

GAS COOK-TOP RANGE

Model No.
GLGC30S8C

Copyright © 2004 Electrolux Home Products, Inc.
All rights reserved.

COOK TOP

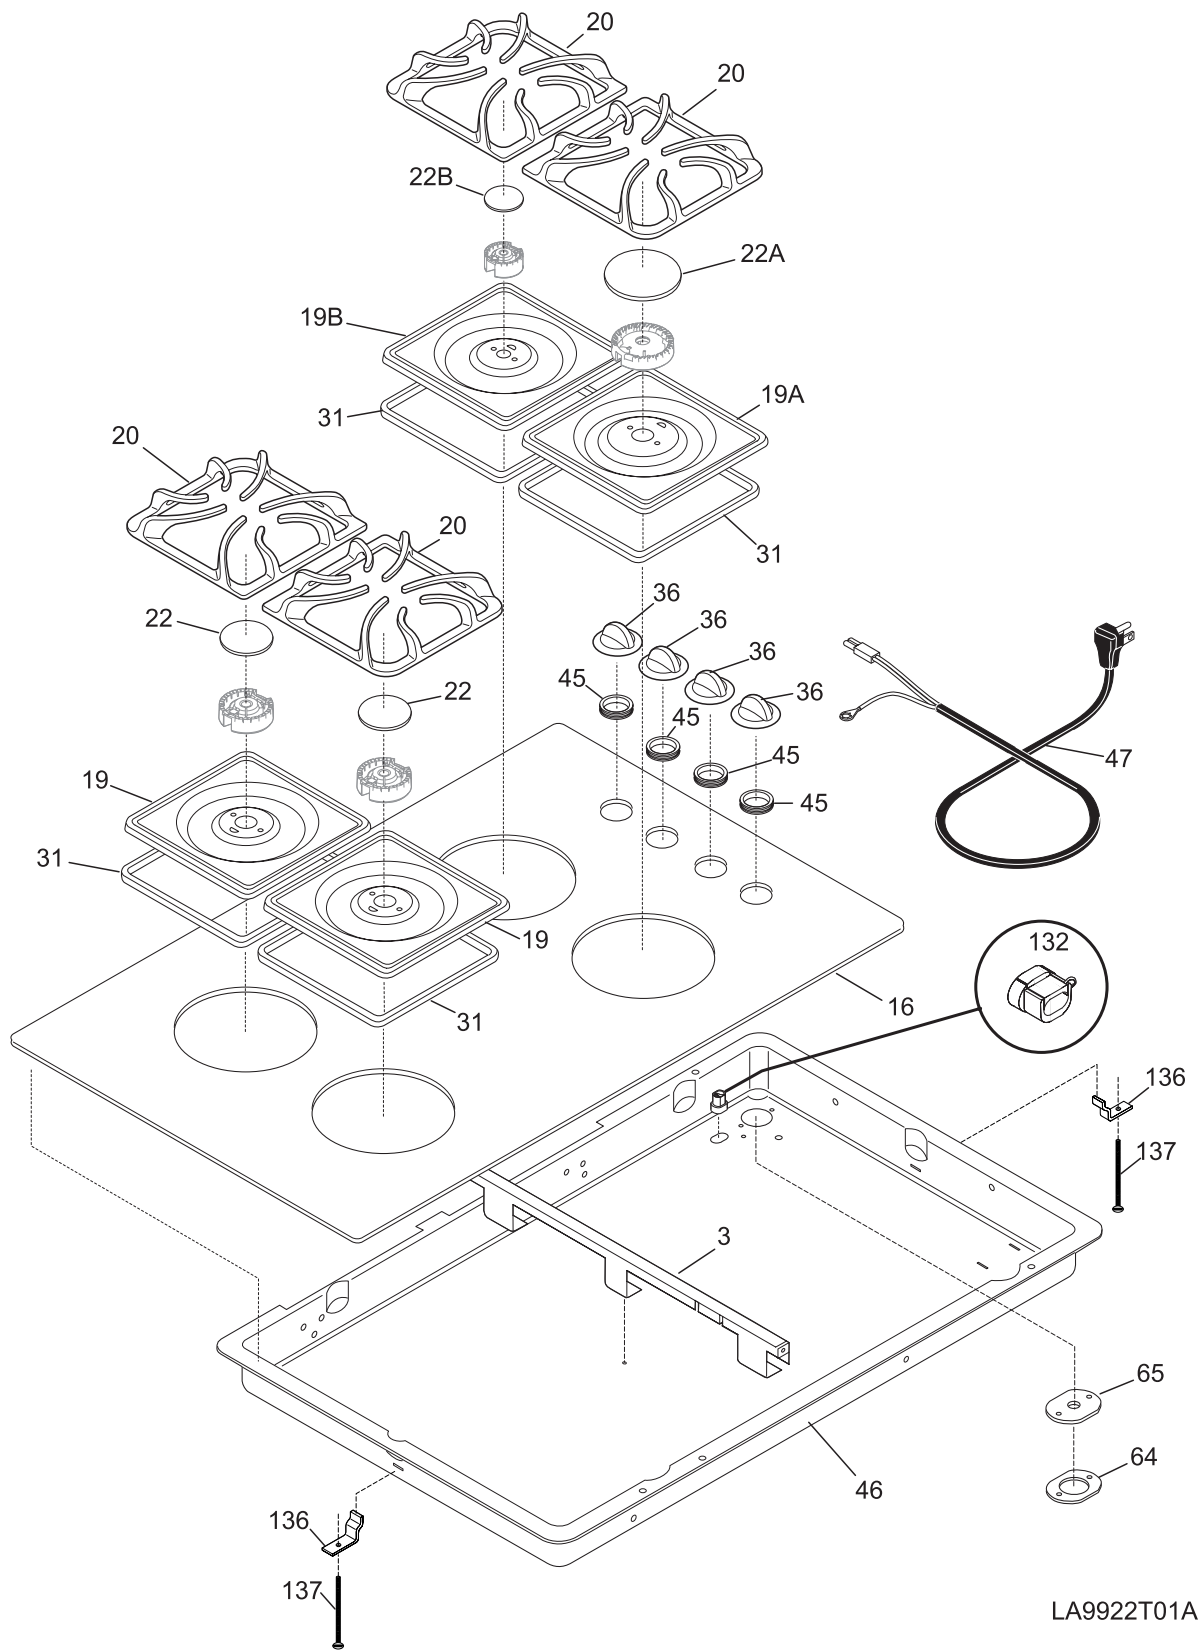


LA9922T01A

COOK TOP

Model Index: A GLGC30S8C (GLGC30S8CSB)
 B GLGC30S8C (GLGC30S8CBB)
 C GLGC30S8C (GLGC30S8CQB)

POS. NO	PART NO.		DESCRIPTION
3	318171401	A B C	Support
16	318018534	A - -	Main Top, white
16	318018533	- B -	Main Top, black
16	318018535	- - C	Main Top, bisque
19	318168116	A - -	Pan, burner, white, medium
19	318168114	- B -	Pan, burner, black, medium
19	318168117	- - C	Pan, burner, bisque, medium
19A	318168126	A - -	Pan, burner, white, large
19A	318168124	- B -	Pan, burner, black, large
19A	318168127	- - C	Pan, burner, bisque, large
19B	318076410	A - -	Pan, burner, white, small
19B	318168104	- B -	Pan, burner, black, small
19B	318168107	- - C	Pan, burner, bisque, small
20	318226001	A - -	Grate, white, (4)
20	318226000	- B -	Grate, black, (4)
20	318226002	- - C	Grate, bisque, (4)
22	318076411	A - -	Cap, burner, grey, medium LF & LR
22	318076410	- B -	Cap, burner, black, medium LF & LR
22	318076414	- - C	Cap, burner, brown, medium LF & LR
22A	318076421	A - -	Cap, burner, grey, large RF
22A	318076420	- B -	Cap, burner, black, large RF
22A	318076424	- - C	Cap, burner, brown, large RF
22B	318076401	A - -	Cap, burner, grey, small RR
22B	318076400	- B -	Cap, burner, black, small RR
22B	318076404	- - C	Cap, burner, brown, small RR
31	318053901	A B C	Gasket, burner pan
36	318196140	A - -	Knob, control, white
36	318196141	- B -	Knob, control, black
36	318196142	- - C	Knob, control, bisque
45	318146200	A B C	Bushing
46	5303307897	A B C	Burner Box
47	318144002	A B C	Cord, Service
64	5303304033	A B C	Bracket, retainer
65	5303304032	A B C	Seal, rubber
132	3201437	A B C	Strain relief
136	5303935029	A B C	Support
137	5303323138	A B C	Screw, 10-24x1/2
*	5303211311	A B C	Screw, 8 x 0.500
*	5303311532	A B C	Screw, 6-32 x 1/4", back
*	5303323140	A B C	Screw, ground, 10-32 x 0.375
*	5304403558	A B C	Screw, 10-16 x 0.250

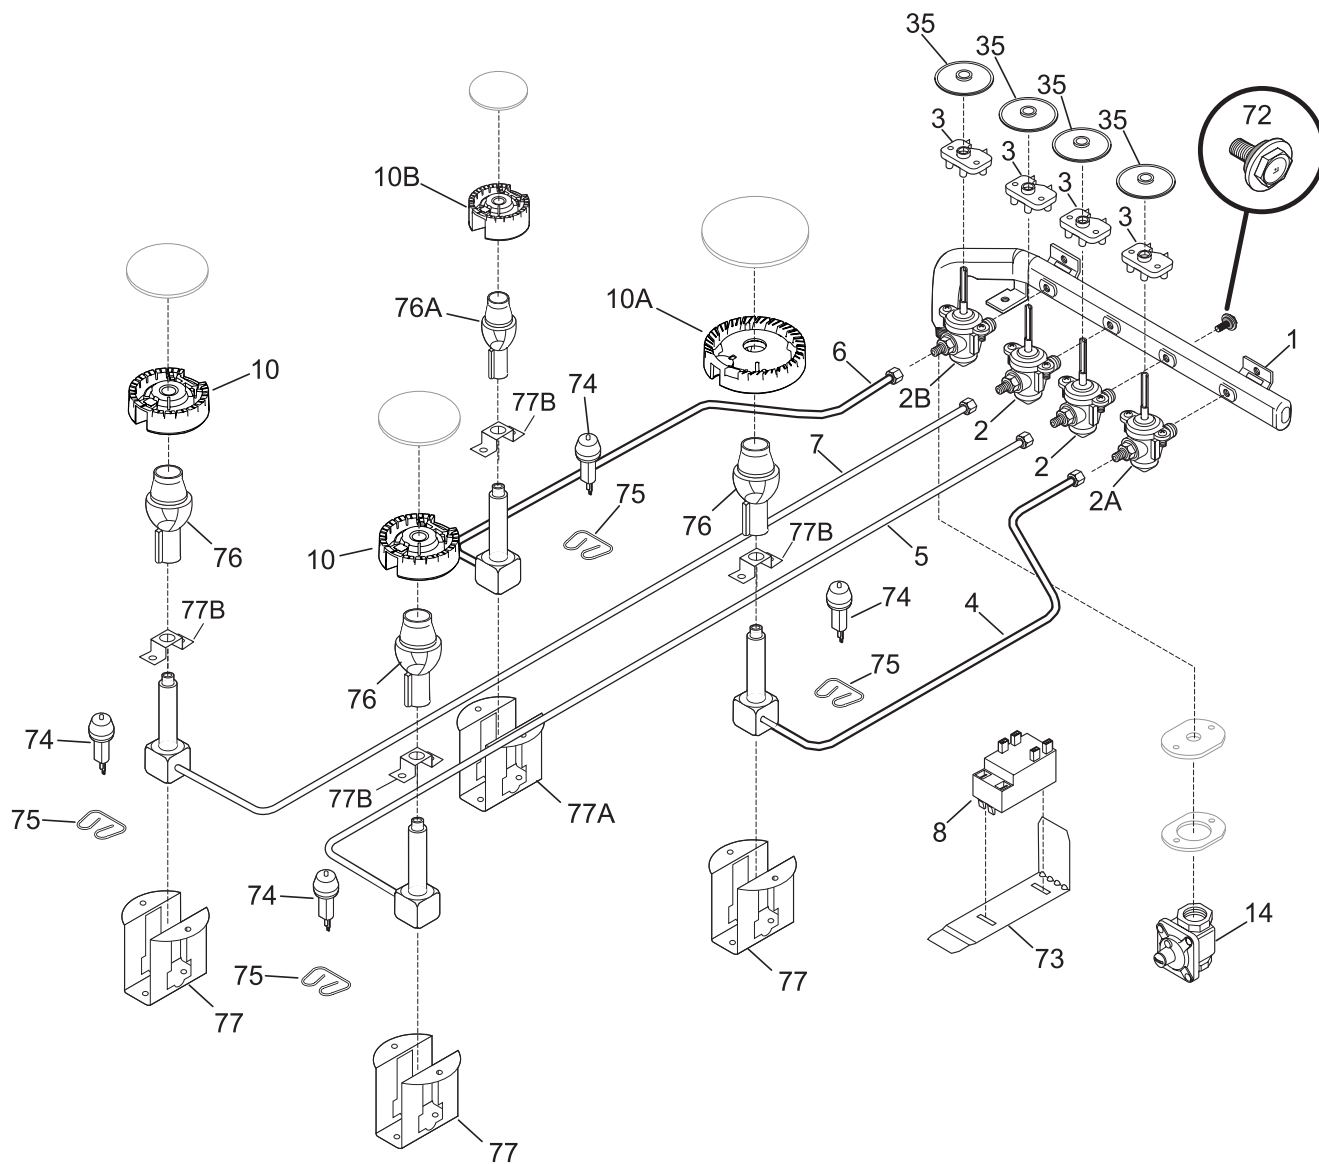BURNER

LA9922B02-2

BURNER

Model Index: A GLGC30S8C (GLGC30S8CSB)
 B GLGC30S8C (GLGC30S8CBB)
 C GLGC30S8C (GLGC30S8CQB)

POS. NO	PART NO.		DESCRIPTION
1	318177003	A B C	Manifold Pipe
2 #	318087040	A B C	Valve, top burner, 13000 BTU
2A #	318087001	A B C	Valve, top burner, 5000 BTU
2B #	5303935042	A B C	Valve, top burner, 2-position, 9100 BTU
3 #	318232604	A B C	Wiring Harness, w/igntr switch
4 #	318167703	A B C	Tube, burner, RF
5 #	318167700	A B C	Tube, burner, LF
6 #	318167702	A B C	Tube, burner, RR
7 #	318167701	A B C	Tube, burner, LR
8 #	316135701	A B C	Module, spark
10 #	318148001	A B C	Burner, top, 9100 BTU, medium LF & LR
10A#	318148002	A B C	Burner, top, 13000 BTU, large RF
10B#	318148000	A B C	Burner, top, 5000 BTU, small RR
14 #	5308007974	A B C	Regulator, pressure
35	318146300	A B C	Bushing
72	5303323141	A B C	Screw, valve mtg, 1/4-20 x 5/16
73	318024201	A B C	Bracket, spark module
74 #	318148700	A B C	Ignitor, top burner
75	318148800	A B C	Clip, electrode
76 #	318167801	A B C	Tube, mixing, medium & large
76A#	318167800	A B C	Tube, mixing, small
77	318112010	A B C	Bracket, burner mtg, medium & large
77A	318112000	A B C	Bracket, burner mtg, small
77B	318180900	A B C	Bracket, burner tube
* #	318127410	A B C	LP Conversion Kit
*	318199729	A B C	Wiring Harness, ignitor
*	5303211311	A B C	Screw, 8 x 0.500
*	5303307980	A B C	Screw, 8-32 x 0.437

WIRING DIAGRAM

