

OPERATING INSTRUCTIONS

Controls and Their Functions

LIGHT/WARMER SWITCH


This switch heats the bottom of the corn pan and turns on the light.

KETTLE MOTOR SWITCH

This switch turns on the motor which drives the kettle agitator shaft.

KETTLE HEAT SWITCH

This switch turns on the heat element inside the popcorn kettle.

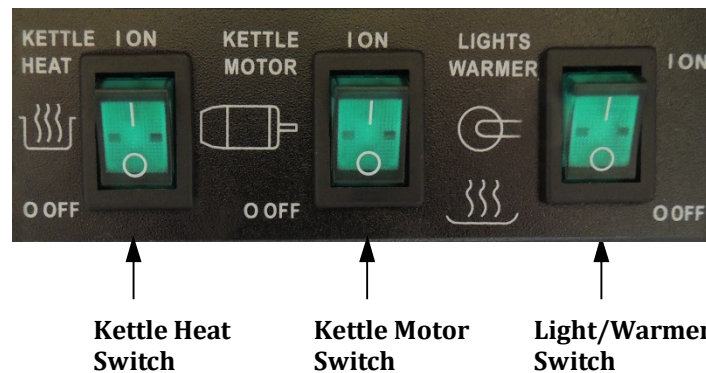

Amount of Popcorn and Oil

Your new popper is equipped with a corn measure cup. Popcorn popped in coconut oil stays fresher longer. Coconut oil does not leave black deposits in your kettle like other oils.

Corn charge: 8 oz.
Oil charge: 2.6 oz.
Flavacol: 1 tablespoon

4 Oz. Accessory Pack

Part No. 2071NM: Scoop
Part No. 47147: One Cup Measure
Part No. 47678: Flavacol Measure 6.5cc
Part No. 47150: Oil Measure (1/3 Cup)

OPERATING INSTRUCTIONS

Controls and Their Functions

LIGHT/WARMER SWITCH


This switch heats the bottom of the corn pan and turns on the light.

KETTLE MOTOR SWITCH

This switch turns on the motor which drives the kettle agitator shaft.

KETTLE HEAT SWITCH

This switch turns on the heat element inside the popcorn kettle.

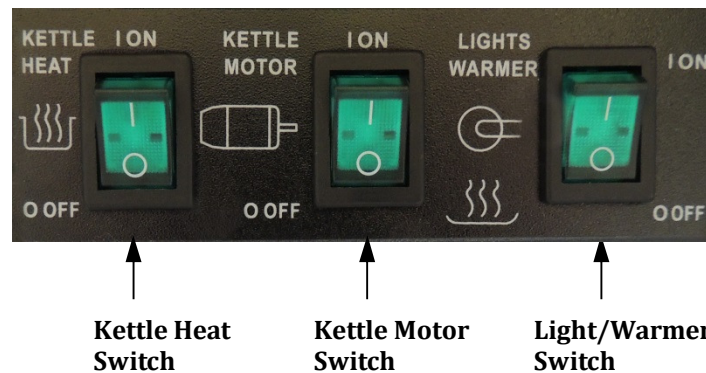

Amount of Popcorn and Oil

Your new popper is equipped with a corn measure cup. Popcorn popped in coconut oil stays fresher longer. Coconut oil does not leave black deposits in your kettle like other oils.

Corn charge: 8 oz.
Oil charge: 2.6 oz.
Flavacol: 1 tablespoon

4 Oz. Accessory Pack

Part No. 2071NM: Scoop
Part No. 47147: One Cup Measure
Part No. 47678: Flavacol Measure 6.5cc
Part No. 47150: Oil Measure (1/3 Cup)

OPERATING INSTRUCTIONS

Controls and Their Functions

LIGHT/WARMER SWITCH


This switch heats the bottom of the corn pan and turns on the light.

KETTLE MOTOR SWITCH

This switch turns on the motor which drives the kettle agitator shaft.

KETTLE HEAT SWITCH

This switch turns on the heat element inside the popcorn kettle.

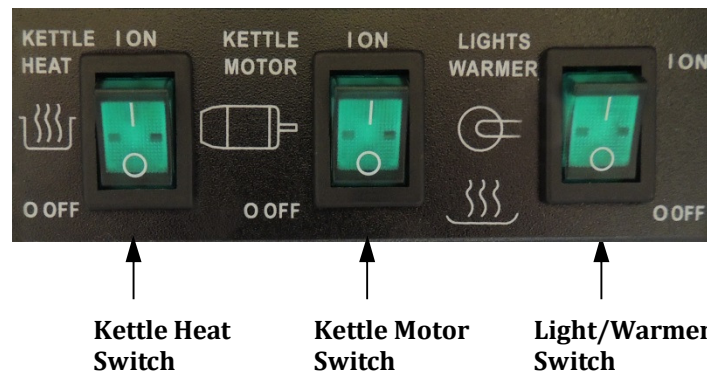

Amount of Popcorn and Oil

Your new popper is equipped with a corn measure cup. Popcorn popped in coconut oil stays fresher longer. Coconut oil does not leave black deposits in your kettle like other oils.

Corn charge: 8 oz.
Oil charge: 2.6 oz.
Flavacol: 1 tablespoon

4 Oz. Accessory Pack

Part No. 2071NM: Scoop
Part No. 47147: One Cup Measure
Part No. 47678: Flavacol Measure 6.5cc
Part No. 47150: Oil Measure (1/3 Cup)



Cabinet Exterior – Front View



Item	Part No.	Model(s)	Part Description	Qty.
1	58001	2408, 2408EX	DECAL POPCORN	1
2	58109	ALL	GLASS, FUN POP 6/8	3




Cabinet Exterior – Front View




Item	Part No.	Model(s)	Part Description	Qty.
1	58001	2408, 2408EX	DECAL POPCORN	1
2	58109	ALL	GLASS, FUN POP 6/8	3

Cabinet Exterior – Rear View

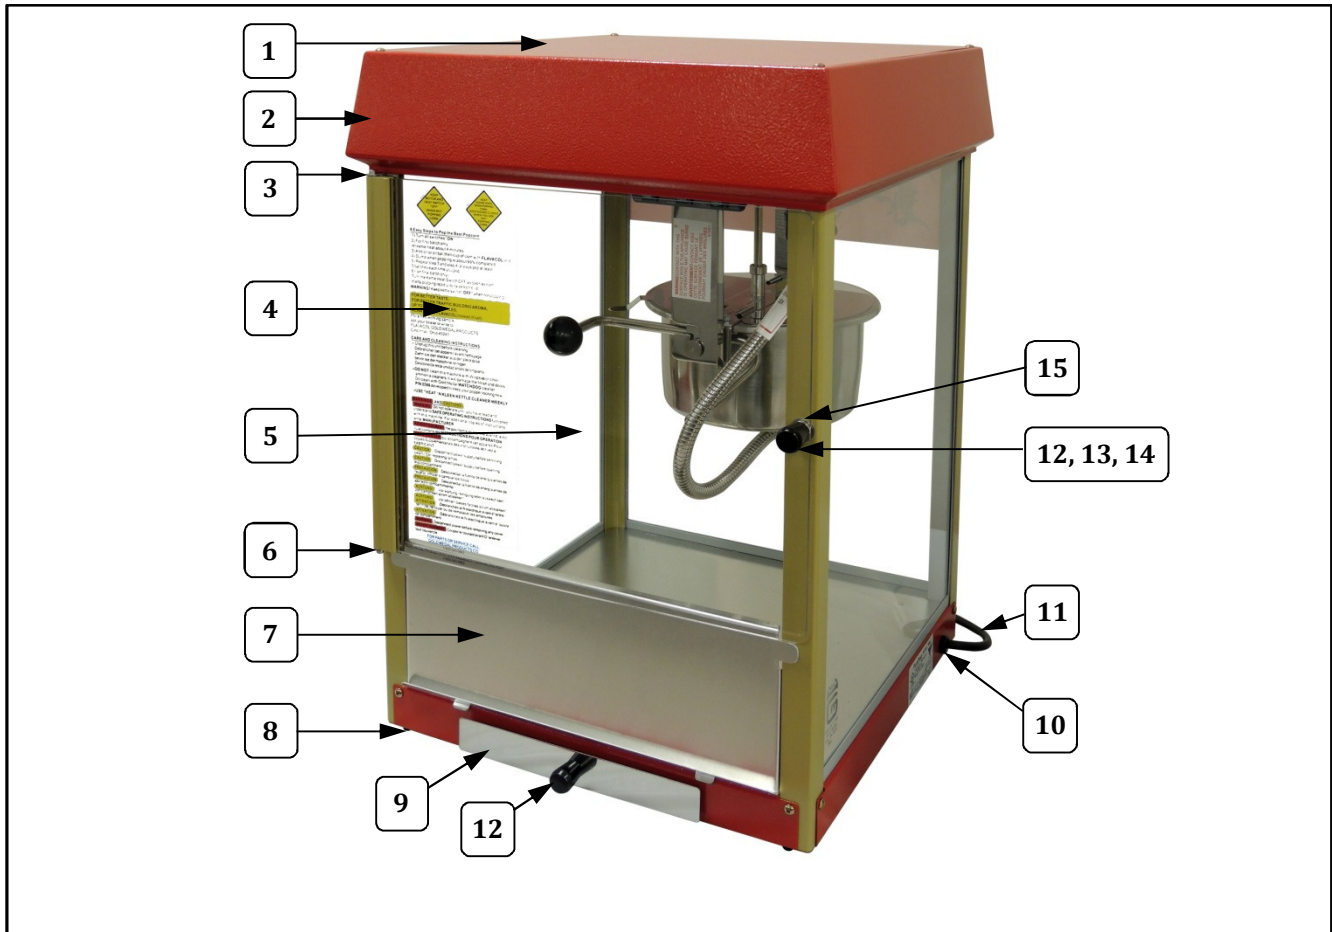


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOMES COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

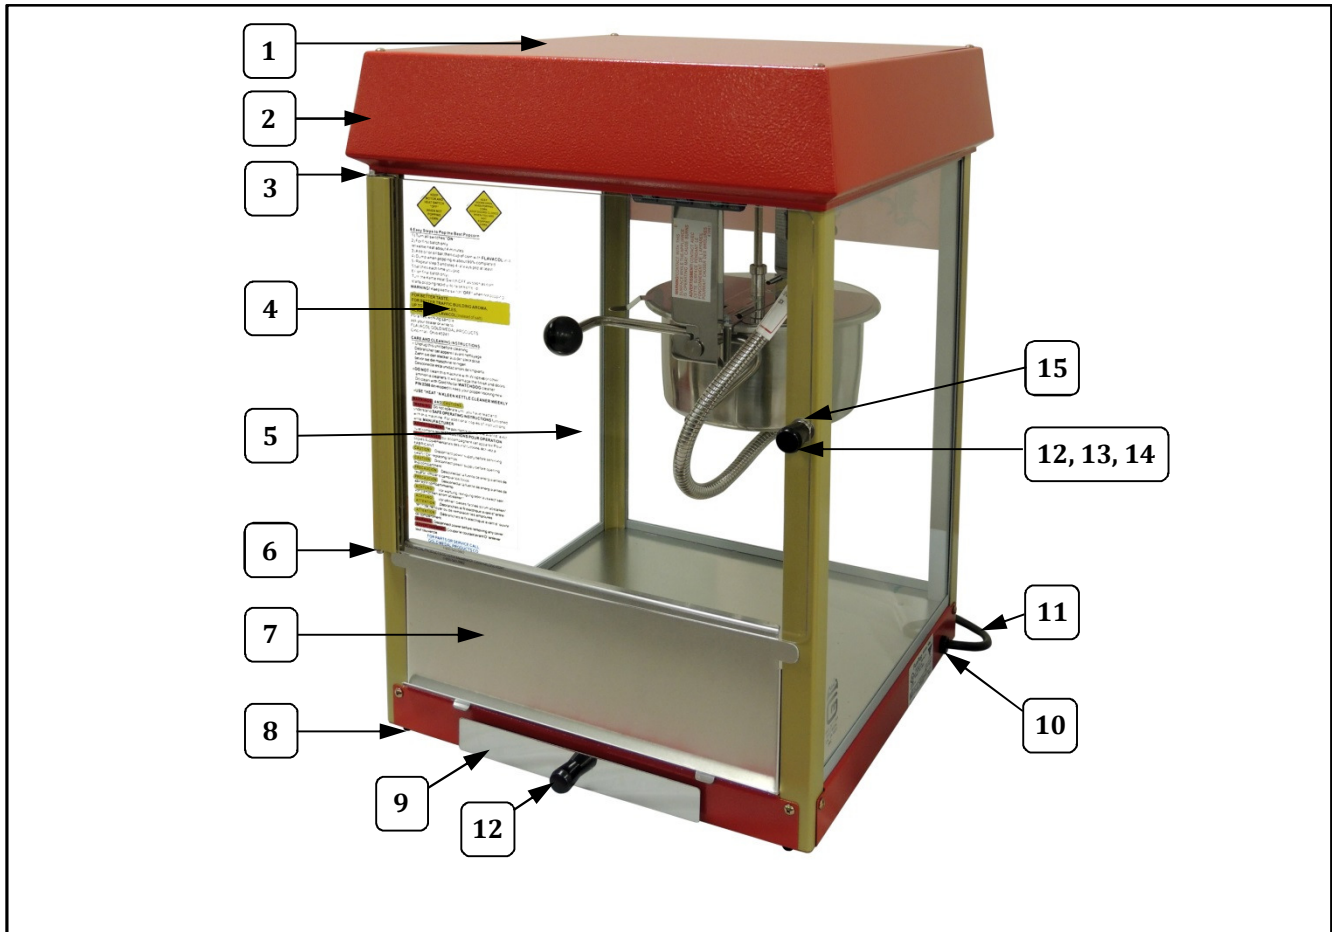


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOME COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

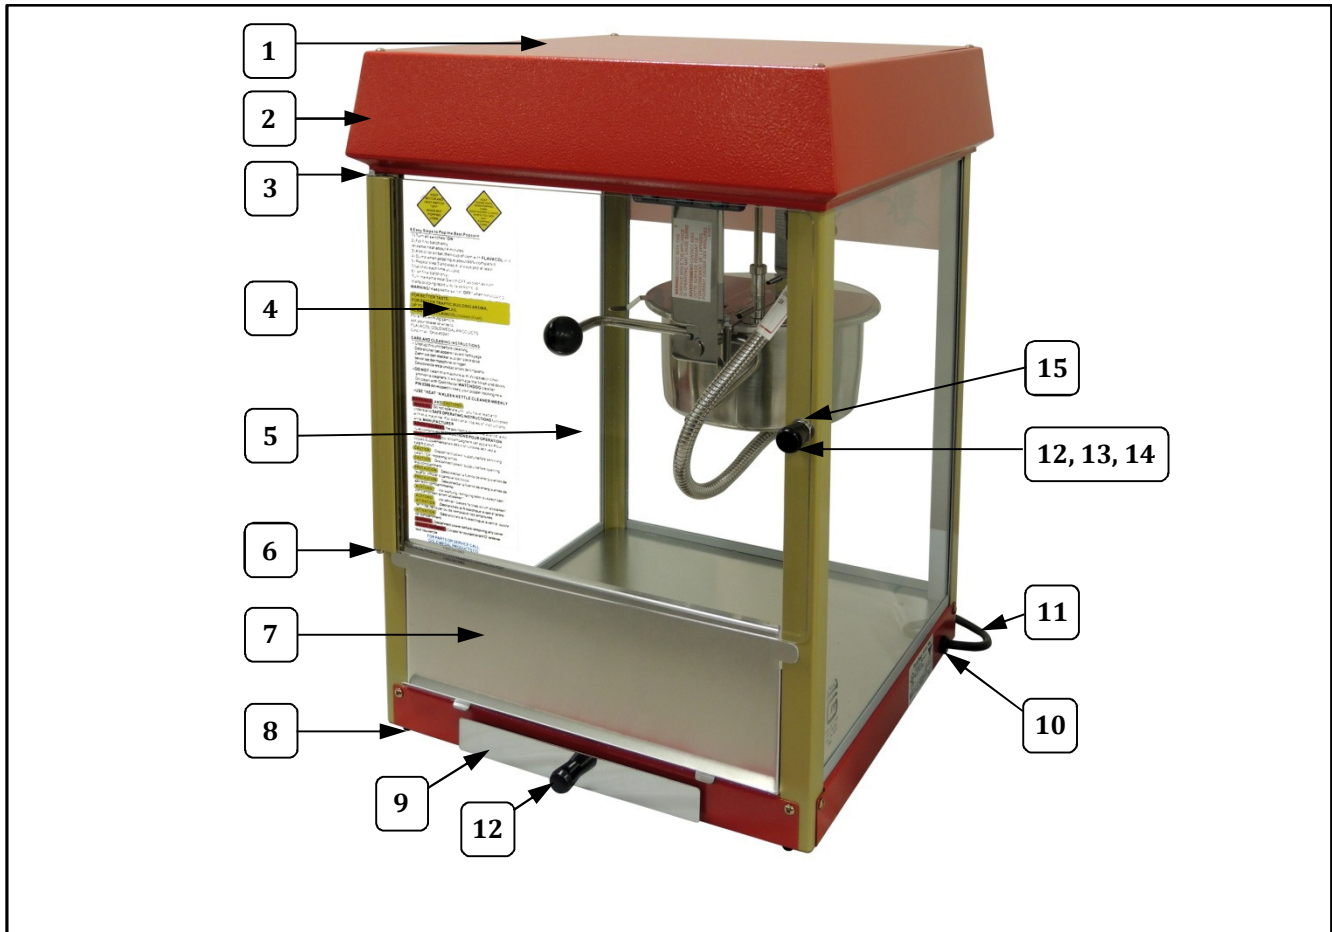


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOME COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

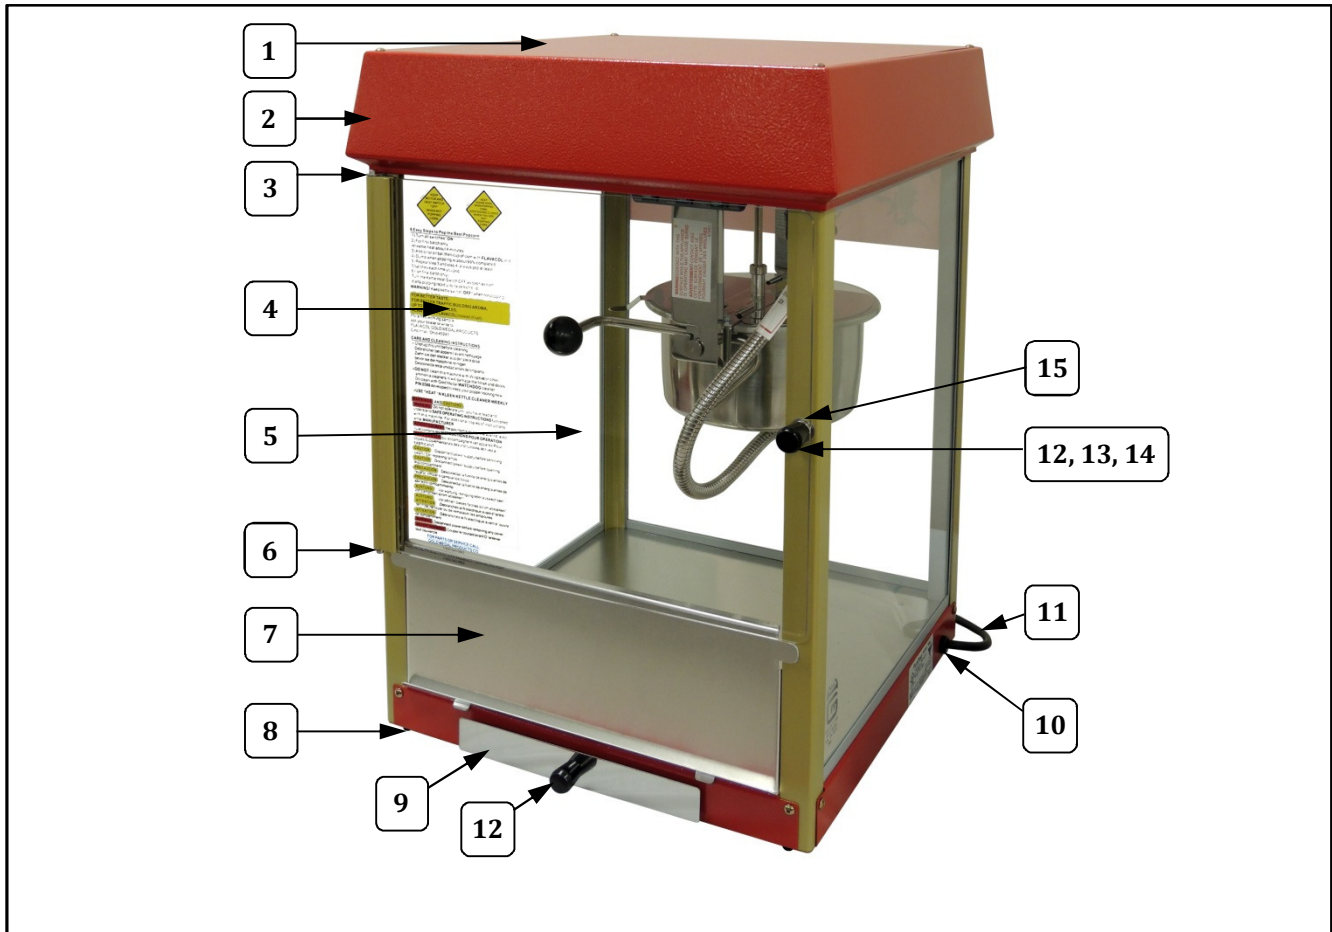


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOMES COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

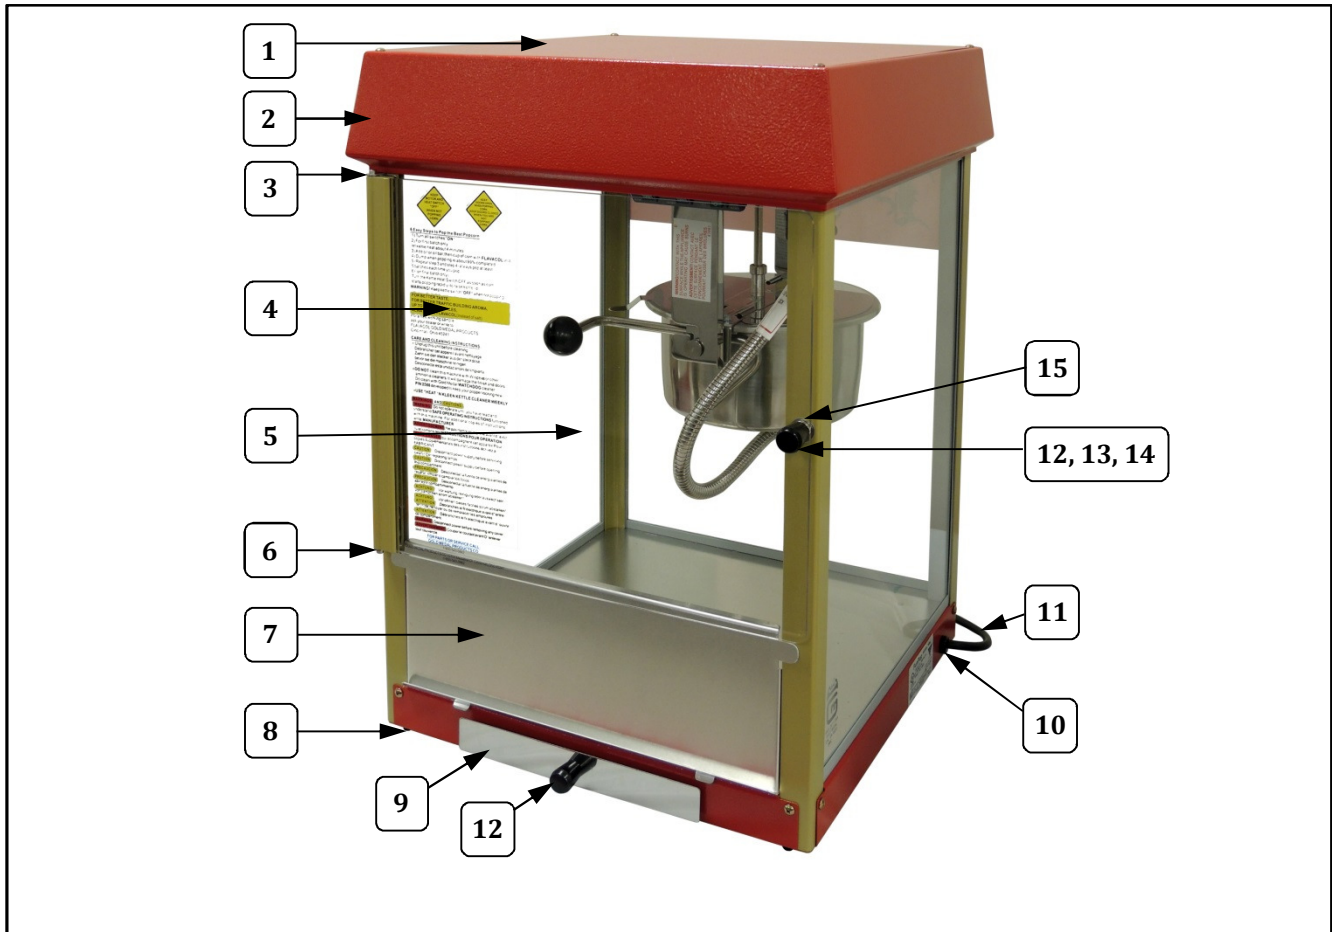


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOMES COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

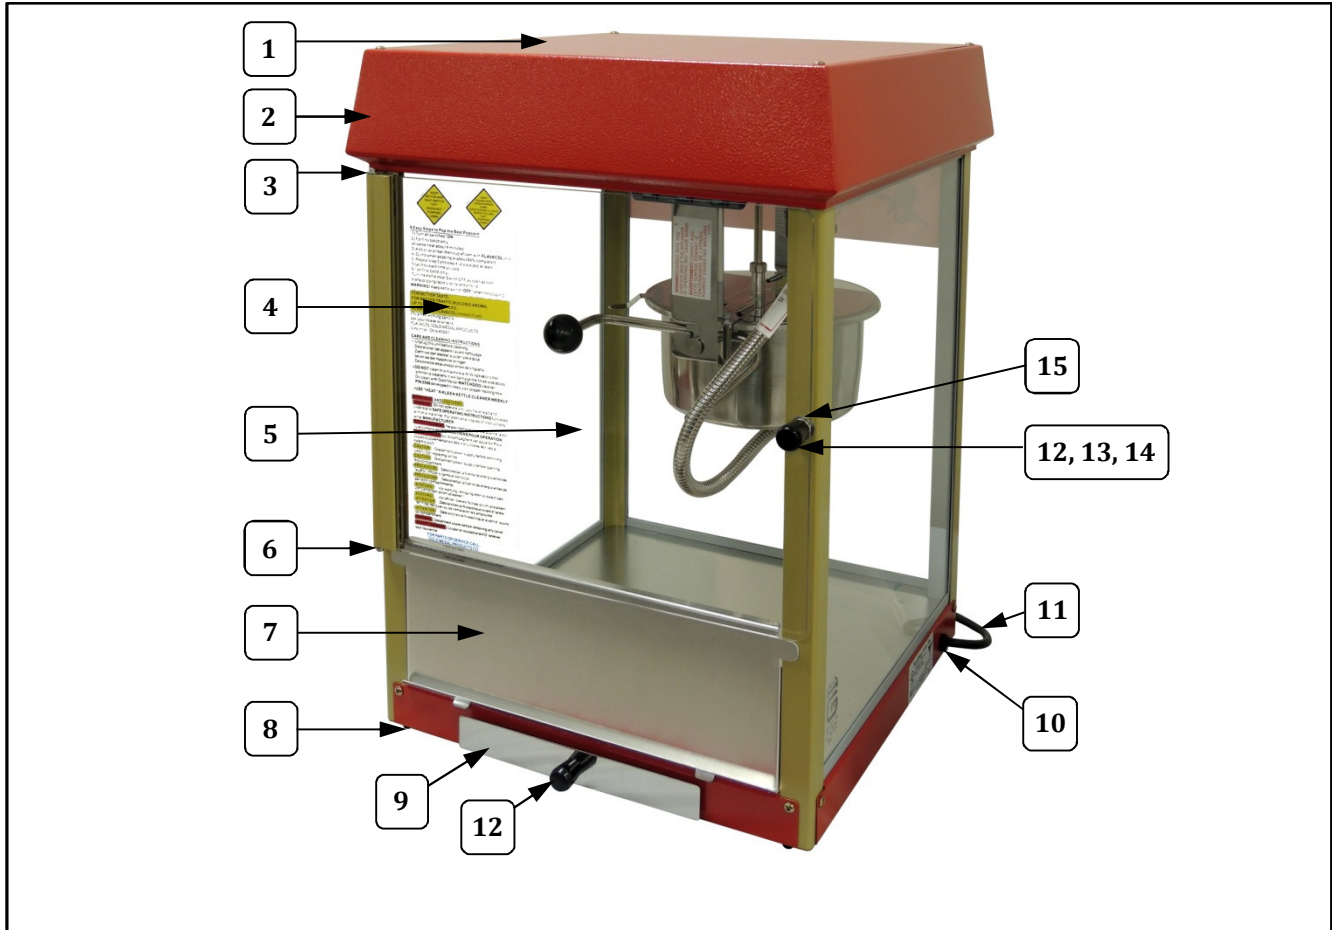


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOMES COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

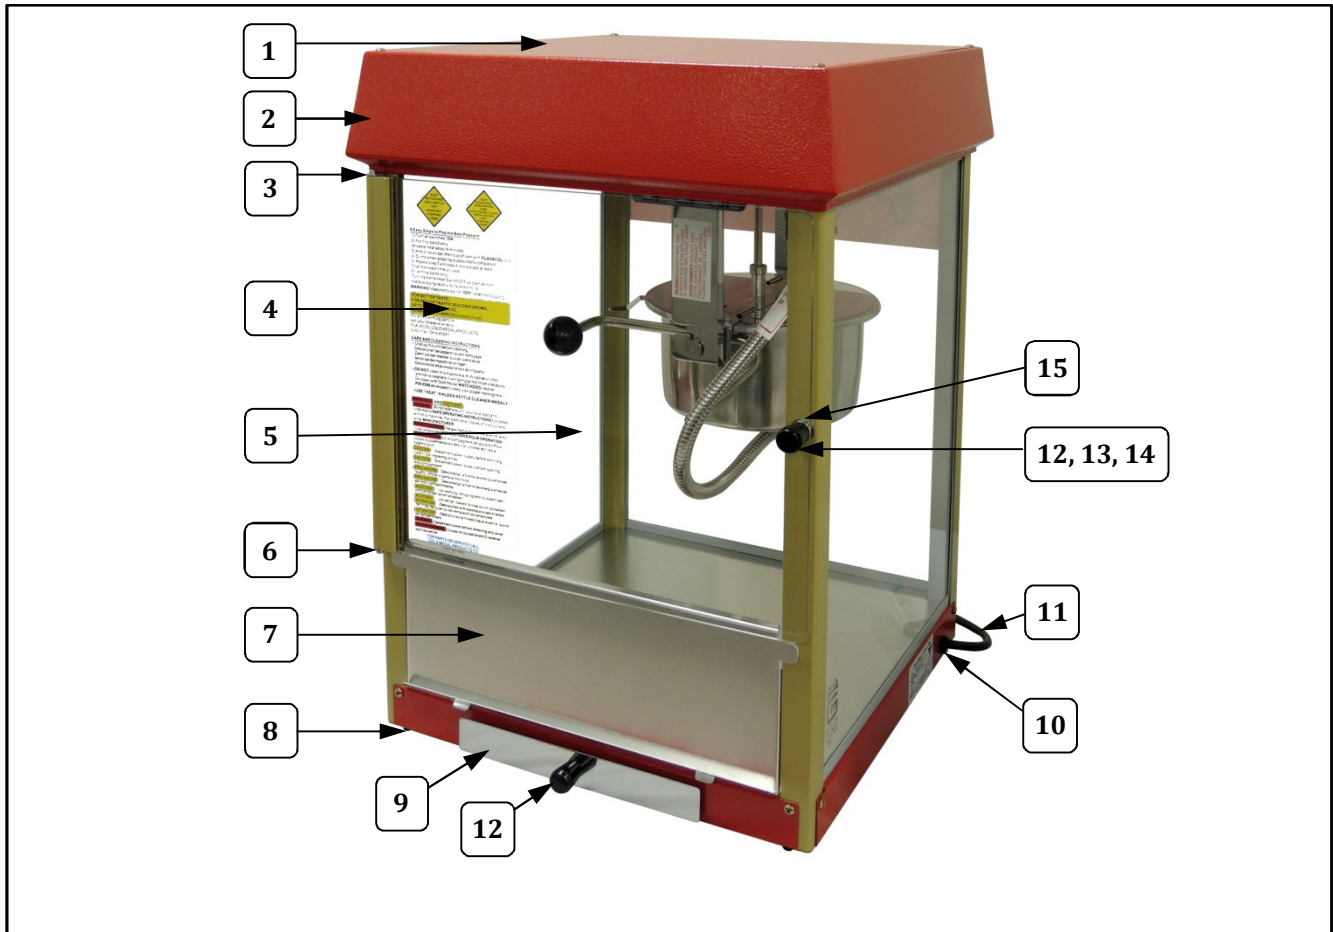


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOME COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

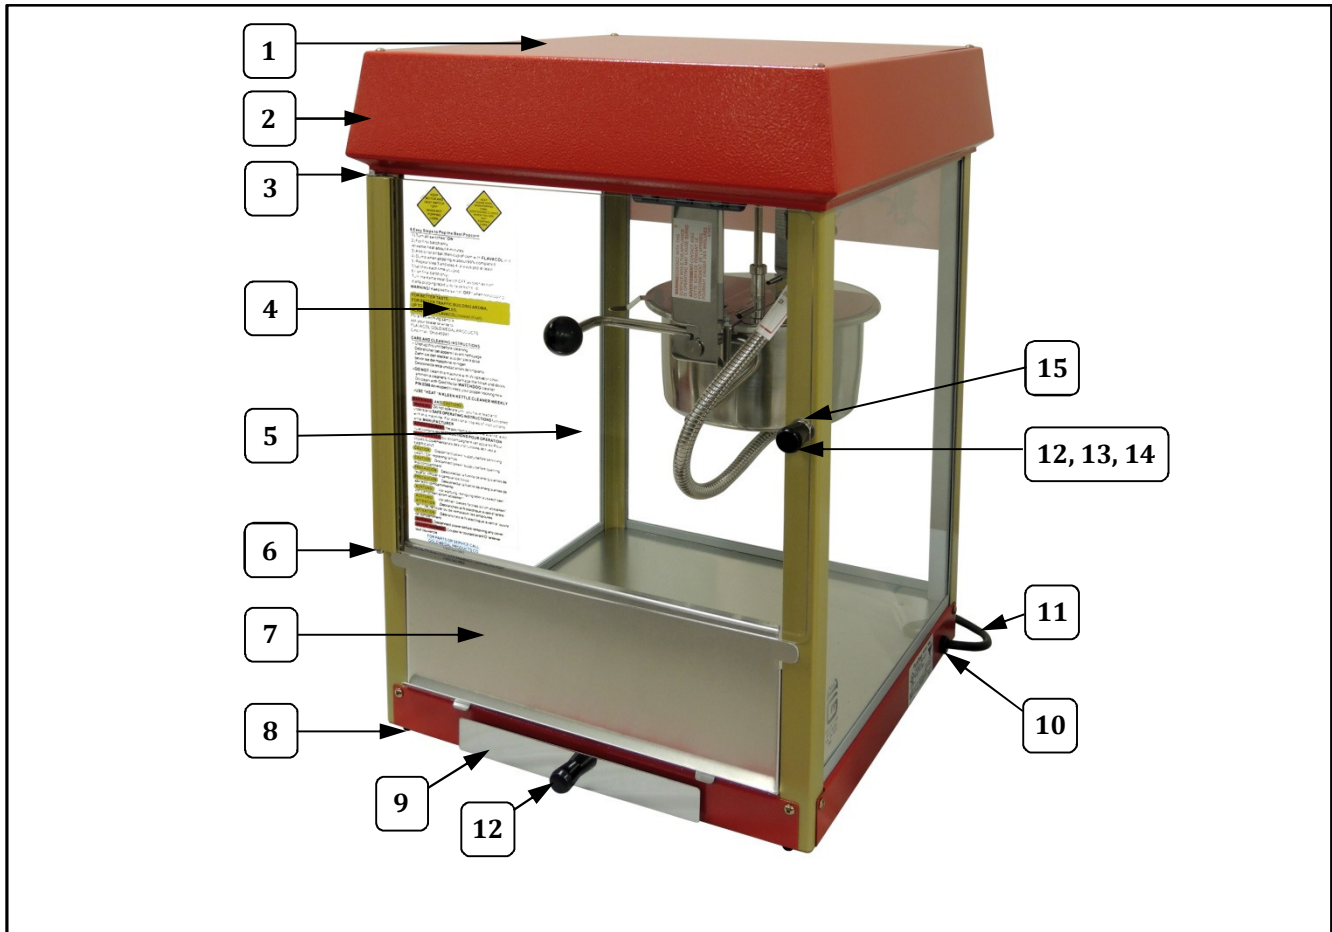


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOME COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

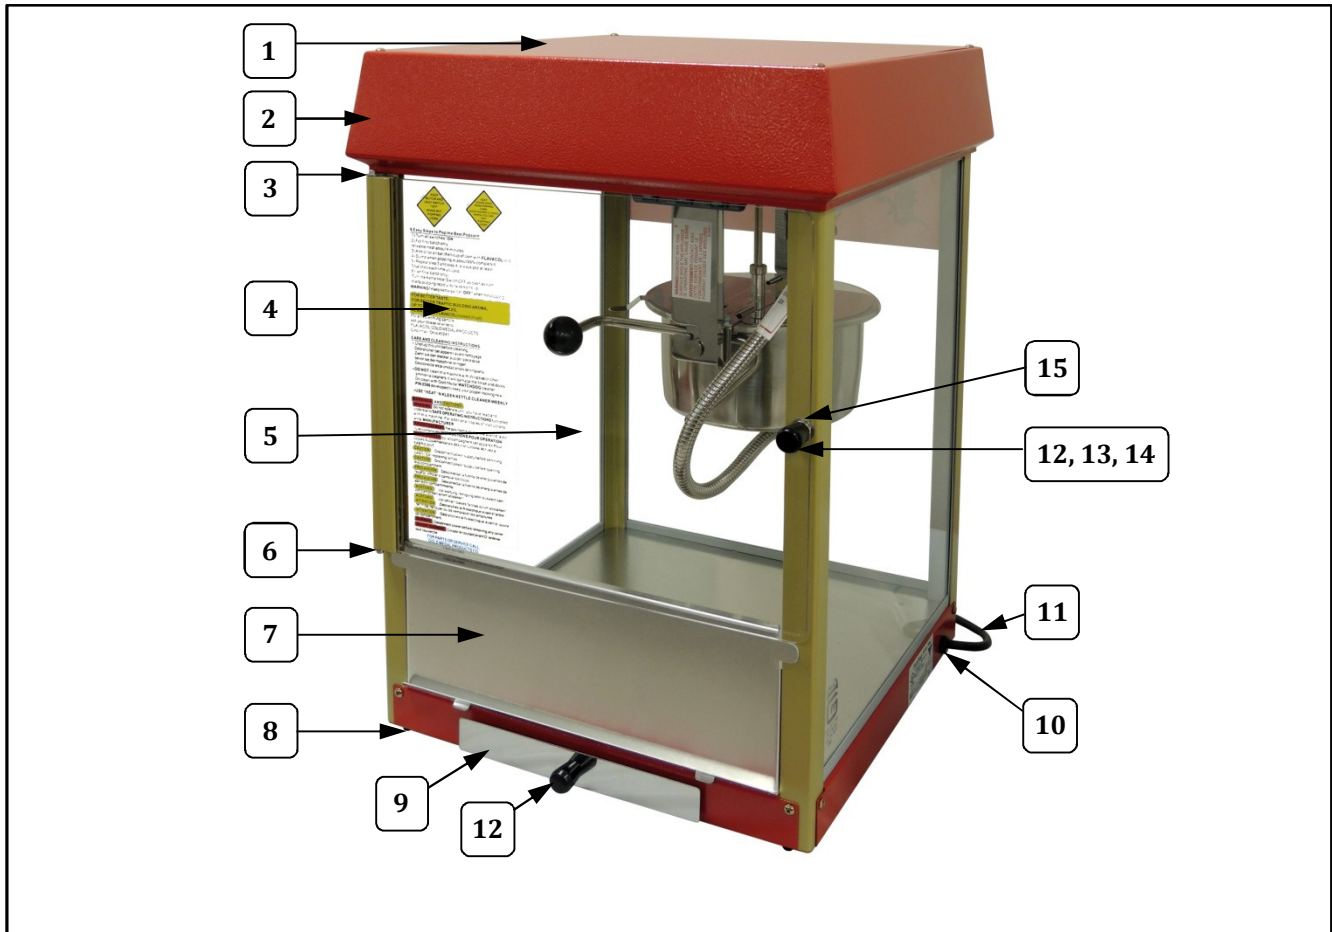


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOME COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

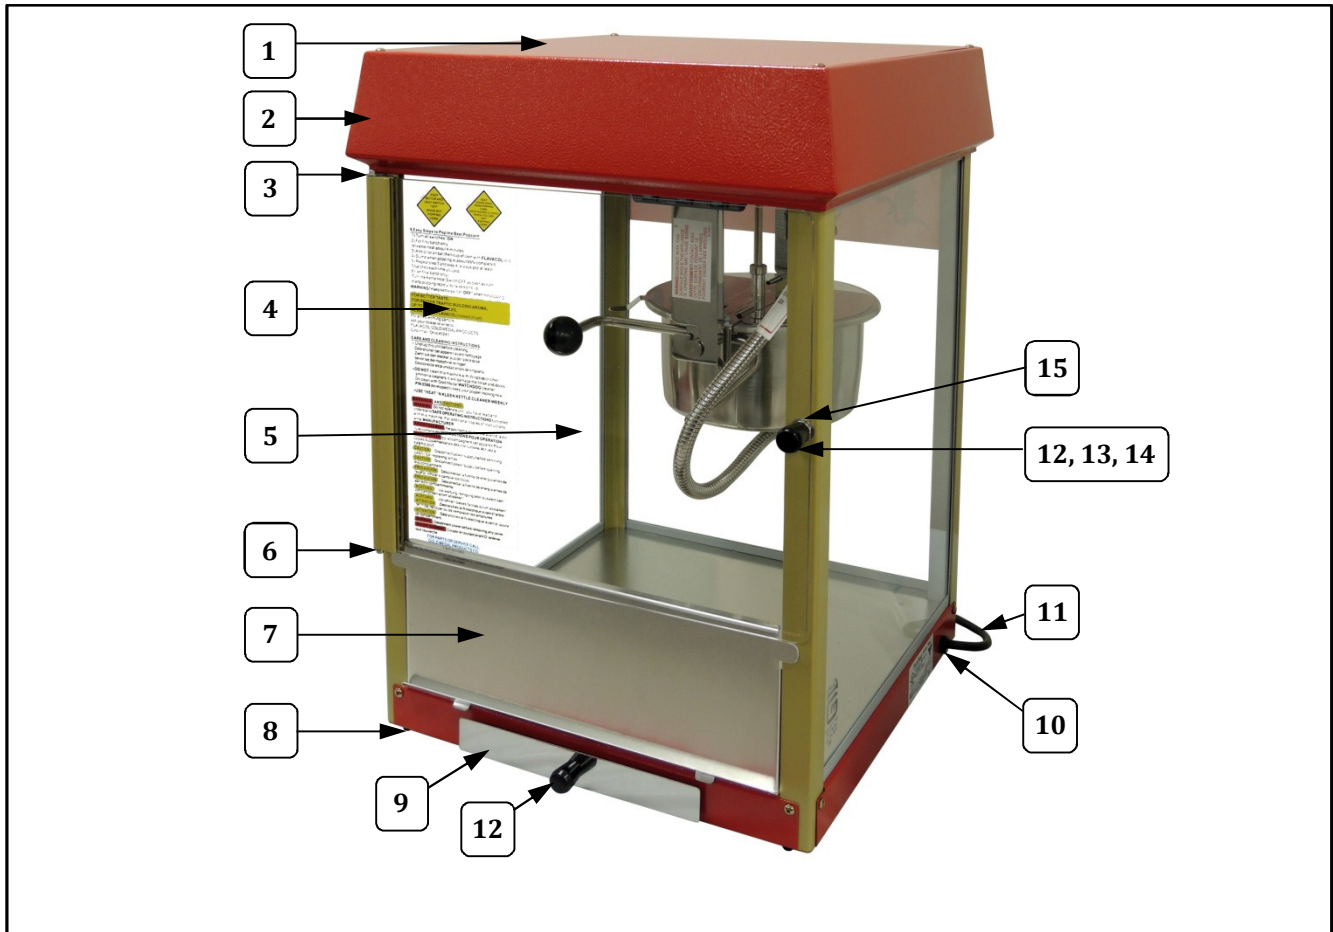


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOMES COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

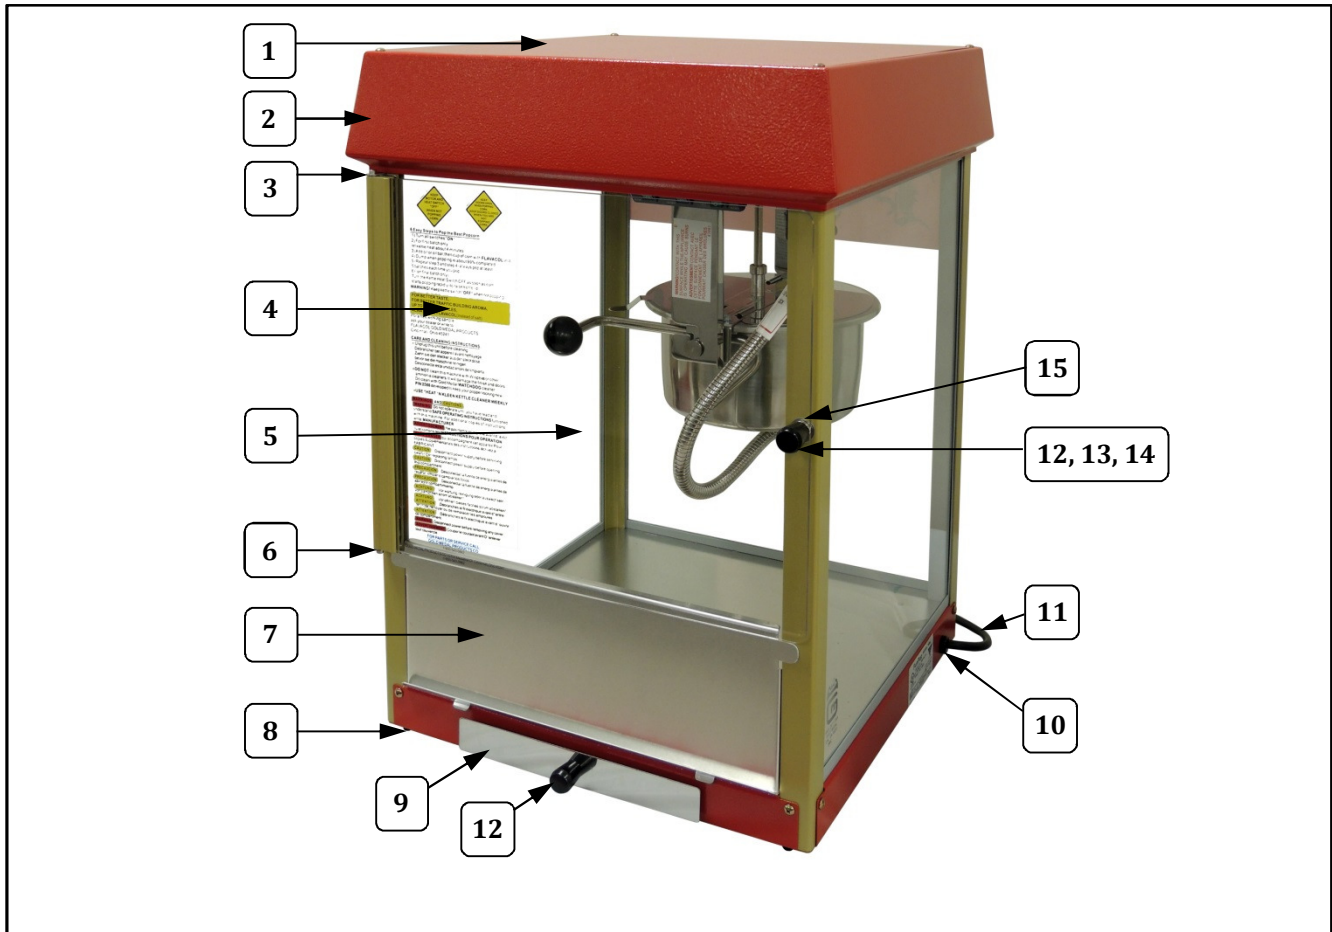


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOME COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

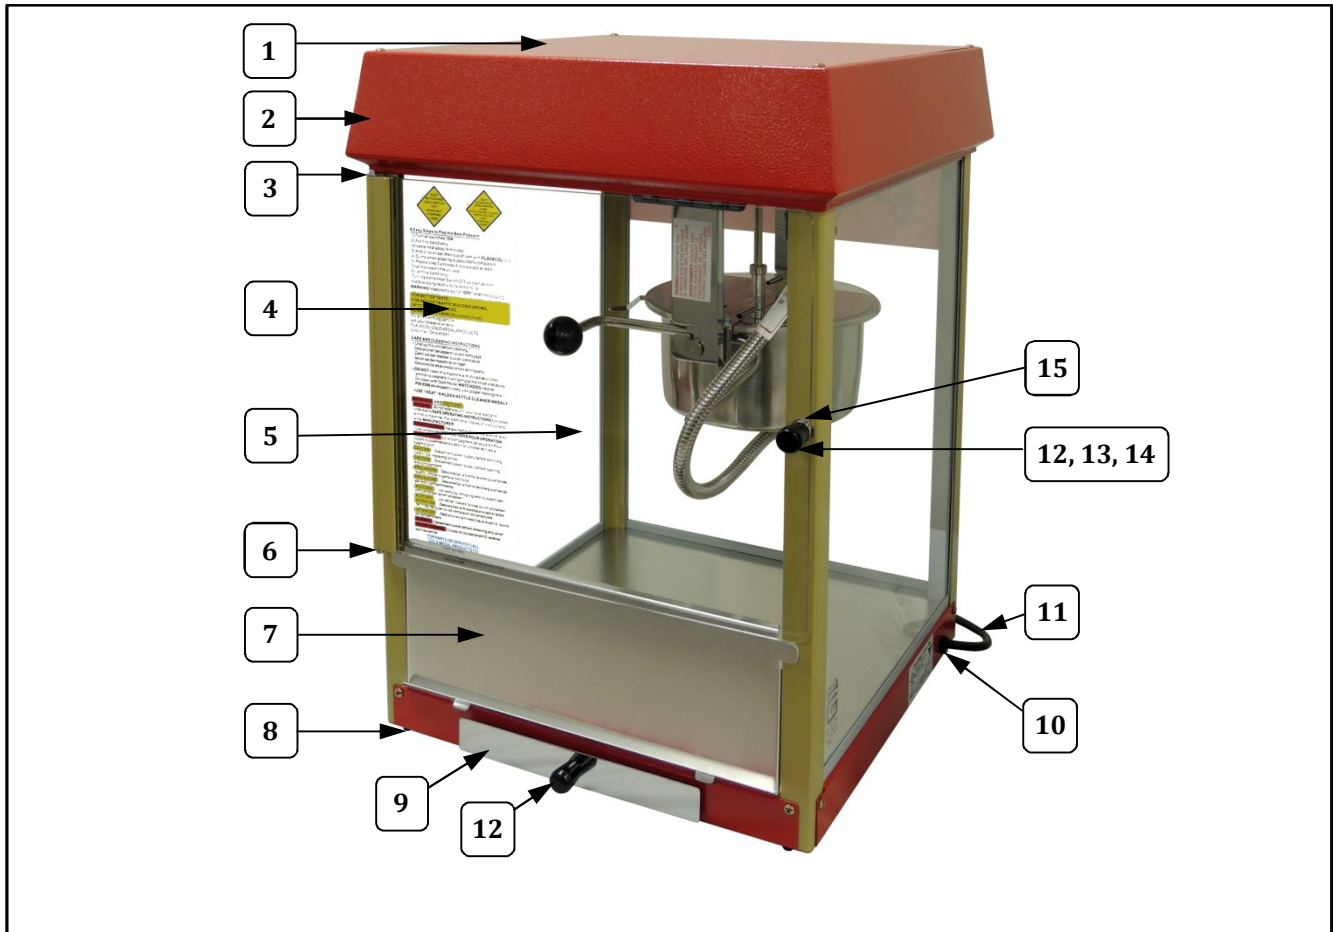


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOME COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

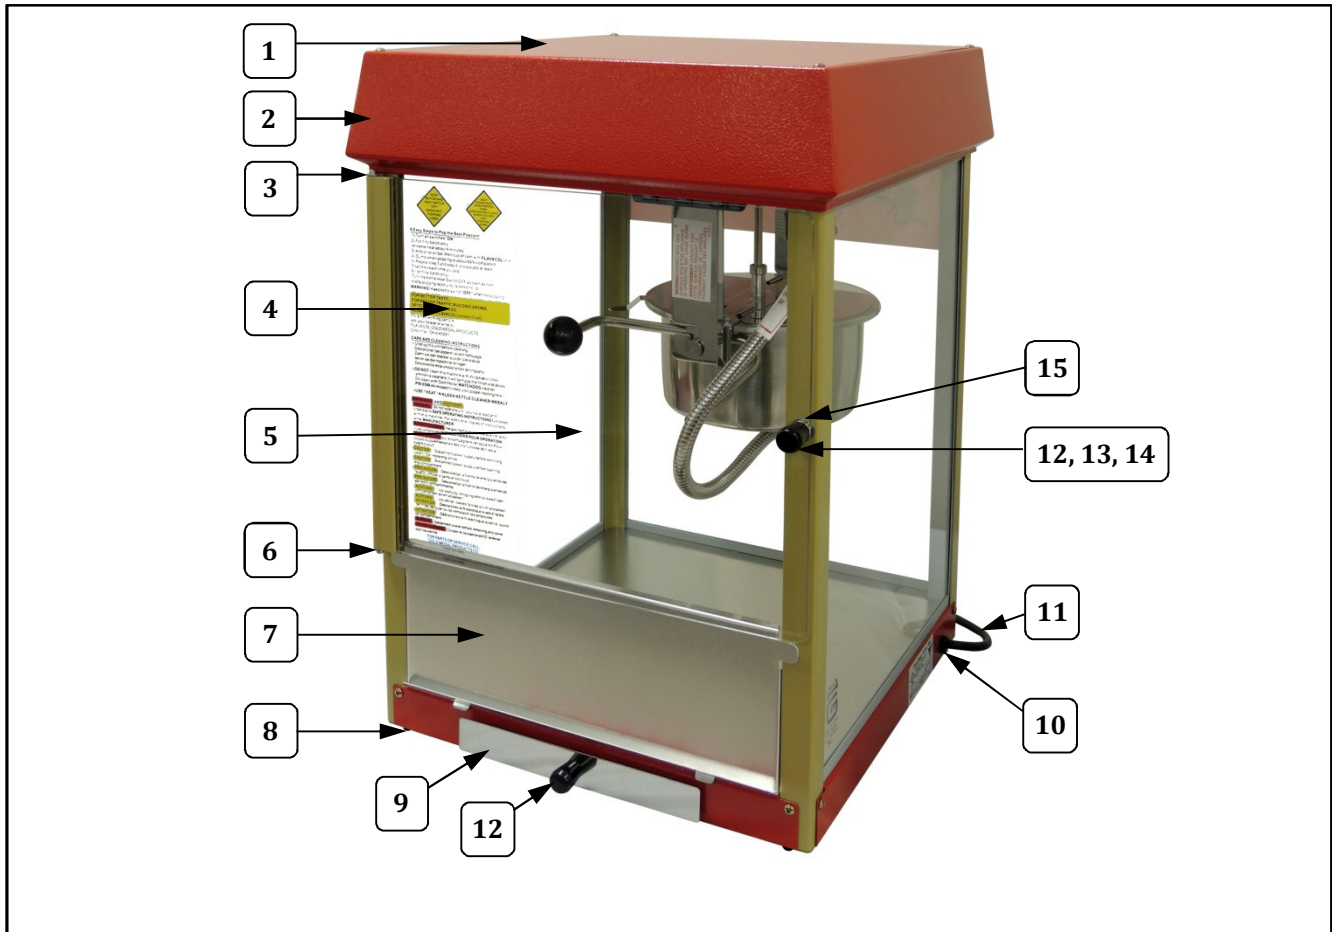


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOMES COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

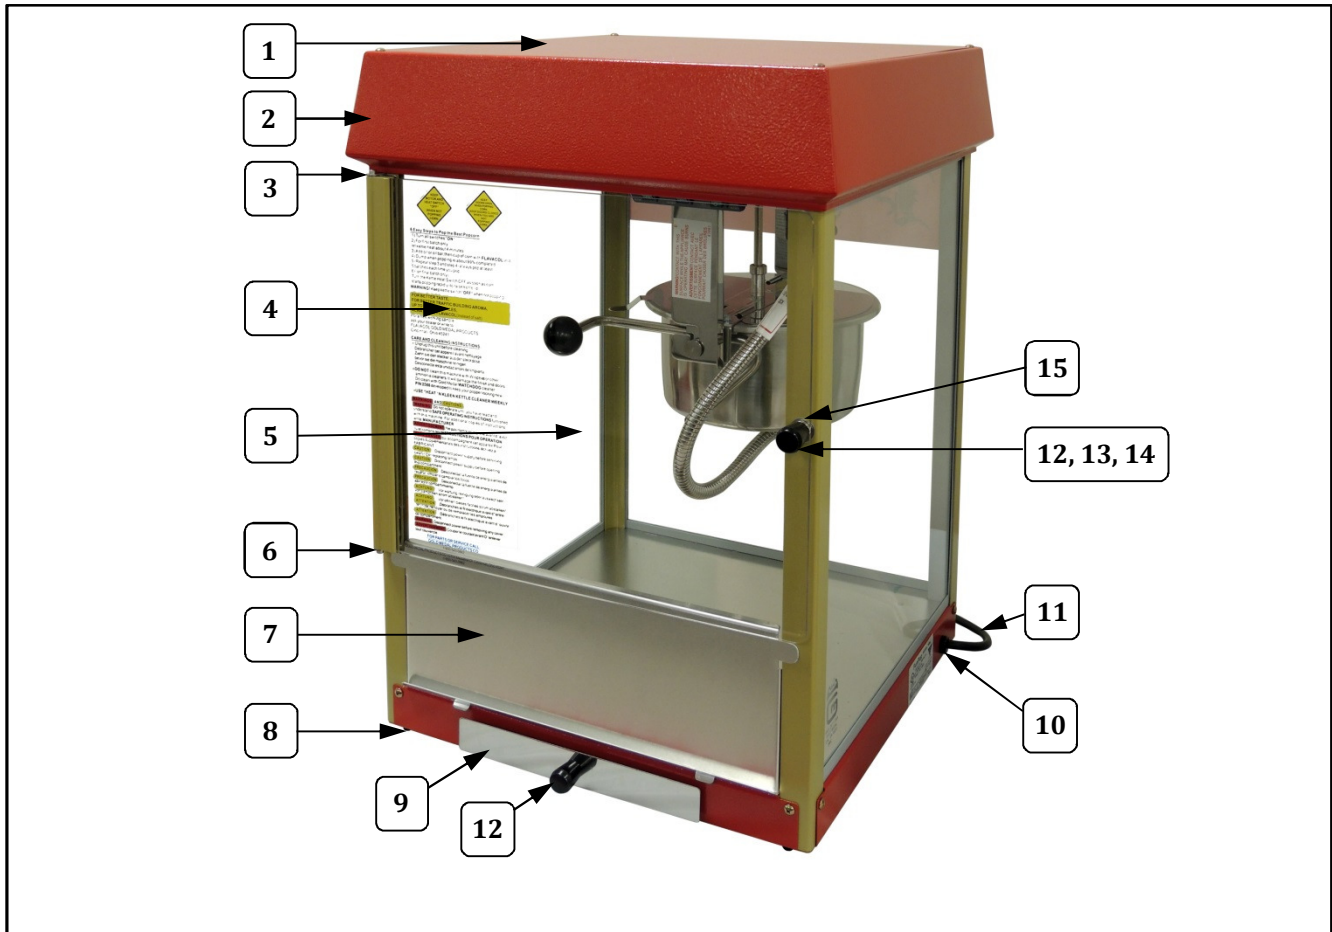


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOME COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

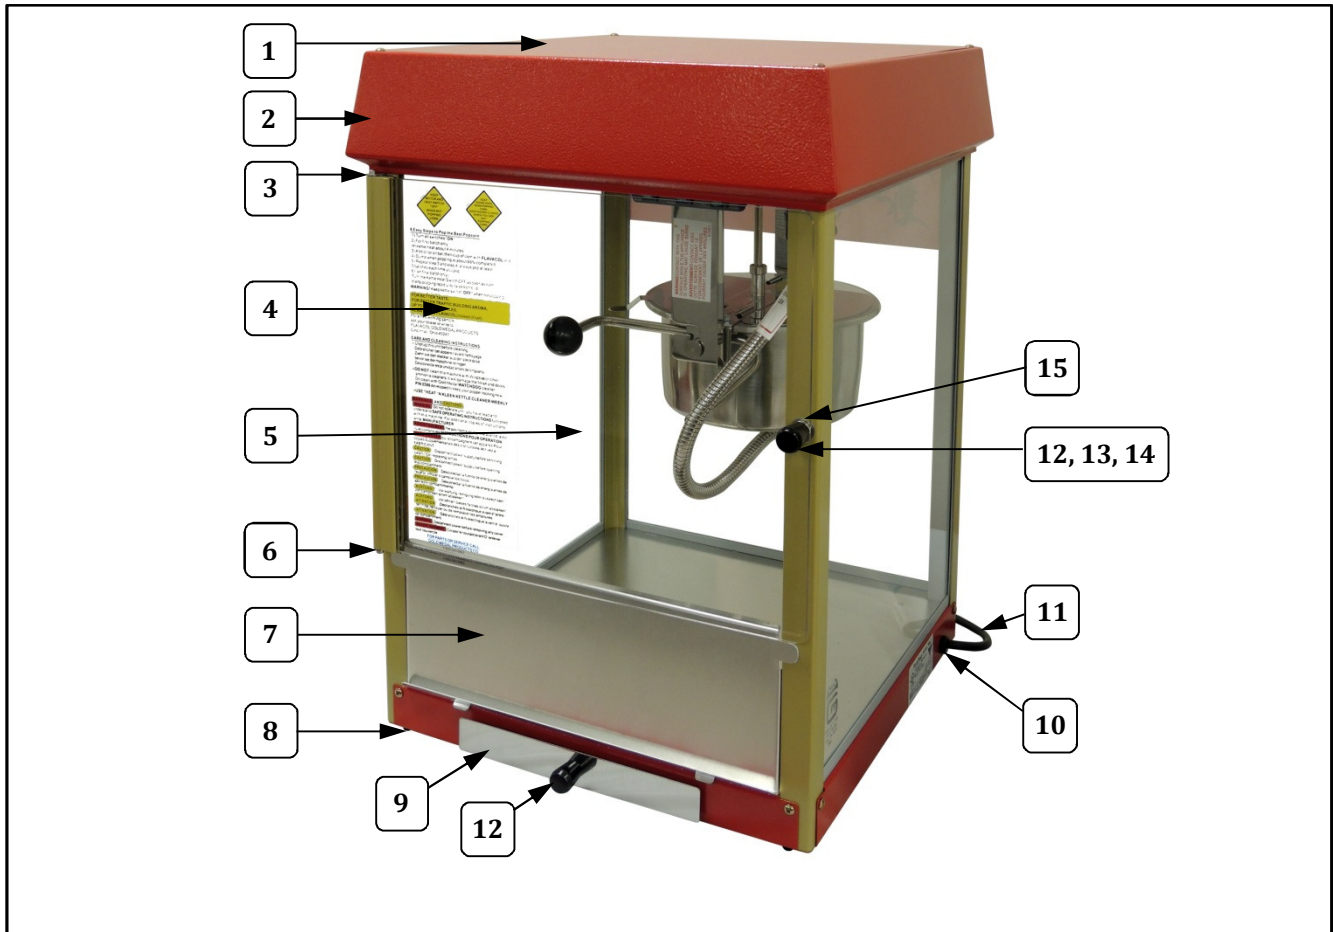


Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOMES COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1

Cabinet Exterior – Rear View

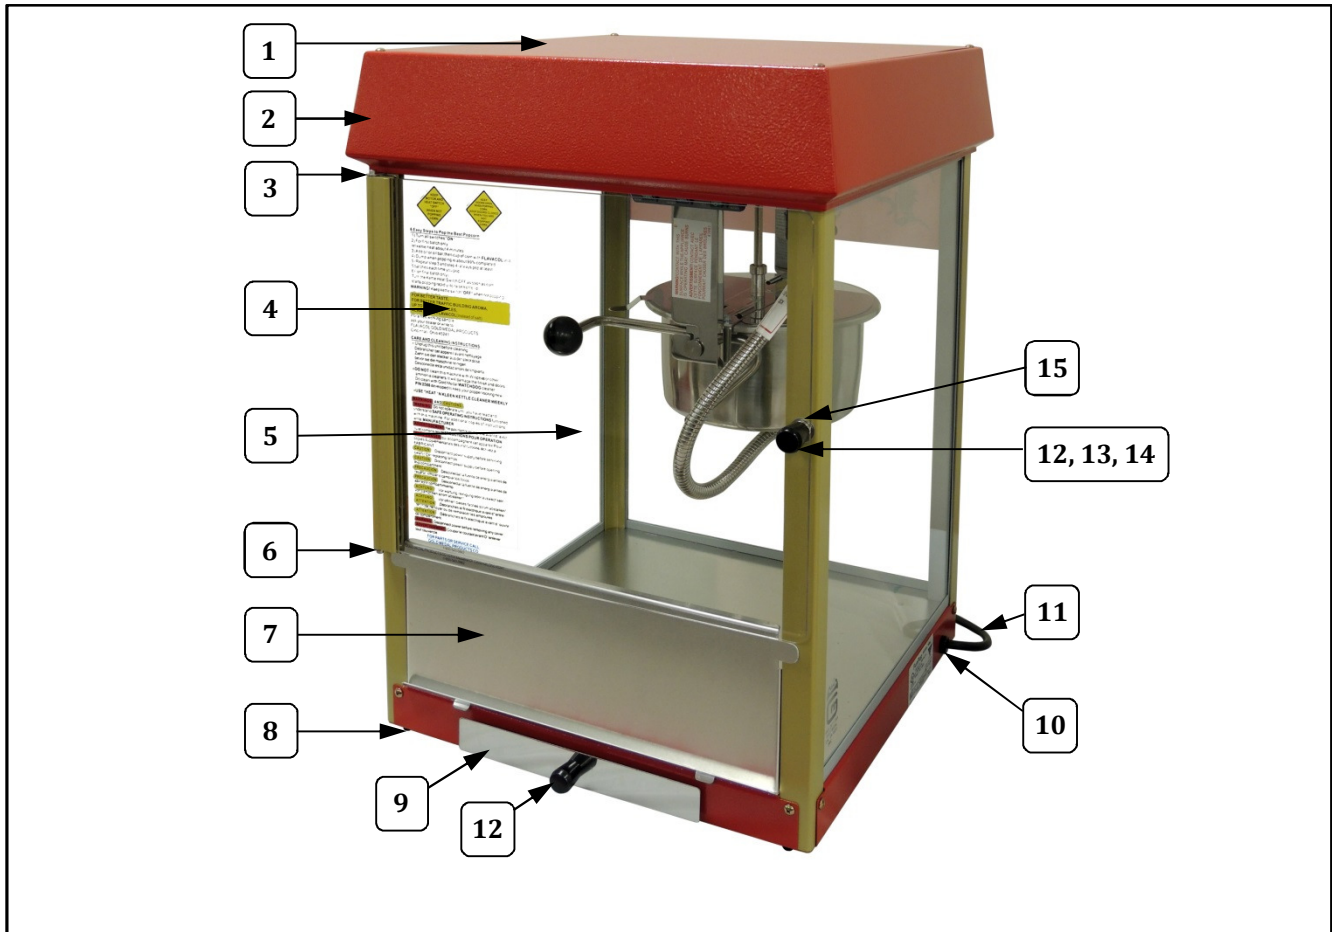

Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOME COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1


Cabinet Exterior – Rear View

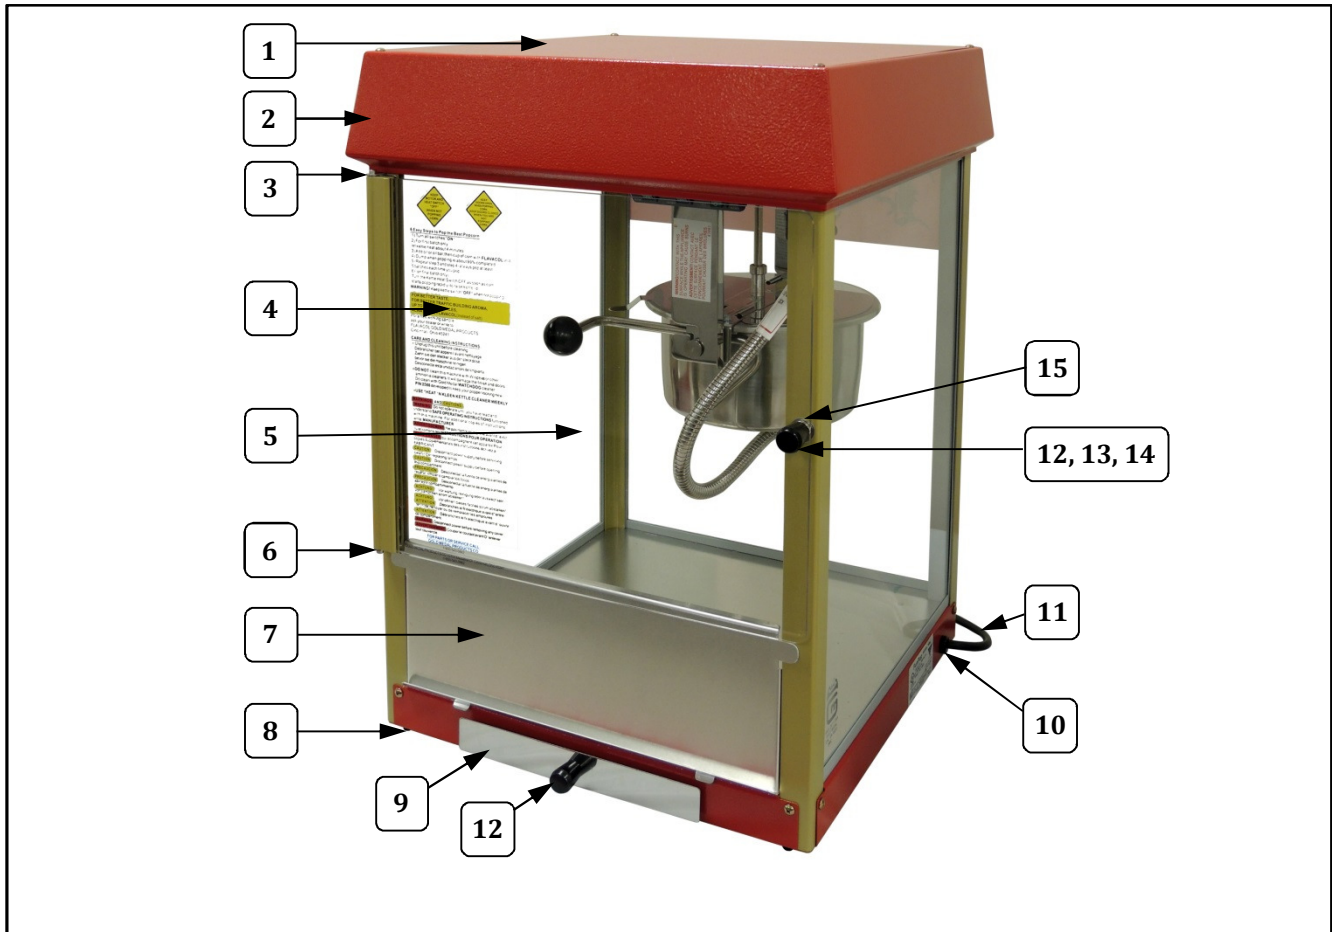

Item	Part No.	Model(s)	Part Description	Qty.
1	58101	2408, 2408EX	DOME COVER FLAT FUN POP	1
2	58104	2408, 2408EX	TOP DOME ASSEMBLY	1
3	55060	ALL	TOP HINGE BRACKET	1
4	41019	ALL	UNIVERSAL POPPER DECAL	1
5	58065	ALL	DOOR ASSEMBLY (includes door, hinge extrusion and pins)	1
6	55061	ALL	BOTTOM HINGE BRACKET	1
7	58113	ALL	DROP PANEL FUN POP 6/8	1
8	87247	ALL	RUBBER BUMPER FOOT	4
9	49100	ALL	OLD MAID PAN	1
10	76026	2408	STRAIN RELIEF	1
	42373	2408EX	IEC SNAP IN RECEPTACLE	
11	22038	2408	LEAD-IN CORD ASSEMBLY	1
	42372	2408EX	POWER CORD IEC SCHUKO	
12	47120	ALL	KNOB LID LIFT	2
13	20066	ALL	8-32 X 1/2 SCREW (for knob)	1
14	50013	ALL	MAGNET	1
15	55104	ALL	LATCH CATCH	1




Cabinet Interior

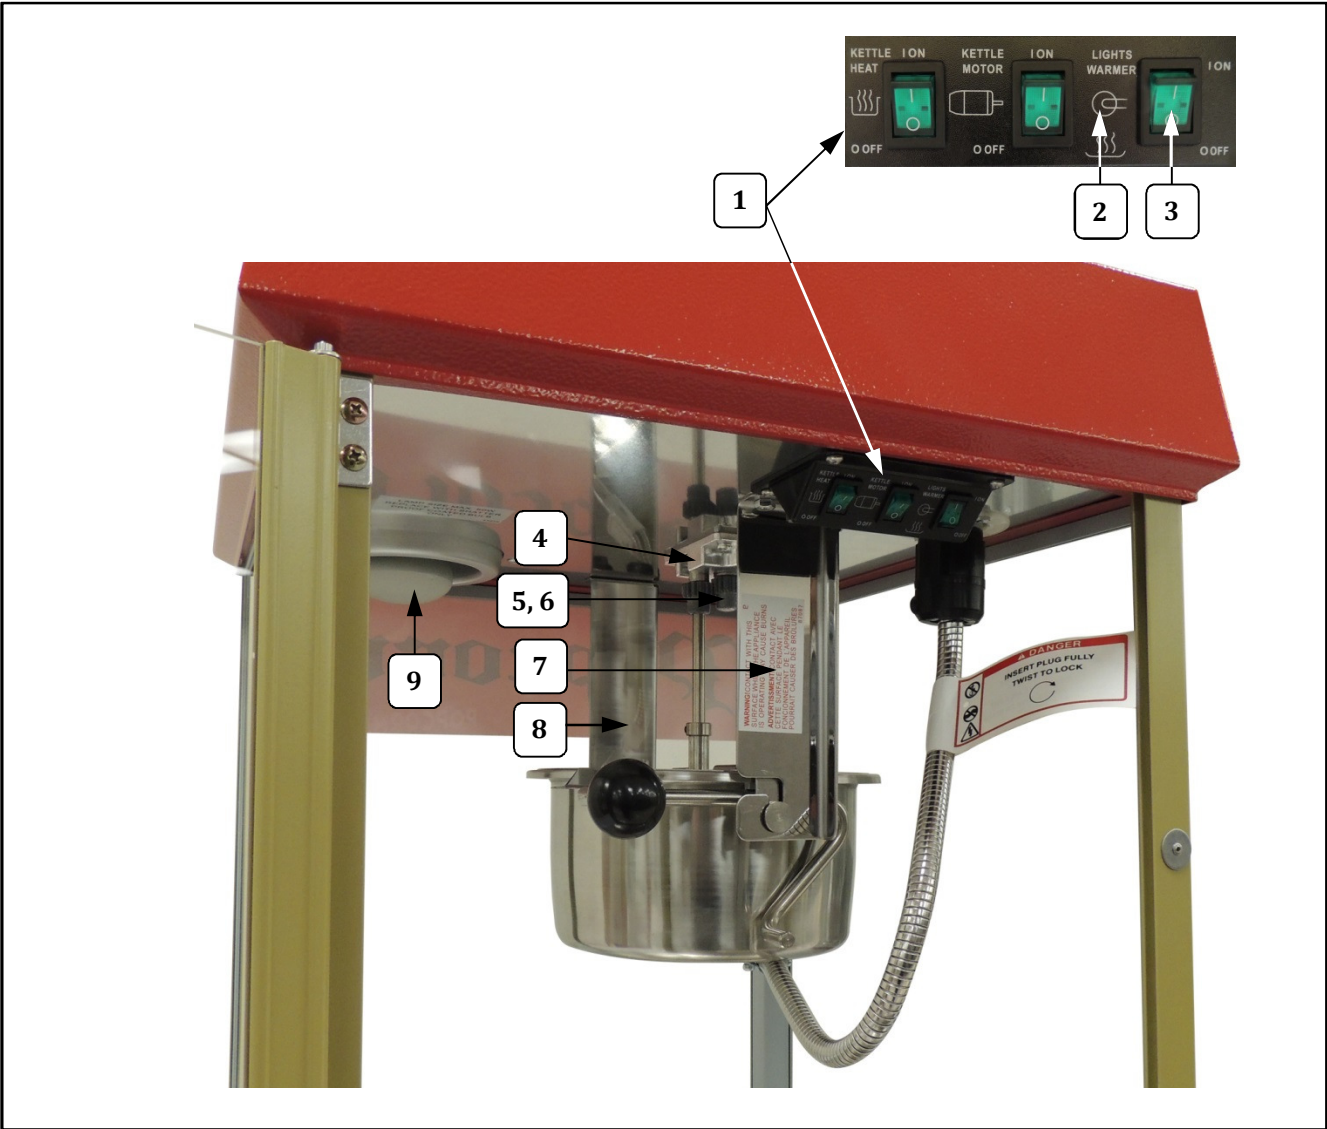

Item	Part No.	Model(s)	Part Description	Qty.
1	55076	ALL	SWITCH MOUNT BOX	1
2	44070	ALL	DECAL, SWITCH MOUNT SMALL	1
3	42532	ALL	DPST ROCKER SWITCH	3
4	67194A	ALL	GEAR BLOCK ASSEMBLY	1
5	47060	ALL	SPUR GEAR	1
6	41742	ALL	SET SCREW #10-32 X 3/16	1
7	49010	ALL	FRONT HANGER ARM	1
8	49009	ALL	REAR HANGER ARM	1
9	42947	2408	50W COATED BULB	1
	13122	2408EX	40W 240V COATED FLOOD	




Cabinet Interior

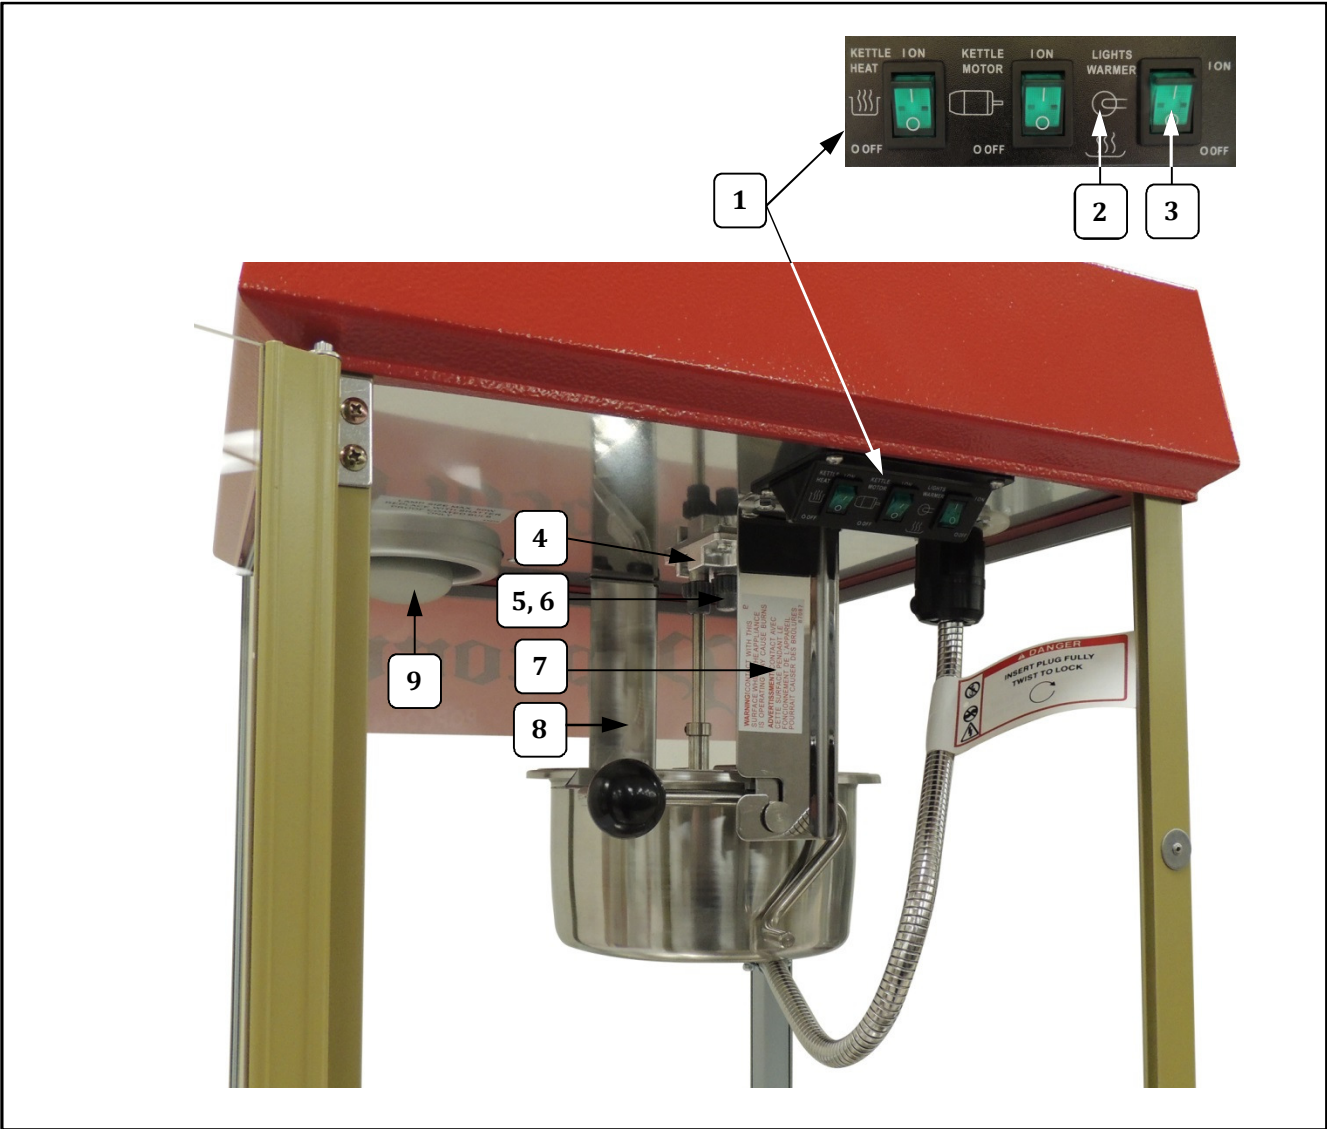

Item	Part No.	Model(s)	Part Description	Qty.
1	55076	ALL	SWITCH MOUNT BOX	1
2	44070	ALL	DECAL, SWITCH MOUNT SMALL	1
3	42532	ALL	DPST ROCKER SWITCH	3
4	67194A	ALL	GEAR BLOCK ASSEMBLY	1
5	47060	ALL	SPUR GEAR	1
6	41742	ALL	SET SCREW #10-32 X 3/16	1
7	49010	ALL	FRONT HANGER ARM	1
8	49009	ALL	REAR HANGER ARM	1
9	42947	2408	50W COATED BULB	1
	13122	2408EX	40W 240V COATED FLOOD	




Cabinet Interior

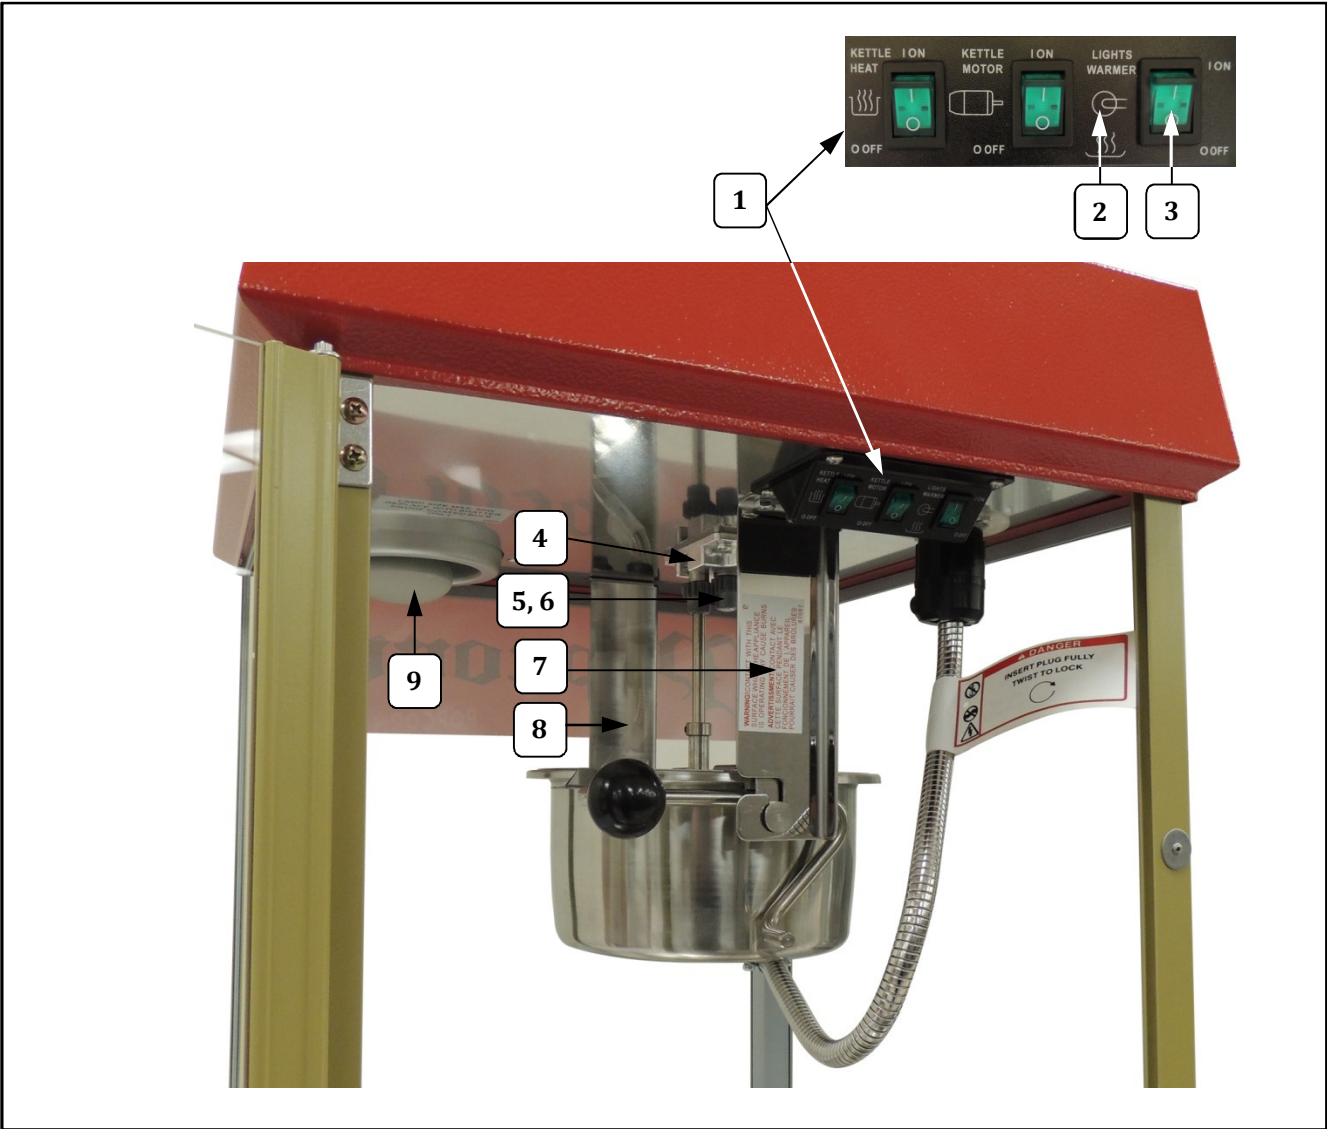

Item	Part No.	Model(s)	Part Description	Qty.
1	55076	ALL	SWITCH MOUNT BOX	1
2	44070	ALL	DECAL, SWITCH MOUNT SMALL	1
3	42532	ALL	DPST ROCKER SWITCH	3
4	67194A	ALL	GEAR BLOCK ASSEMBLY	1
5	47060	ALL	SPUR GEAR	1
6	41742	ALL	SET SCREW #10-32 X 3/16	1
7	49010	ALL	FRONT HANGER ARM	1
8	49009	ALL	REAR HANGER ARM	1
9	42947	2408	50W COATED BULB	1
	13122	2408EX	40W 240V COATED FLOOD	




Cabinet Interior

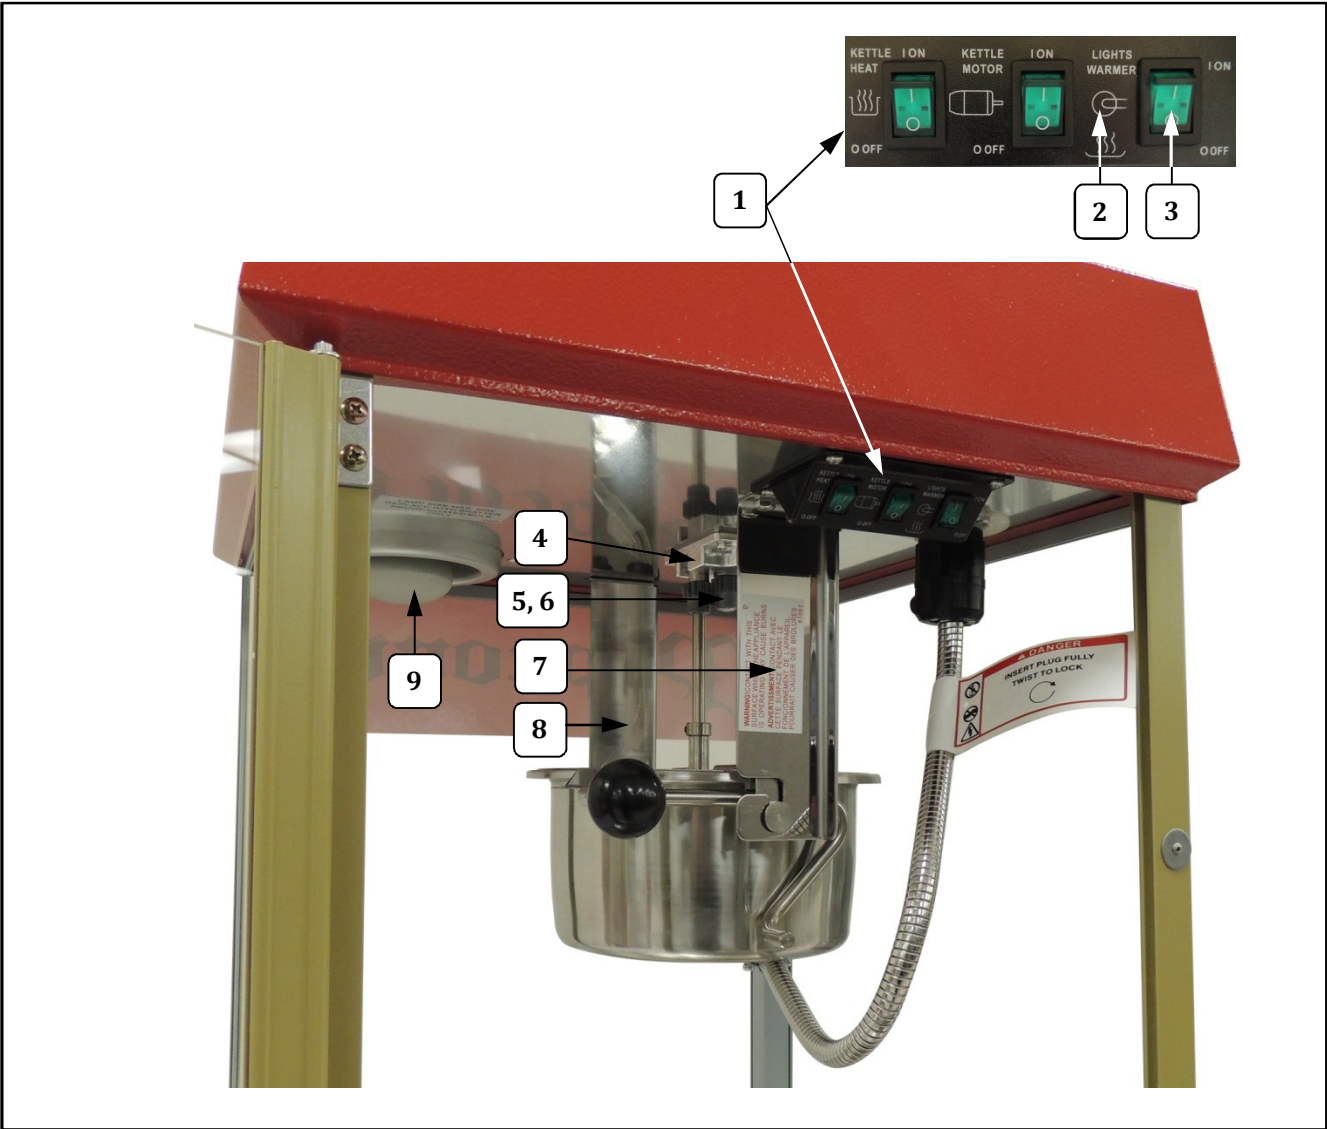

Item	Part No.	Model(s)	Part Description	Qty.
1	55076	ALL	SWITCH MOUNT BOX	1
2	44070	ALL	DECAL, SWITCH MOUNT SMALL	1
3	42532	ALL	DPST ROCKER SWITCH	3
4	67194A	ALL	GEAR BLOCK ASSEMBLY	1
5	47060	ALL	SPUR GEAR	1
6	41742	ALL	SET SCREW #10-32 X 3/16	1
7	49010	ALL	FRONT HANGER ARM	1
8	49009	ALL	REAR HANGER ARM	1
9	42947	2408	50W COATED BULB	1
	13122	2408EX	40W 240V COATED FLOOD	




Cabinet Interior

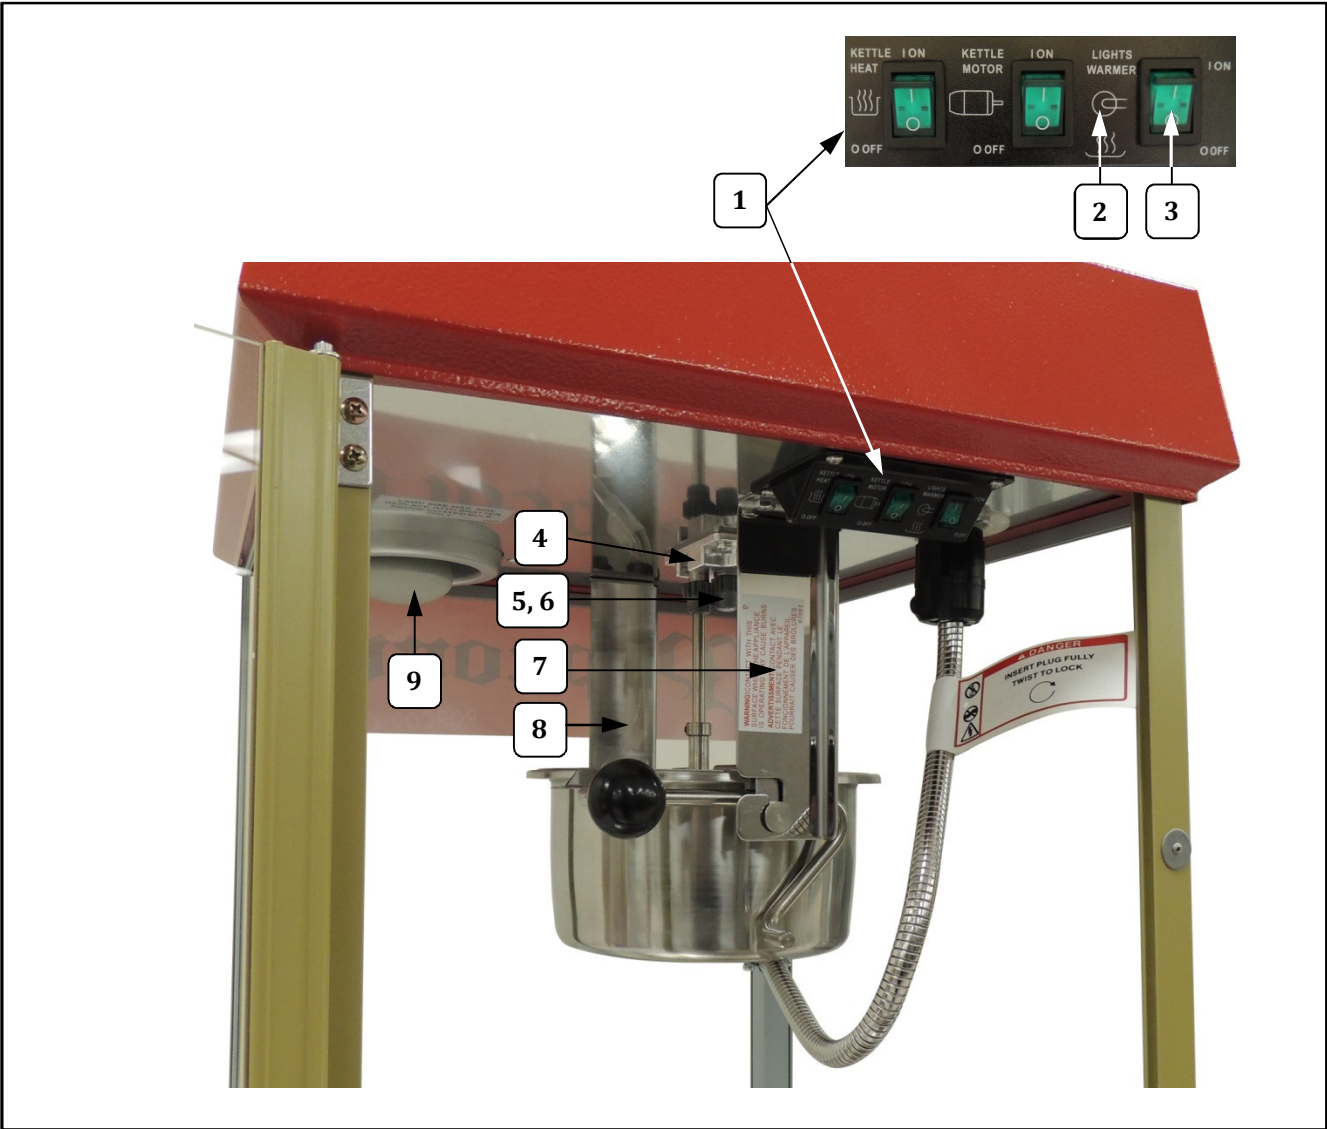

Item	Part No.	Model(s)	Part Description	Qty.
1	55076	ALL	SWITCH MOUNT BOX	1
2	44070	ALL	DECAL, SWITCH MOUNT SMALL	1
3	42532	ALL	DPST ROCKER SWITCH	3
4	67194A	ALL	GEAR BLOCK ASSEMBLY	1
5	47060	ALL	SPUR GEAR	1
6	41742	ALL	SET SCREW #10-32 X 3/16	1
7	49010	ALL	FRONT HANGER ARM	1
8	49009	ALL	REAR HANGER ARM	1
9	42947	2408	50W COATED BULB	1
	13122	2408EX	40W 240V COATED FLOOD	




Cabinet Interior

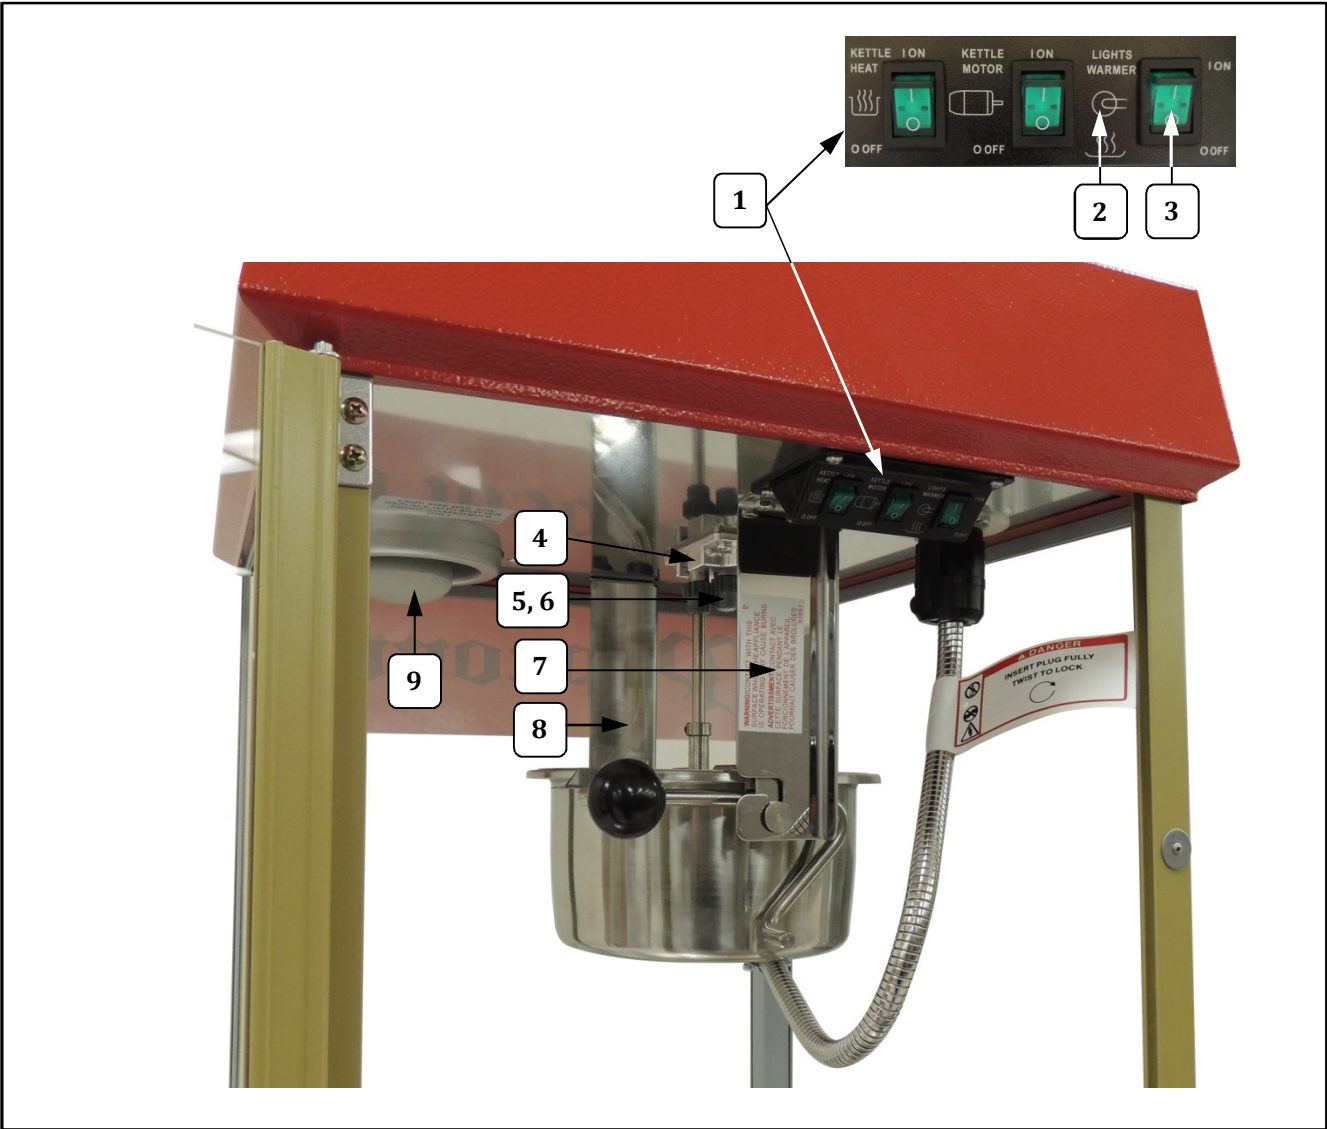

Item	Part No.	Model(s)	Part Description	Qty.
1	55076	ALL	SWITCH MOUNT BOX	1
2	44070	ALL	DECAL, SWITCH MOUNT SMALL	1
3	42532	ALL	DPST ROCKER SWITCH	3
4	67194A	ALL	GEAR BLOCK ASSEMBLY	1
5	47060	ALL	SPUR GEAR	1
6	41742	ALL	SET SCREW #10-32 X 3/16	1
7	49010	ALL	FRONT HANGER ARM	1
8	49009	ALL	REAR HANGER ARM	1
9	42947	2408	50W COATED BULB	1
	13122	2408EX	40W 240V COATED FLOOD	




Cabinet Interior

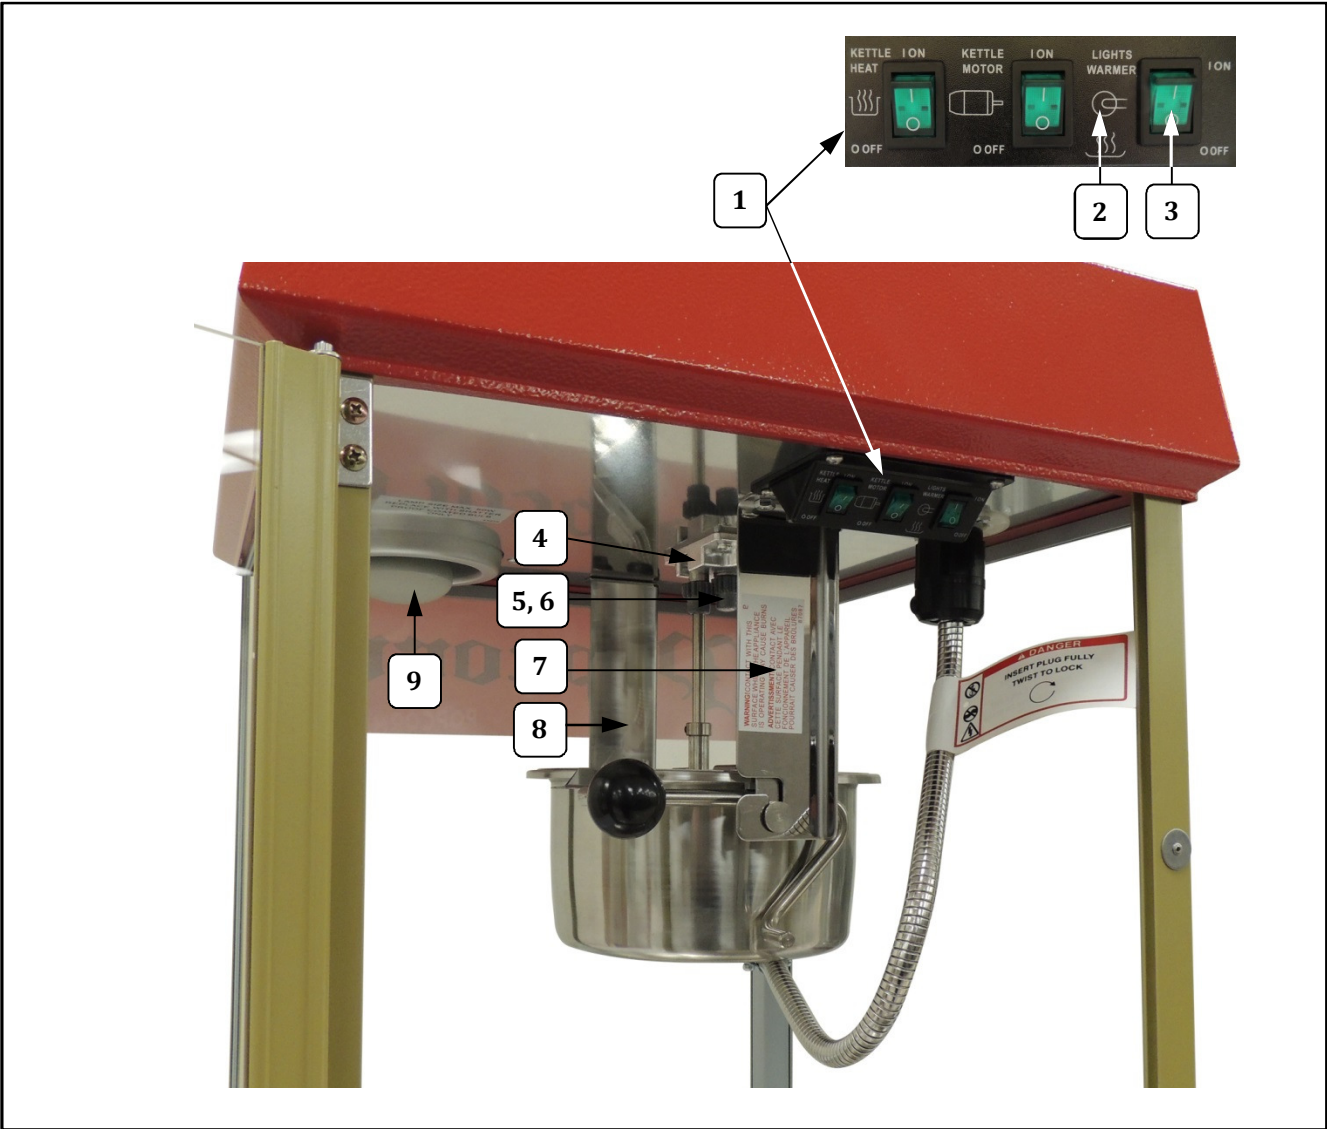

Item	Part No.	Model(s)	Part Description	Qty.
1	55076	ALL	SWITCH MOUNT BOX	1
2	44070	ALL	DECAL, SWITCH MOUNT SMALL	1
3	42532	ALL	DPST ROCKER SWITCH	3
4	67194A	ALL	GEAR BLOCK ASSEMBLY	1
5	47060	ALL	SPUR GEAR	1
6	41742	ALL	SET SCREW #10-32 X 3/16	1
7	49010	ALL	FRONT HANGER ARM	1
8	49009	ALL	REAR HANGER ARM	1
9	42947	2408	50W COATED BULB	1
	13122	2408EX	40W 240V COATED FLOOD	




Cabinet Interior

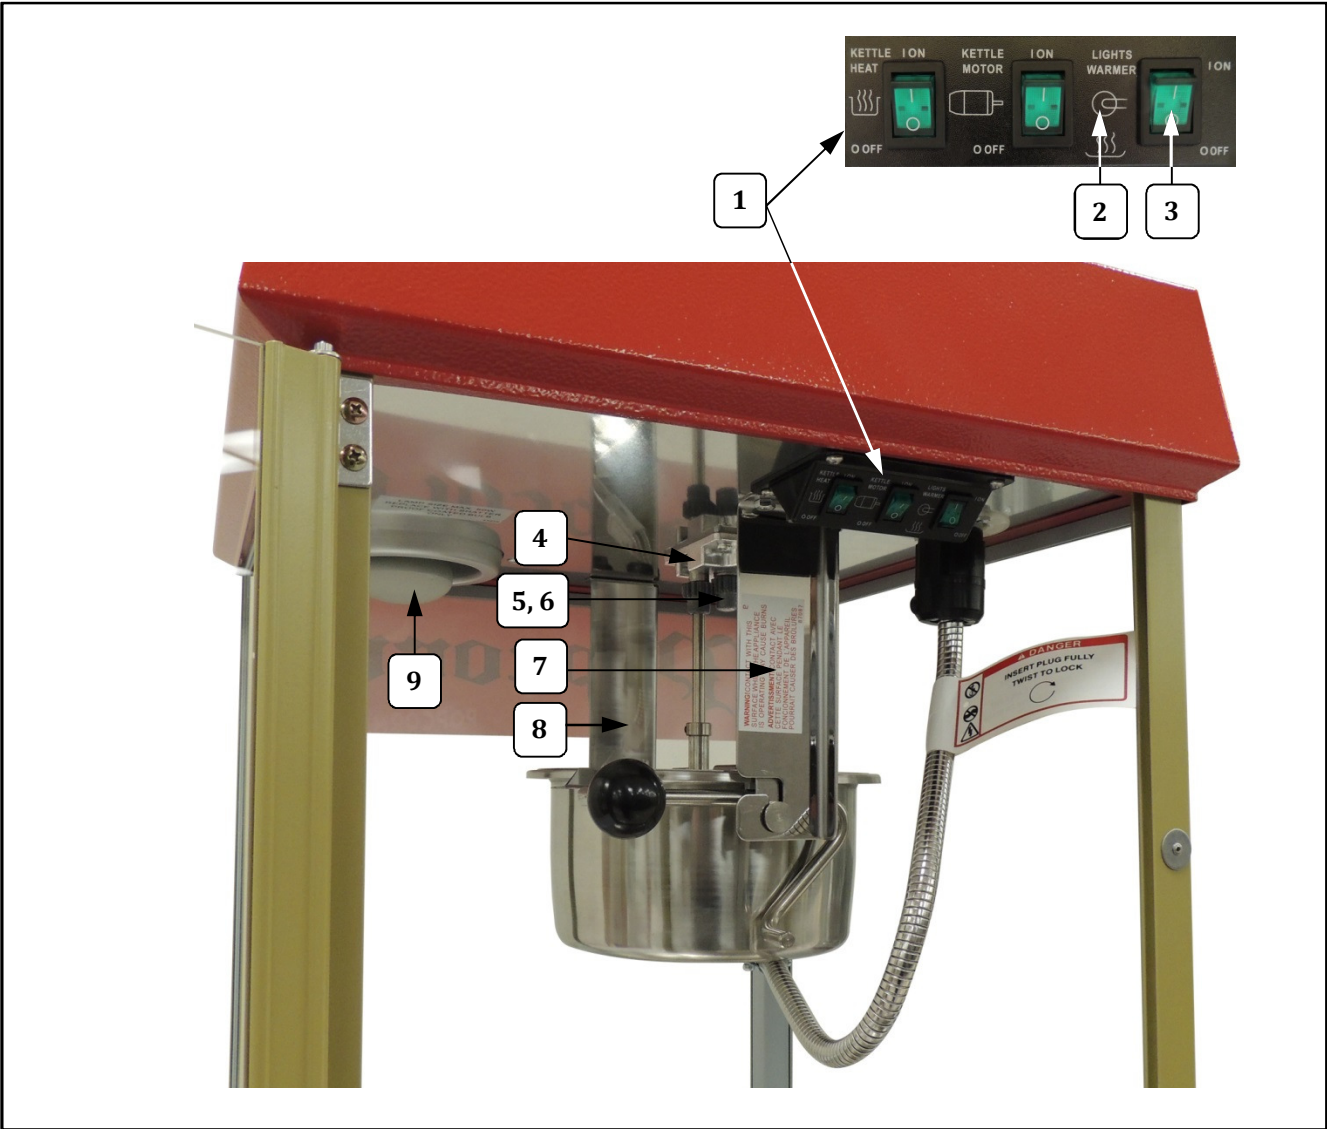

Item	Part No.	Model(s)	Part Description	Qty.
1	55076	ALL	SWITCH MOUNT BOX	1
2	44070	ALL	DECAL, SWITCH MOUNT SMALL	1
3	42532	ALL	DPST ROCKER SWITCH	3
4	67194A	ALL	GEAR BLOCK ASSEMBLY	1
5	47060	ALL	SPUR GEAR	1
6	41742	ALL	SET SCREW #10-32 X 3/16	1
7	49010	ALL	FRONT HANGER ARM	1
8	49009	ALL	REAR HANGER ARM	1
9	42947	2408	50W COATED BULB	1
	13122	2408EX	40W 240V COATED FLOOD	




Cabinet Interior

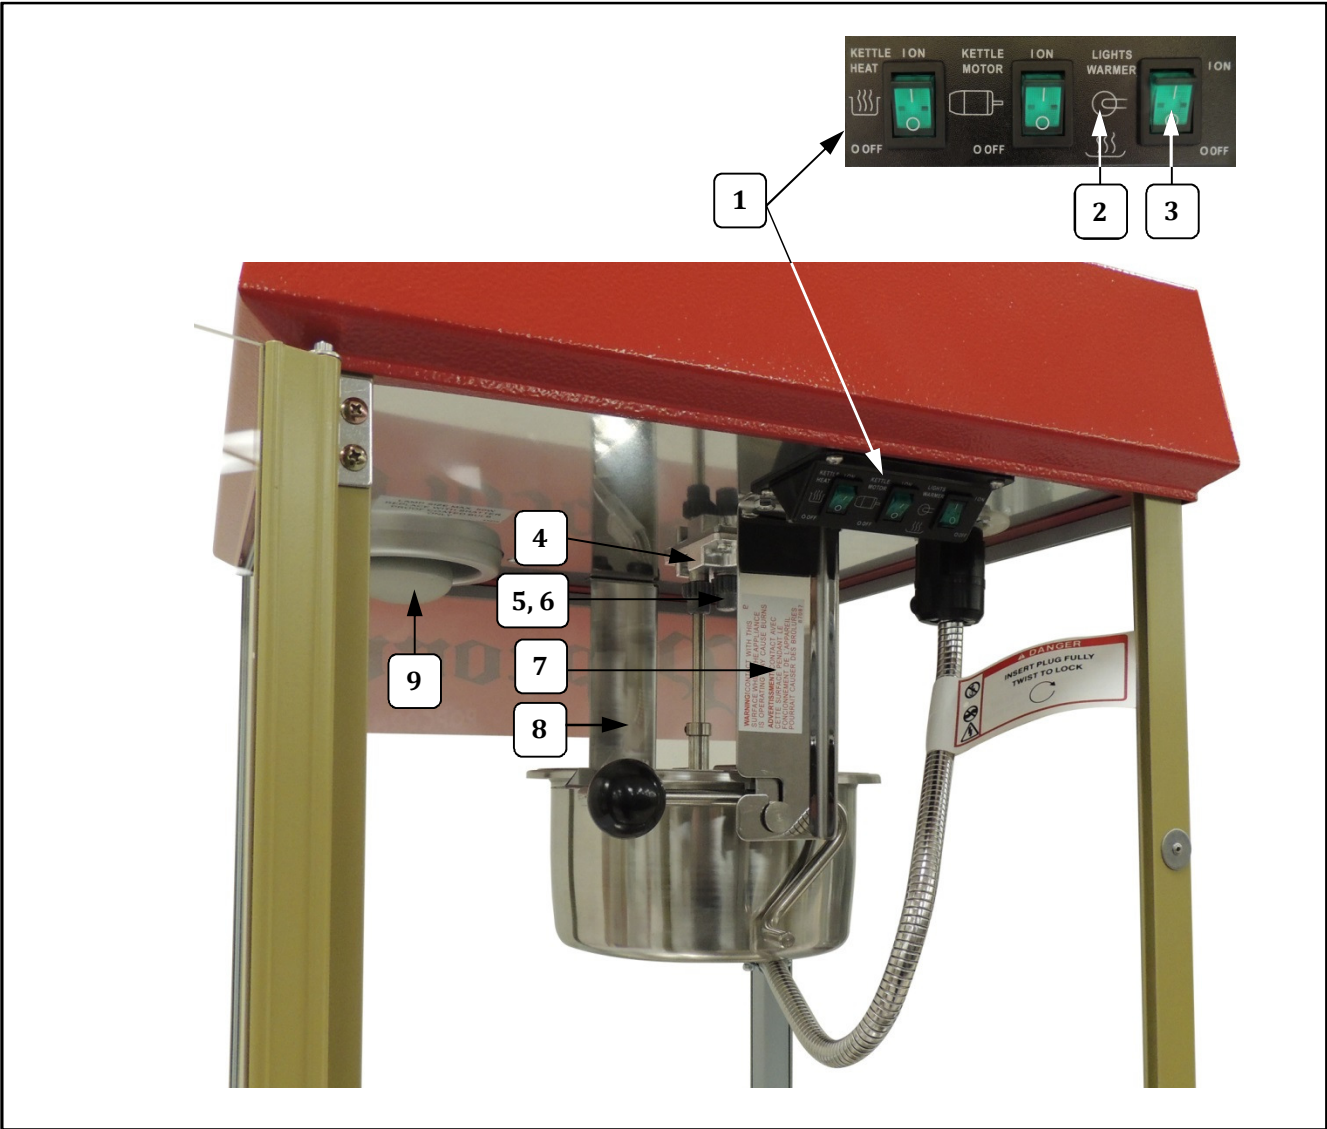

Item	Part No.	Model(s)	Part Description	Qty.
1	55076	ALL	SWITCH MOUNT BOX	1
2	44070	ALL	DECAL, SWITCH MOUNT SMALL	1
3	42532	ALL	DPST ROCKER SWITCH	3
4	67194A	ALL	GEAR BLOCK ASSEMBLY	1
5	47060	ALL	SPUR GEAR	1
6	41742	ALL	SET SCREW #10-32 X 3/16	1
7	49010	ALL	FRONT HANGER ARM	1
8	49009	ALL	REAR HANGER ARM	1
9	42947	2408	50W COATED BULB	1
	13122	2408EX	40W 240V COATED FLOOD	




Cabinet Interior

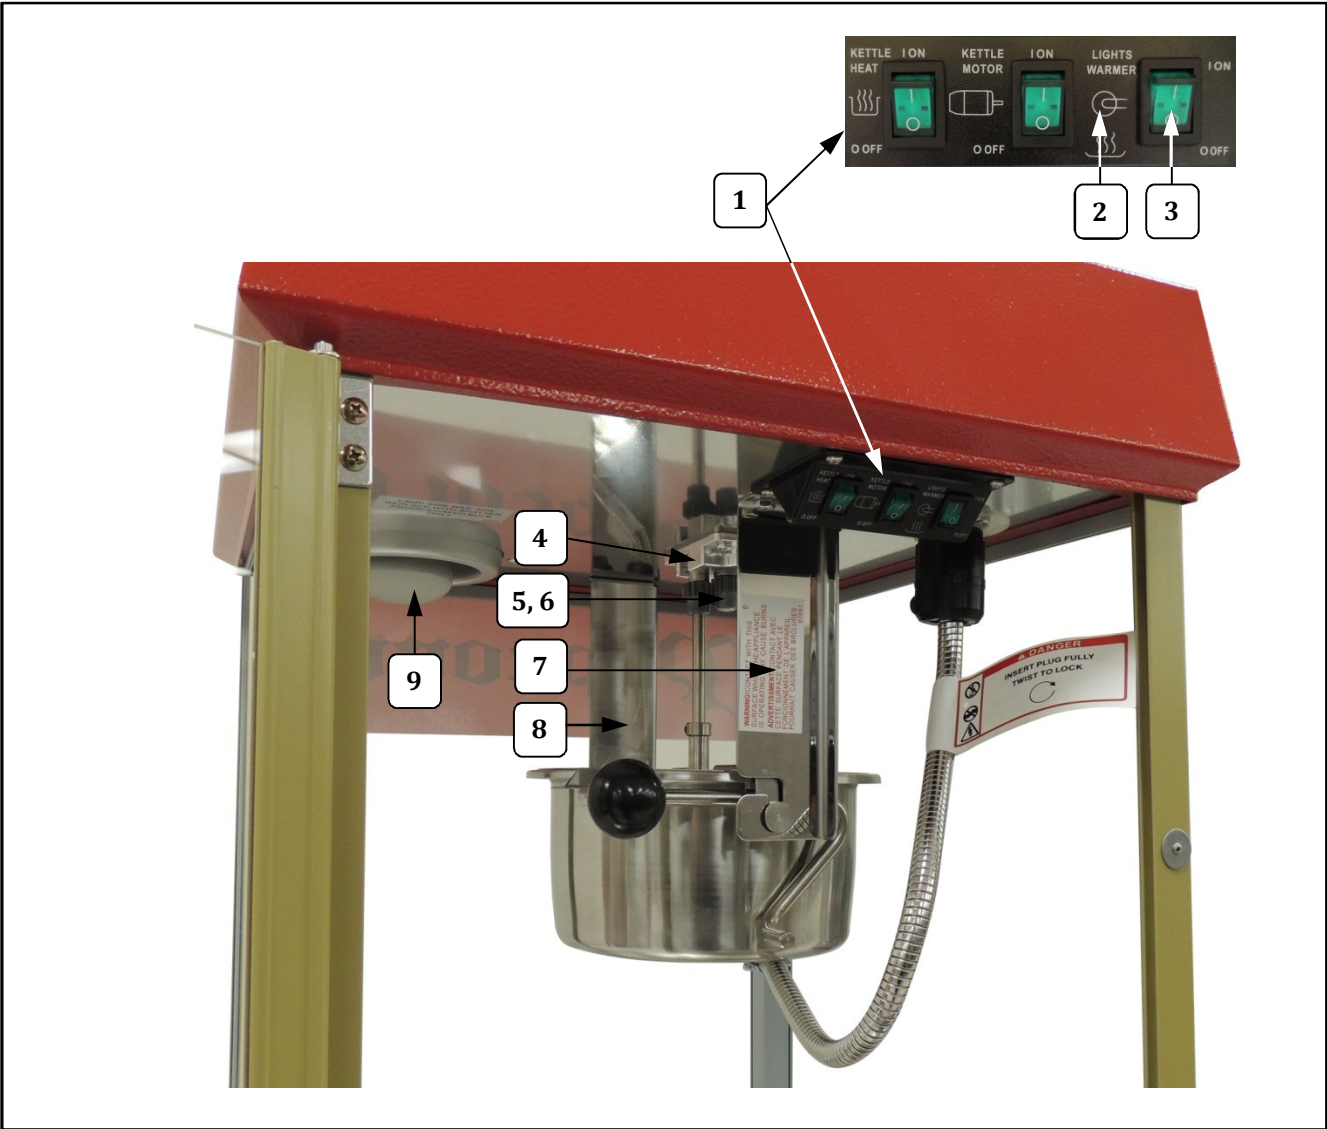

Item	Part No.	Model(s)	Part Description	Qty.
1	55076	ALL	SWITCH MOUNT BOX	1
2	44070	ALL	DECAL, SWITCH MOUNT SMALL	1
3	42532	ALL	DPST ROCKER SWITCH	3
4	67194A	ALL	GEAR BLOCK ASSEMBLY	1
5	47060	ALL	SPUR GEAR	1
6	41742	ALL	SET SCREW #10-32 X 3/16	1
7	49010	ALL	FRONT HANGER ARM	1
8	49009	ALL	REAR HANGER ARM	1
9	42947	2408	50W COATED BULB	1
	13122	2408EX	40W 240V COATED FLOOD	




Cabinet Bottom

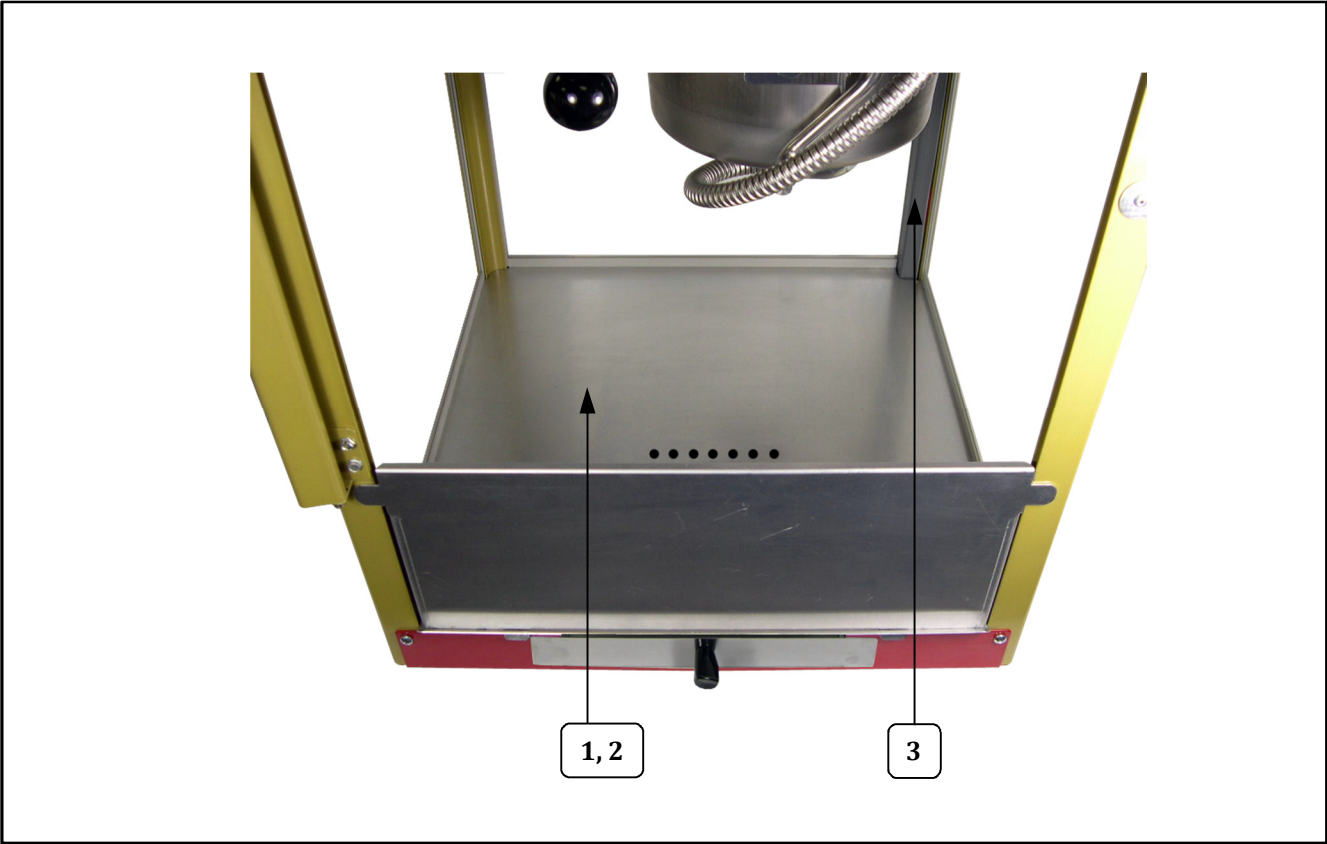

Item	Part No.	Model(s)	Part Description	Qty.
1	58110	ALL	CORN PAN	1
2	40557	2408	120V 20W FOIL HEATER (under corn pan)	1
	40557EX	2408EX	230V 20W FOIL HEATER (under corn pan)	1
3	58077	ALL	WIRE ROUTE COVER	1




Cabinet Bottom

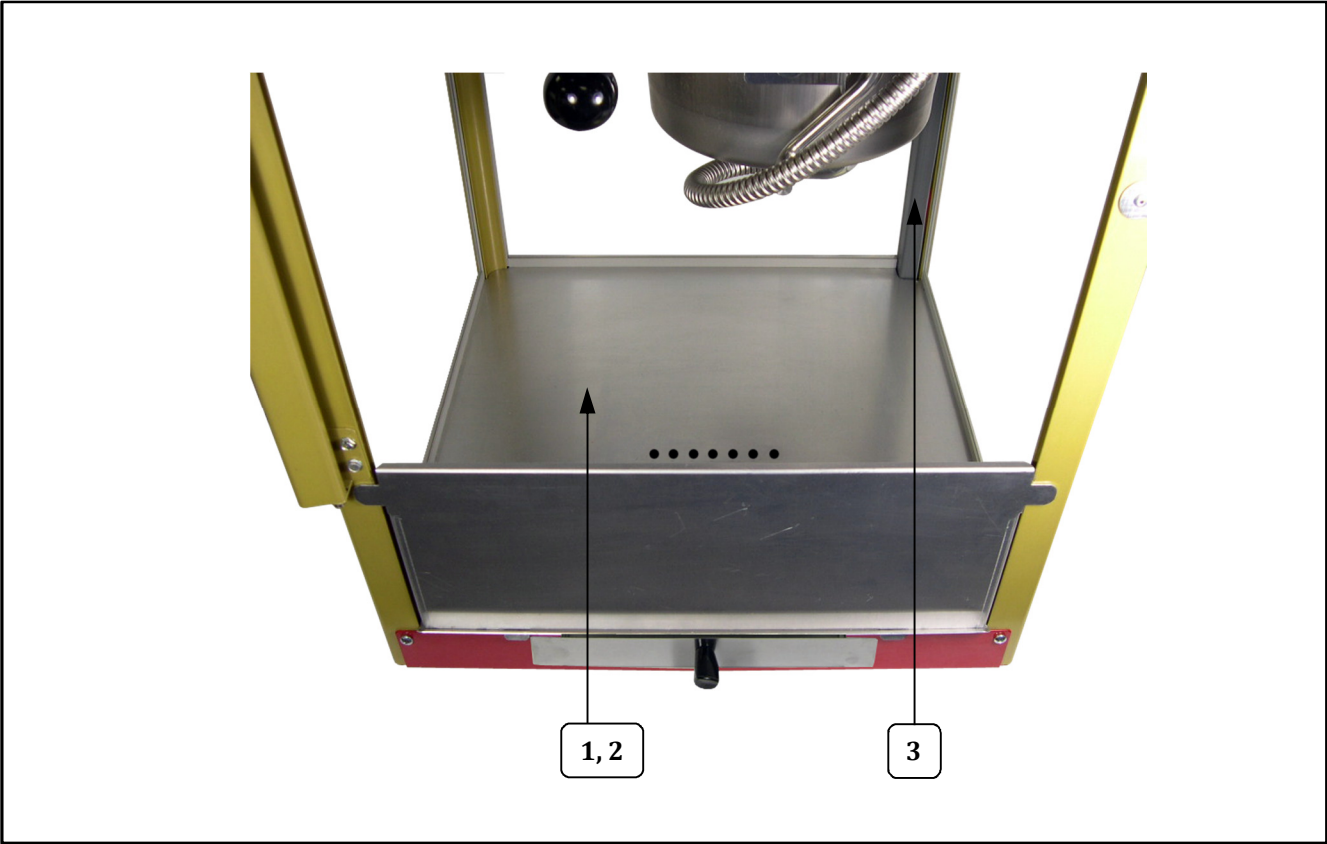

Item	Part No.	Model(s)	Part Description	Qty.
1	58110	ALL	CORN PAN	1
2	40557	2408	120V 20W FOIL HEATER (under corn pan)	1
	40557EX	2408EX	230V 20W FOIL HEATER (under corn pan)	1
3	58077	ALL	WIRE ROUTE COVER	1




Cabinet Bottom

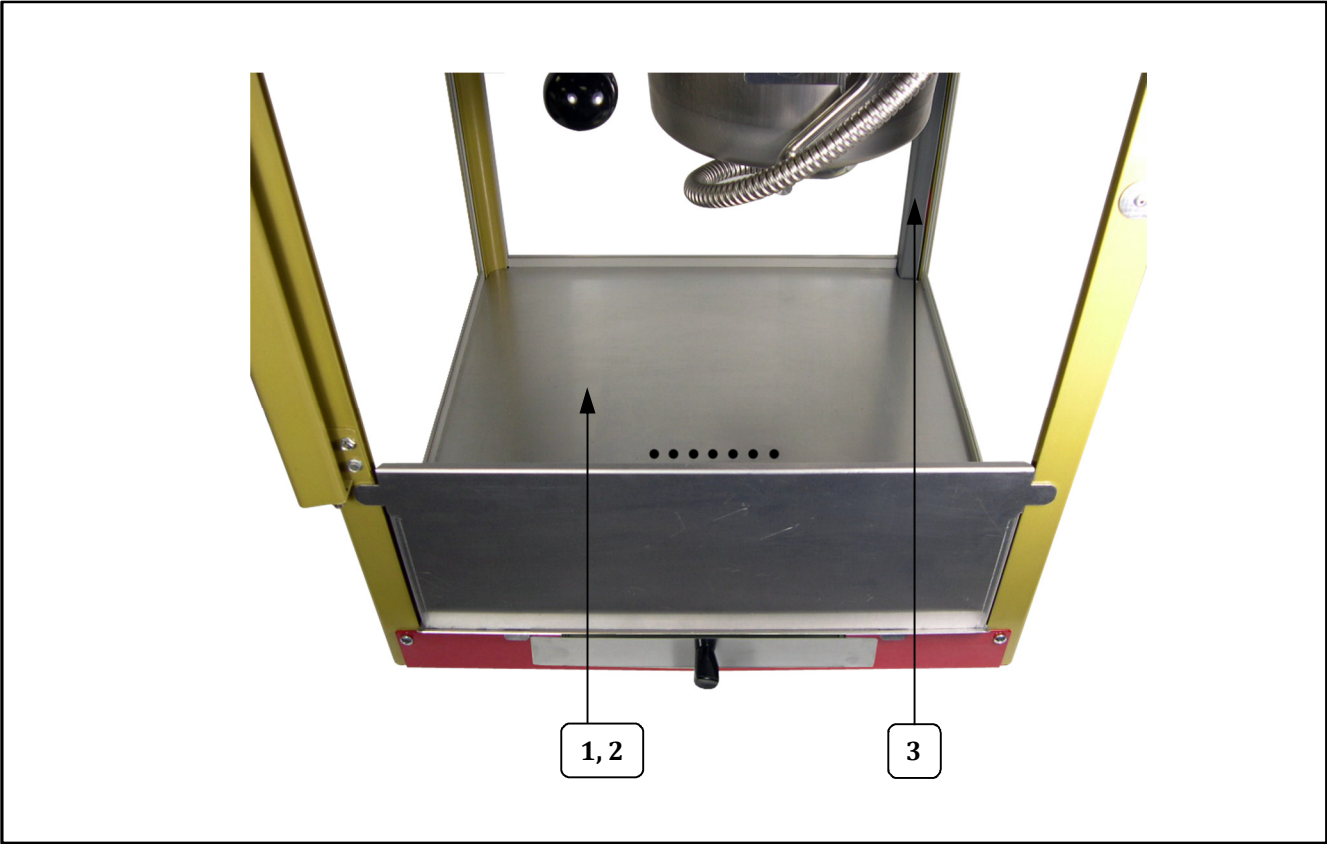

Item	Part No.	Model(s)	Part Description	Qty.
1	58110	ALL	CORN PAN	1
2	40557	2408	120V 20W FOIL HEATER (under corn pan)	1
	40557EX	2408EX	230V 20W FOIL HEATER (under corn pan)	1
3	58077	ALL	WIRE ROUTE COVER	1




Cabinet Bottom

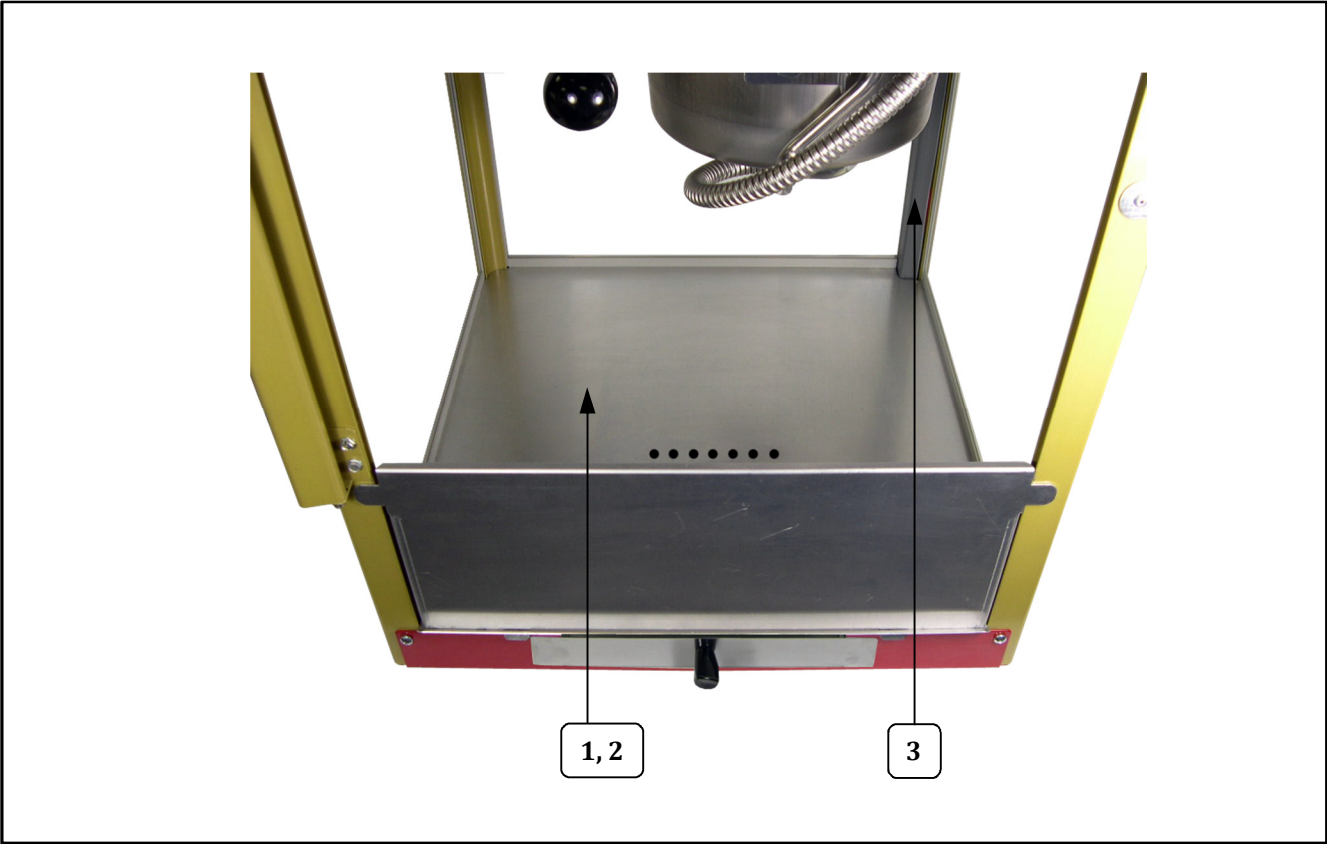

Item	Part No.	Model(s)	Part Description	Qty.
1	58110	ALL	CORN PAN	1
2	40557	2408	120V 20W FOIL HEATER (under corn pan)	1
	40557EX	2408EX	230V 20W FOIL HEATER (under corn pan)	1
3	58077	ALL	WIRE ROUTE COVER	1




Motor Plate

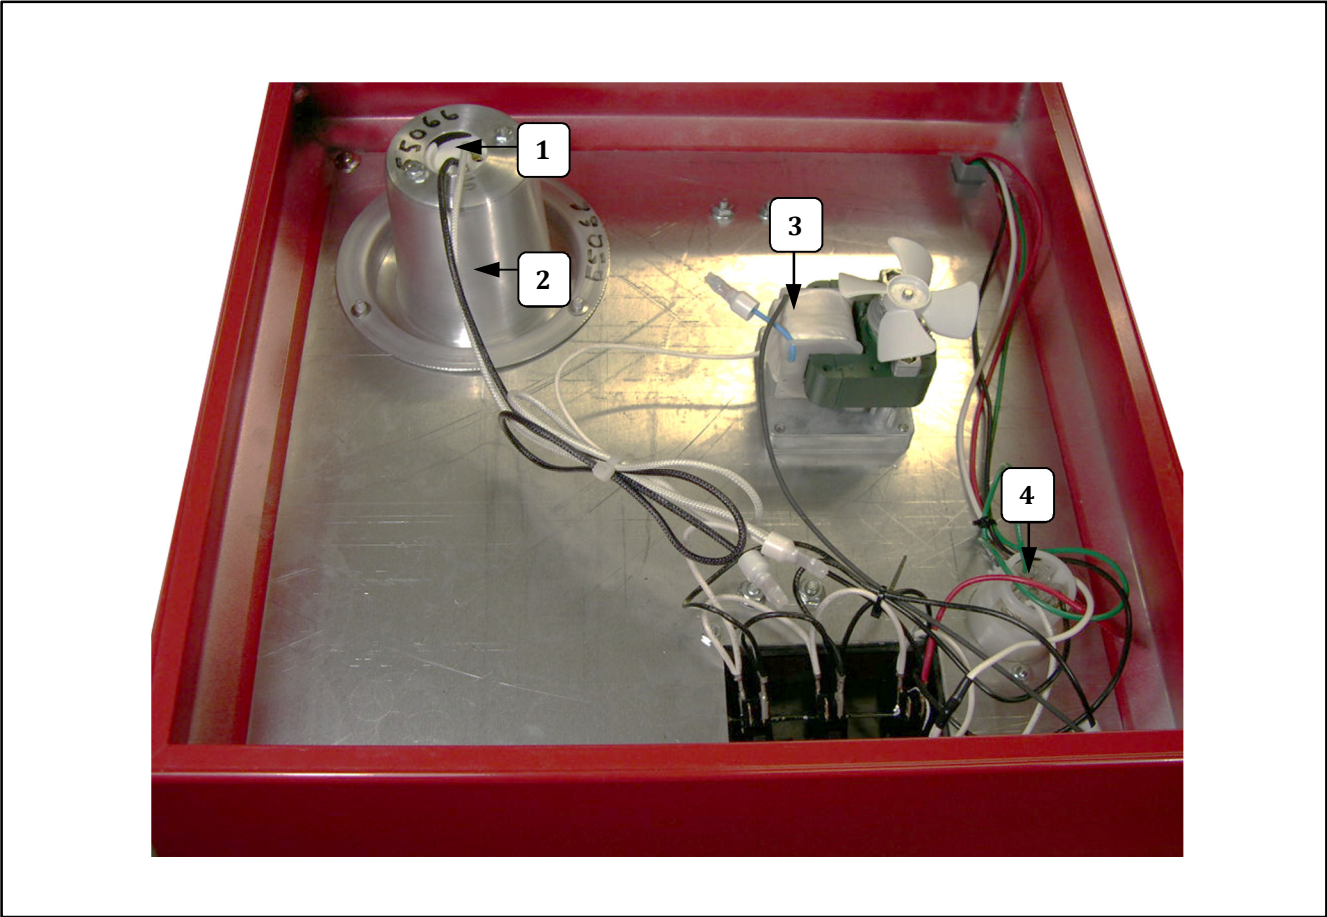

Item	Part No.	Model(s)	Part Description	Qty.
1	56050	ALL	LIGHT BULB SOCKET	1
2	55066	ALL	LIGHT CONE	1
3	47038	2408	KETTLE DRIVE MOTOR 120V	1
	47067	2408EX	KETTLE DRIVE MOTOR 230V	
4	49330	ALL	15A KETTLE RECEPTACLE	1




Motor Plate

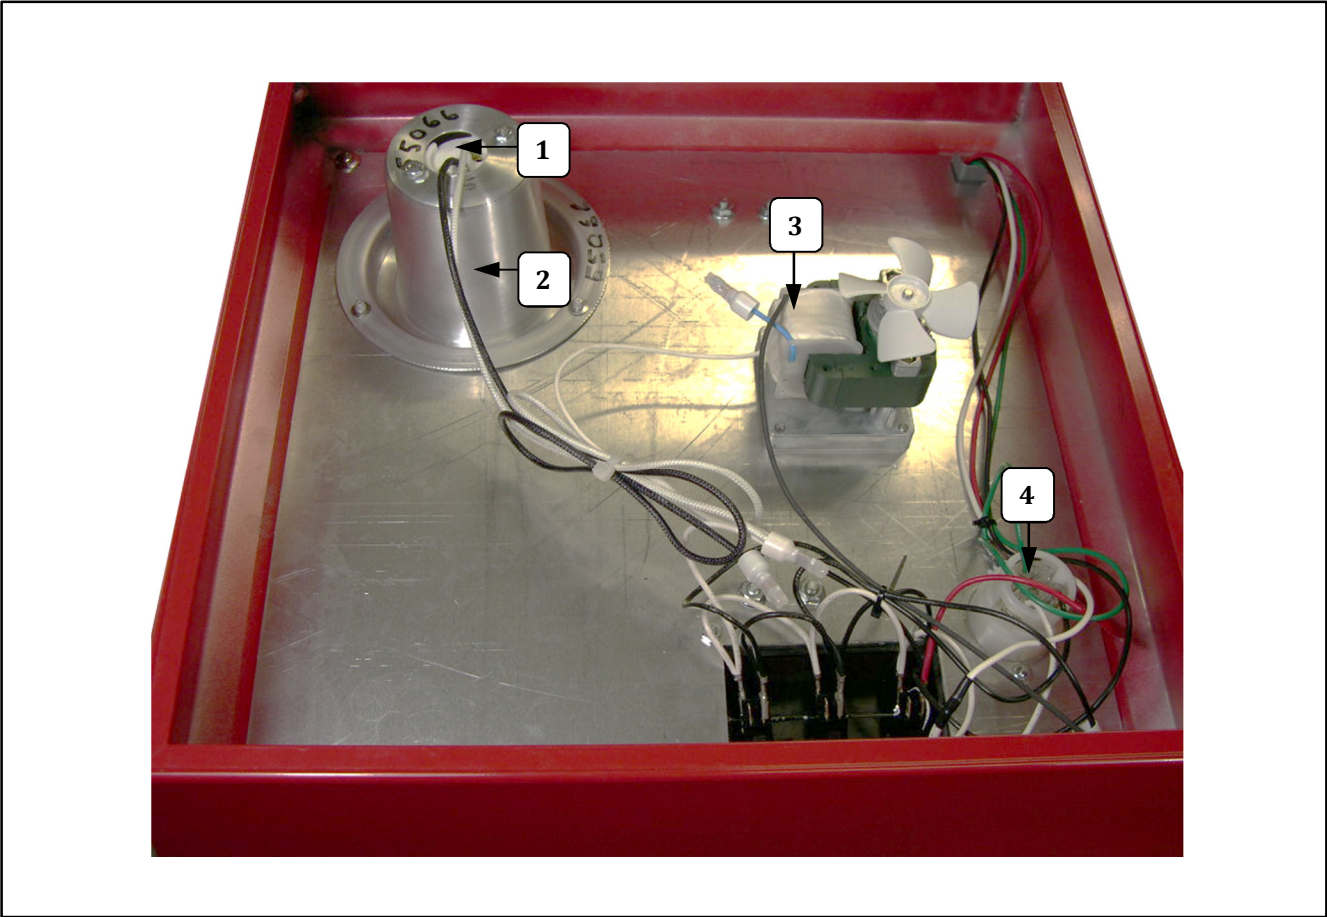

Item	Part No.	Model(s)	Part Description	Qty.
1	56050	ALL	LIGHT BULB SOCKET	1
2	55066	ALL	LIGHT CONE	1
3	47038	2408	KETTLE DRIVE MOTOR 120V	1
	47067	2408EX	KETTLE DRIVE MOTOR 230V	
4	49330	ALL	15A KETTLE RECEPTACLE	1




Motor Plate

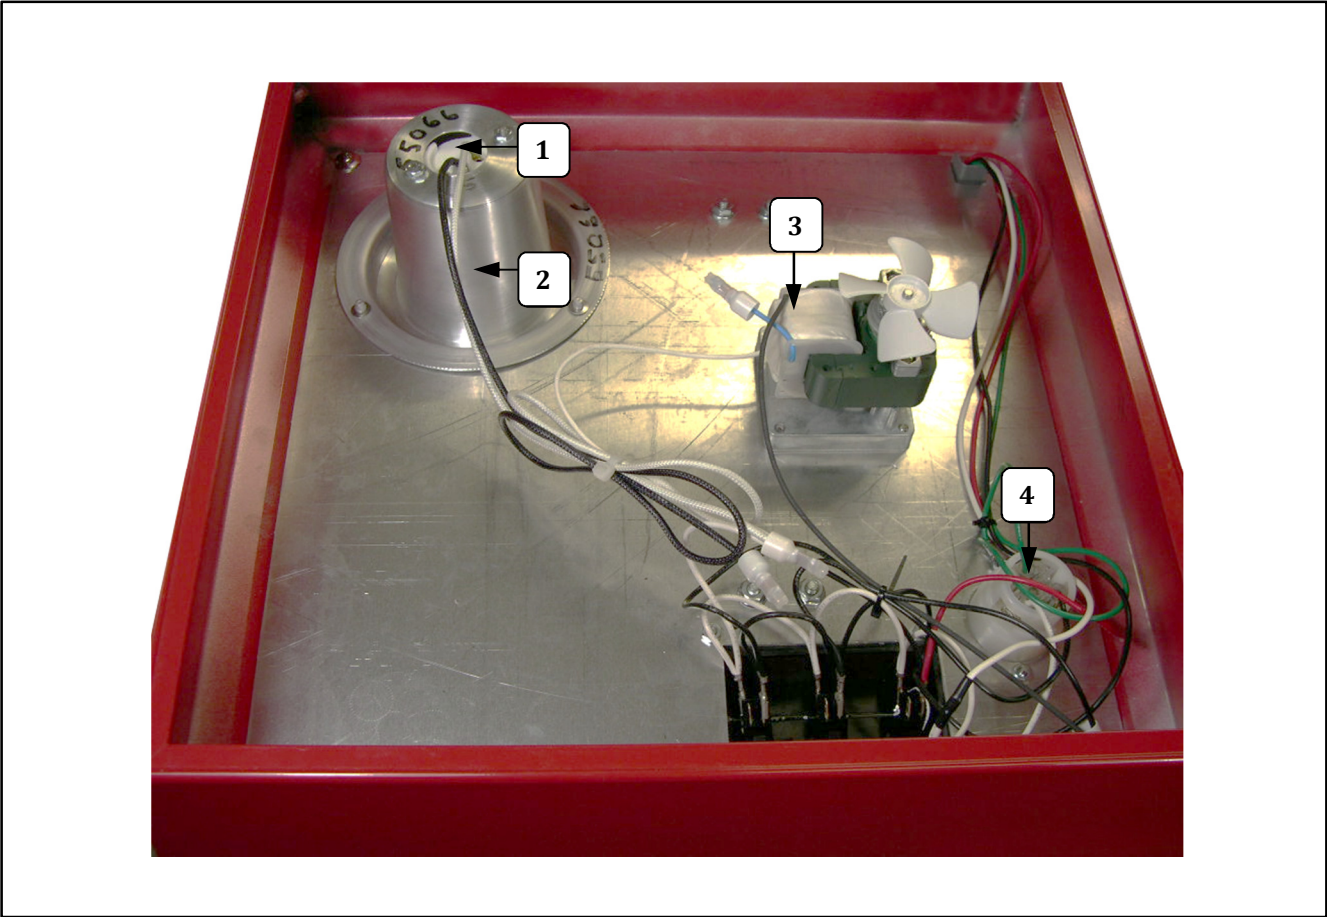

Item	Part No.	Model(s)	Part Description	Qty.
1	56050	ALL	LIGHT BULB SOCKET	1
2	55066	ALL	LIGHT CONE	1
3	47038	2408	KETTLE DRIVE MOTOR 120V	1
	47067	2408EX	KETTLE DRIVE MOTOR 230V	
4	49330	ALL	15A KETTLE RECEPTACLE	1




Motor Plate

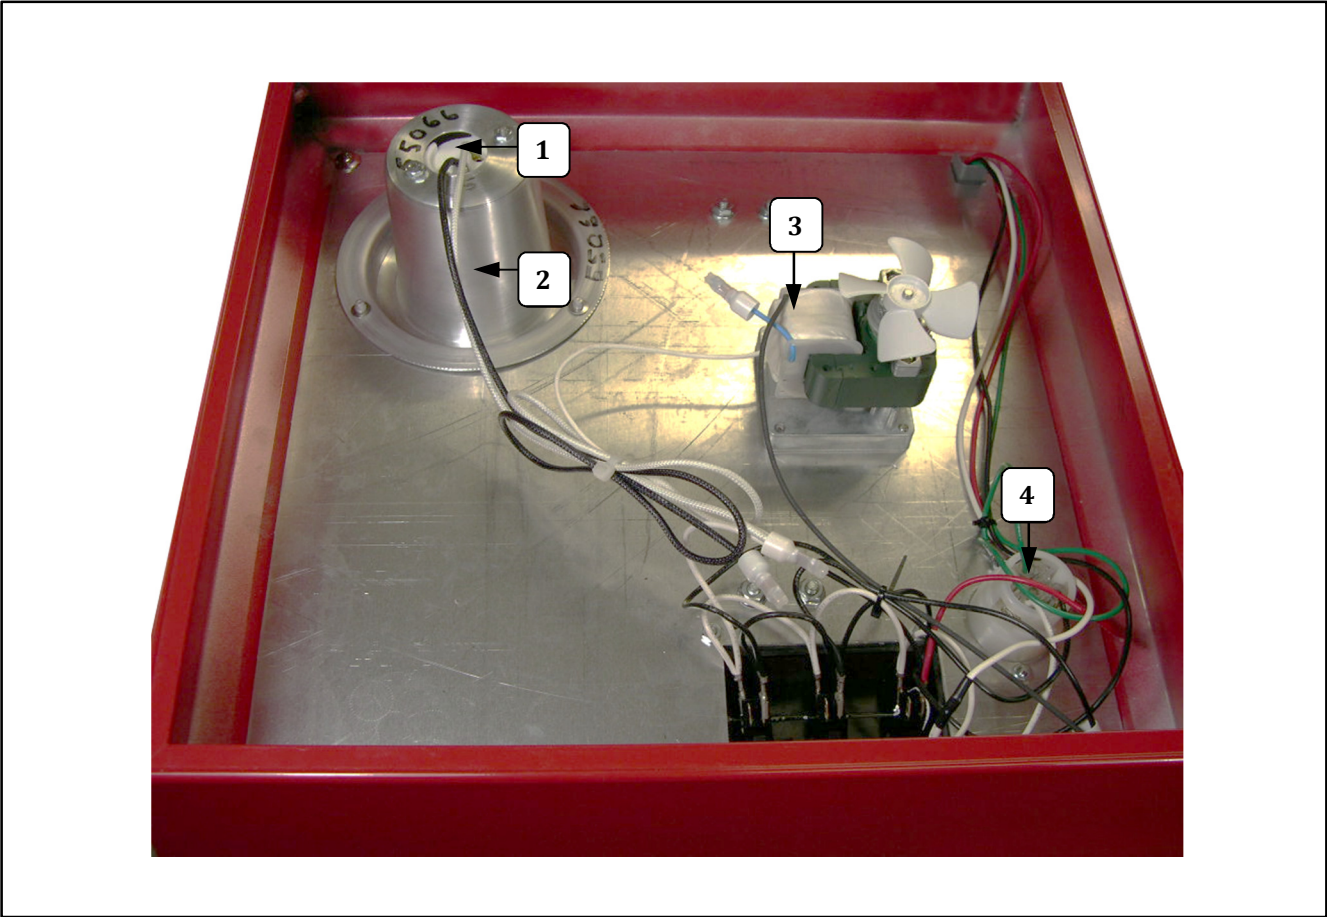

Item	Part No.	Model(s)	Part Description	Qty.
1	56050	ALL	LIGHT BULB SOCKET	1
2	55066	ALL	LIGHT CONE	1
3	47038	2408	KETTLE DRIVE MOTOR 120V	1
	47067	2408EX	KETTLE DRIVE MOTOR 230V	
4	49330	ALL	15A KETTLE RECEPTACLE	1




Motor Plate

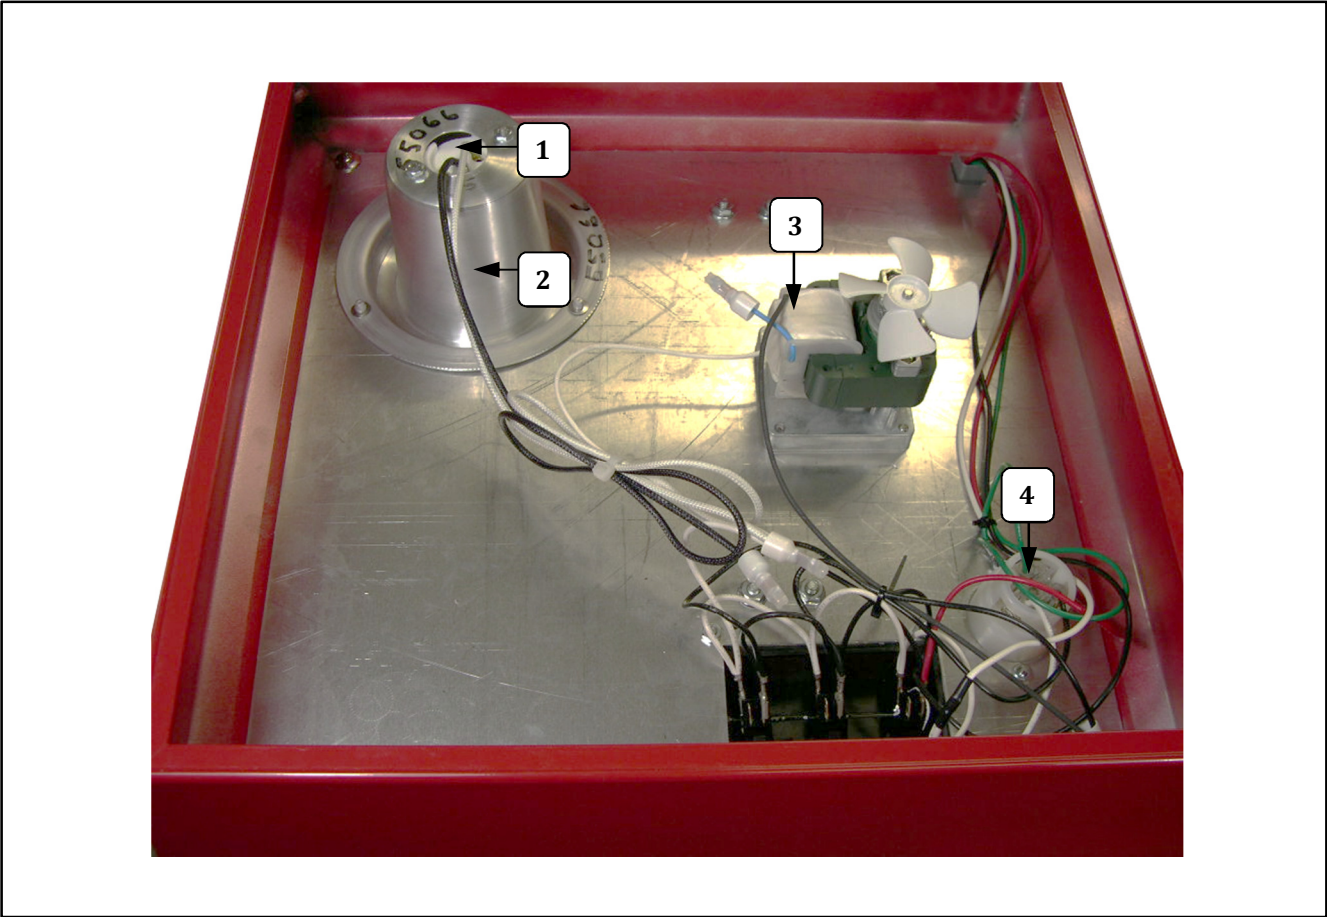


Item	Part No.	Model(s)	Part Description	Qty.
1	56050	ALL	LIGHT BULB SOCKET	1
2	55066	ALL	LIGHT CONE	1
3	47038	2408	KETTLE DRIVE MOTOR 120V	1
	47067	2408EX	KETTLE DRIVE MOTOR 230V	
4	49330	ALL	15A KETTLE RECEPTACLE	1

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

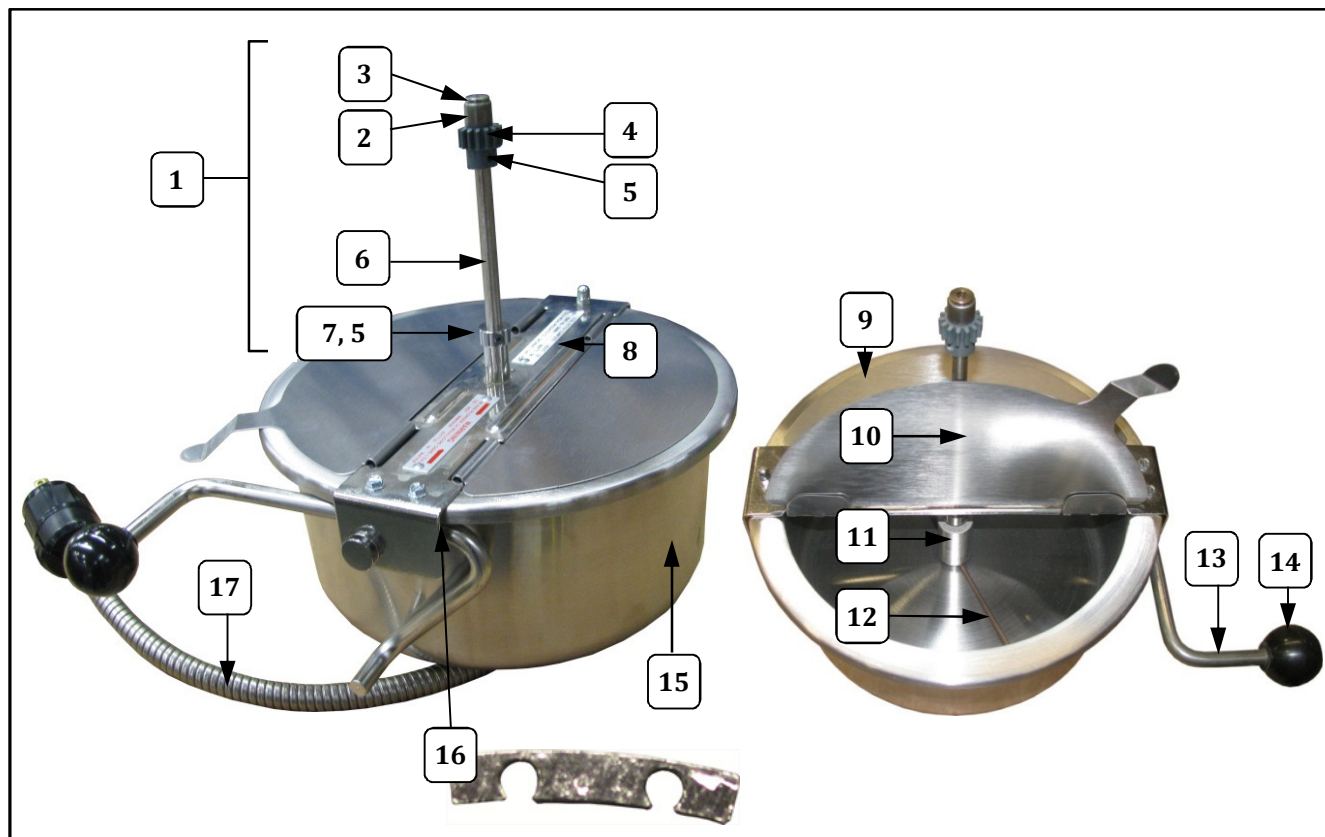


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

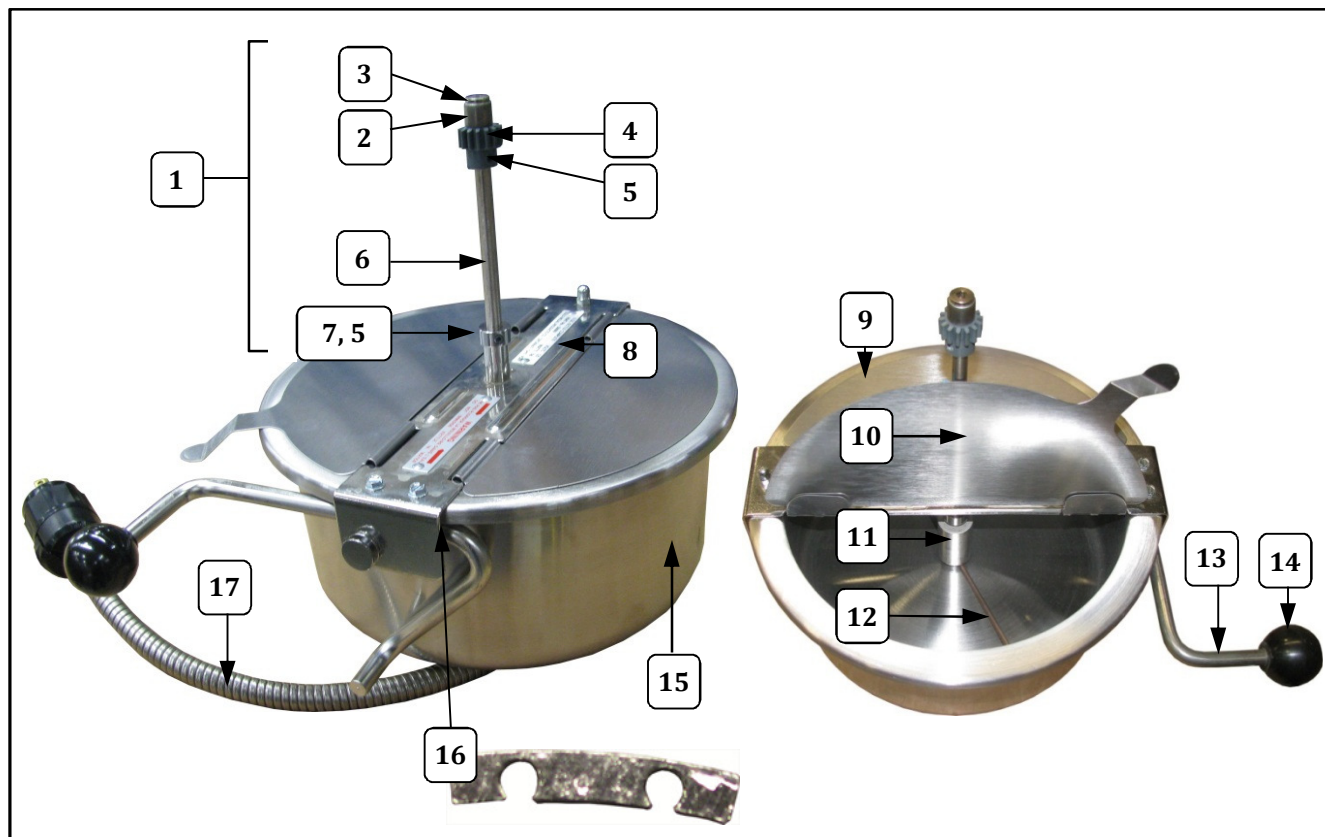


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

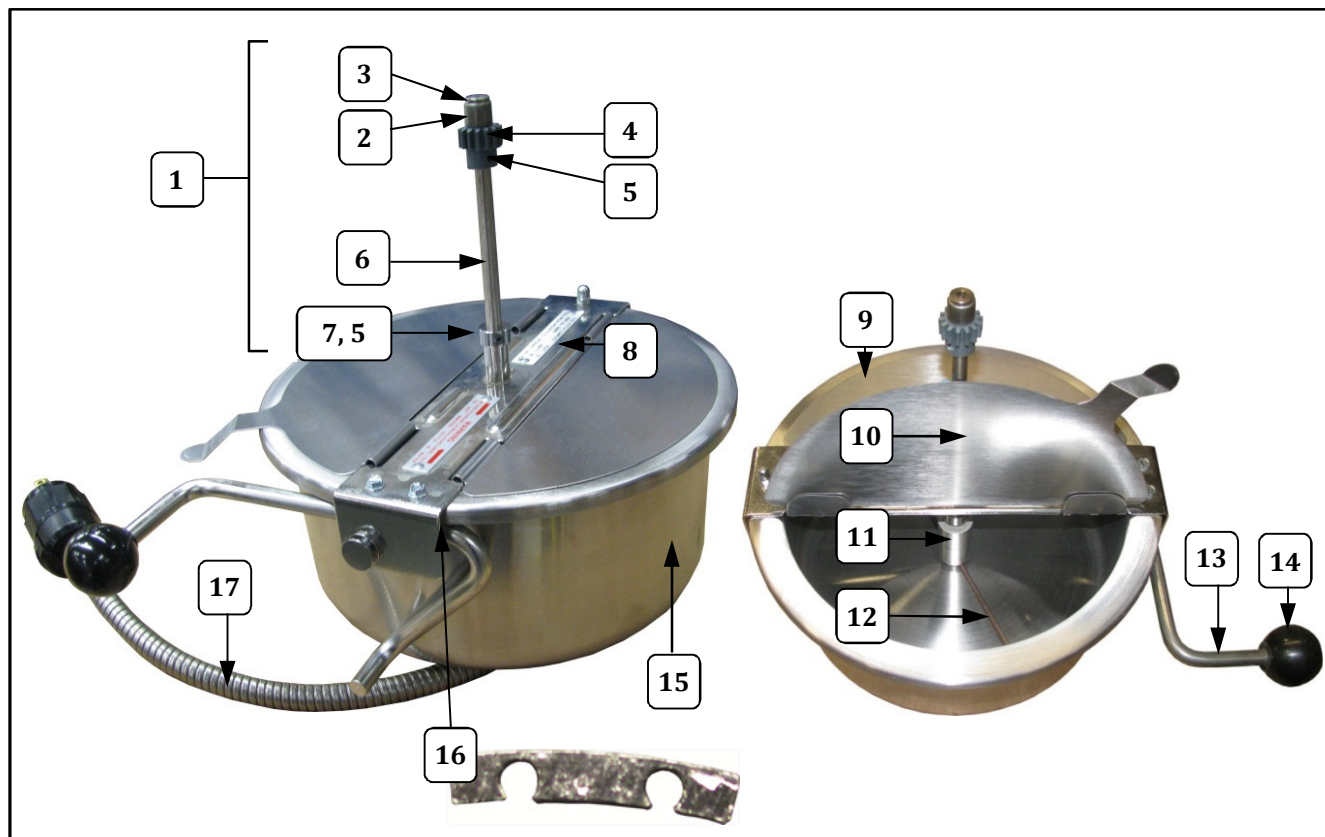


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

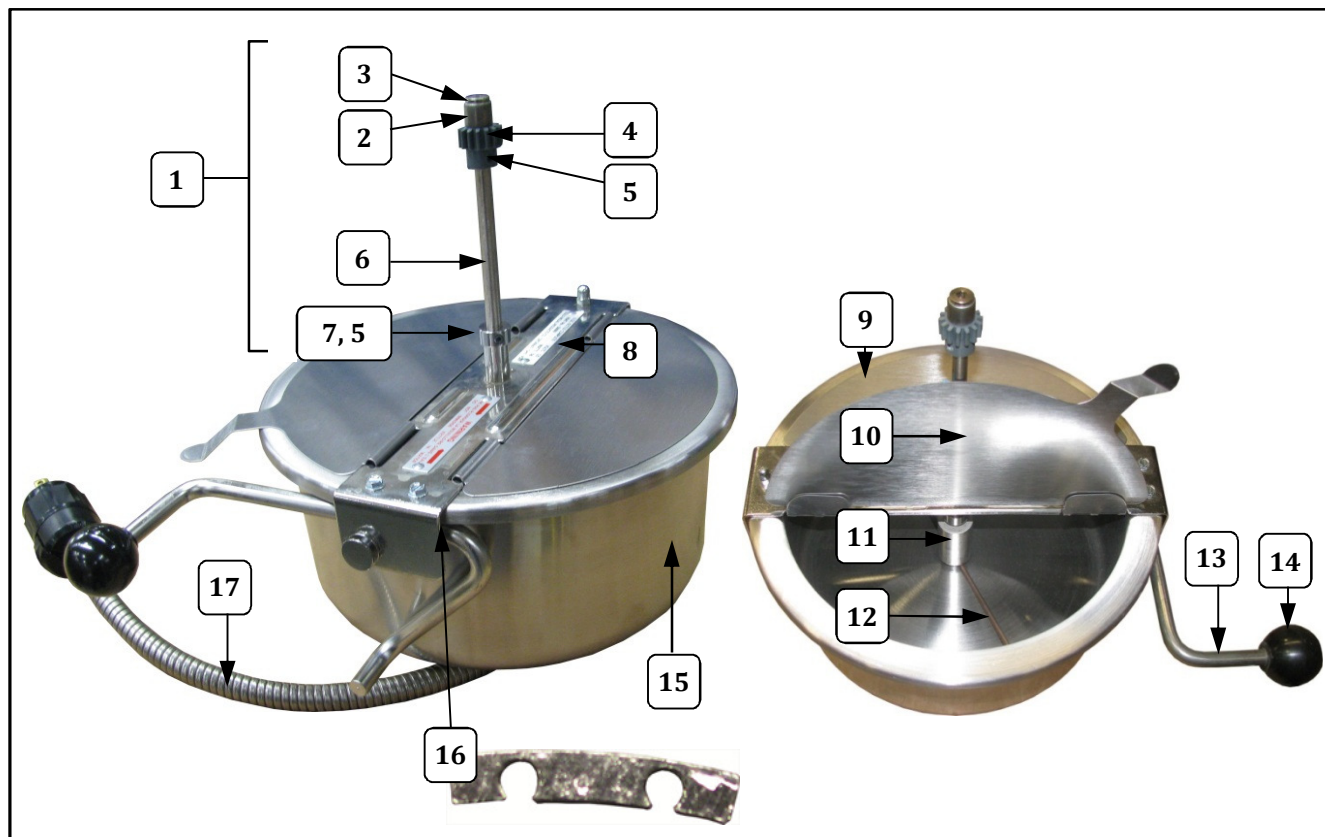


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

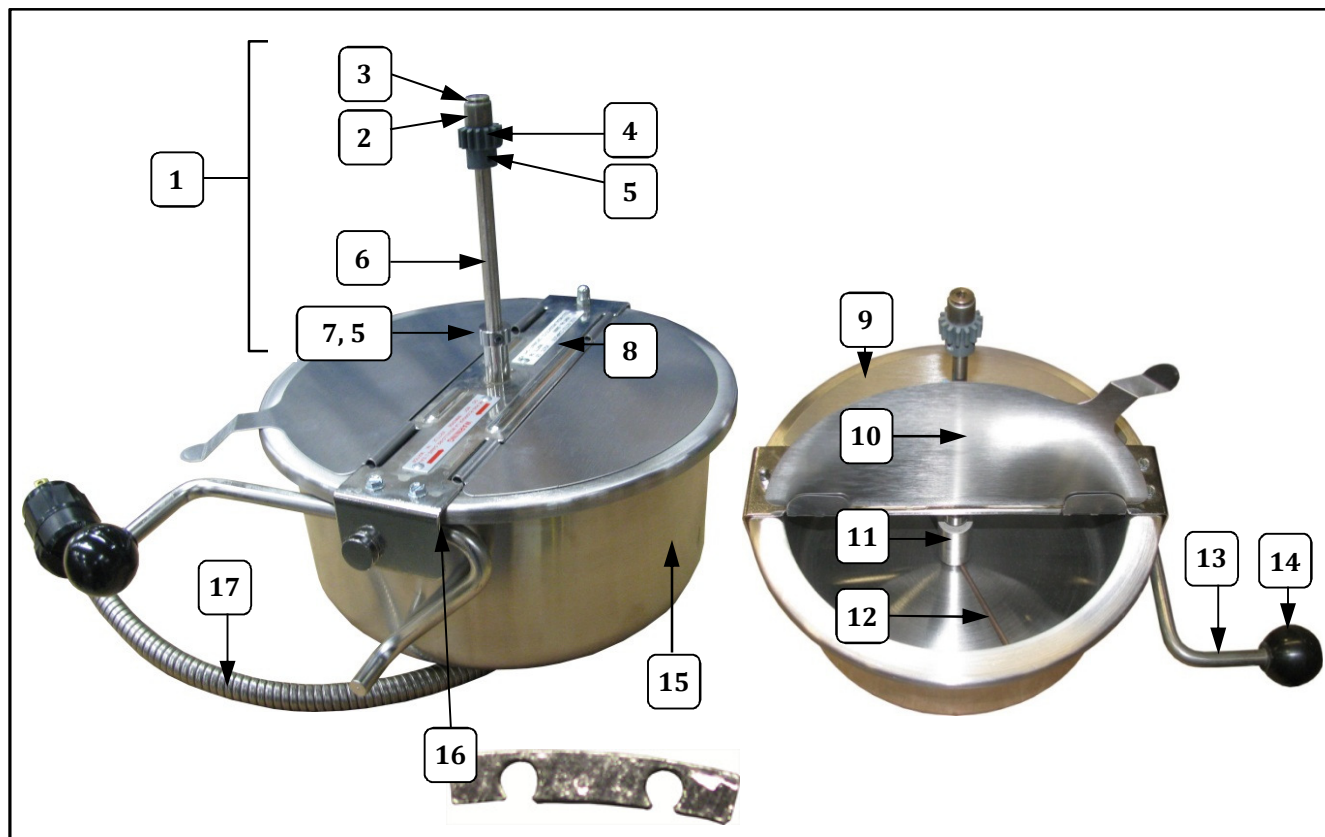


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

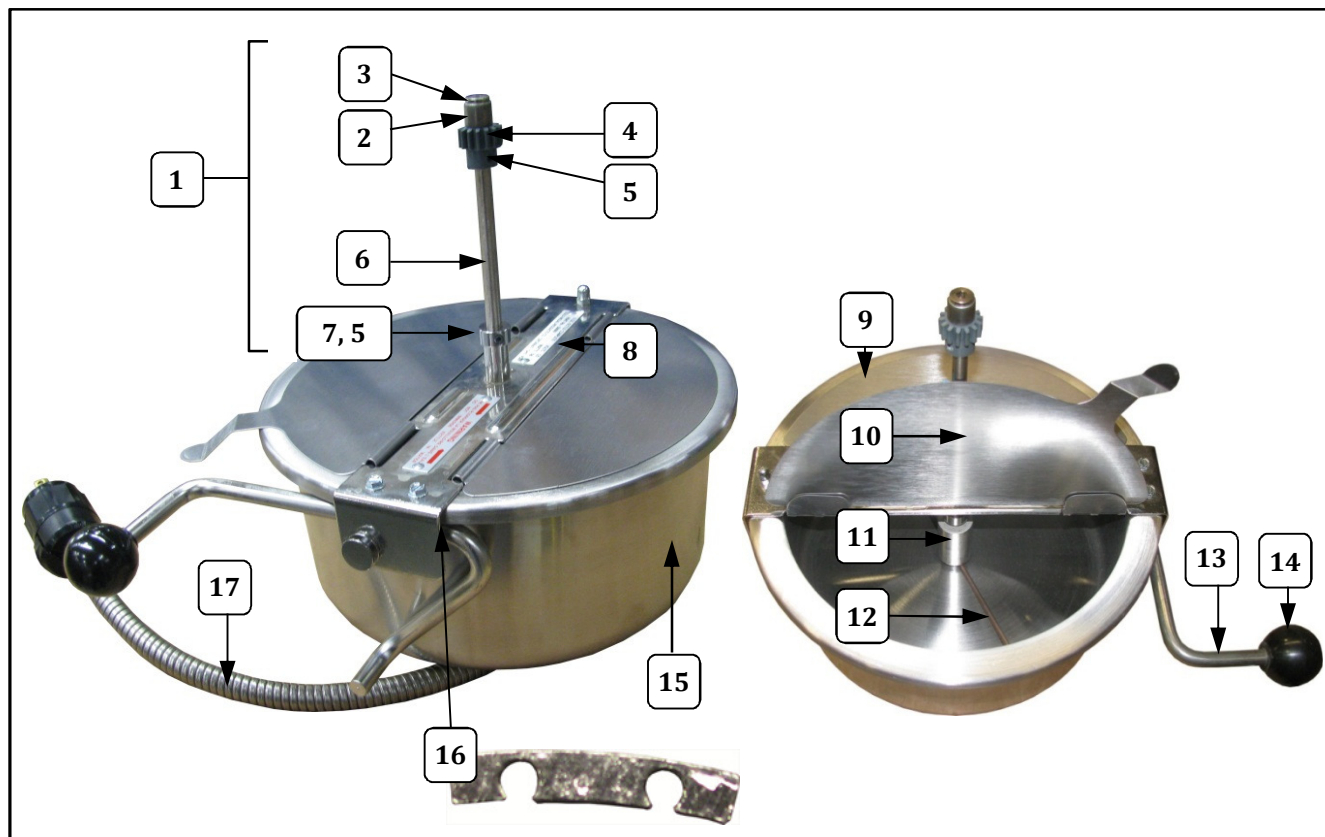


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

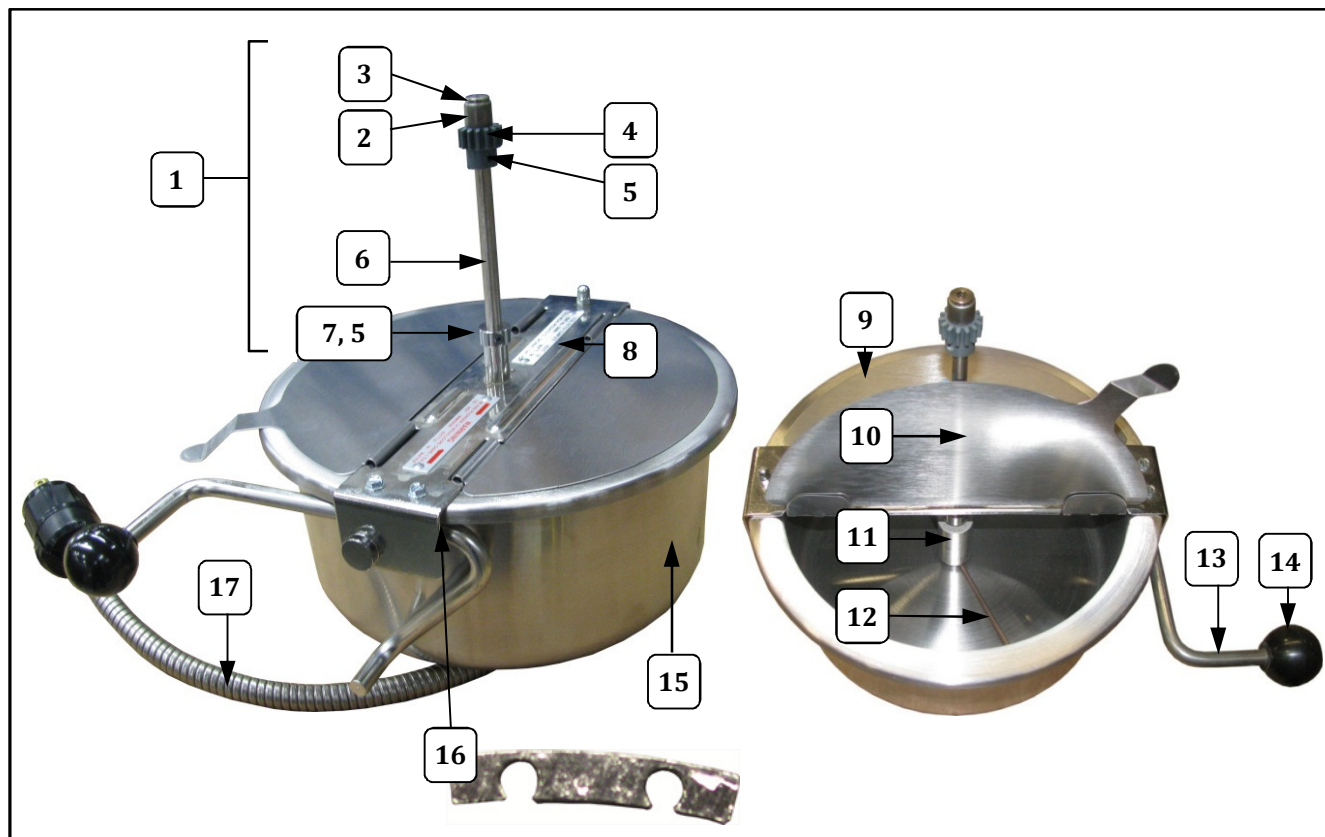


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

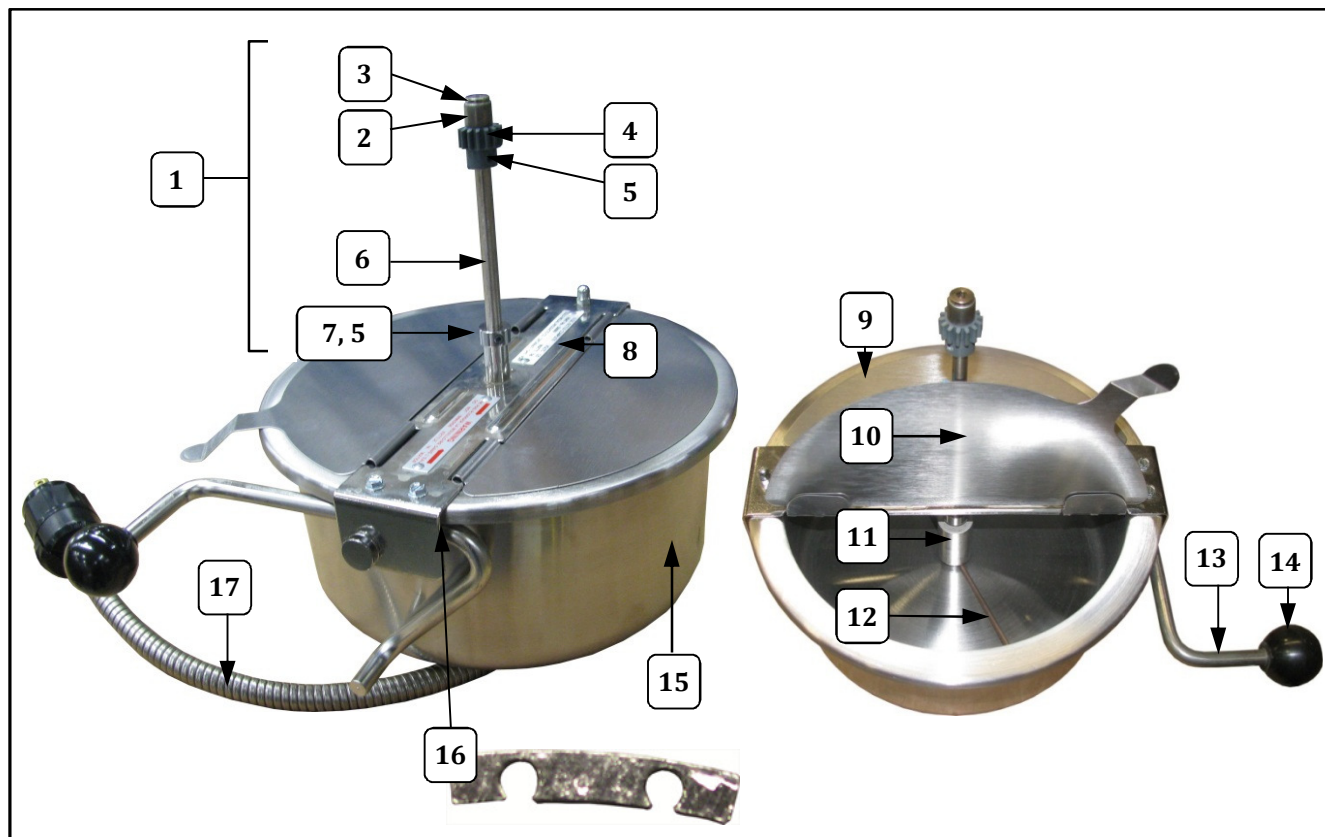


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

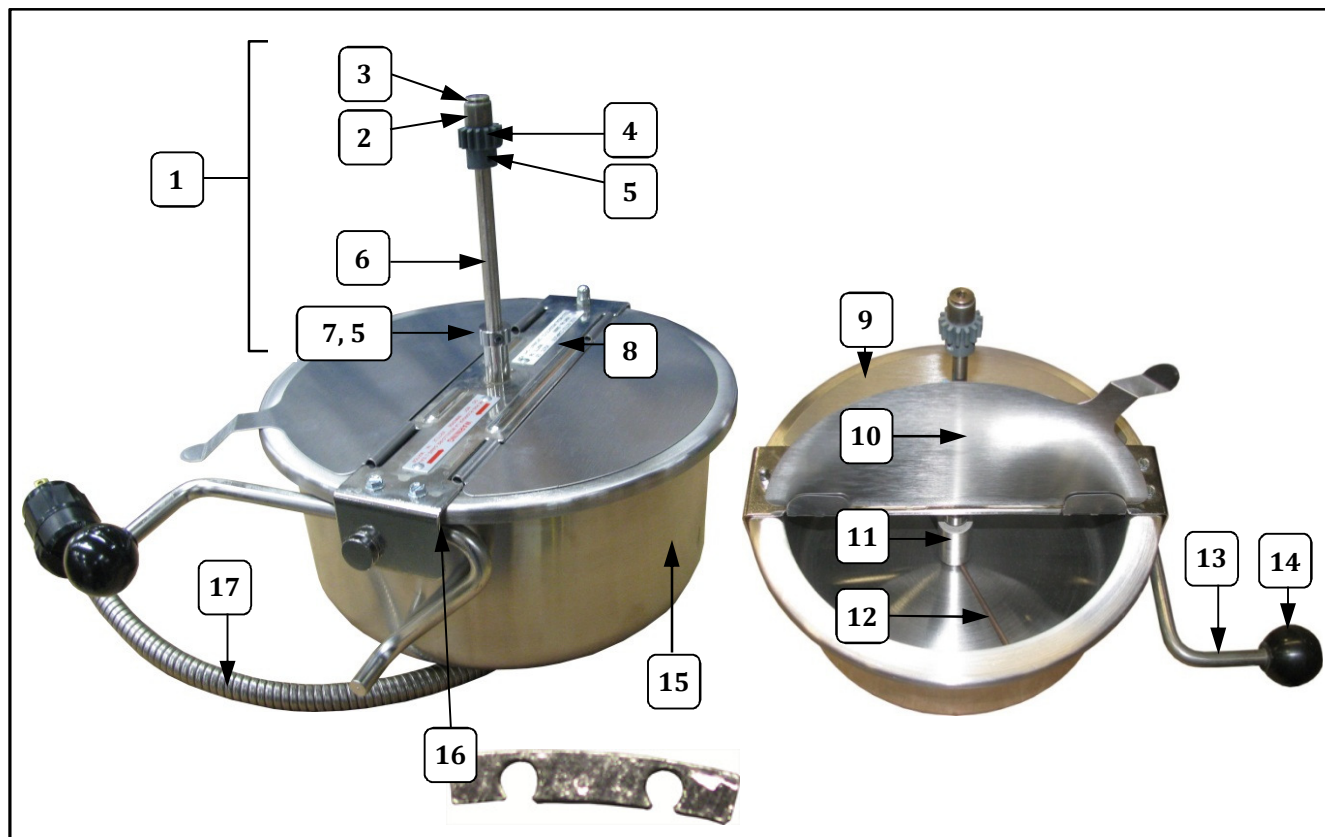


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

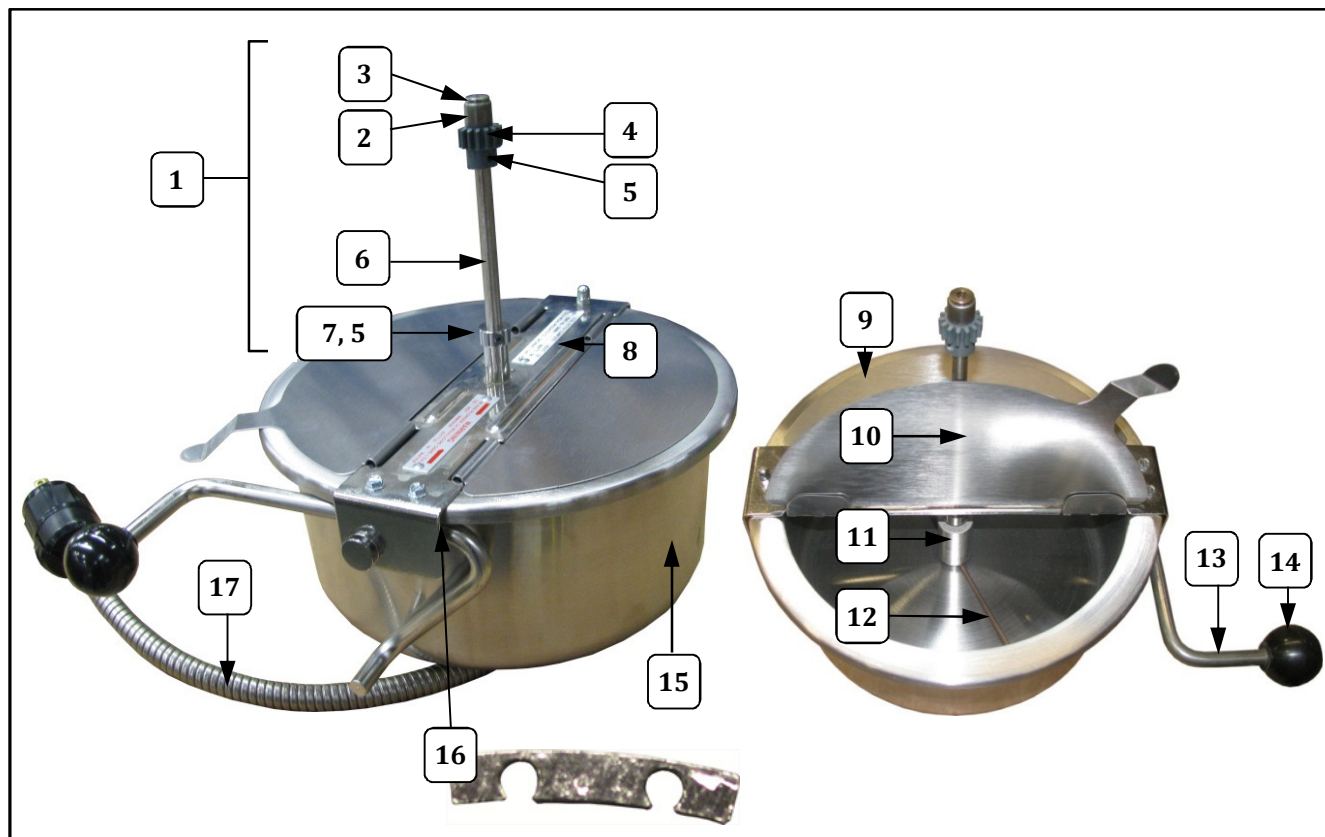


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

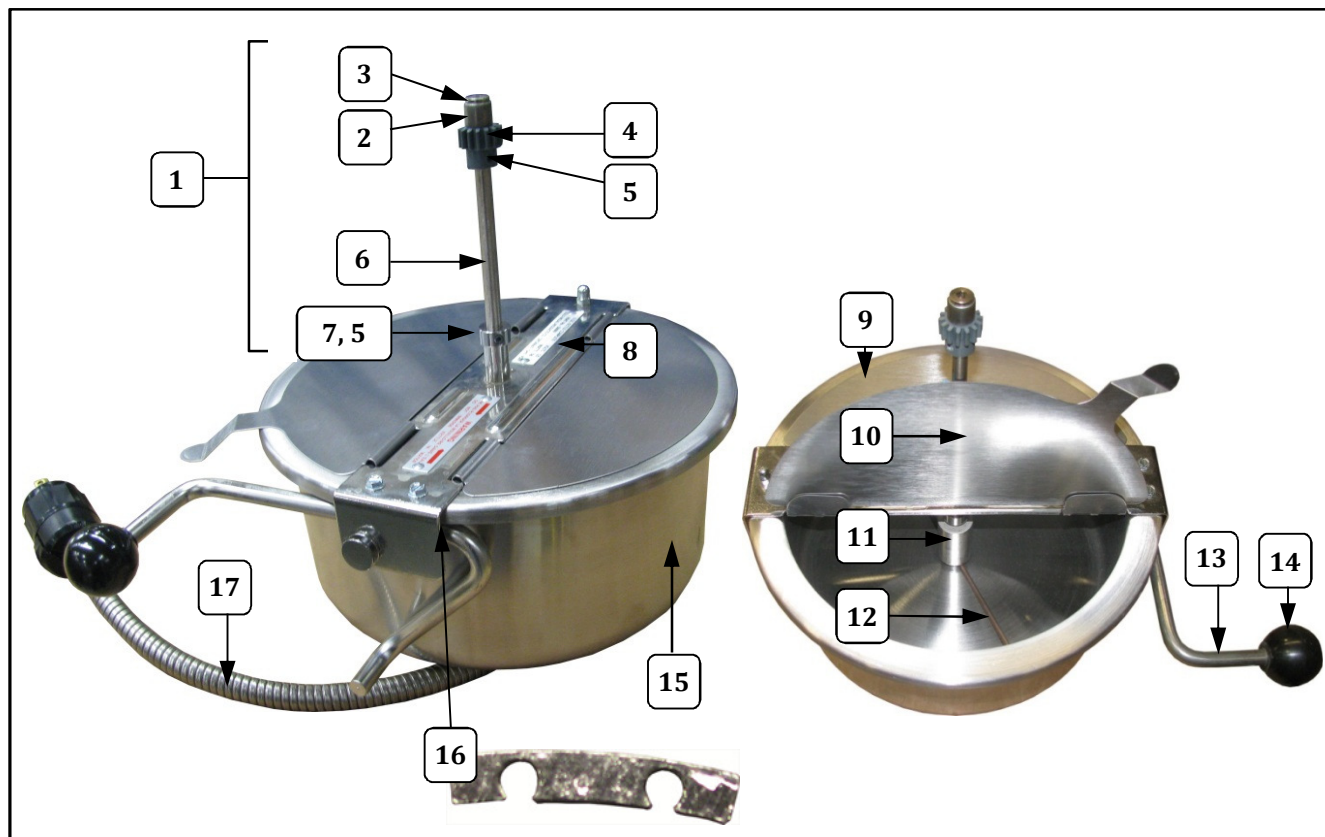


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

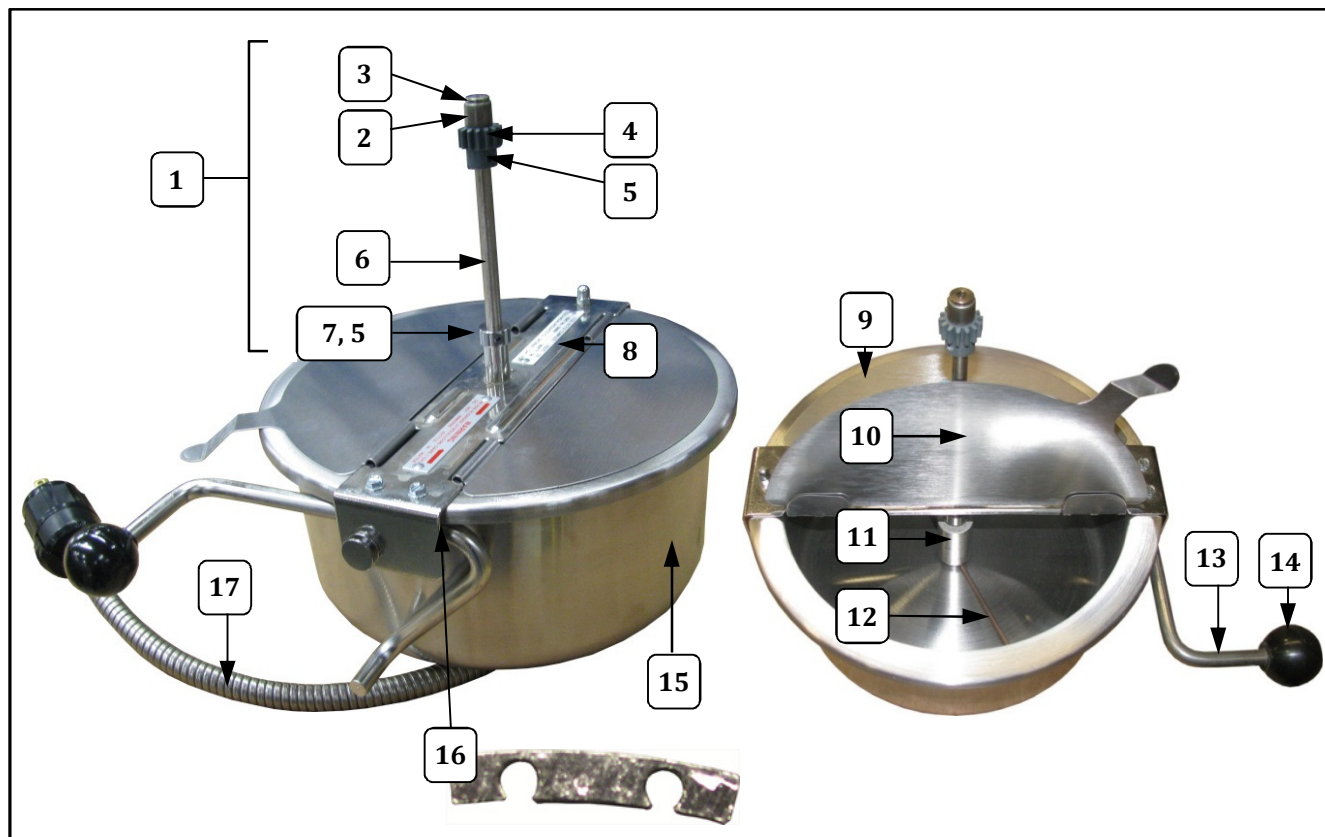


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

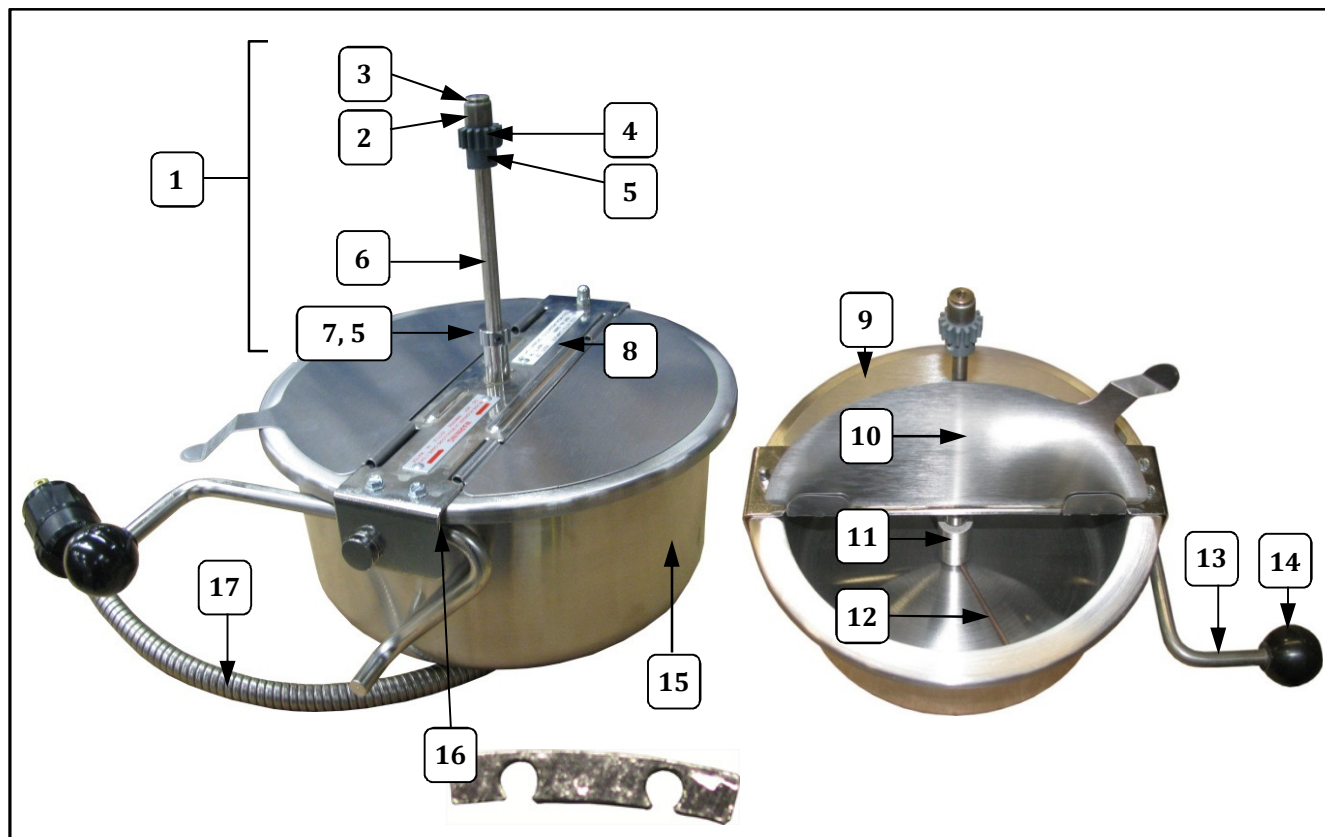


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

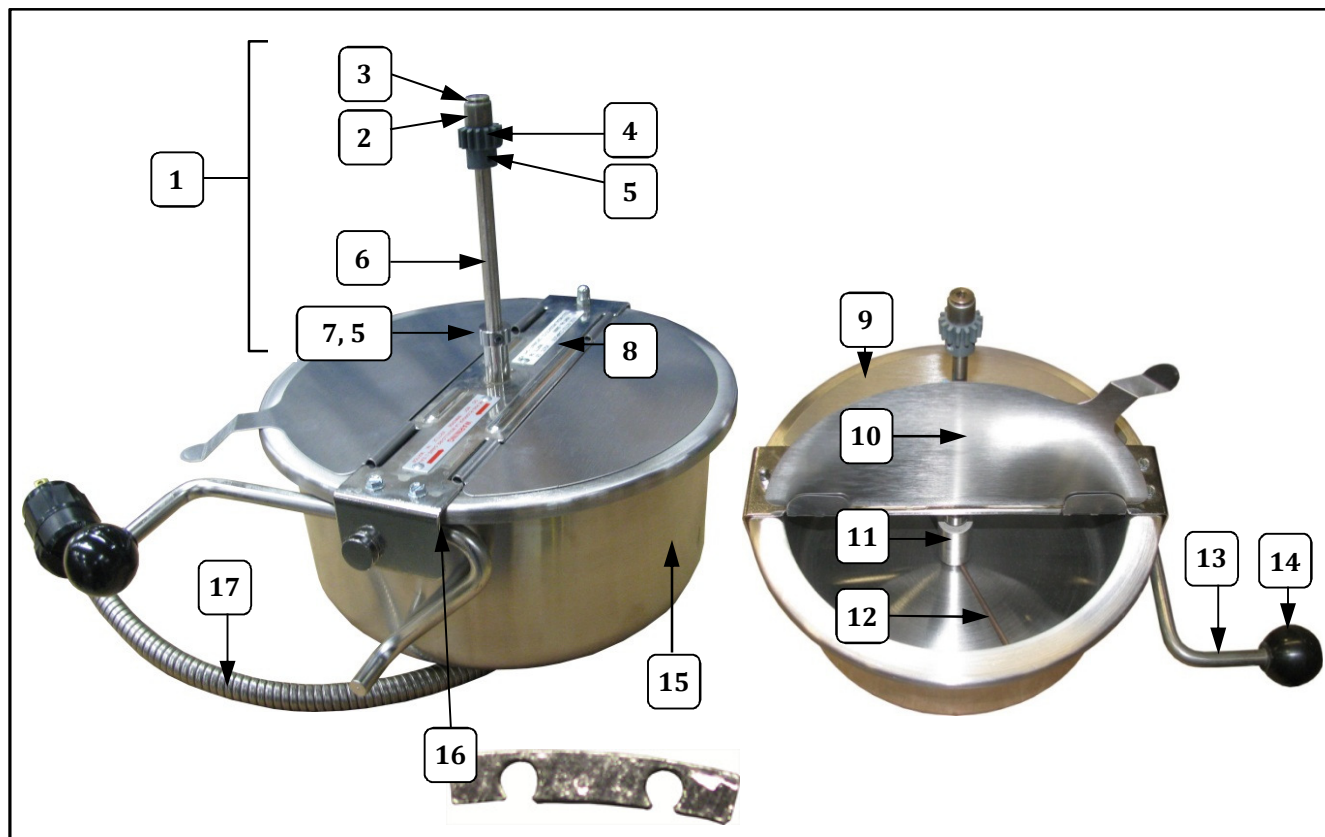


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

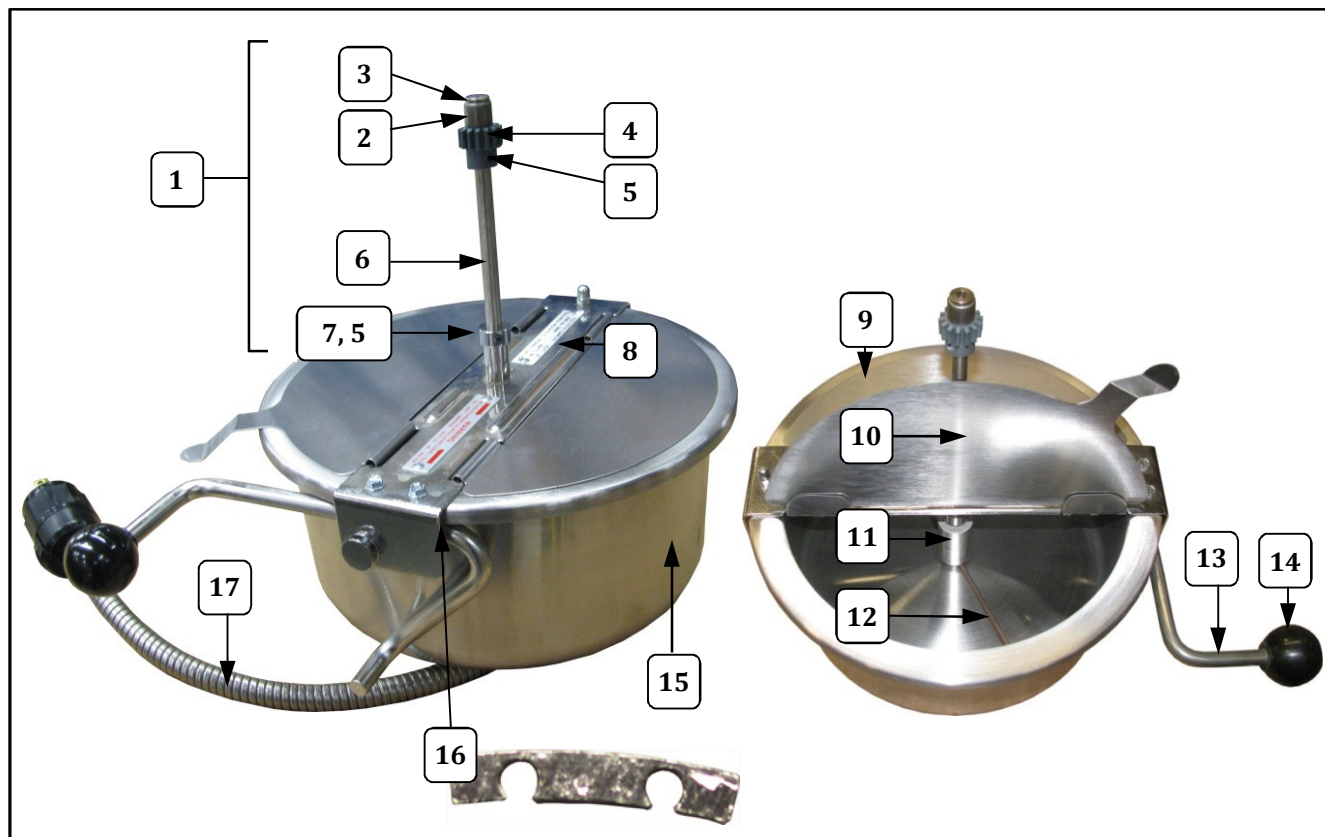


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

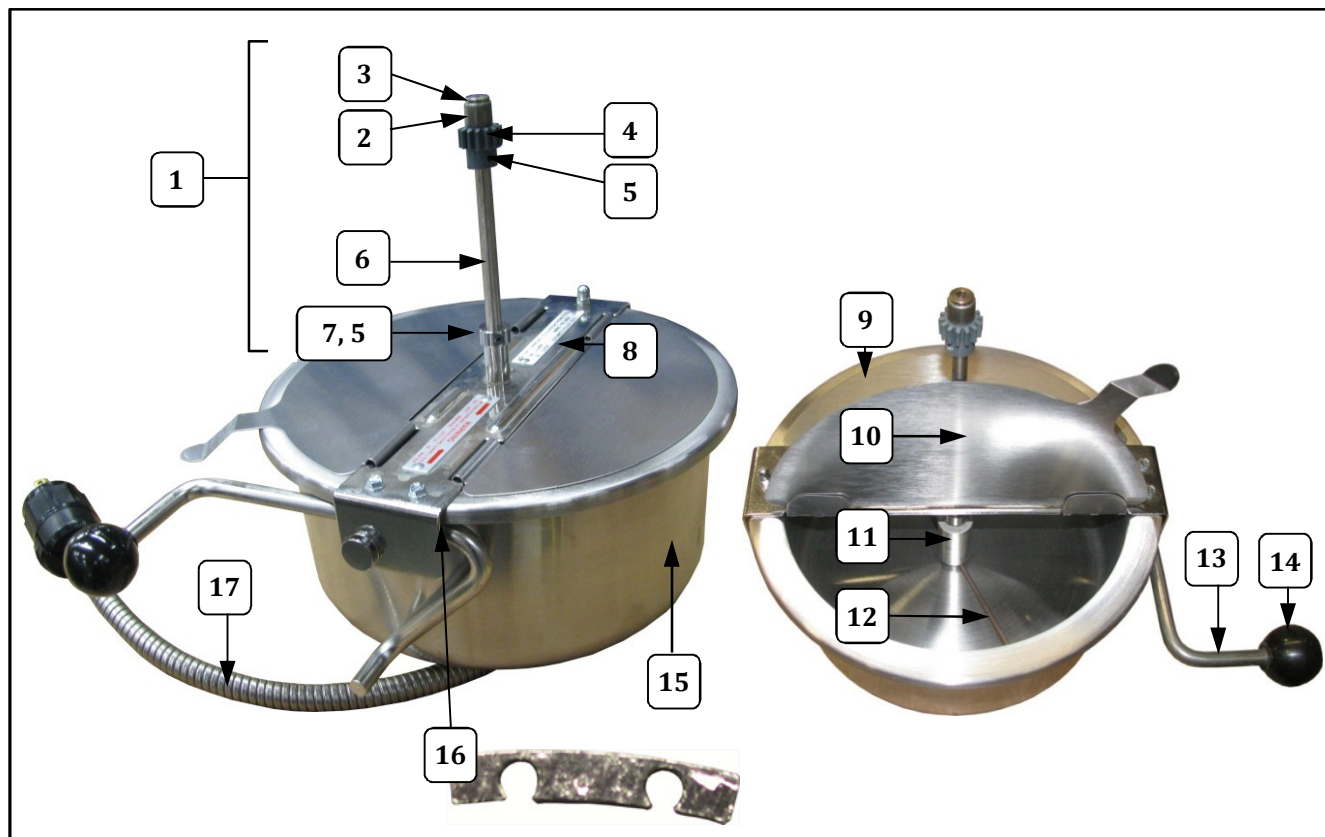


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

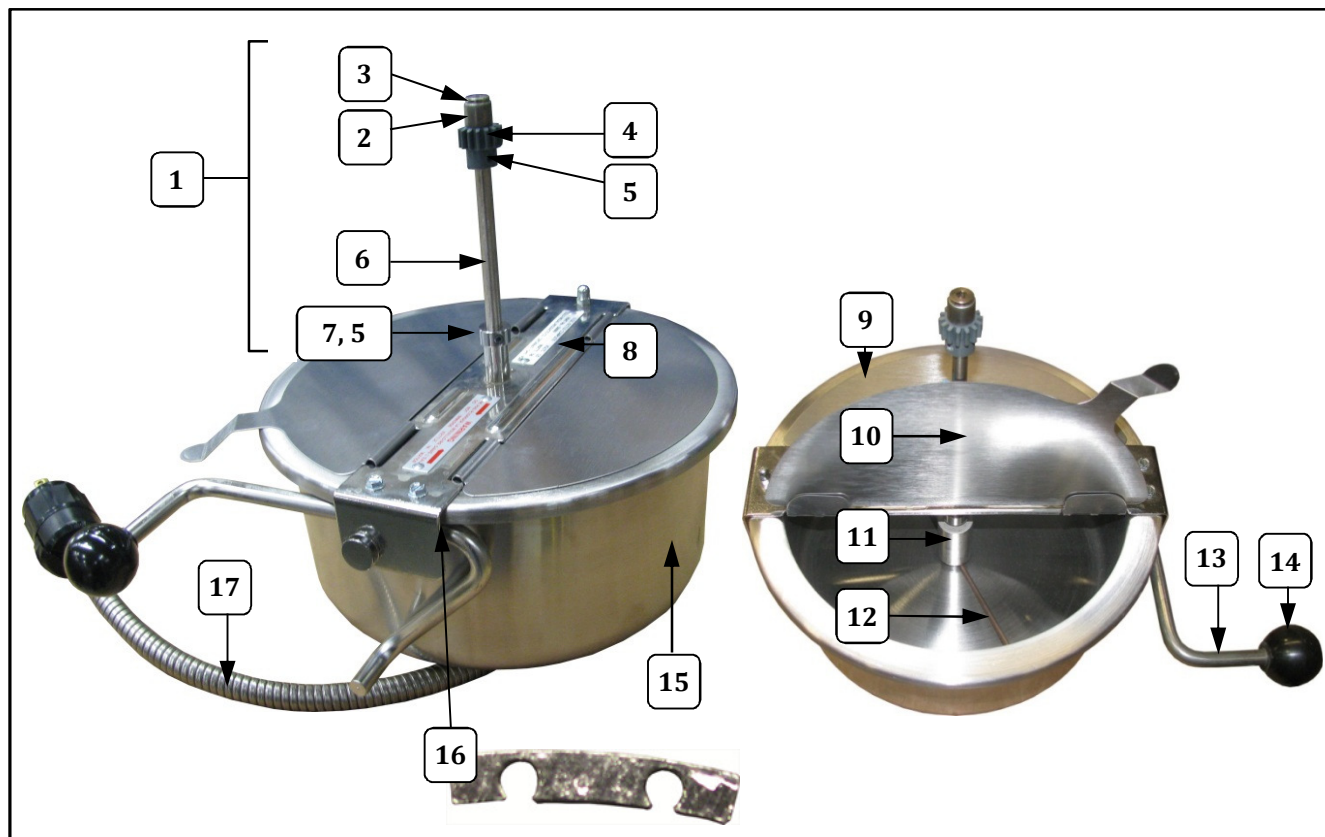


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

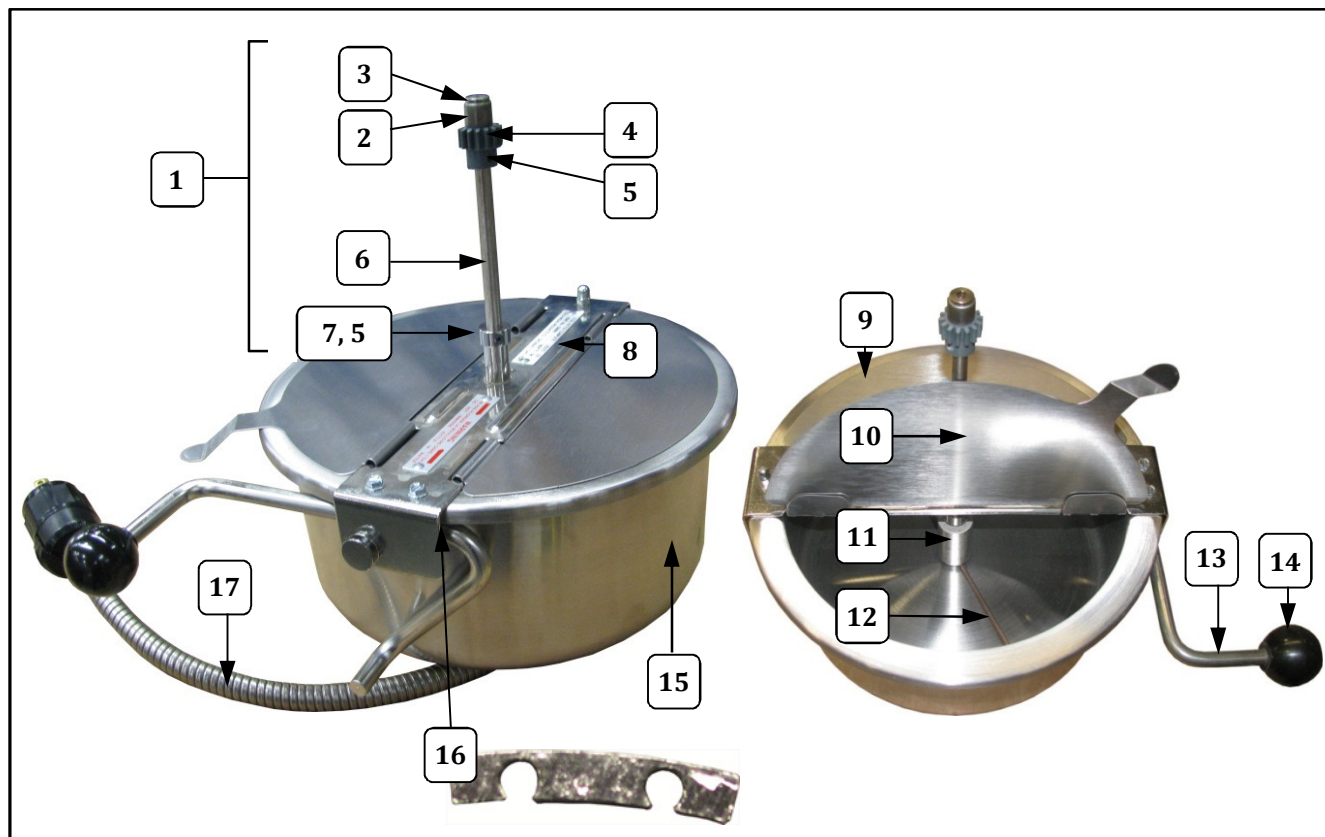


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

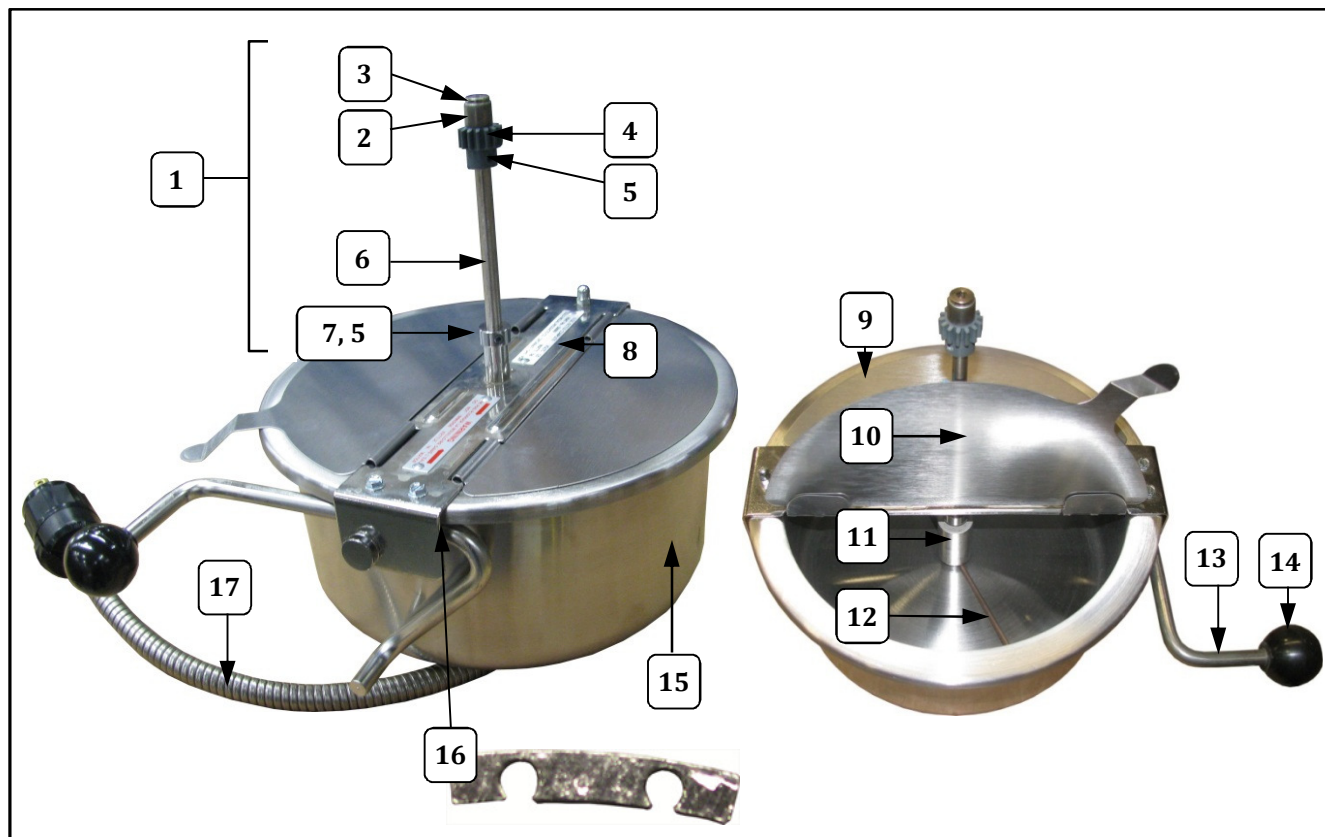


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

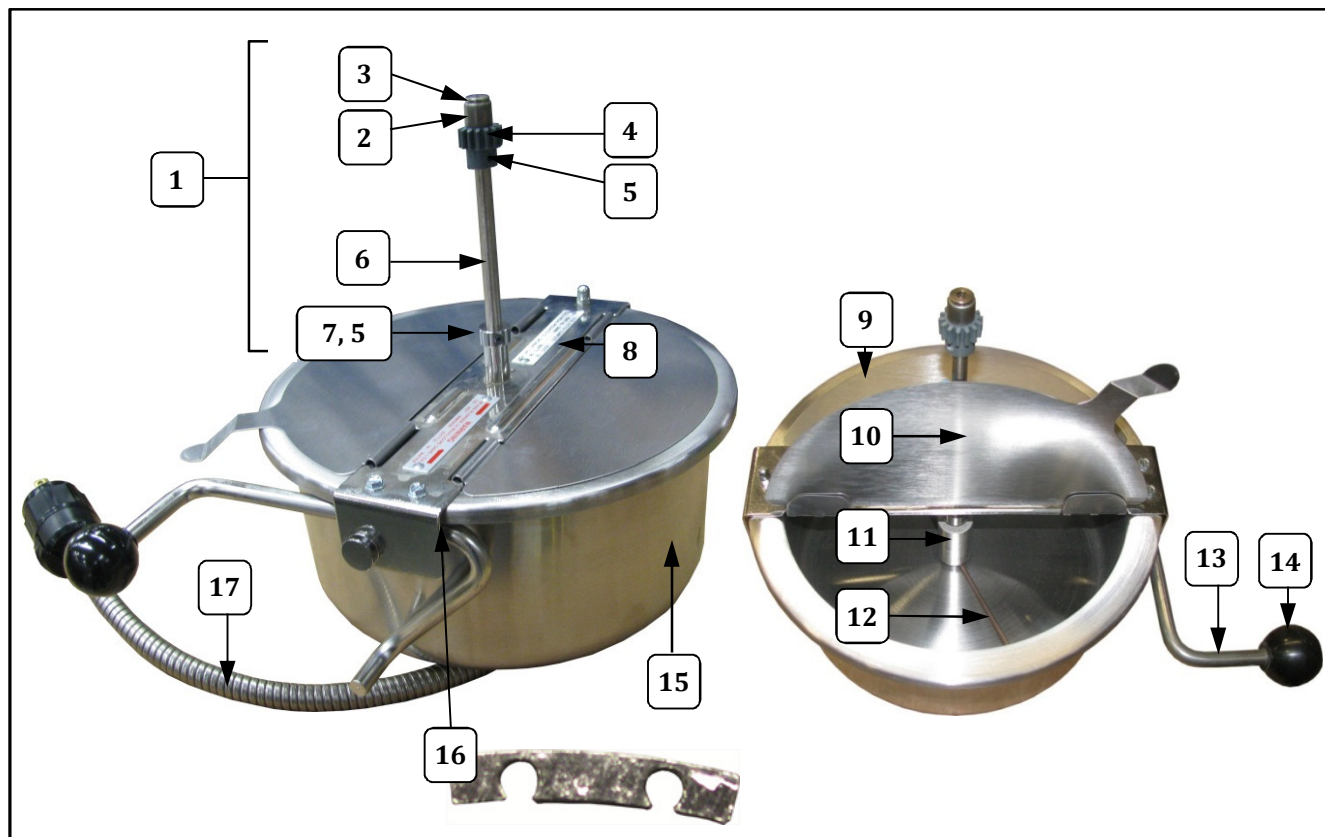


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

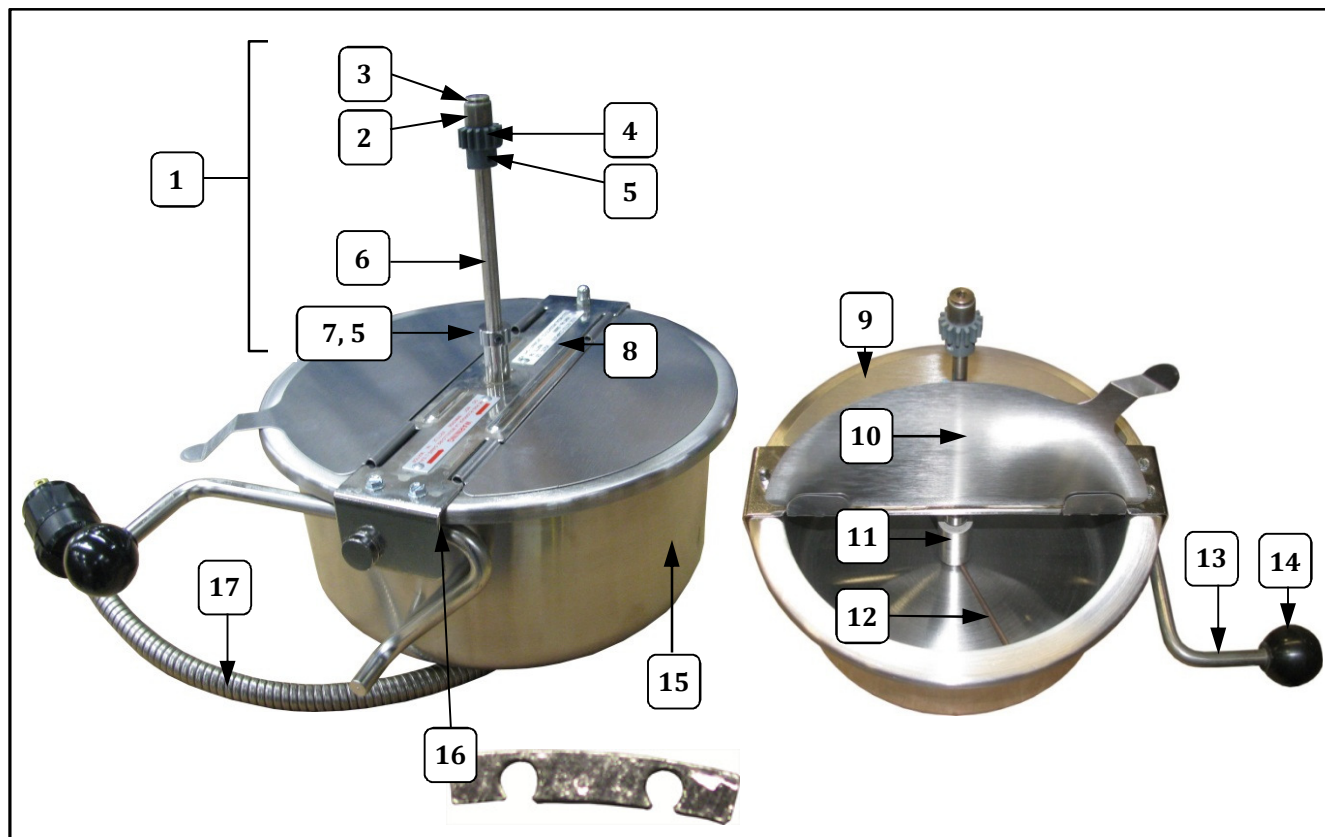


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

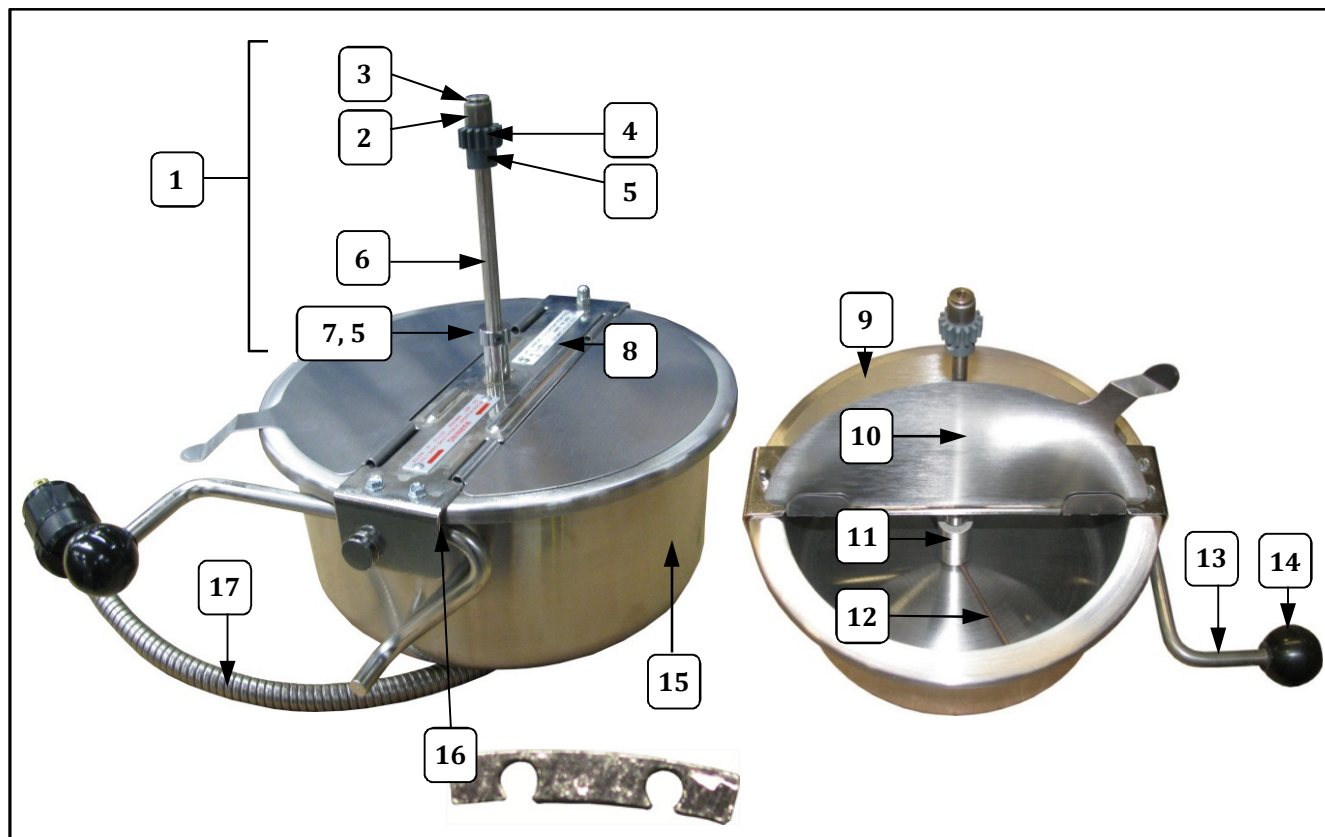


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

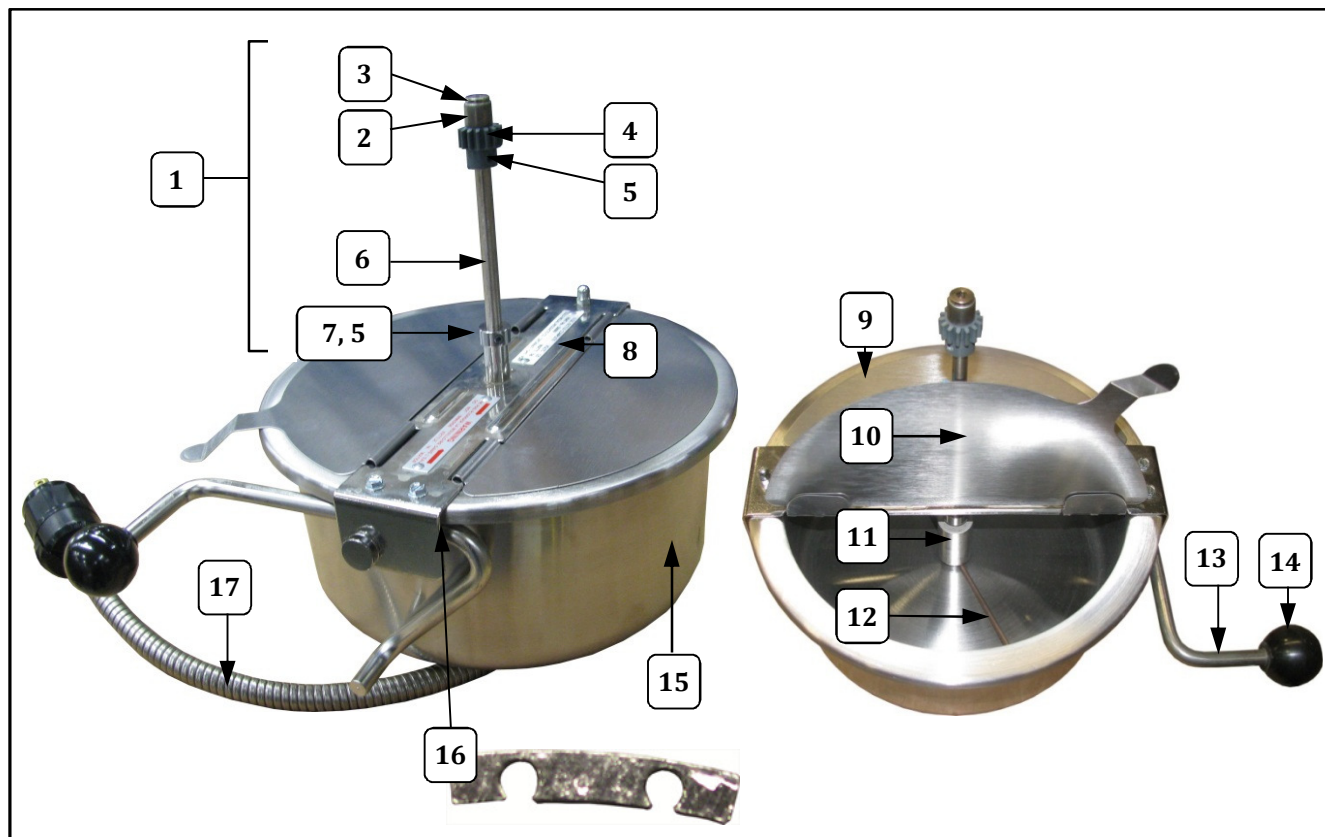


Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	

Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

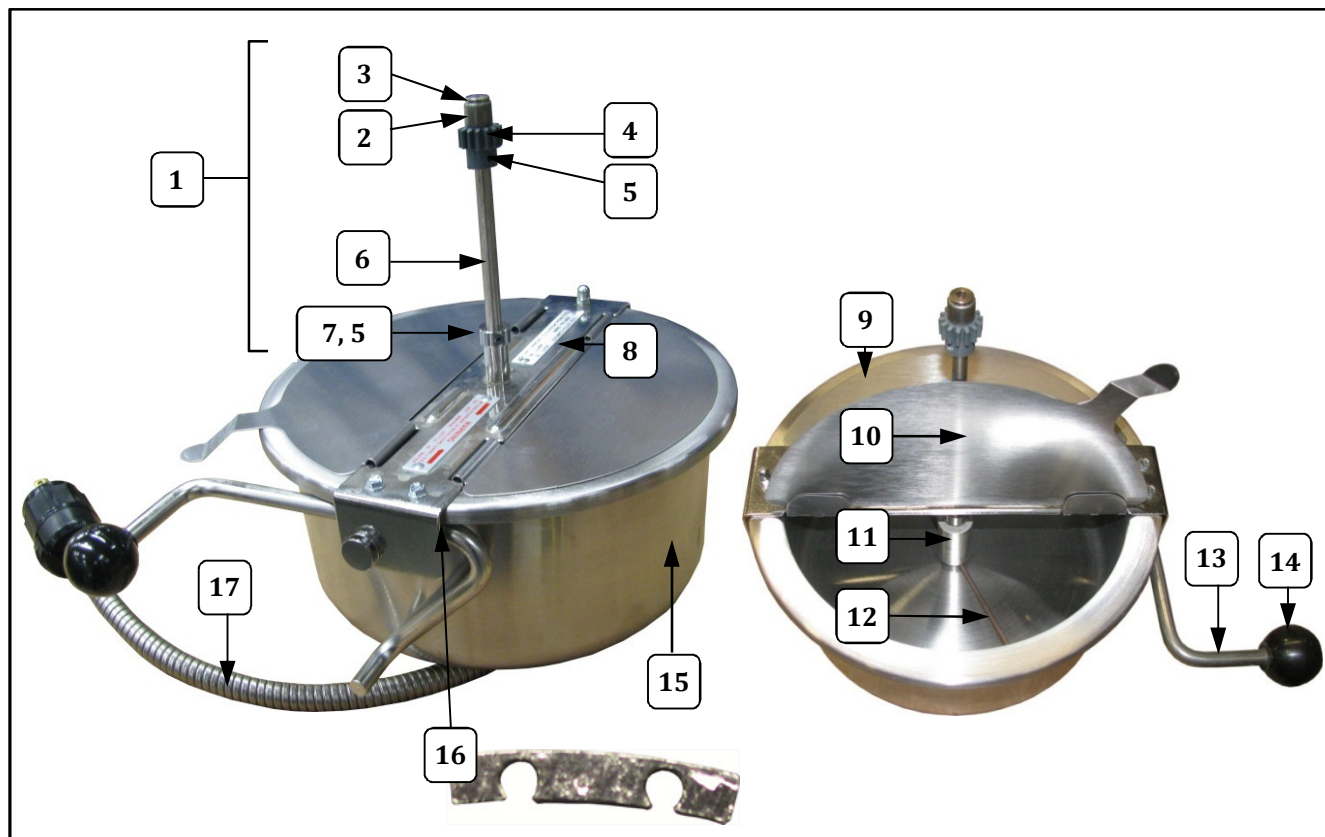

Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	


Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

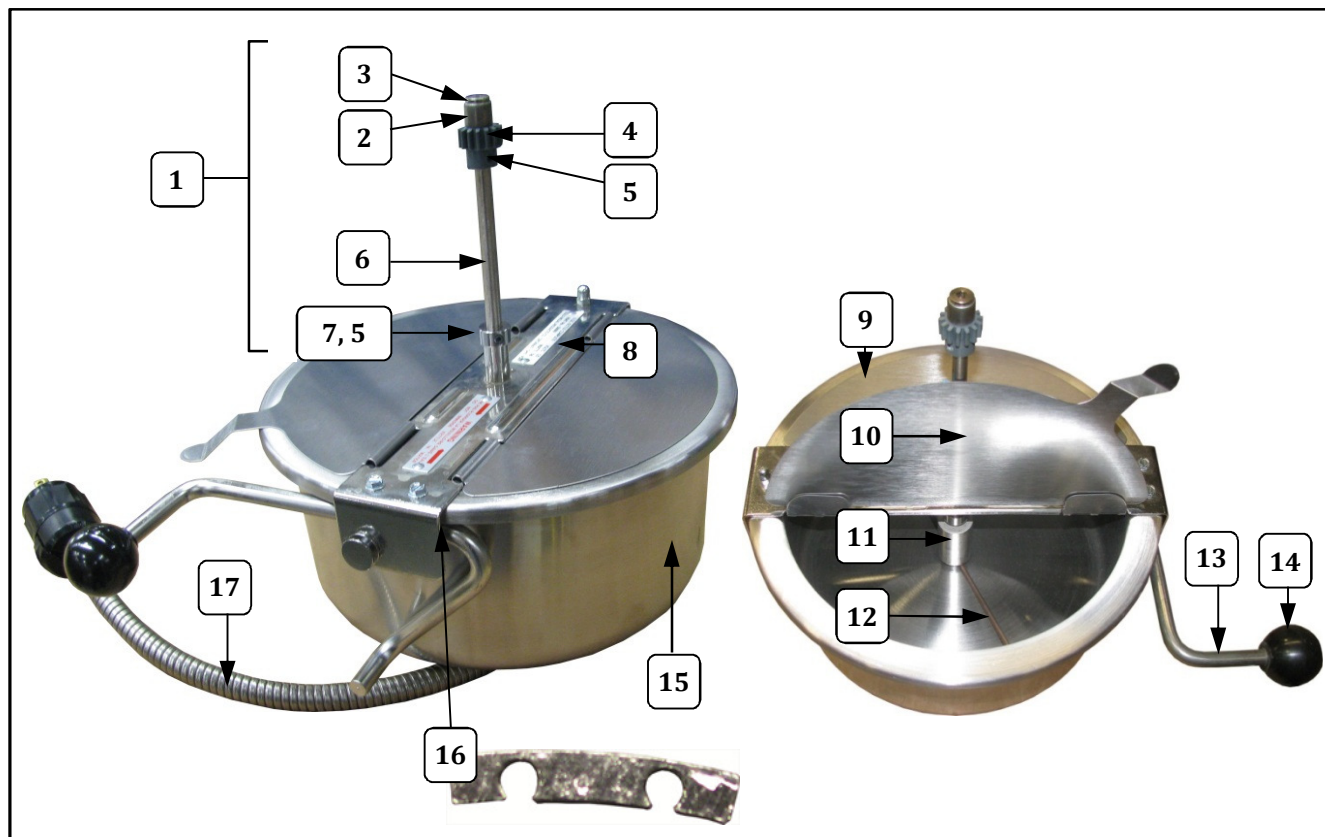

Item	Part No.	Model(s)	Part Description	Qty.
1	59908	58000	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
	59908EX	58000EX	LID & AGITATOR ASSY 8OZ (complete assembly - includes crossbar assy)	1
2	47106	ALL	NEEDLE BEARING	1
3	49701	ALL	RETAINING RING	1
4	47060	ALL	SPUR GEAR	1
5	41742	ALL	SET SCREW	4
6	49437	ALL	AGITATOR SHAFT	1
7	46649	ALL	SET COLLAR	3
8	59907	58000	CROSSBAR ASSEMBLY 8OZ.	1
	59907EX	58000EX	CROSSBAR ASSEMBLY 8OZ. EXPORT	
9	49016	ALL	REAR KETTLE LID	1
10	49017	ALL	FRONT LID W/FORMED LIFTER	1
11	49013	ALL	AGITATOR WEIGHT	1
12	49011	ALL	STIR ROD	1
13	49314	ALL	RH DUMP HANDLE	1
14	47110	ALL	KNOB DUMP HANDLE	1
15	49431	ALL	KETTLE SHELL	1
16	49362	ALL	SPACER DUMP HANDLE	1
17	49328	2408	KETTLE LEAD ASSEMBLY	1
	49490	2408EX	EXPORT KETTLE LEAD ASSEMBLY	



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

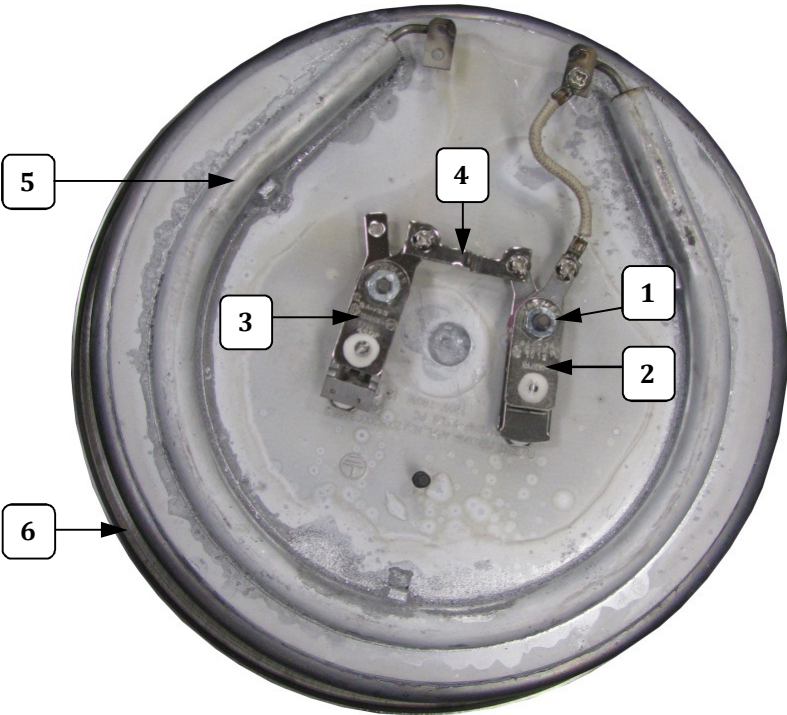


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

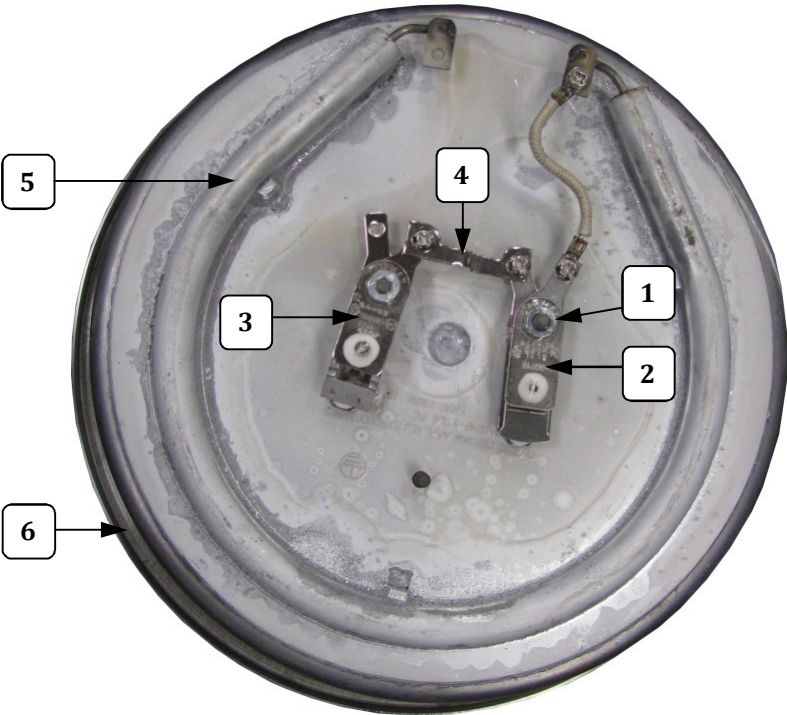


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

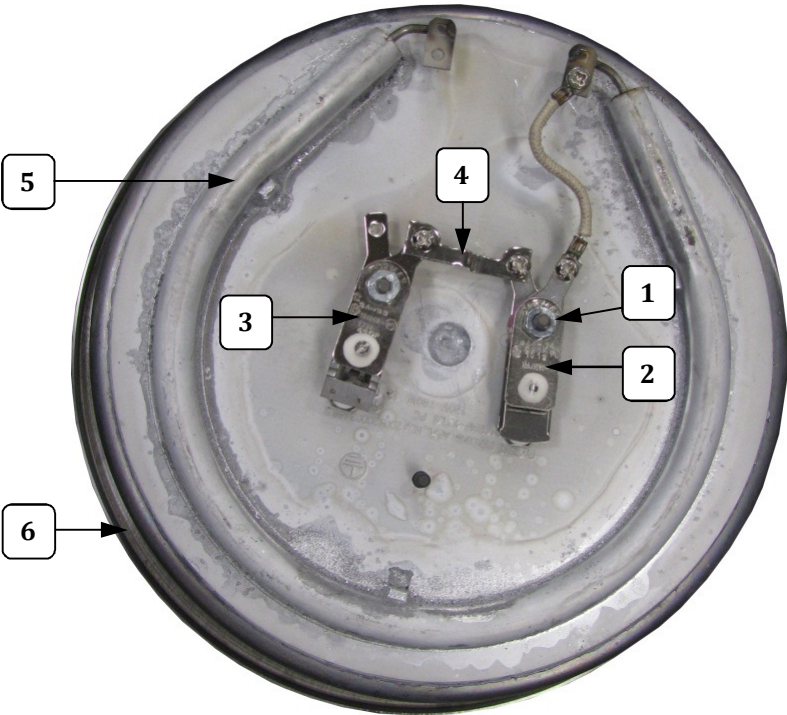


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

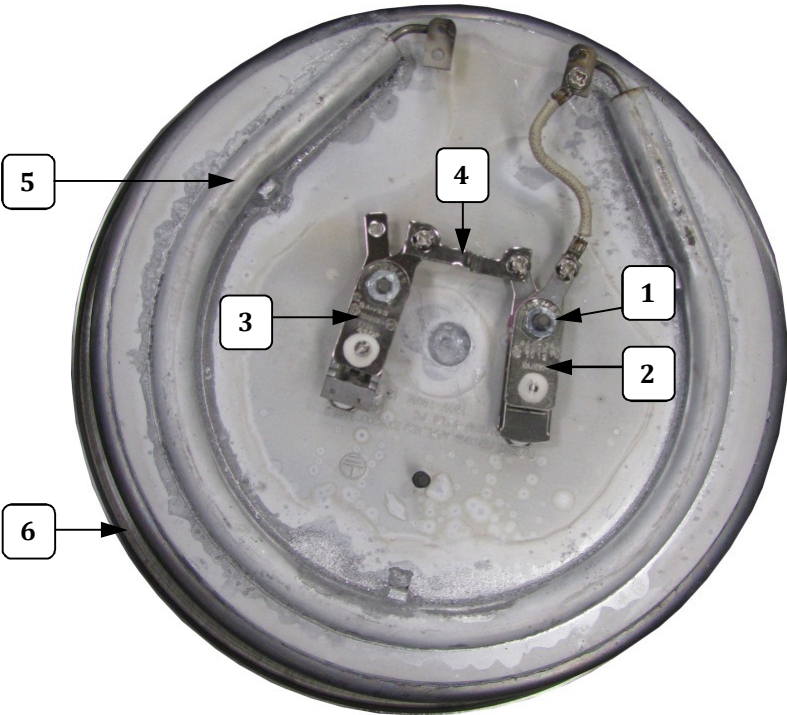


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

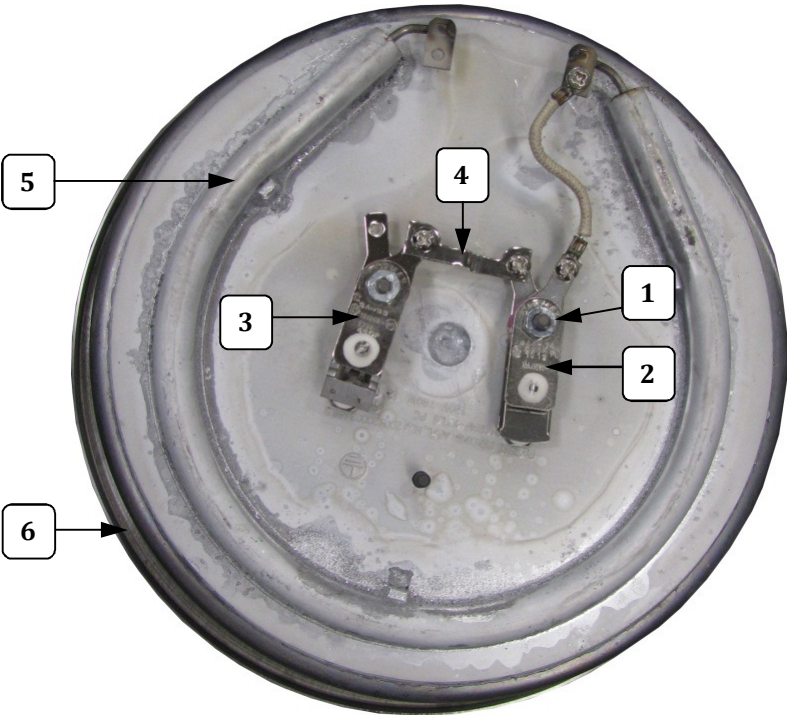


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

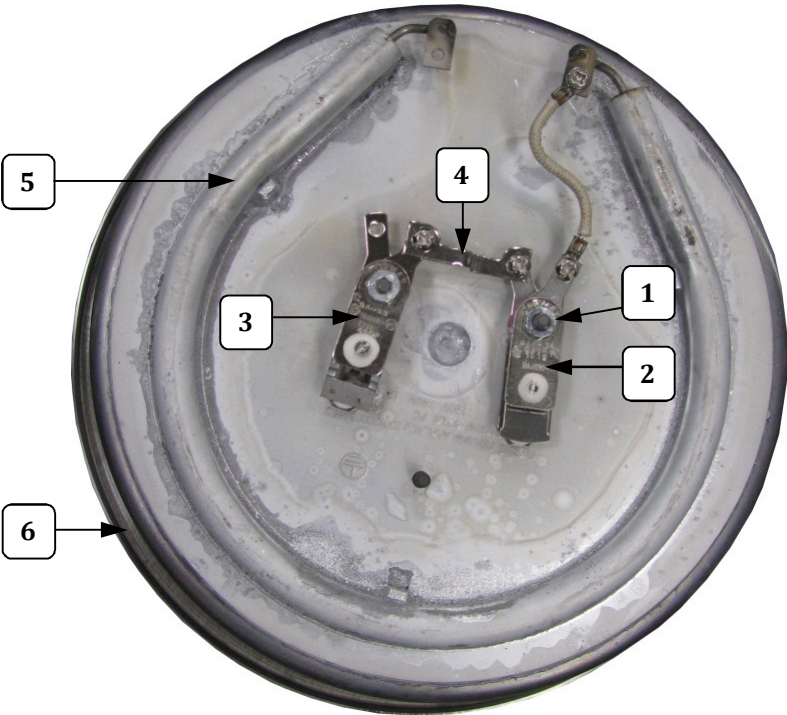


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

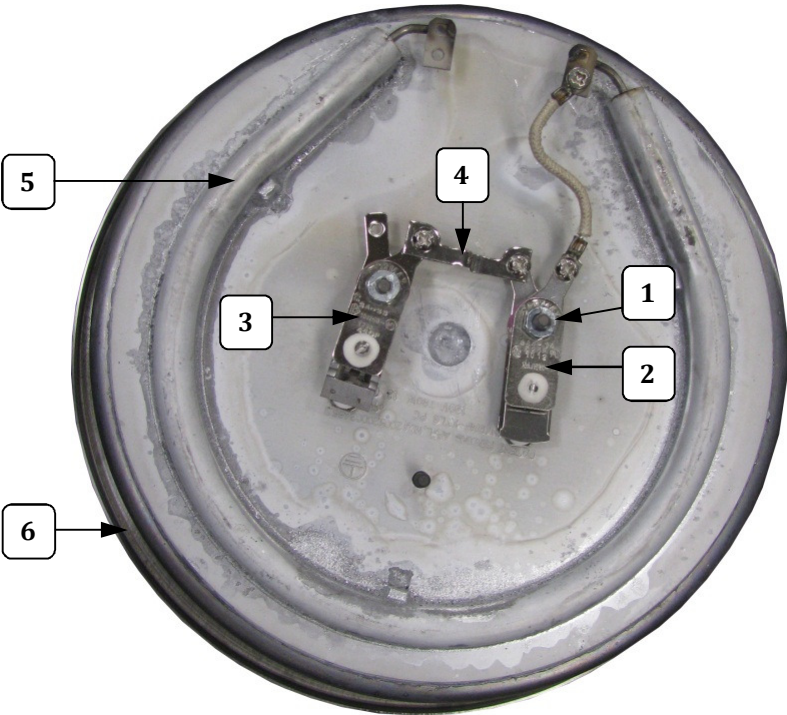


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

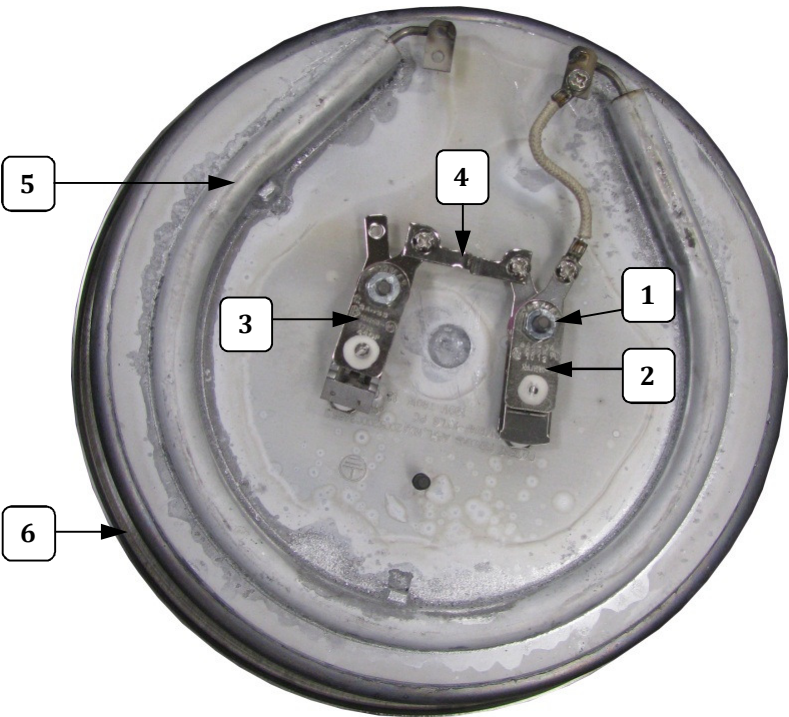


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

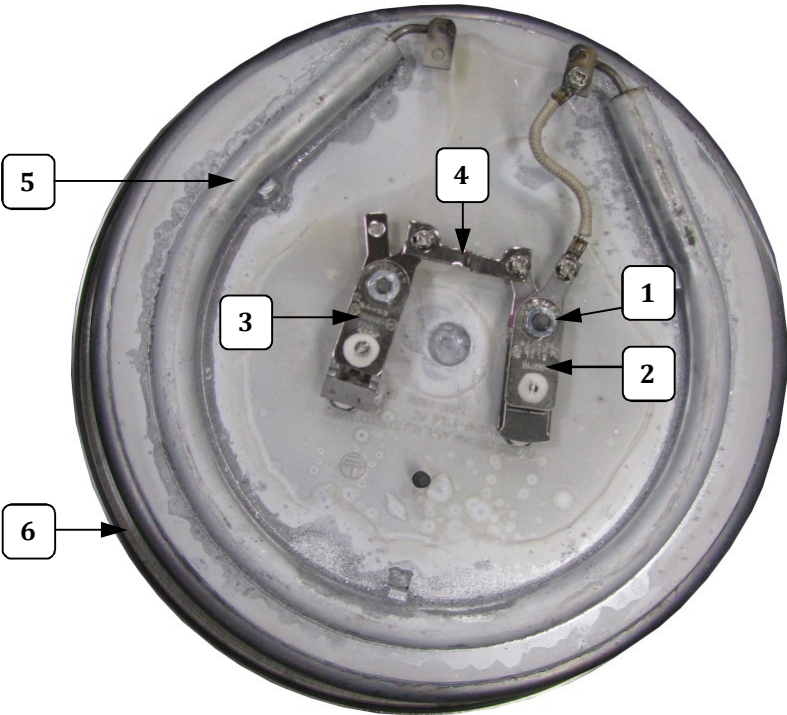


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

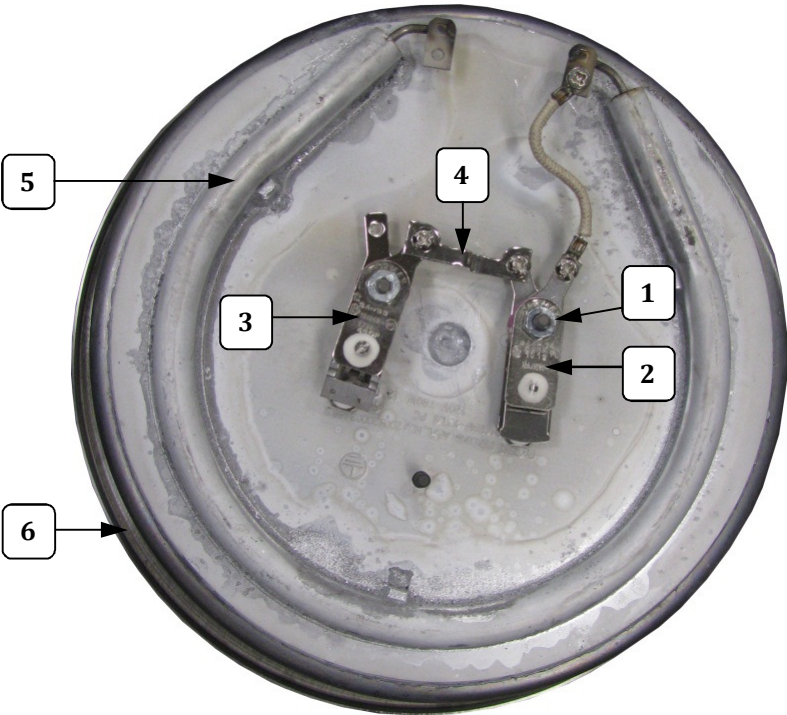


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

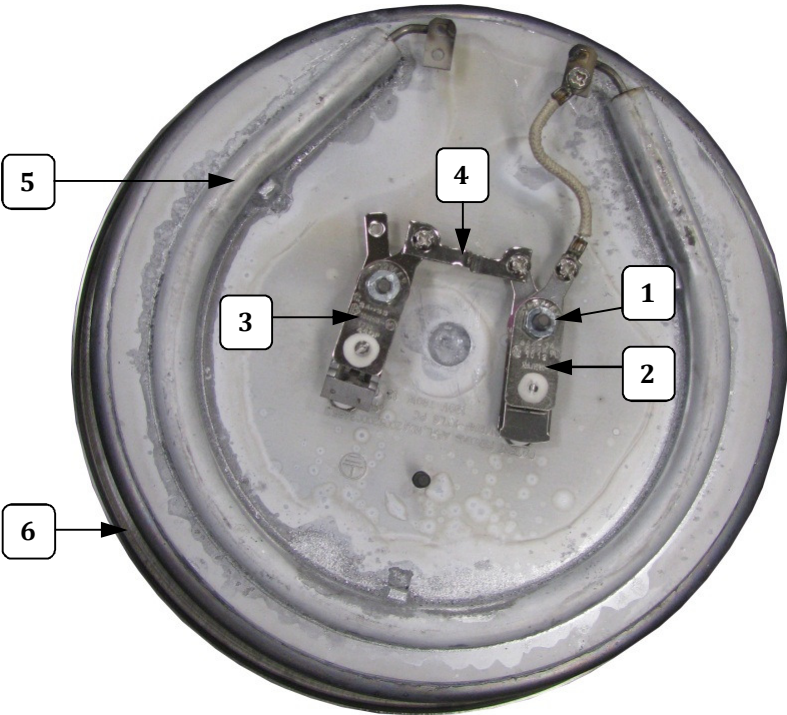


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

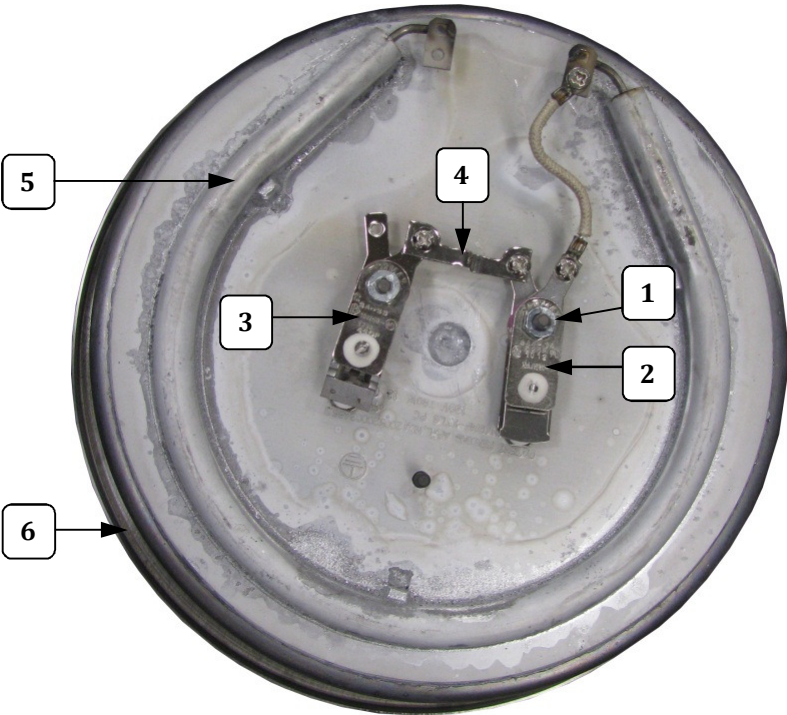


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

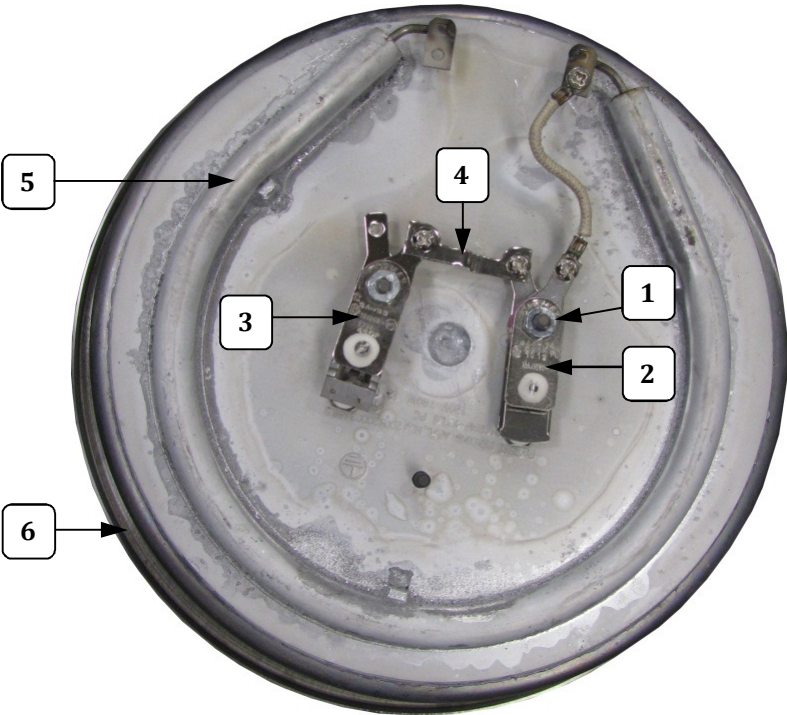


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

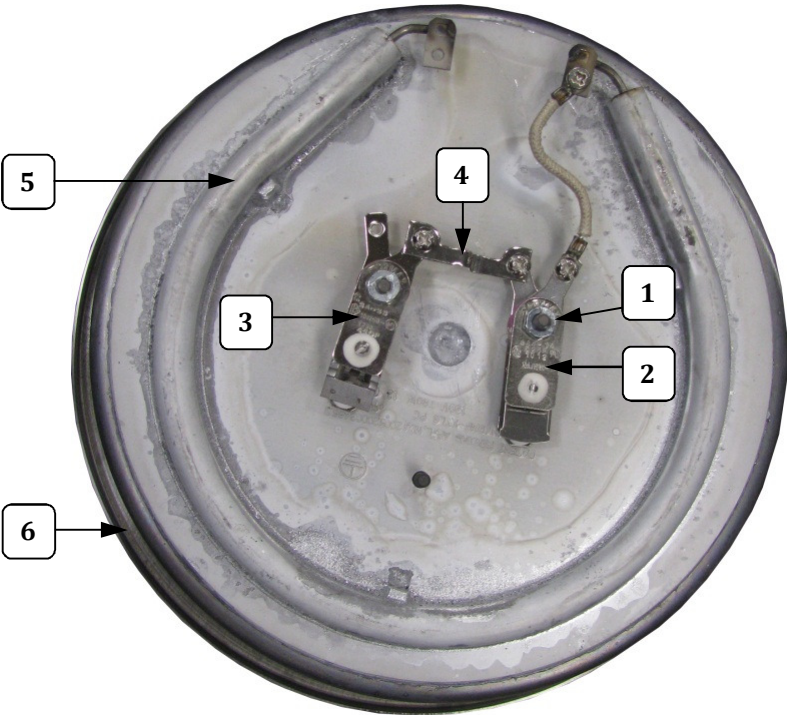


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

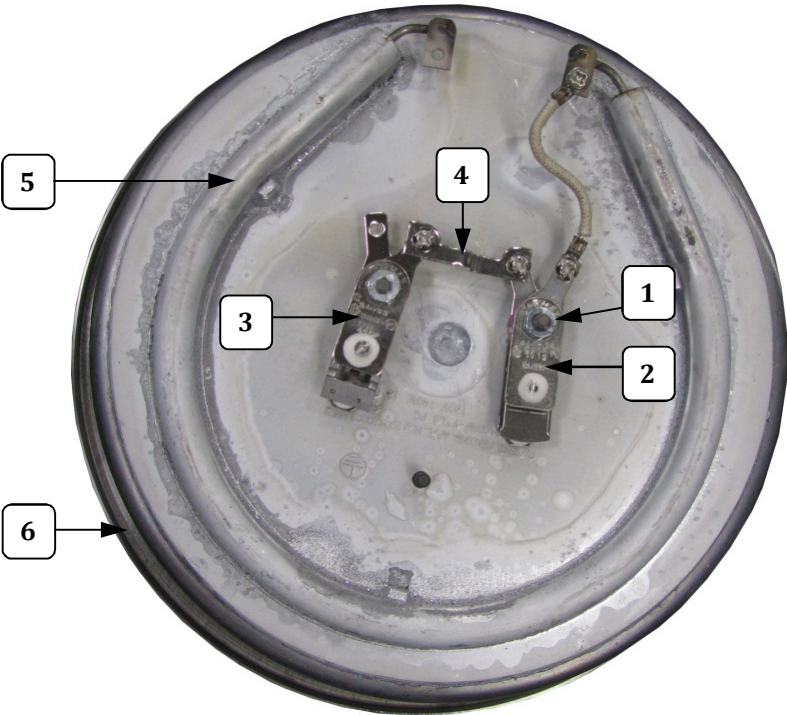


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

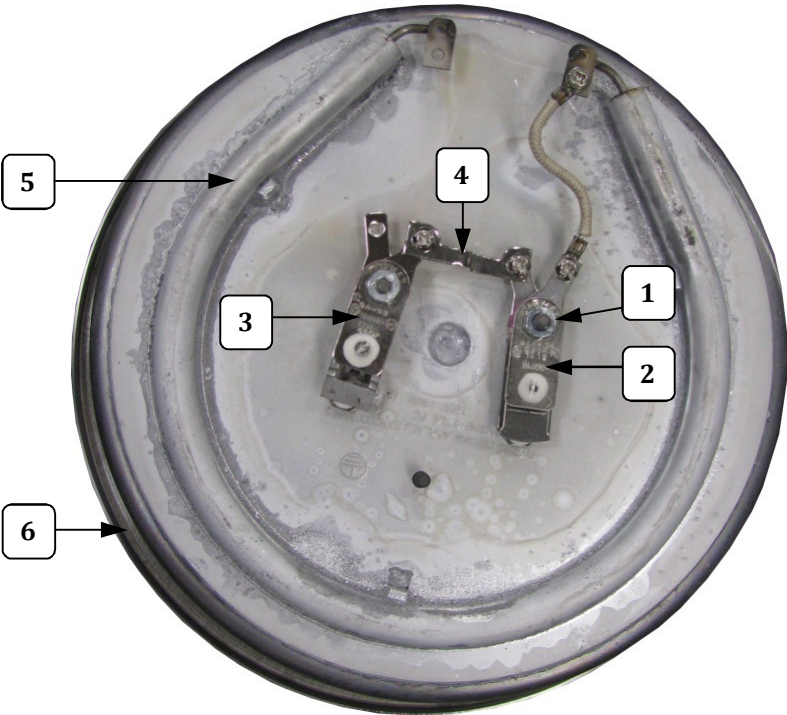


Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1



Kettle Assembly – 8oz. Kettle **58000** (Domestic), **58000EX** (Export)

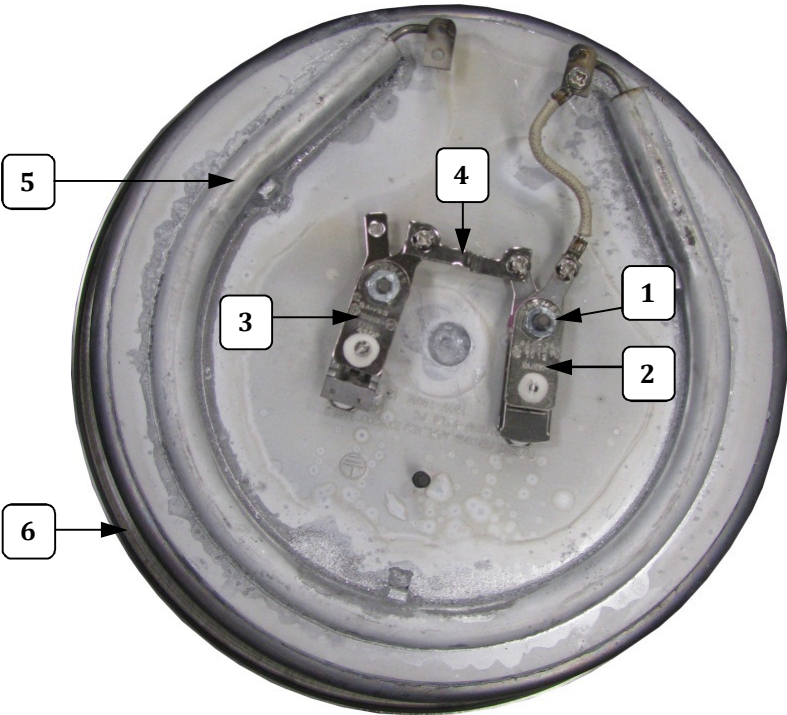

Domestic Model **58000 Shown**
(See Wiring Diagrams for Domestic and Export wiring)

Item	Part No.	Model(s)	Part Description	Qty.
1	67943	ALL	#8-32 TOP LOCK NUT (for thermostat studs)	2
2	76702	58000	THERMOSTAT 525°F	1
3	76089	58000	THERMOSTAT 450°F	1
	76089	58000EX	THERMOSTAT 450°F	2
4	47193	58000	THERMOSTAT SHUNT BAR	1
5	58008	58000	KETTLE/HEATER 8OZ 120V	1
	58008EX	58000EX	KETTLE/HEATER 8 OZ EXPORT	
6	49368	ALL	KETTLE GASKET	1