




CATALOG OF

REPLACEMENT PARTS

**MODEL HPGF15
GAS PRESSURE FRYER**


ML-126825

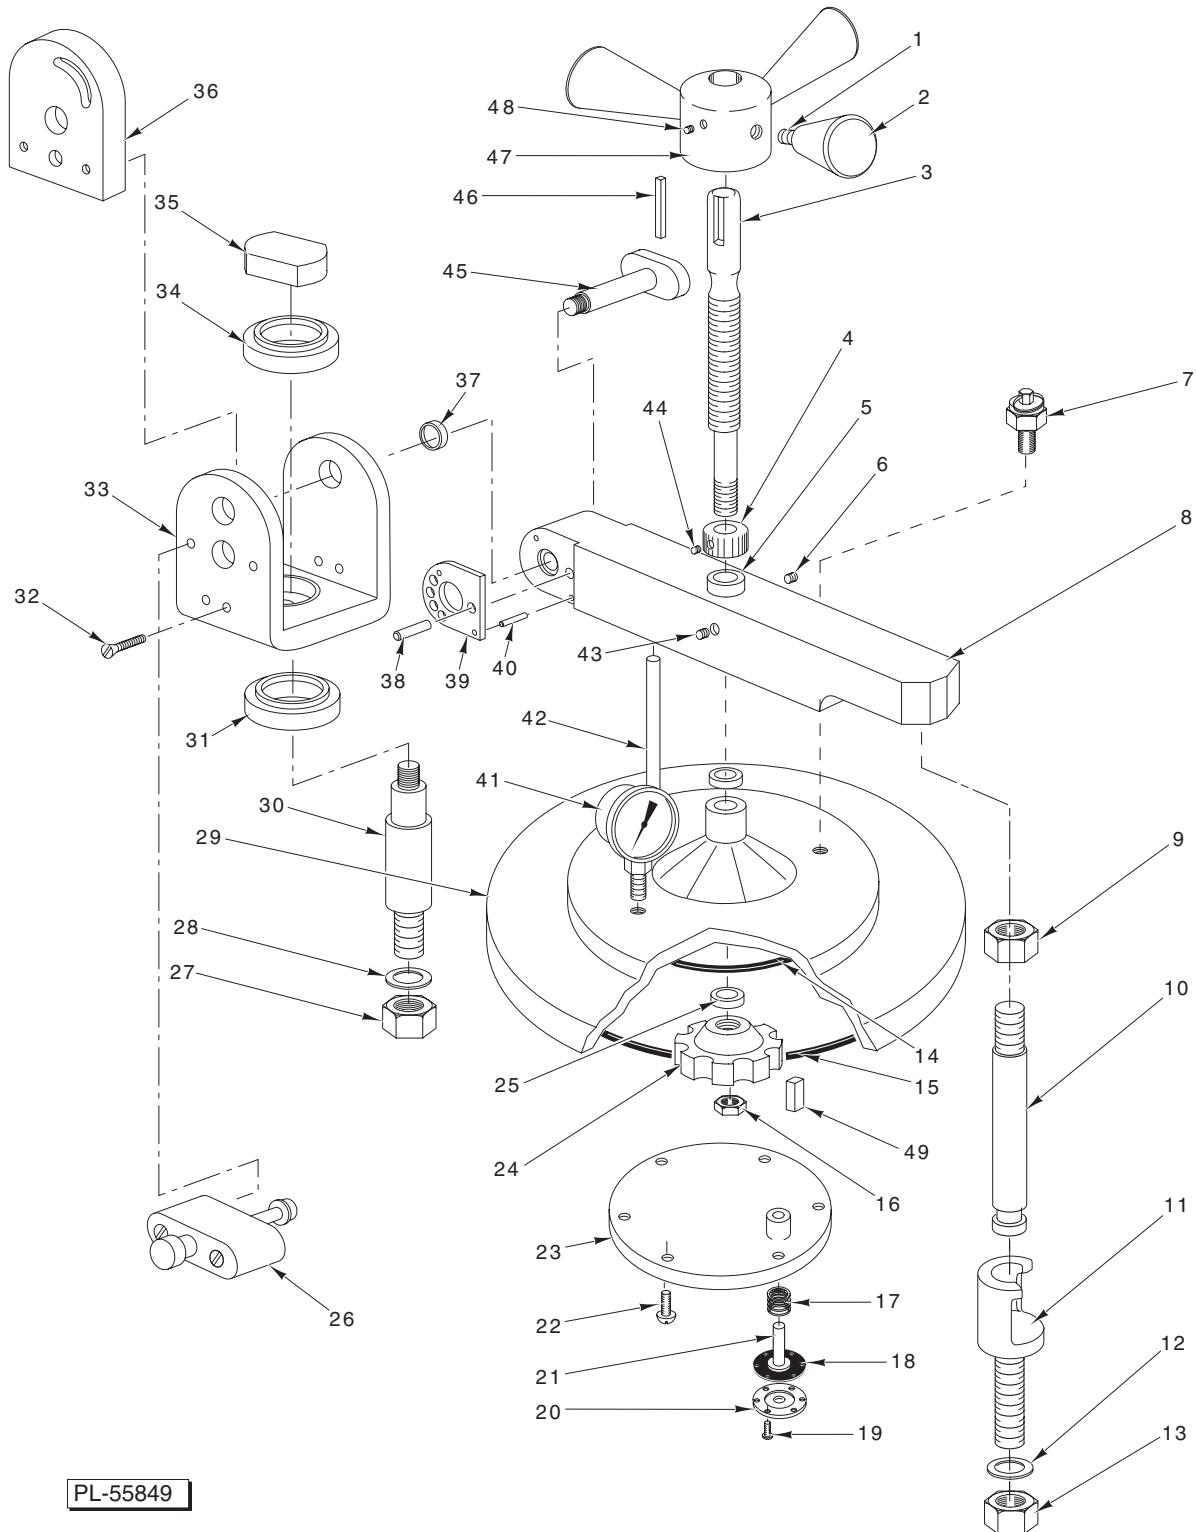

LID ASSEMBLY

LID ASSEMBLY


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55849			
1	00-360661	Stud – Aluminum Handle	3
2	00-360660	Handle – Aluminum	3
3	00-360758	Post – Locking Screw	1
4	00-360637	Collar – Knurled Screw Post	1
5	00-360659	Bearing – Threaded Bronze	1
6	SC-075-10	Set Screw 1/4-20 x 3/16 Soc. Hdls., Cup Pt.	2
7	00-360675	Valve – Relief	1
8	00-854317-00084	Arm – Lid Crossover	1
9	00-360774	Nut	1
10	00-360626	Post – Lock	1
11	00-360627	Catch – Overarm Post	1
12	WS-025-01	Washer	1
13	00-360774	Nut	1
14	00-360746	O-Ring (Inner Lid) 4.850 I.D.	1
15	00-360747	O-Ring (Outer) 12.475 I.D.	1
16	00-360775	Nut – Lock	1
17	00-360761	Spring – Plunger	1
18	00-360762	Gasket – Lock	1
19	SC-121-49	Mach. Screw 10-32 x 1/4 Flat Hd.	6
20	00-360764	Gasket – Retainer	1
21	00-360853-00163	Plunger – Locking	1
22	SC-117-73	Mach. Screw 10-32 x 5/8 Phil. Truss Hd.	6
23	00-360763	Plate – Inner	1
24	00-360760	Gear – Star Locking	1
25	00-360853-00151	Bearing – Thrust	2
26	00-854317-00081	Kit – Lift Arm Pin	1
27	00-360774	Nut	1
28	WS-025-01	Washer	1
29	00-360759	Lid	1
30	00-854317-00063	Post – Rear Swivel	1
31	00-360778	Bearing	1
32	00-854317-00077	Screw	4
33	00-854317-00082	Yoke – Crossover Arm	1
34	00-360778	Bearing	1
35	00-854317-00062	Nut	1
36	00-854317-00083	Plate – Yoke Inner	2
37	00-854317-00048	Bearing – Thrust	2
38	00-854317-00085	Pin – Stop	2
39	00-854317-00066	Plate – Overarm Skid	2
40	00-854317-00075	Pin 1/8 x 5/8	4
41	00-360623	Gauge – Pressure	1
42	00-360629	Pin – Stop Swivel	1
43	SC-075-10	Set Screw 1/4-20 x 3/16 Soc. Hdls., Cup Pt.	1
44	SC-047-12	Set Screw 1/4-20 x 3/8 Soc. Hdls., Cup Pt.	1
45	00-854317-00065	Bolt – Lid Pivot	1
46	00-360789	Key	1
47	00-360673	Hub – Handle	1
48	SC-055-03	Set Screw 3/8-16 x 3/8 Hdls., Cup Pt.	1
49	00-360789	Key	1

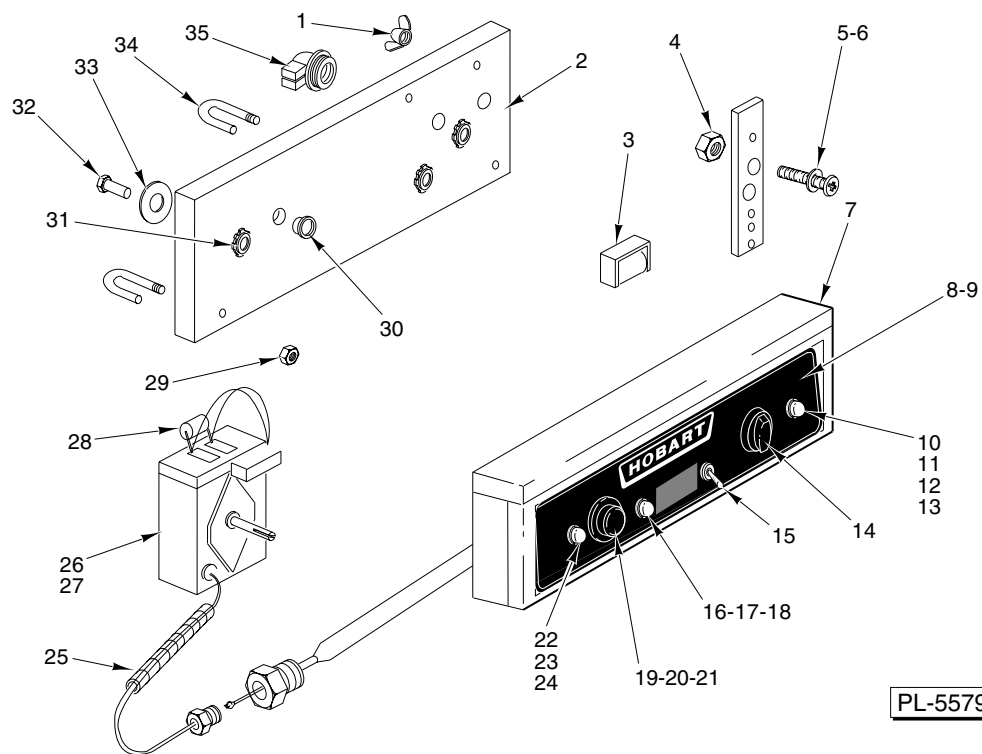

CONTROL PANEL

CONTROL PANEL

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55797			
1	NS-048-01	Wing Nut 1/4-20	2
2	00-360665	Insulation – Control Panel	1
3	00-360679	Buzzer	1
4	NS-013-02	Nut 1/4-20 Hex	2
5	SC-011-82	Mach. Screw 1/4-20 x 1 1/4 Fil. Hd.	2
6	WS-022-23	Washer	2
7	00-360810	Panel – Control (Frame)	1
8	00-854317-00070	Plate – Control Panel	1
9	00-360853-00150	Transformer	1
10	00-360682	Lens (Red)	1
11	00-360853-00183	Light – Indicator	1
12	00-360680	Socket – Pilot Light	1
13	00-360853-00185	Resistor	1
14	00-360853-00158	Timer Assy. (30 Min.) (115 V.)	1
15	00-360853-00143	Switch – On/Off (3-Way)	1
16	00-360681	Lens (White)	1
17	00-854317-00074	Light – Indicator	1
18	00-854317-00080	Socket	1
19	00-360806	Knob – Thermostat	1
20	SC-053-38	Mach. Screw 6-32 x 1/4 Truss Hd.	1
21	00-360690	Plate – Thermostat Outer	1
22	00-360853-00106	Lens (Amber)	1
23	00-360853-00183	Light – Indicator	1
24	00-360680	Socket	1
25	00-360807	Bushing – Poly Spiral	1
26	00-360853-00178	Thermostat	1
27	NS-009-12	Mach. Nut 8-32 Hex	4
28	00-360853-00179	Capacitor	1
29	NS-009-12	Mach. Nut 8-32 Hex	4
30	00-360828	Bushing	1
31	00-360826	Connector – Electrical	4
32	00-360666	Nut – Insulation	2
33	00-360795	Washer – Insulation	2
34	00-360811	Hook – Control Panel	2
35	00-360827	Connector – Electrical 90 Deg.	1
	00-854317-00073	Harness – Wiring	1

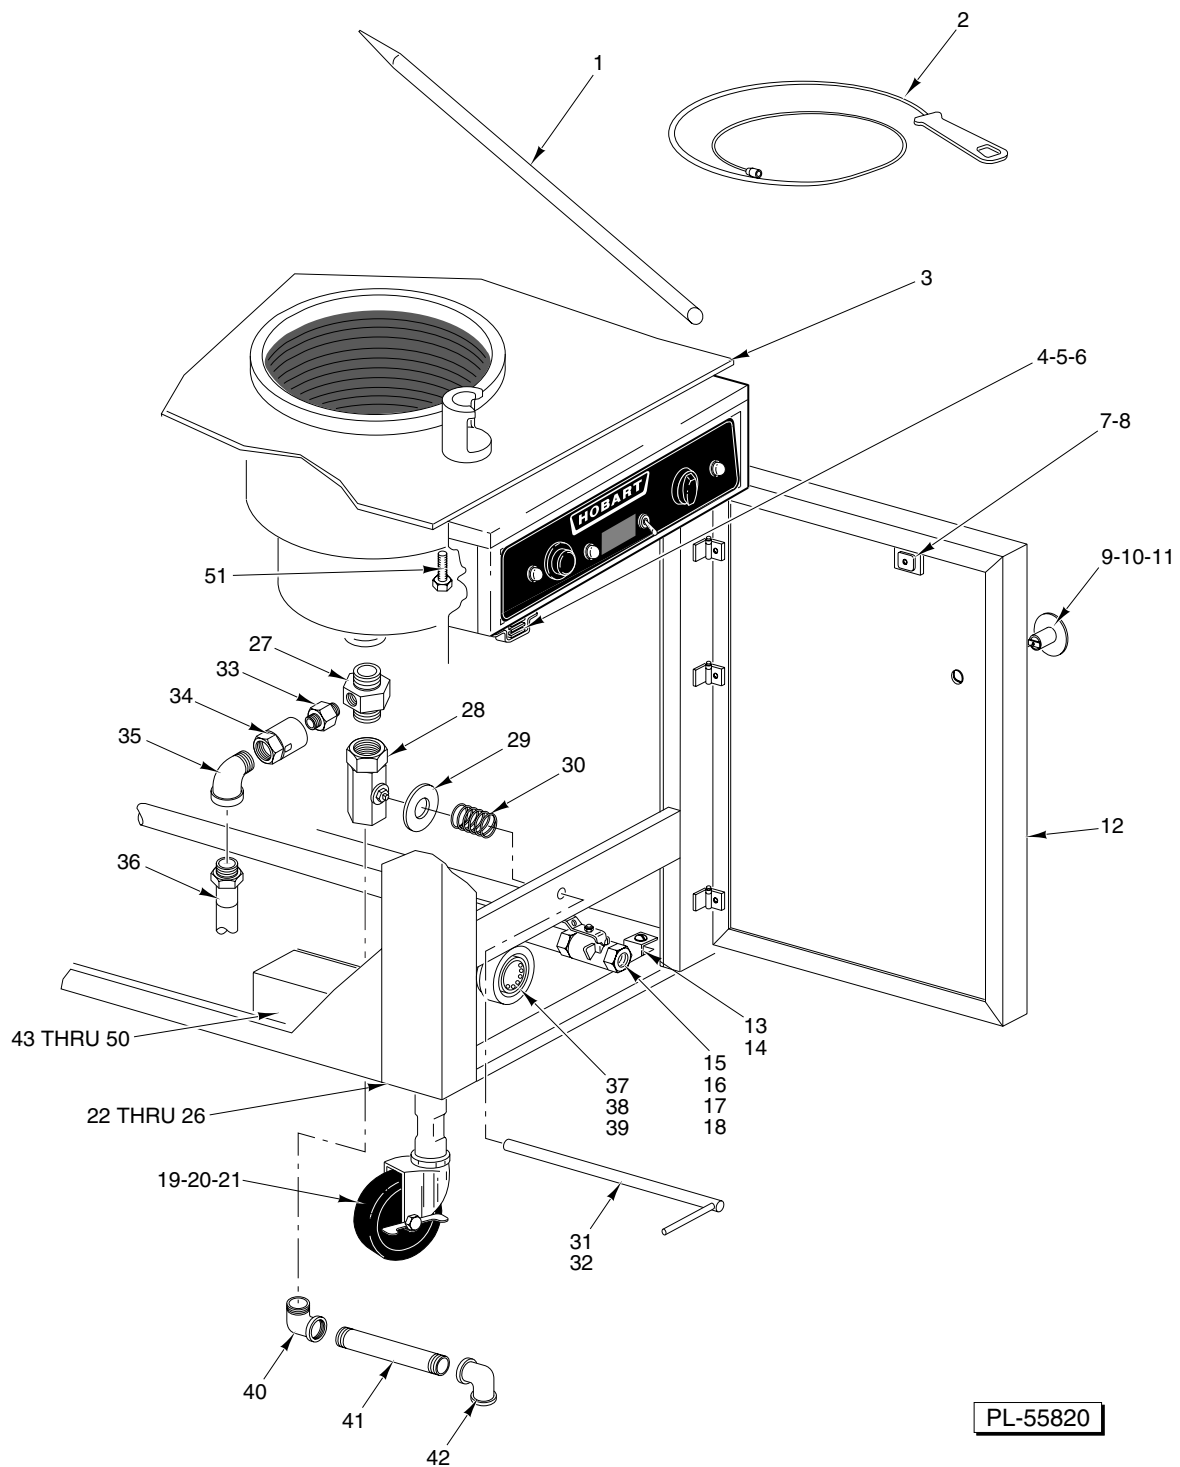


PL-55820

UNDERSIDE

UNDERSIDE

ILLUS. PL-55820	PART NO.	NAME OF PART	AMT.
1	00-360786	Cleaner – Drain (Wood)	1
2	00-360757	Scraper – Flexible	1
3	00-360802	Top – Table	1
4	00-360853-00182	Catch – Door	1
5	SC-019-28	Mach. Screw 8-32 x 1/4 Bndg. Hd.	2
6	WL-008-07	Lockwasher #8 Internal Shakeproof	2
7	SC-119-14	Mach. Screw 8-32 x 1/4 Phil. Flat Hd.	3
8	WL-008-07	Lockwasher #8 Internal Shakeproof	3
9	00-360691	Pull – Door	1
10	SC-081-12	Mach. Screw 8-32 x 1 1/2 Rd. Hd.	1
11	WL-008-07	Lockwasher #8 Internal Shakeproof	1
12	00-360853-00174	Door	1
13	SC-019-28	Mach. Screw 8-32 x 1/4 Bndg. Hd.	4
14	WL-008-07	Lockwasher #8 Internal Shakeproof	4
15	00-854317-00059	Valve – Condensate Drain	1
16	00-360853-00154	Pipe – Drain	1
17	00-360853-00177	Bracket – Support	1
18	00-854317-00005	Extension – Drain Pipe	1
19	00-358637-00001	Caster – Plain (Threaded) (4" Dia. Wheel)	2
20	00-358637-00002	Caster – W/Brake (Threaded) (4" Dia. Wheel)	2
21	00-358637-00003	Leg – Fryer (Threaded)	4
22	00-360853-00038	Flange – Front Leg	2
23	00-360853-00039	Flange – Rear Leg	2
24	00-360853-00123	Screw 1/2-13 x 2 Sq. Hd.	4
25	WL-008-17	Lockwasher 1/4 Internal Shakeproof	12
26	NS-046-38	Mach. Nut 1/4-20 Hex	12
27	00-854317-00013	Fitting – Hex Kettle Drain	1
28	00-854317-00087	Drain – Kettle	1
29	00-854317-00032	Washer 9/16	1
30	00-360753	Spring	1
31	00-360853-00168	Lever – Drain Control	1
32	00-854317-00004	Cotter Pin 3/32 x 1 (SST)	1
33	00-854317-00051	Nipple 1/2	1
34	00-854317-00058	Valve – Check	1
35	00-854317-00050	Elbow 1/2 x 90 Deg.	1
36	00-854317-00053	Hose – Flex	1
37	00-854317-00071	Bracket – Quick Disconnect	1
38	00-854317-00026	Screw 10-32 x 1/2	2
39	00-854317-00049	Disconnect – Quick	1
40	FP-013-27	Elbow 1 x 90 Deg.	1
41	00-854317-00086	Nipple 1 x 4 3/4	1
42	00-854317-00068	Elbow 1 x 90 Deg. Modified	1
43	00-360853-00186	Box – Electrical	1
44	00-360853-00153	Cover – Box	1
45	SC-013-20	Mach. Screw 6-32 x 1/4 Flat Hd.	1
46	SC-066-21	Mach. Screw 10-32 x 3/8 Truss Hd.	2
47	WL-008-13	Lockwasher #10 Internal Shakeproof	2
48	NS-011-23	Mach. Nut Hex 10-32 (SST)	2
49	FE-016-20	Fuse (15 Amp.) (125 V.)	1
50	FE-012-36	Connector – Conduit 1/2 TS	1
51	SC-037-73	Cap Screw 3/8-16 x 1 Hex Hd.	3
	00-360756	Wrench	1
	00-360755	Gloves (Pair)	1
	00-854317-00059	Valve – Gas Shut-Off	1

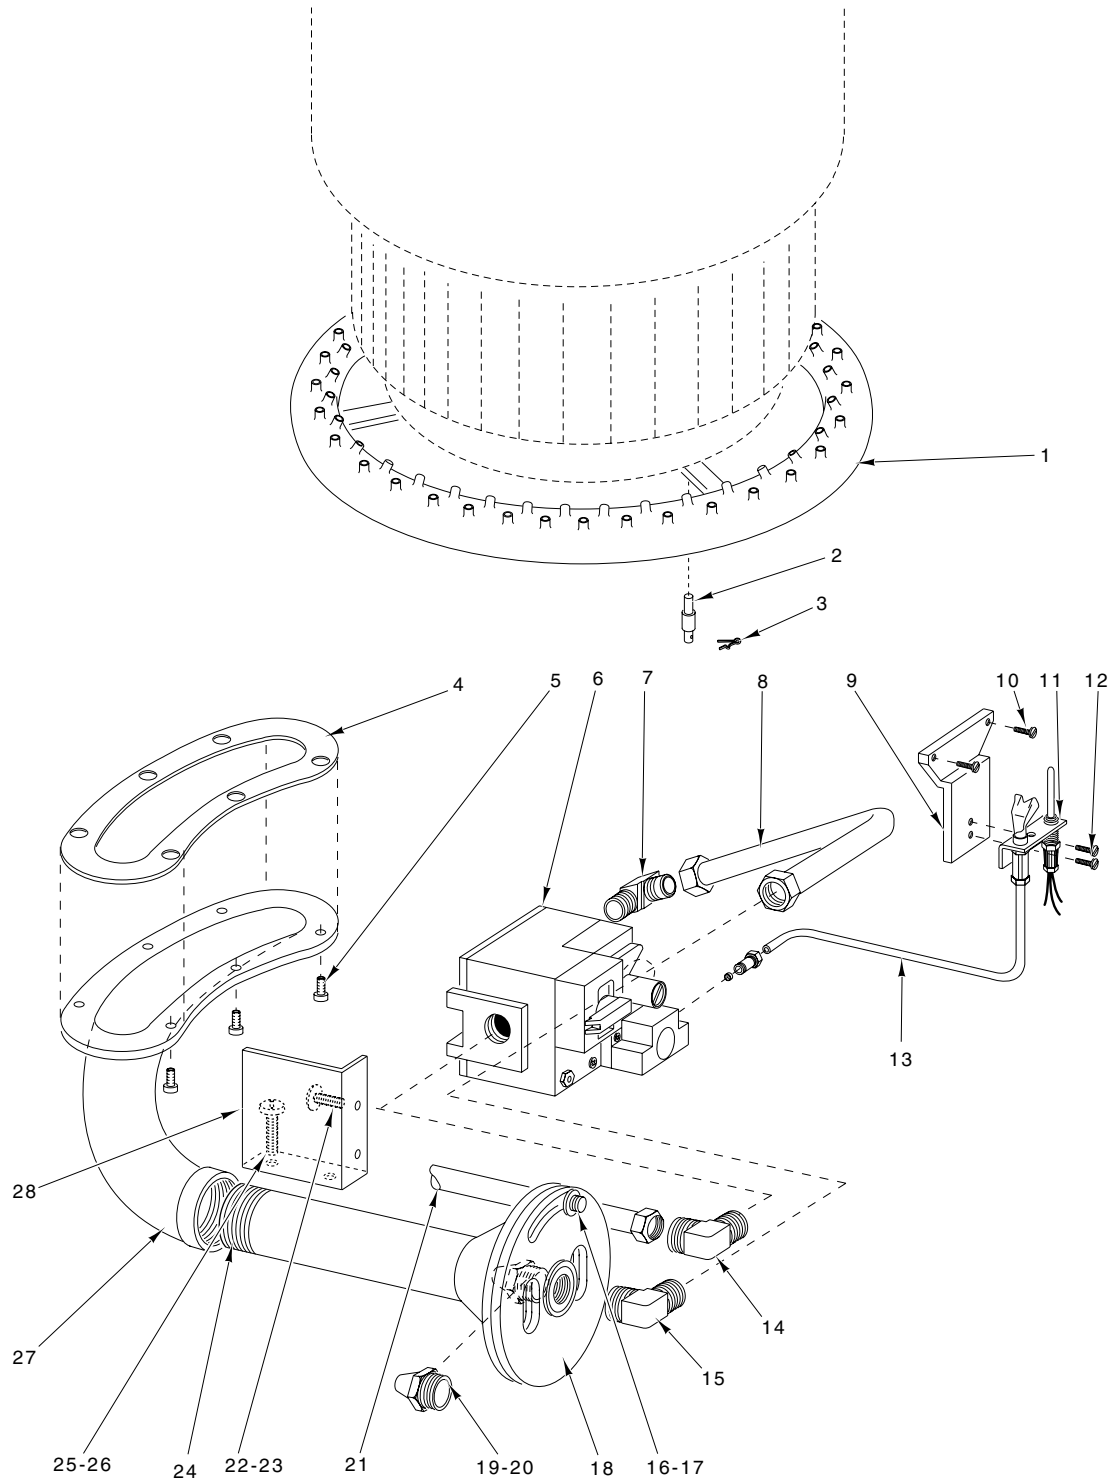


PL-55810

GAS COMPONENTS

GAS COMPONENTS


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55810			
1	00-360853-00167	Burner	1
2	00-360853-00169	Stud	4
3	00-360644	Pin – Burner Mounting Bracket	4
4	00-360647	Gasket – Manifold	4
5	SC-121-50	Cap Screw 1/4-20 x 5/8 Socket Hex Hd.	6
6	00-360853-00160	Valve – Combo	1
7	FP-012-07	Elbow – Male (1/2 Pipe x 5/8 Tube)	1
8	00-360853-00235	Tube – Gas (18 In.) (Incls. Items 7 & 15)	1
9	00-854317-00069	Bracket – Igniter Mounting	1
10	SC-066-21	Mach. Screw 10-32 x 3/8 Truss Hd.	2
11	00-360853-00162	Ignitor – Hot Surface	1
12	SC-012-79	Mach. Screw 8-32 x 1/4 Truss Hd.	2
13	00-360625	Tube – Aluminum 12 x 1/4	1
14	FP-012-07	Elbow – Male (1/2 Pipe x 5/8 Tube)	1
15	FP-012-07	Elbow – Male (1/2 Pipe x 5/8 Tube)	1
16	SC-087-27	Stud – Venturi Face	1
17	WS-022-21	Washer – Venturi Face	1
18	00-360649	Plate – Venturi Face	1
19	00-360651	Orifice – Gas (Nat.)	1
20	00-360720	Orifice – Gas (LP Only)	1
21	00-360853-00237	Tube – Regulator (36 In.) (Incls. Item 14)	1
22	SC-019-28	Mach. Screw 8-32 x 1/4 Bndg. Hd.	2
23	WL-008-07	Lockwasher #8 Internal Shakeproof	2
24	00-360648	Venturi	1
25	SC-066-21	Mach. Screw 10-32 x 3/8 Truss Hd.	2
26	WL-008-13	Lockwasher #10 Internal Shakeproof	2
27	00-360645	Manifold	1
28	00-360742	Bracket – Gas Regulator Mounting	1
	00-360715	Orifice – Pilot (Propane Kit)	1
	00-854317-00088	Kit – Propane Conversion	1

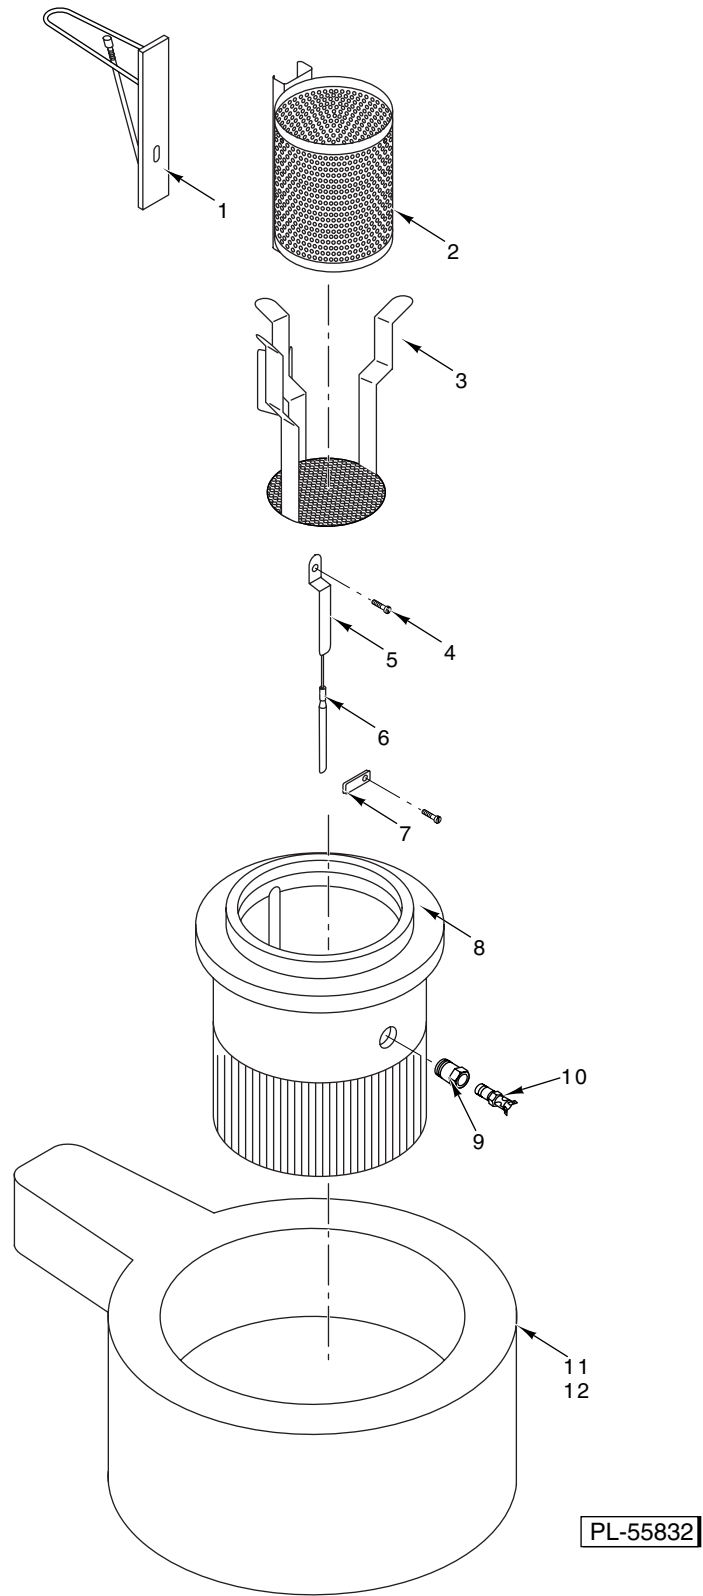

KETTLE ASSEMBLY

KETTLE ASSEMBLY


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55832			
1	00-360853-00192	Handle	1
2	00-360853-00191	Basket	1
3	00-360853-00173	Screen – Crumb	1
4	SC-053-35	Mach. Screw 8-32 x $\frac{3}{8}$ Truss Hd. (SST)	2
5	00-360670	Cover – Thermostat Wire	1
6	00-360853-00178	Thermostat	1
7	00-360671	Brace – Thermostat Tube	1
8	00-360779	Kettle	1
9	00-360853-00067	Adaptor – Limit Switch	1
10	00-360636	Switch – Safety Limit	1
11	00-360853-00176	Shroud	1
12	00-360801	Insulation – Shroud	1

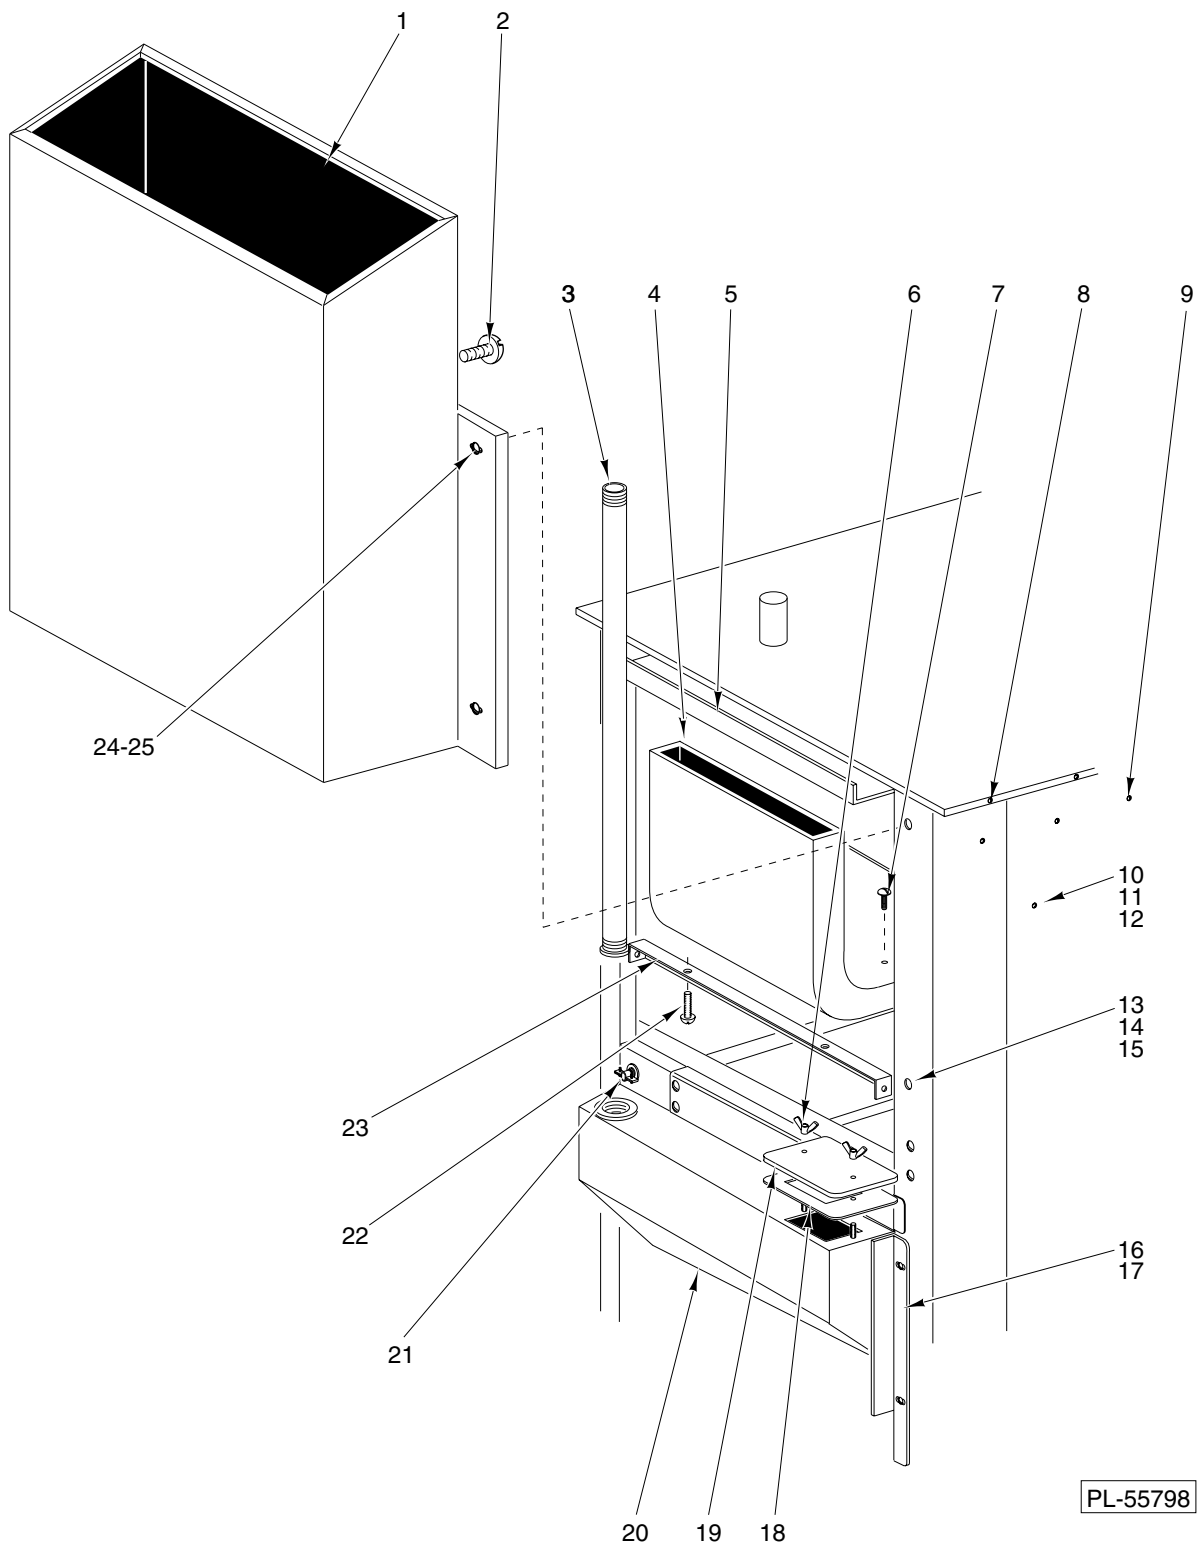

BACK VIEW

BACK VIEW

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55798			
1	00-360642	Vent – Exhaust	1
2	SD-035-43	Self-Tapping Screw 10-32 x 1/2 Phil. Pan Hd., Type D	4
3	00-360853-00100	Pipe – Exhaust	1
4	00-360641	Flue	1
5	00-360793	Channel – Drip	1
6	NS-048-01	Wing Nut 1/4-20	2
7	SD-035-43	Self-Tapping Screw 10-32 x 1/2 Phil. Pan Hd., Type D	2
8	SD-017-30	Self-Tapping Screw 6-20 x 3/8 Phil. Flat Hd., Type AB	7
9	SD-033-84	Self-Tapping Screw 10-32 x 1/2 Phil. Truss Hd., Type F	14
10	SC-025-29	Mach. Screw 10-32 x 5/8 Bndg. Hd.	2
11	NS-011-23	Mach. Nut Hex 10-32 (SST)	2
12	WL-008-13	Lockwasher #10 Internal Shakeproof	2
13	SC-025-29	Mach. Screw 10-32 x 5/8 Bndg. Hd.	4
14	WL-008-13	Lockwasher #10 Internal Shakeproof	4
15	NS-011-23	Mach. Nut Hex 10-32 (SST)	4
16	SC-066-13	Mach. Screw 8-32 x 1/4 Phil. Truss Hd.	4
17	WL-008-07	Lockwasher #8 Internal Shakeproof	4
18	00-360733	Gasket – Access Lid	1
19	00-360732	Lid – Tank Exhaust	1
20	00-360853-00180	Tank – Exhaust	1
21	FE-012-36	Connector – Conduit 1/2 TS	1
22	SD-036-42	Self-Tapping Screw 10-24 x 1/2 Hex Washer Hd., Type T	2
23	00-360640	Bracket – Shroud Mounting Rear	1
24	SC-066-13	Mach. Screw 8-32 x 1/4 Phil. Truss Hd.	4
25	WL-008-07	Lockwasher #8 Internal Shakeproof	4

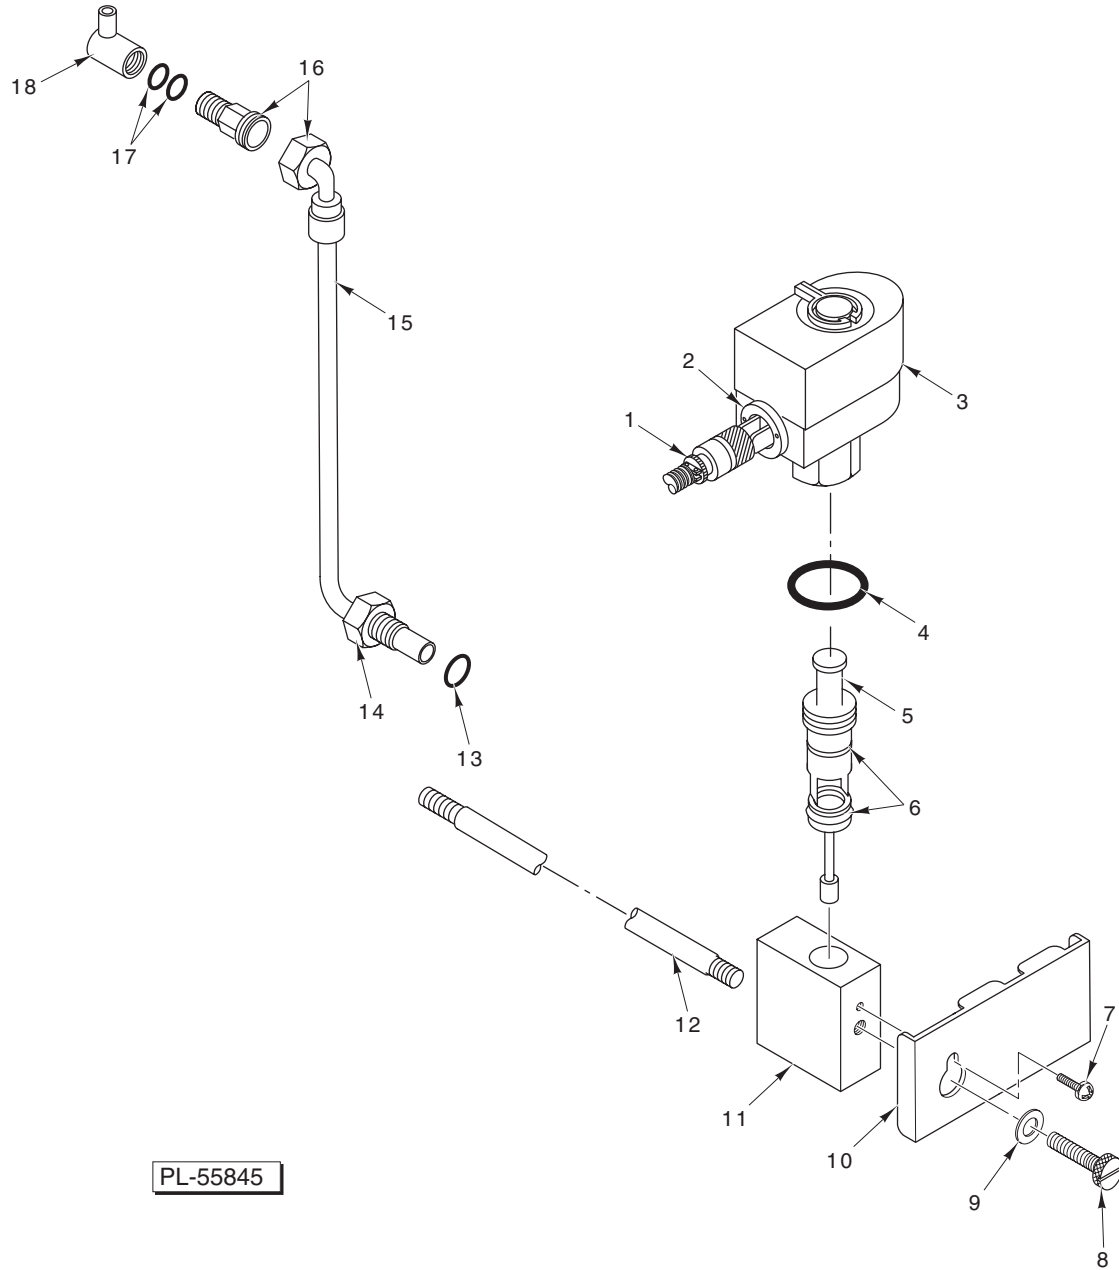

PL-55845

SOLENOID

SOLENOID

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55845			
1	00-360772	Plug – Solenoid	1
2	00-360631	Plug – Solenoid	1
3	00-360711	Housing – Solenoid Coil	1
4	00-360635	Gasket – Upper Valve Body	1
5	00-360853-00193	Pressure Relief Valve Assy. (Incls. Items 4 & 6)	1
6	00-360853-00194	O-Ring	2
7	00-854317-00027	Mach. Screw $\frac{1}{4}$ -20 x $\frac{3}{8}$ Truss Hd.	1
8	00-360853-00197	Thumb Screw (Brass)	1
9	00-360853-00196	O-Ring	1
10	00-360853-00172	Bracket – Support	1
11	00-360853-00195	Block – Solenoid	1
12	00-854317-00054	Pipe – Exhaust	1
13	00-360782	O-Ring	1
14	00-360771	Bushing – Exhaust	1
15	00-360805	Line – Exhaust (SST)	1
16	00-360773	Pipe $\frac{5}{8}$ x $\frac{1}{2}$ MPT	1
17	00-854317-00008	O-Ring	2
18	00-360744	Elbow – Exhaust	1

