HOBART

CATALOG OF REPLACEMENT PARTS



6115CE POTATO PEELER

ML-136155 **6115T (CE)**


A product of HOBART 701 S. RIDGE AVENUE TROY, OHIO 45374-0001

FORM 43323 (May 2018)

 © HOBART 2018

Table of Contents


5 TIMER UNIT
7 HOUSING UNIT
9 DRIVE UNIT
11 LINER
13 PEEL TRAP UNIT (ML-16952-Z)
15 PORTABLE STAND AND BASKET

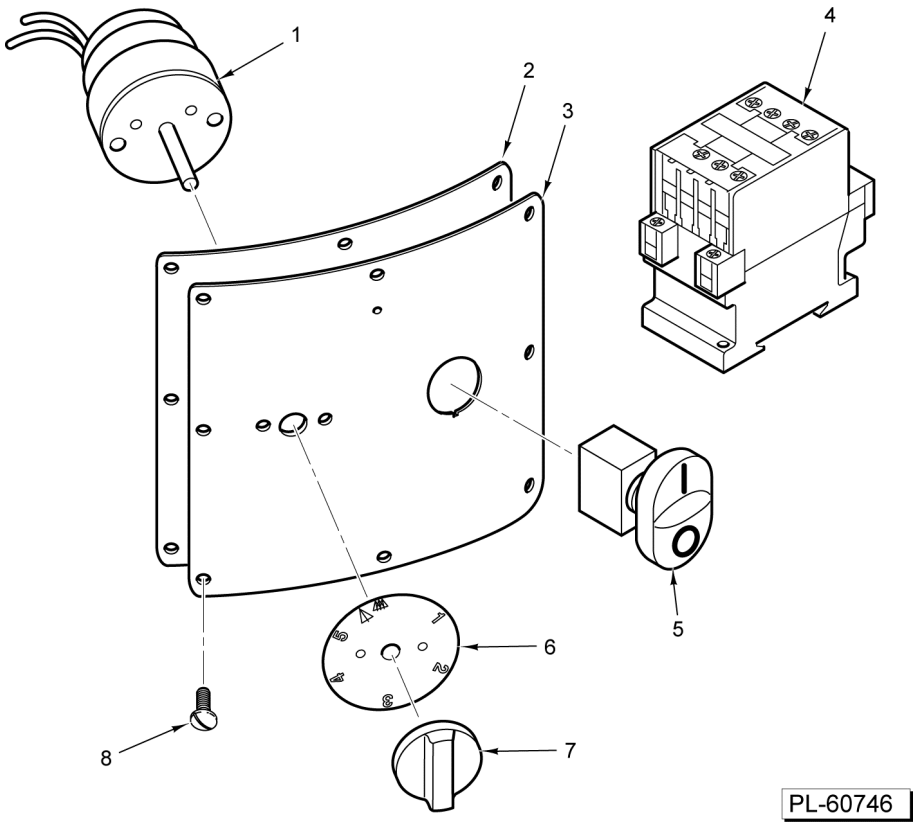

TIMER UNIT

TIMER UNIT

ILLUS. PL-60746	PART NO.	NAME OF PART	AMT.
1	00-294650-04-13	Timer Assy	1
2	00-891511	Gasket	1
3	00-914912	Plate - Cover (Timer/Switch)	1
4	00-914288	Contactor	1
5	00-087711-232-1	Switch (Start/Stop)	1
6	00-914913	Dial - Adhesive	1
7	00-914914	Knob - Timer	1
8	SD-033-44	Self-Tapping Screw 8-18 x 5/16 Slotted Pan Hd., Type B	8

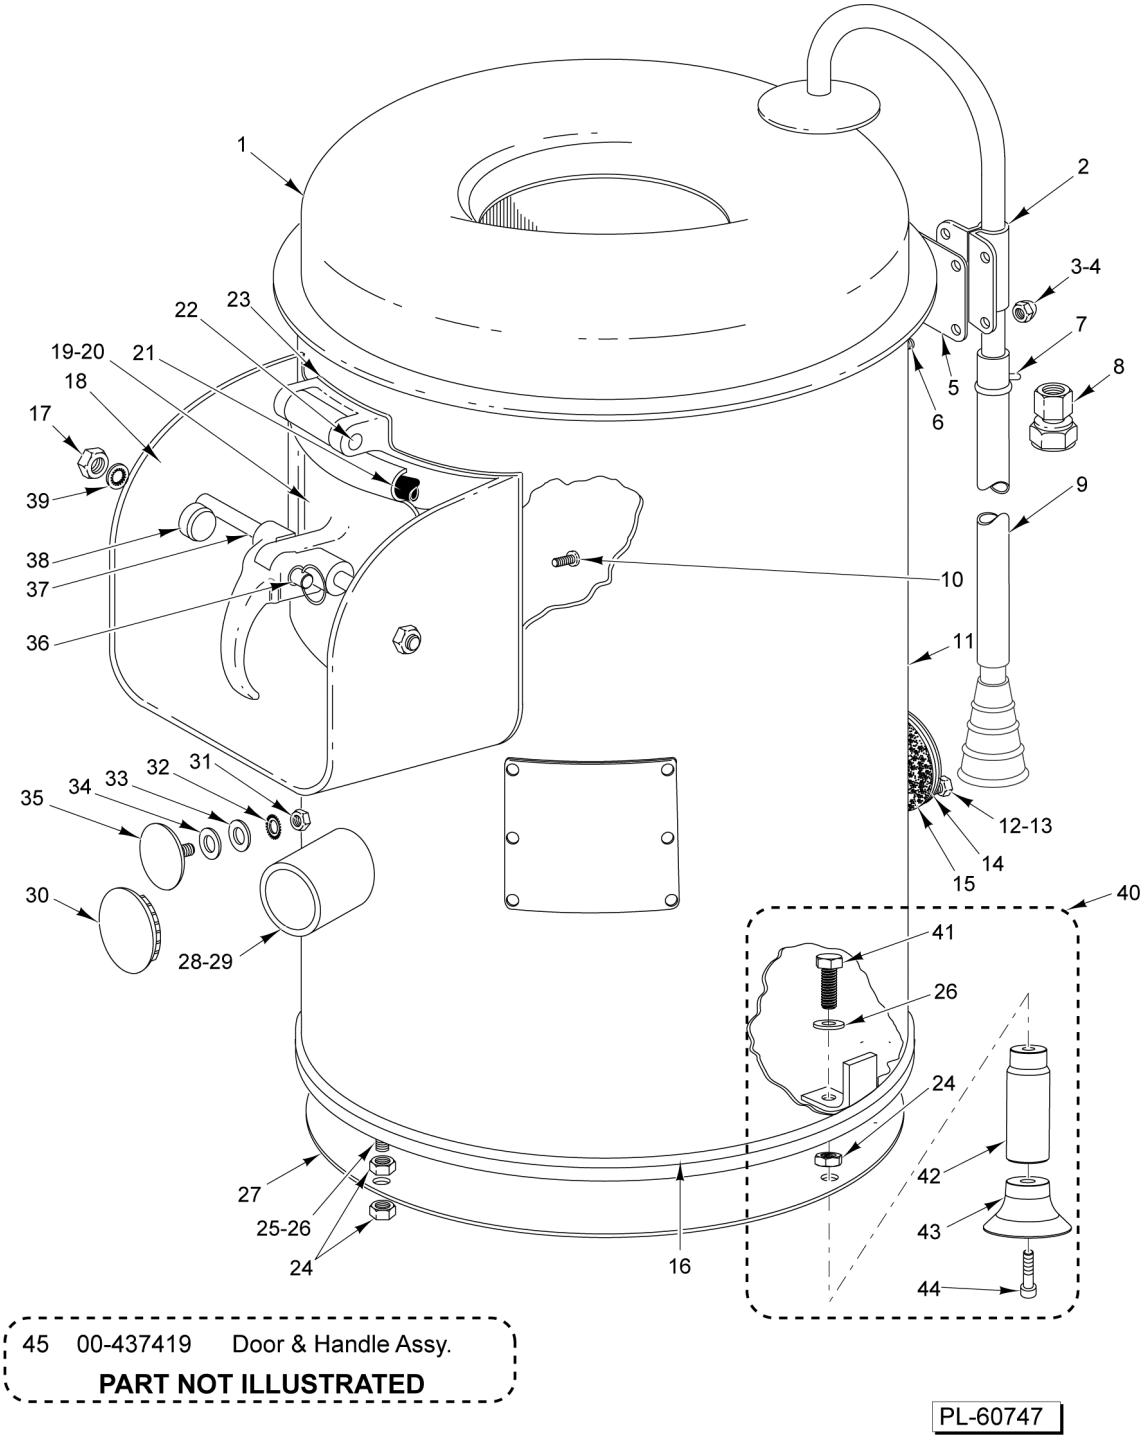


HOUSING UNIT

HOUSING UNIT

ILLUS. PL-60747	PART NO.	NAME OF PART	AMT.
1	00-891514	Top - Hopper	1
2	00-064350	Fill Tube & Bracket Assy	1
3	NS-025-01	Crown Nut 10-24 (SST)	4
4	WS-002-30	Washer	AR
5	00-063294	Gasket - Fill Assy	1
6	SC-025-07	Mach. Screw 10-24 x 5/16 Slotted Bndg. Hd. (SST)	4
7	00-063242	Clamp - Hose	1
8	00-079404-00001	Coupling (1/2 In. Female Pipe x 1/2 In. Tube) (Use With Peel Trap Only)	1
9	00-063456	Hose - Fill	1
10	SC-025-07	Mach. Screw 10-24 x 5/16 Slotted Bndg. Hd. (SST)	11
11	00-891504-00002	Housing Assy	1
12	00-070641-00018	Thumb Screw	2
13	NS-031-08	Stop Nut 8-32 Special (SST)	1
14	00-124526	Cover - Reset Button	1
15	00-124529	Gasket - Reset Cover	1
16	00-062635-00001	Base - Rubber	1
17	NS-018-06	Jam Nut 5/16-18 Hex (SST)	2
18	00-064219	Chute - Housing	1
19	00-078145	Bushing - Chute Door	1
20	00-102826	Door & Seal Assy. (Incls. Items 19 & 21)	1
21	00-062372-00001	Seal - Chute Door	1
22	00-292011-00002	Pin - Lock	1
23	00-062387	Gasket - Chute Housing	1
24	NS-018-06	Jam Nut 5/16-18 Hex (SST)	8
25	SC-041-10	Cap Screw 5/16-18 x 5/8 Hex Hd. (SST)	4
26	WS-017-08	Washer (0.328 x 0.625 x 0.062) (SST)	4
27	00-064351	Cover - Bottom Plate	1
28	00-538412	Clamp - Hose	1
29	00-069642	Hose - Drain	1
30	00-291592	Plug - Button (2 In.) (Use With Peel Trap Only)	1
31	NS-009-22	Nut 10-24 Hex	1
32	WL-010-06	Lockwasher #10 External Shakeproof	1
33	WS-018-09	Washer	1
34	WS-022-16	NLA - Obsolete--Washer	1
35	00-063215	Timer Hole Cover & Screw Assy	1
36	00-292011-00004	Pin - Lock	1
37	00-437454	Door Handle - Locking Assy	1
38	00-064200-00002	Stud - Latch	2
39	WL-008-22	Lockwasher 5/16 Internal Shakeproof	2
40	00-937924	Kit - Leg (Incls. Items 41 thru 44)	4
41	SC-041-12	Cap Screw 5/16-18 x 7/8 Hex Hd. (SST)	4
42	00-937923	Leg Assy. (Incls. Items 43 & 44)	4
43	00-914835	Foot - Base	4
44	00-968067	Screw - Button Hd. Torq W/Patch (5/16-18 x 1.0)	4
45	00-437419	Door & Handle Assy. (Incls. Items 20, 36, & 37)	1

50	00-985449	Kit - Drive Unit
51	00-062630	Abrasive Wheel & Hub Assy.


PARTS NOT ILLUSTRATED

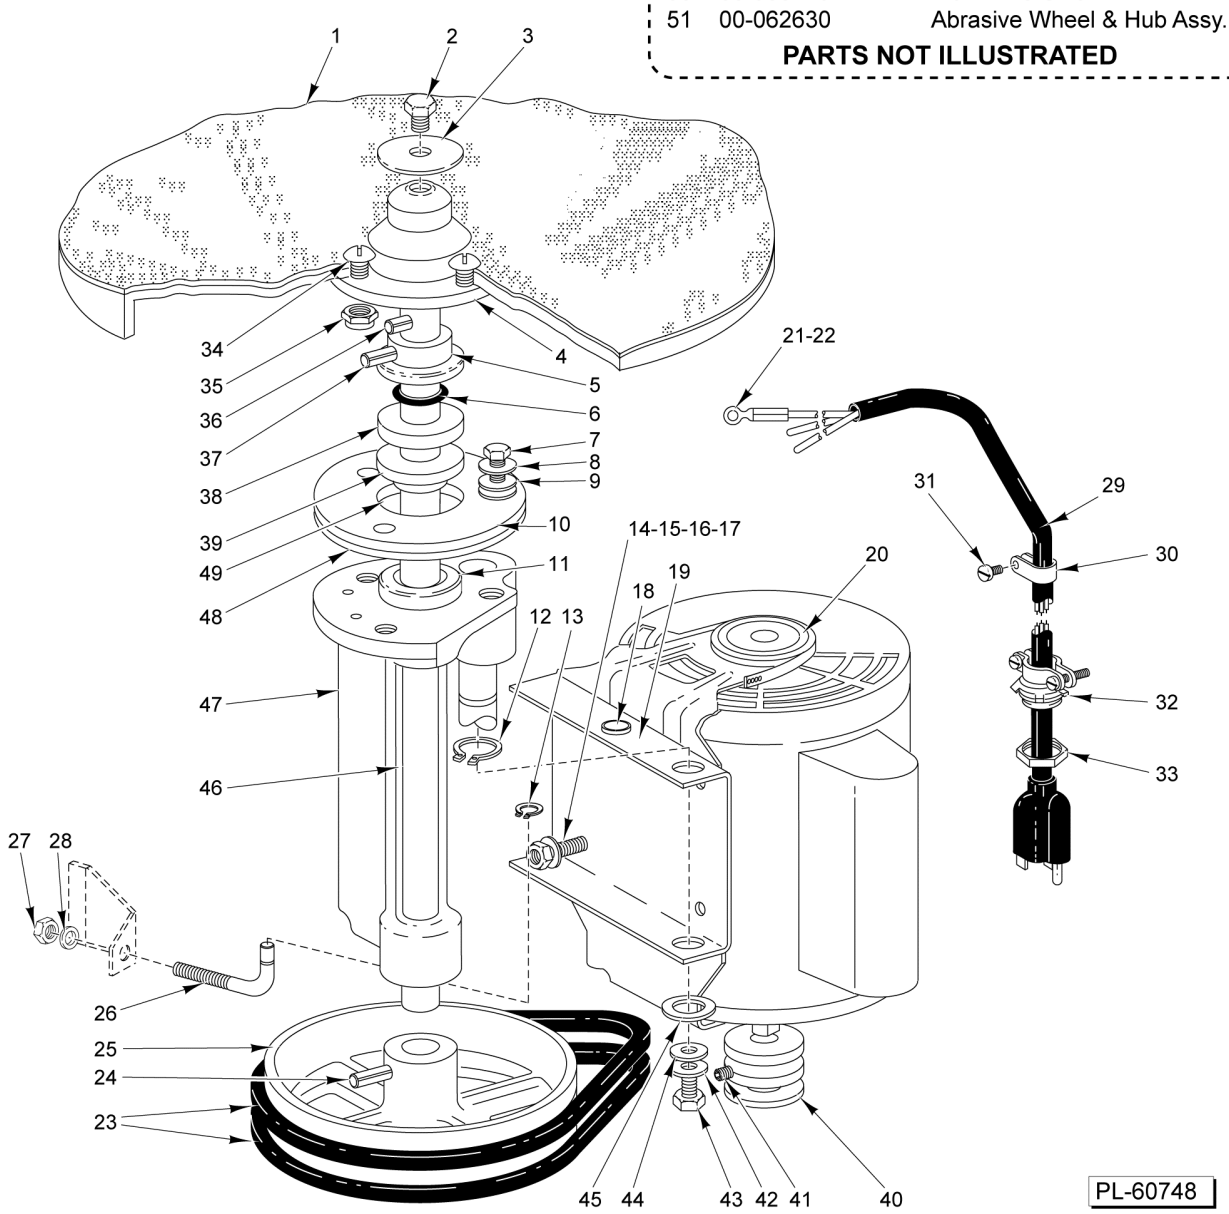

DRIVE UNIT

DRIVE UNIT


ILLUS. PL-60748	PART NO.	NAME OF PART	AMT.
1	00-944012	Disc - Abrasive Assy	1
2	SC-067-23	Mach. Screw 5/16-18 x 3/8 Hex Hd	1
3	00-070706-00002	Washer - Sealer	1
4	00-291252	Hub - Abrasive Wheel	1
5	00-875019	Flange - Drive	1
6	00-067500-00009	O-Ring	1
7	SC-041-12	Cap Screw 5/16-18 x 7/8 Hex Hd. (SST)	3
8	WL-006-23	Lockwasher 5/16 Helical (SST)	3
9	WS-004-21	Washer	3
10	00-063208	Plate - Retaining	1
11	00-108394-00046	Sleeve - Bearing	2
12	RR-004-18	Retaining Ring	1
13	RR-007-10	Retaining Ring	1
14	SC-037-85	Cap Screw 5/16-18 x 1 Hex Hd	4
15	WL-003-44	Lockwasher 5/16 Helical	4
16	NS-013-14	Nut 5/16-18 Hex	4
17	WS-017-08	Washer (0.328 x 0.625 x 0.062) (SST)	4
18	FE-022-43	Bushing - Electric Snap	1
19	00-290027	Motor Sub-Base	1
20	00-278187-00002	Motor (115/220 V., 50 Hz., 1 Ph.)	1
21	SC-007-33	Mach. Screw 8-32 x 3/8 Slotted Rd. Hd	1
22	WL-008-07	Lockwasher 8 Internal Shakeproof	1
23	00-063267	V-Belt (Order in Pairs Only)	2
24	RP-002-19	Rollpin 3/16 Dia. x 1-3/8 Lg	1
25	00-063207	Pulley - Driven	1
26	00-875580	Tightener - Belt	1
27	NS-032-12	Stop Nut 5/16-18 Flexloc	1
28	WS-017-08	Washer (0.328 x 0.625 x 0.062) (SST)	1
29	00-117542-00024	Cord & Plug Assy	1
30	00-078752-00003	Clamp - Cable (Cord & Plug)	1
31	SC-007-33	Mach. Screw 8-32 x 3/8 Slotted Rd. Hd	1
32	FE-026-33	Relief - Strain	1
33	FE-006-05	Lock Nut 1/2	1
34	SC-041-15	Cap Screw 5/16-18 x 1-1/4 Hex Hd. (SST)	4
35	NS-032-35	Stop Nut 5/16-18 Flexloc	4
36	RP-002-20	Rollpin 5/16 Dia. x 1-3/8 Lg	1
37	RP-002-18	Rollpin 1/4 Dia. x 1-1/4 Lg	1
38	00-062367	Seal - Graphitar	1
39	00-062368	Flange - Seal	1
40	00-062670	Pulley - Motor	1
41	SC-047-26	Set Screw 1/4-28 x 3/8 Soc. Hd., Cup Pt	1
42	WL-003-38	Lockwasher 1/4 Helical	1
43	SC-036-14	Cap Screw 1/4-20 x 1/2 Hex Hd	1
44	WS-003-45	Washer	1
45	WS-010-36	Washer	1
46	00-062370	Shaft - Main Drive	1
47	00-063260	Bearing Carrier & Pivot Shaft Assy. (Incls. Items 11 & 39)	1
48	00-064722	Gasket - Bearing Carrier	1
49	00-067500-00018	O-Ring	1
50	00-985449	Kit - Drive Unit (Incls. Items 5, 6, 11, 23, 36, 38, & 49)	1
51	00-062630	Abrasive Wheel & Hub Assy. (Incls. Items 1 thru 4, 34, & 35)	1

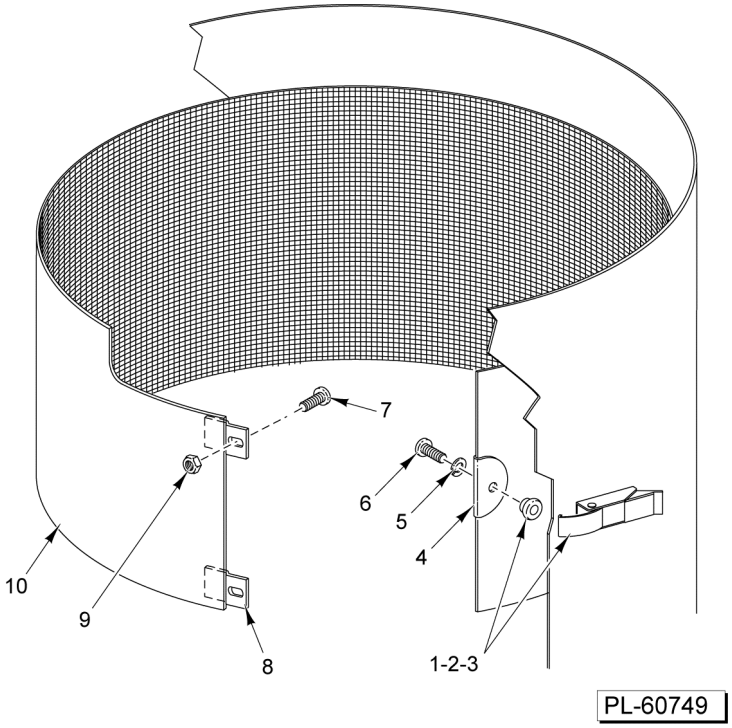

LINER

LINER

ILLUS. PL-60749	PART NO.	NAME OF PART	AMT.
1	00-479480	Latch - Keeper & Draw	1
2	SC-021-98	Mach. Screw 8-32 x 3/8 Phil. Rd. Hd. (SST)	2
3	NS-031-08	Stop Nut 8-32 Special (SST)	2
4	00-479473	Bracket - Liner	1
5	WL-006-11	Lockwasher #12 Light (SST)	1
6	SC-066-26	Mach. Screw 12-24 x 1/2 Phil. Truss Hd. (SST)	1
7	SC-109-62	Mach. Screw 10-24 x 3/8 Slotted Pan Hd	2
8	00-479475	Bracket - Liner LH	2
9	NS-031-15	Stop Nut 10-24 Hex (SST)	2
10	00-479494-00001	Liner Service Assy. (Use For Service) (Incls. Items 1, 2, 3, 7, 8, & 9)	1

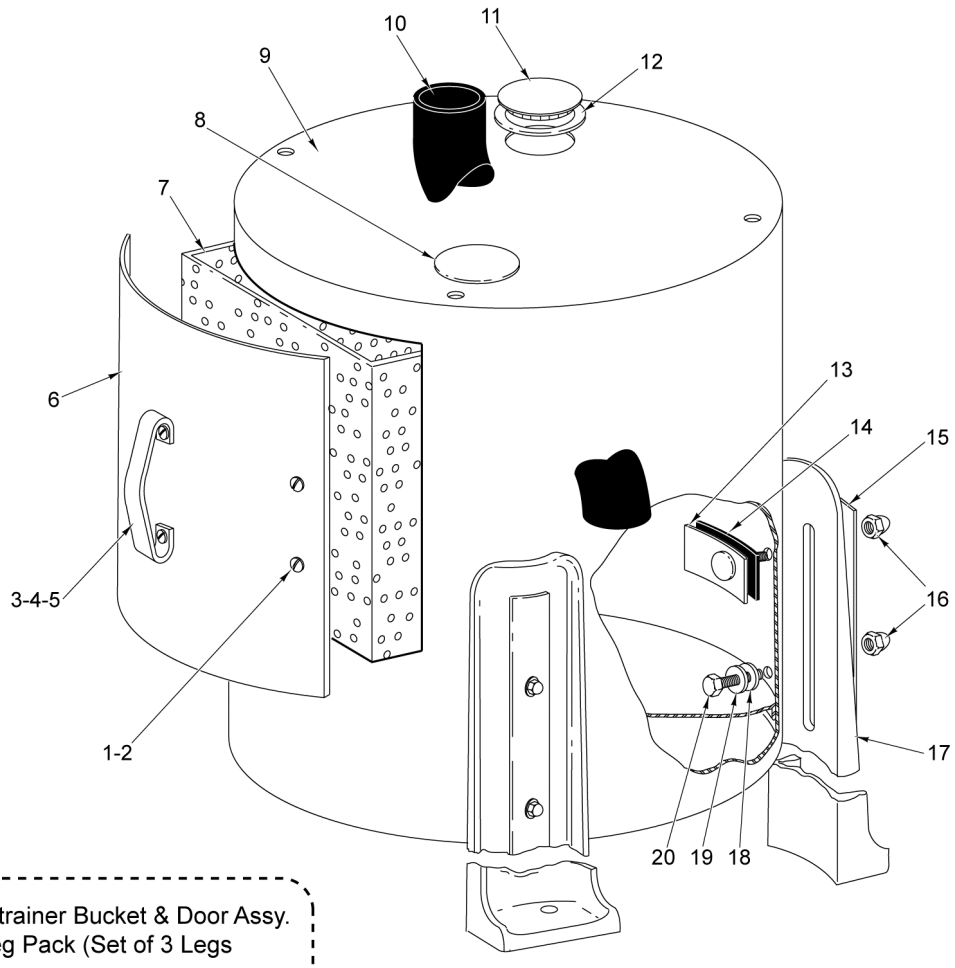

21	00-437460	Strainer Bucket & Door Assy.
22	00-290580	Leg Pack (Set of 3 Legs


PART NOT ILLUSTRATED

PL-60750

PEEL TRAP UNIT (ML-16952-Z)

PEEL TRAP UNIT (ML-16952-Z)

ILLUS. PL-60750	PART NO.	NAME OF PART	AMT.
1	SC-053-05	Mach. Screw 10-24 x 3/8 Slotted Truss Hd. (SST)	4
2	NS-031-15	Stop Nut 10-24 Hex (SST) (Elastic)	4
3	00-111303-00002	Handle - Door Strainer	1
4	SC-053-05	Mach. Screw 10-24 x 3/8 Slotted Truss Hd. (SST)	2
5	NS-031-15	Stop Nut 10-24 Hex (SST) (Elastic)	2
6	00-291437	Door - Strainer	1
7	00-437461	Strainer Bucket Assy	1
8	00-064877	Grommet - Drain Hose	1
9	00-290404	Peel Trap Housing Assy	1
10	00-063273	Hose - Drain (Peel Trap)	1
11	00-291592	Plug - Button (2 In.)	1
12	00-064953	Gasket - Plug Button	1
13	00-077620	Inside Leg Clamp and Bolt Assy	3
14	00-062601-00002	Gasket - Leg Screw	3
15	00-077619	Cover - Leg Slot	3
16	NS-025-16	Acorn Nut 3/8-16	6
17	00-077618	Leg - Peel Trap	3
18	WS-006-13	Washer (Lead)	3
19	WS-006-44	Washer	3
20	SC-041-28	Cap Screw 3/8-16 x 3/4 Hex Hd. (SST)	3
21	00-437460	Strainer Bucket & Door Assy. (Incls Items 1 thru 7)	1
22	00-290580	Leg Pack (Set of 3 Legs)	1

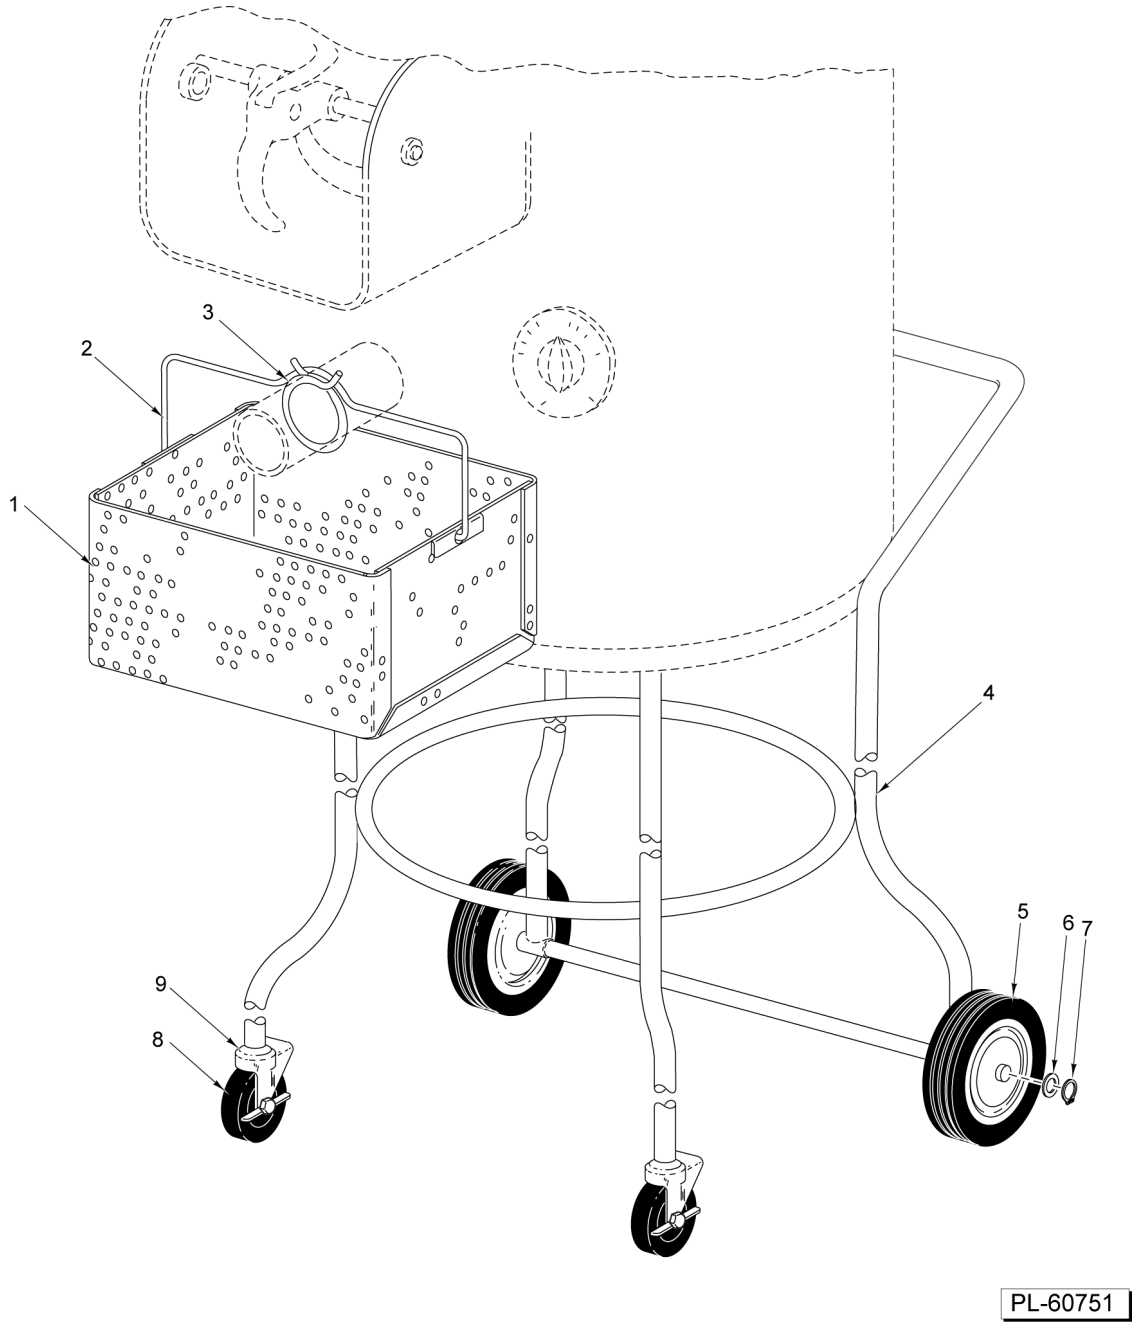

PORTABLE STAND AND BASKET

PORTABLE STAND AND BASKET

ILLUS. PL-60751	PART NO.	NAME OF PART	AMT.
1	00-290322	Basket Assy. (Peel Trap) (Incls. Items 2 & 3)	1
2	00-069560	Handle - Basket	1
3	00-534651	Clamp - Hose #32	1
4	00-290321	Portable Stand Assy. (Incls. Items 5 thru 9)	1
5	00-068881-00013	Wheel - Rear	2
6	WS-008-09	Washer	2
7	RR-010-12	Retaining Ring	2
8	00-068881-00014	Caster - Front	2
9	00-068881-00015	Socket - Caster	2