



Refrigerated Showcases

Models RS-CN-0271, 0271-S, 0371, 0371-S,


0471, 0471-S, 0571, 0571-S

Items 44387, 44382, 44502, 44383, 44503, 44384, 44504, 44505

Instruction Manual



Revised - 02/18/2022

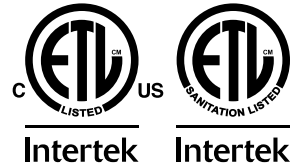

Toll Free: 1-800-465-0234
Fax: 905-607-0234
Email: service@omcan.com
www.omcan.com

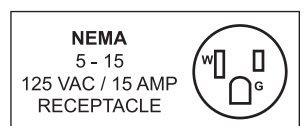


Table of Contents

Model RS-CN-0271 / Model RS-CN-0271-S / Model RS-CN-0371
Model RS-CN-0371-S / Model RS-CN-0471 / Model RS-CN-0471-S
Model RS-CN-0571 / Model RS-CN-0571-S

Section	Page
Disclaimer	3
General Information	4 - 5
Safety and Warranty	5 - 8
Technical Specifications	8 - 10
Operation	11 - 12
Maintenance	12
Troubleshooting	12 - 13
Parts Breakdown	14 - 29
Electrical Schematics	30 - 32
Notes	33 - 34
Warranty Registration	35

Disclaimer

***OMCAN IS NOT RESPONSIBLE FOR
DIMINISHED COOLING OR ANY DAMAGES
DUE TO WATER LEAKS. WARRANTY IS VOID
IF THE AMBIENT ROOM TEMPERATURE
EXCEEDS 75°F AND 55% RELATIVE
HUMIDITY, AND THE APPLIANCE DRAIN IS
NOT CONNECTED DIRECTLY TO A FLOOR
DRAIN.***

General Information

Omcan Manufacturing and Distributing Company Inc., Food Machinery of America, Inc. dba Omcan and Omcan Inc. are not responsible for any harm or injury caused due to any person's improper or negligent use of this equipment. The product shall only be operated by someone over the age of 18, of sound mind, and not under the influence of any drugs or alcohol, who has been trained in the correct operation of this machine, and is wearing authorized, proper safety clothing. Any modification to the machine voids any warranty, and may cause harm to individuals using the machine or in the vicinity of the machine while in operation.

CHECK PACKAGE UPON ARRIVAL

Upon receipt of an Omcan shipment please inspect for external damage. If no damage is evident on the external packaging, open carton to ensure all ordered items are within the box, and there is no concealed damage to the machine. If the package has suffered rough handling, bumps or damage (visible or concealed), please note it on the bill of lading before accepting the delivery and contact Omcan within 24 hours, so we may initiate a claim with the carrier. A detailed report on the extent of the damage caused to the machine must be filled out within three days, from the delivery date shown in the shipping documents. Omcan has no recourse for damaged products that were shipped collect or third party.

Before operating any equipment, always read and familiarize yourself with all operation and safety instructions.

Omcan would like to thank you for purchasing this machine. It's of the utmost importance to save these instructions for future reference. Also save the original box and packaging for shipping the equipment if servicing or returning of the machine is required.

Omcan Fabrication et distribution Compagnie Limitée et Food Machinery d'Amérique, dba Omcan et Omcan Inc. ne sont pas responsables de tout dommage ou blessure causé du fait que toute personne ait utilisé cet équipement de façon irrégulière. Le produit ne doit être exploité que par quelqu'un de plus de 18 ans, sain d'esprit, et pas sous l'influence d'une drogue ou d'alcool, qui a été formé pour utiliser cette machine correctement, et est vêtu de vêtements de sécurité appropriés. Toute modification de la machine annule toute garantie, et peut causer un préjudice à des personnes utilisant la machine ou des personnes à proximité de la machine pendant son fonctionnement.

VÉRIFIEZ LE COLIS DÈS RÉCEPTION

Dès réception d'une expédition d'Omcan veuillez inspecter pour dommages externes. Si aucun dommage n'est visible sur l'emballage externe, ouvrez le carton afin de s'assurer que tous les éléments commandés sont dans la boîte, et il n'y a aucun dommage dissimulé à la machine. Si le colis n'a subi aucune mauvaises manipulations, de bosses ou de dommages (visible ou cachée), notez-le sur le bon de livraison avant d'accepter la livraison et contactez Omcan dans les 24 heures qui suivent, pour que nous puissions engager une réclamation auprès du transporteur. Un rapport détaillé sur l'étendue des dommages causés à la machine doit être rempli dans un délai de trois jours, à compter de la date de livraison indiquée dans les documents d'expédition. Omcan n'a aucun droit de recours pour les produits endommagés qui ont été expédiés ou cueilli par un tiers transporteur.

General Information

Avant d'utiliser n'importe quel équipement, toujours lire et vous familiariser avec toutes les opérations et les consignes de sécurité.

Omcan voudrais vous remercier d'avoir choisi cette machine. Il est primordial de conserver ces instructions pour une référence ultérieure. Également conservez la boîte originale et l'emballage pour l'expédition de l'équipement si l'entretien ou le retour de la machine est nécessaire.

Omcan Empresa De Fabricacion Y Distribucion Inc. Y Maquinaria De Alimentos De America, Inc. dba Omcan y Omcan Inc. no son responsables de ningun daño o perjuicio causado por cualquier persona inadecuada o el uso descuidado de este equipo. El producto solo podra ser operado por una persona mayor de 18 años, en su sano juicio y no bajo alguna influencia de droga o alcohol, y que este ha sido entrenado en el correcto funcionamiento de esta máquina, y ésta usando ropa apropiada y autorizada. Cualquier modificación a la máquina anula la garantía y puede causar daños a las personas usando la máquina mientras esta en el funcionamiento.

REVISE EL PAQUETE A SU LLEGADA

Tras la recepcion de un envio Omcan favor inspeccionar daños externos. Si no hay daños evidentes en el empaque exterior, Habra el carton para asegurarse que todos los articulos solicitados estén dentro de la caja y no encuentre daños ocultos en la máquina. Si el paquete ha sufrido un manejo de poco cuidado, golpes o daños (visible o oculto) por favor anote en la factura antes de aceptar la entrega y contacte Omcan dentro de las 24 horas, de modo que podamos iniciar una reclamación con la compañía. Un informe detallado sobre los daños causados a la máquina debe ser llenado en el plazo de tres días, desde la fecha de entrega que se muestra en los documentos de envío. Omcan no tiene ningun recurso por productos dañados que se enviaron a recoger por terceros.

Antes de utilizar cualquier equipo, siempre lea y familiarizarse con todas las instrucciones de funcionamiento y seguridad.

Omcan le gustaría darle las gracias por la compra de esta máquina. Es de la mayor importancia para salvar estas instrucciones para futuras consultas. Además, guarda la caja original y el embalaje para el envío del equipo si servicio técnico o devolución de la máquina que se requiere.

Safety and Warranty

HANDLE AND ASSEMBLING



Handle with care


Unplug wall socket before moving. Never tilt the refrigerator over 45 degrees during handling.

Safety and Warranty




Storage

Always store refrigerator in a dry place.

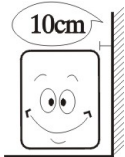


Sufficient space

To allow for proper air circulation and increased refrigeration capabilities, the refrigerator must have at least 3 inches of space between wall and unit.

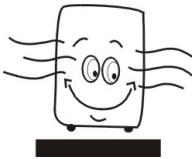

Proper ventilation

Always place the refrigerator in an area with good ventilation. For first time use, wait at least 2 hours before plugging into wall socket.

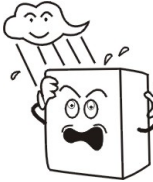

Away from heat source

Never place the refrigerator near any type of heat source or in direct sunlight, as it reduces refrigeration capabilities.




No heavy load

Never put heavy items on top of the refrigerator.



No alterations/tampering


Never tamper with, or make changes to the refrigerator. Changes and add-ons should not be installed to the inside or outside of the refrigerator.

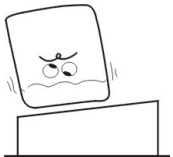

Stable location


Unpack and place the refrigerator on flat, solid ground.

PREPARATION AND POWER SUPPLY

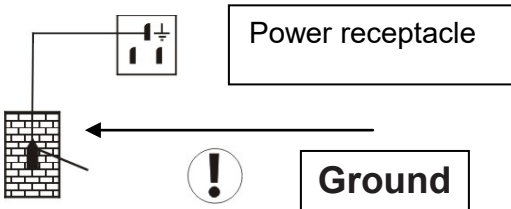

Exclusive power socket


Power supply should be 110V, single phase AC with exclusive single phase three pin outlet and fuse (8A). The power outlet must be in close proximity to the ground.

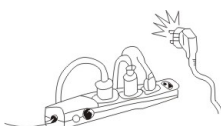

No shared power outlets

Refrigerator cable should never share the power outlet with any other appliance, as cable will overheat and may result in a fire.

Safety and Warranty



Protect cables

Extra caution should be used when handling cables, as broken or damaged cables can cause sparking and may result in a fire.




No water flushing

Never flush the refrigerator surface. This can cause leakage, which may result in electrical damage or fire.



Never store flammables and explosives

No explosives or flammables should be stored in, or in proximity to, the refrigerator, such as gasoline, alcohol, and adhesives.

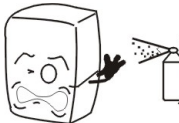

No spray

Never spray flammables such as paint or coating near the refrigerator. This may cause fire or malfunction.



After power outage

After a power outage or the unplugging of the refrigerator, wait at least 5 minutes before plugging it back in.



No medicine

Medicine should not be stored inside of the refrigerator.

RESIDENTIAL USERS: Vendor assumes no liability for parts or labor coverage for component failure or other damages resulting from installation in non-commercial or residential applications. The right is reserved to deny shipment for residential usage; if this occurs, you will be notified as soon as possible.

1 YEAR PARTS AND LABOUR WARRANTY

Within the warranty period, contact Omcan Inc. at 1-800-465-0234 to schedule an Omcan authorized service technician to repair the equipment locally.

Unauthorized maintenance will void the warranty. Warranty covers electrical and part failures, not improper use.

Please see <https://omcan.com/disclaimer> for complete info.

Safety and Warranty

WARNING:

The packaging components are classified as normal solid urban waste and can therefore be disposed of without difficulty.

In any case, for suitable recycling, we suggest disposing of the products separately (differentiated waste) according to the current norms.

DO NOT DISCARD ANY PACKAGING MATERIALS IN THE ENVIRONMENT!

Technical Specifications

0271 UNITS

Model	RS-CN-0271	RS-CN-0271-S
Power	600 W	535 W
Capacity	310 L / 10.95 cu.ft.	390 L / 13.77 cu.ft.
Lamp Power	23 W	
Temperature Range	0 - 12°C / 32 - 54°F	
Max Ambient Temp Rating	32°C / 90°F	
Refrigerant	R290	
Blowing Gas	Front	
Type of Climate	4	
Rated Current	7.1A	6.3A
Shelf Size	36.8" x 12" / 935 x 311mm 36.8" x 14" / 935 x 361mm	
Dimensions	36" x 26.8" x 55.5" / 914 x 681 x 1410mm	36" x 26.8" x 56" / 914 x 681 x 1422mm
Packaging Dimensions	41" x 31" x 65" / 1045 x 787 x 1655mm	42" x 31" x 66" / 1067 x 787 x 1676mm
Weight	322 lbs. / 146 kgs.	355 lbs. / 161 kgs.
Packaging Weight	386 lbs. / 175 kgs.	394.6 lbs. / 179 kgs.
Item Number	44387	44382

Technical Specifications

0371 UNITS

Model	RS-CN-0371	RS-CN-0371-S
Power	540 W	
Capacity	420 L / 14.83 cu.ft	530 L / 18.71 cu.ft.
Lamp Power	41 W	
Temperature Range	0 - 12°C / 32 - 54°F	
Max Ambient Temp Rating	32°C / 90°F	
Refrigerant	R290	
Blowing Gas	Front	
Type of Climate	4	
Rated Current	6.3A	
Shelf Size	48.6" x 10" / 1235 x 261mm 48.6" x 14.4" / 1235 x 311mm 48.6" x 14.6" / 1235 x 371mm	44.7" x 12.2" / 1135 x 311mm 44.7" x 14.6" / 1135 x 371mm
Dimensions	48" x 26.8" x 56" / 1225 x 680 x 1420mm	48" x 26.7" x 55.5" / 1225 x 677 x 1410mm
Packaging Dimensions	53" x 30.9" x 65" / 1345 x 785 x 1655mm	
Weight	390.2 lbs. / 177 kgs.	427.7 lbs. / 194 kgs.
Packaging Weight	467.4 lbs. / 200 kgs.	474 lbs. / 215 kgs.
Item Number	44502	44383

Technical Specifications

0471 UNITS

Model	RS-CN-0471	RS-CN-0471-S
Power	510 W	540 W
Capacity	535 L / 18.89 cu.ft.	670 L / 23.66 cu.ft.
Lamp Power	50 W	
Temperature Range	0 - 12°C / 32 - 54°F	
Max Ambient Temp Rating	32°C / 90°F	
Refrigerant	R290	
Blowing Gas	Front	
Type of Climate	4	
Rated Current	6.5A	
Shelf Size	55.7" x 10" / 1416 x 253mm 55.7" x 14.4" / 1416 x 367mm	55.5" x 12" / 1412 x 311mm 55.5" x 14.6" / 1412 x 371mm
Dimensions	60" x 26.8" x 56" / 1525 x 680 x 1420mm	59.8" x 27.6" x 55.5" / 1520 x 702 x 1410mm
Packaging Dimensions	66.5" x 32.7" x 63.4" / 1690 x 830 x 1610mm	
Weight	482.8 lbs. / 219 kgs.	505 lbs. / 229 kgs.
Packaging Weight	533.5 lbs. / 242 kgs.	556 lbs. / 252 kgs.
Item Number	44503	44384

0571 UNITS

Model	RS-CN-0571	RS-CN-0571-S
Power	630 W	
Capacity	650 L / 22.95 cu.ft.	810 L / 28.61 cu.ft.
Lamp Power	60 W	
Temperature Range	0 - 12°C / 32 - 54°F	
Max Ambient Temp Rating	32°C / 90°F	
Refrigerant	R290	
Blowing Gas	Front	
Type of Climate	4	
Rated Current	6.8A	
Shelf Size	33" x 10" / 843 x 253mm 33" x 14" / 843 x 367mm	37" x 12" / 942 x 311mm 37" x 14" / 942 x 361mm
Dimensions	72" x 26.8" x 56" / 1825 x 680 x 1420mm	
Packaging Dimensions	78.3" x 32.7" x 63" / 1990 x 830 x 1610mm	
Weight	518 lbs. / 235 kgs.	551 lbs. / 250 kgs.
Packaging Weight	606 lbs. / 275 kgs.	639 lbs. / 290 kgs.
Item Number	44504	44505

Operation


The device is installed with an enclosed compressor with refrigerant R290 which has been indicated as an environmentally friendly agent. The product is operated under an air cooling system, maintaining the body temperature evenly.

1. Double hollow transparent glasses are used on the door and body, it features an artistic and elegant appearance, perfect perspective and easy access.
2. The device is commonly for commercial use, such as restaurants, convenience stores, clubs, ect.

BEFORE USE

- Plug refrigerator into the 110-120V exclusive socket.
- After the refrigerator is running, confirm that air suction/filtration is in order and that it is sufficiently cold. After checking to make sure the refrigerator is working properly, it may be used.

DIGITAL TEMPERATURE CONTROLLER

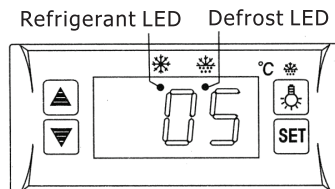

FEATURES OF FUNCTION

- Small, integrated digital controller, which is applicable to the compressor of 1 Hp.
- Main functions are: Temperature Display/Temperature Control/Manual-Automatic /Light Control/Value Storing/Self-Testing/Parameter Locking.

FRONT PANEL OPERATION

1. Set temperature: Press **SET** button; set temperature will be displayed. Press **▲** or **▼** button to modify and store the displayed value. Press **SET** button to exit the adjustment and display the cold-room temperature.
2. If no button is pressed within 10 seconds, the cold-room temperature will be displayed.
3. Lighting: Press **Light** button to activate light in refrigerator; press again to turn off. Manual start/stop defrost: Press **Defrost** button and hold for 6 seconds to either defrost or to stop defrost.
4. Refrigeration LED: During refrigeration, the LED is on. When the cold room temperature is constant, the LED is off. During delay start, the LED flashes.
5. Defrost LED: During defrosting, the LED is on. When it stops defrosting, the LED is off. During the delay of defrost, the LED flashed.

CAUTION

- Minimizing time the time and frequency that the door is open will maintain temperature.
- Never block the air outlet and suction to keep the air circulation and refrigeration capability constant.

Operation

- Do not overfill refrigerator with food, as it will influence the cooling effect. If needed, adjust the rack height for proper food storage.
- Cool down hot food to room temperature before placing inside the refrigerator.
- When power supply has been cut off, reduce opening times and maintain cool temperature in refrigerator.
- To avoid scalding, never touch the compressor.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Maintenance

1. Cabinet Cleaning:
 - a. The product should be maintained and cleaned periodically with power supply disconnected. In cleaning, please use mild-rinsing water or non-corrosive products. Do not wash directly with water faucet.
 - b. Clean outside of unit using a soft cloth with neutral detergent, and dry with a separate soft cloth.
 - c. Clean inside racks by removing them from the unit and clean with water.
2. When shutting down unit for a long period of time, take out all food and unplug wall socket. Clean inside and outside thoroughly, and keep door open to sufficiently dry.
3. As glass breaks easily, keep far away from children.
4. Frequently observe the operation of the product. In case of any abnormal noise or smell, cut off the power supply immediately and call professionals. Do not restart the product before source of trouble is found.
5. We will not be responsible for any accidents acquired through failure to follow previous notices.

Troubleshooting

Trouble	Cause and Remedy
No Refrigeration	Is the plug securely in the socket?
	Is the fuse broken?
	Is there no power?

Troubleshooting

Poor Refrigeration	Is it under sunlight? Is there any heat source nearby?
	Is the surrounding ventilation poor?
	Is the door seal strip deformed or damaged?
	Is the food congested or is there too much food?
	Does food block the air suction or outlet?
	Regulate the temperature controller.
Noisy	The refrigerator is not level.
	The refrigerator is making contact with the wall or other objects.
	There is a loose part in the refrigerator.
Contact Omcan for help if simple trouble shooting does not solve the problems.	


NOTE

Following occurrences are not problems:

- The murmur of water is heard when the refrigerator is working. It is a normal occurrence as the coolant is circulating in the system.
- When the weather is damp, condensation might be found on the outside of the refrigerator. It is caused by high humidity. Simply use cloth to wipe it off.

Parts Breakdown

Model RS-CN-0271 44387

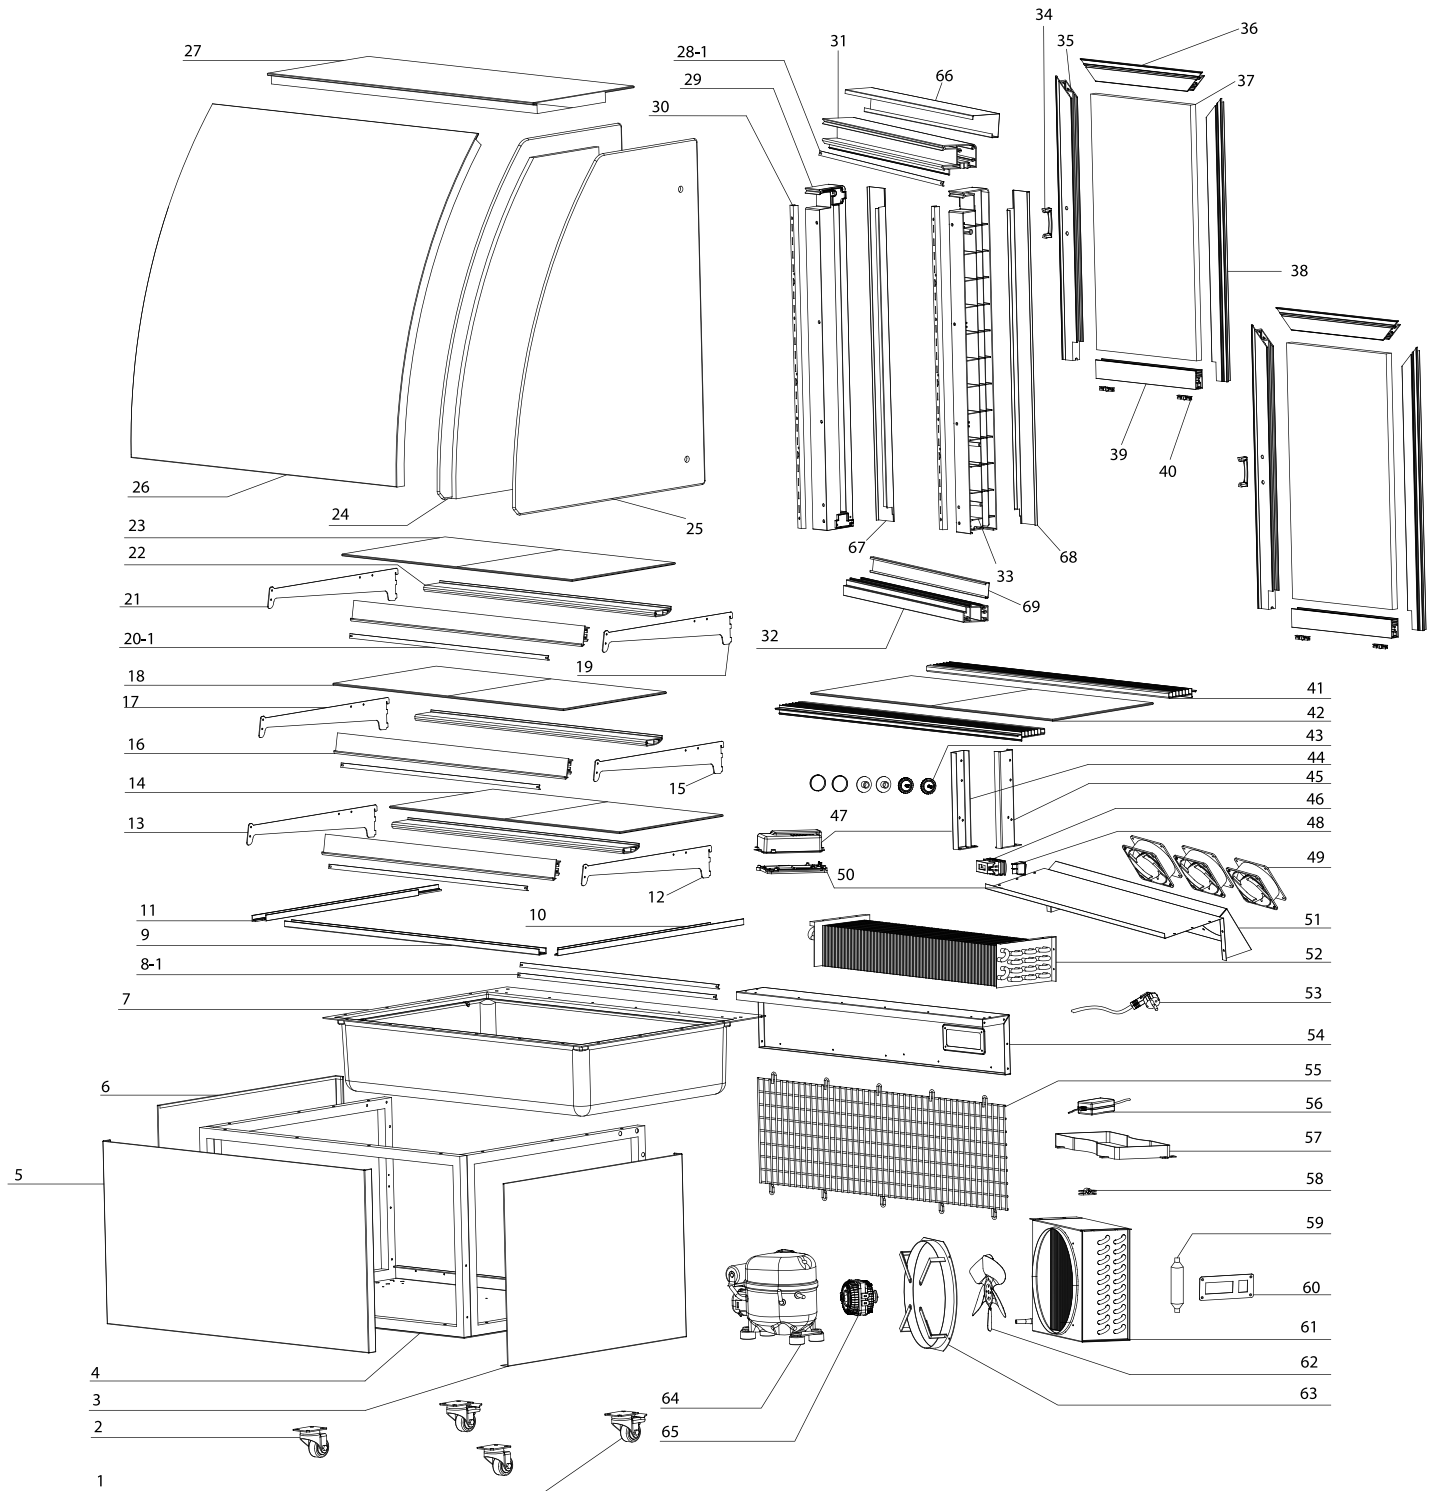


Parts Breakdown

Model RS-CN-0271 44387

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
71042	Rear Swivel Caster with Brake for 44387	1	68180	Left Glass for 44387	24	71079	Thermostat Lid for 44387	47
79763	Swivel Front Caster without Brake for 44387	2	68186	Right Glass for 44387	25	68196	Switch for 44387	48
68164	Right Cover for 44387	3	68181	Front Glass for 44387	26	71081	Evaporator Motor for 44387	49
68165	Base for 44387	4	68182	Top Glass for 44387	27	71082	Thermostat Base for 44387	50
68166	Right Cover for 44387	5	68183	Top LED for 44387	28	68197	Evaporator Cover for 44387	51
68167	Left Cover for 44387	6	68184	Left Pole for 44387	29	71084	Evaporator for 44387	52
71046	Evaporator Insulation for 44387	7	68185	Shelf Holder for 44387	30	68198	Power Cord for 44387	53
68168	Bottom LED for 44387	8	68187	Top Frame for 44387	31	71086	Rear Frame for 44387	54
68169	Front Glass Fixer for 44387	9	68188	Bottom Frame for 44387	32	71087	Back Grill for 44387	55
68170	Right Glass Fixer for 44387	10	68189	Right Pole for 44387	33	64750	#4 LED Transformer for 44387	56
68171	Left Glass Fixer for 44387	11	71110	Door Handle for 44387	34	71089	Water Tray for 44387	57
68172	Right Bottom Shelf Holder for 44387	12	68190	Left Door Frame for 44387	35	71133	Power Cord Fixer for 44387	58
68211	Left Bottom Shelf Holder for 44387	13	71068	Top Upper Door Frame for 44387	36	71083	Dryer Filter for 44387	59
68174	Bottom Glass Shelf for 44387	14	68191	Door Glass for 44387	37	77434	Control Panel for 44387	60
68175	Right Top Shelf Holder for 44387	15	68192	Right Door Frame for 44387	38	71135	Condenser for 44387	61
68173	Metal Price Tags for 44387	16	71071	Bottom Door Frame for 44387	39	71136	Fan Bracket for 44387	62, 63
68177	Left Top Shelf Holder for 44387	17	71114	Door Glide Wheel for 44387	40	68199	Compressor for 44387	64
68179	Top Glass Shelf for 44387	18	68193	Air In/Outlet for 44387	41	71137	Condenser Motor for 44387	65
68276	Left Top Shelf Holder for 44387	19	71074	Bottom Black Glass Frame for 44387	42	AF506	Top Back Frame for 44387	66
68176	Middle LED for 44387	20	71121	Screw Cover for 44387	43	AF507	Left Back Frame for 44387	67
68274	Right Top Shelf Holder for 44387	21	68194	Pole Fixer Left for 44387	44	AF508	Right Back Frame for 44387	68
68178	Metal Shelf Support for 44387	22	68195	Pole Fixer Right for 44387	45	AF509	Bottom Back Frame for 44387	69
AF505	Small Glass Shelf for 44387	23	71123	Digital Control for 44387	46			

Parts Breakdown

Model RS-CN-0271-S 44382

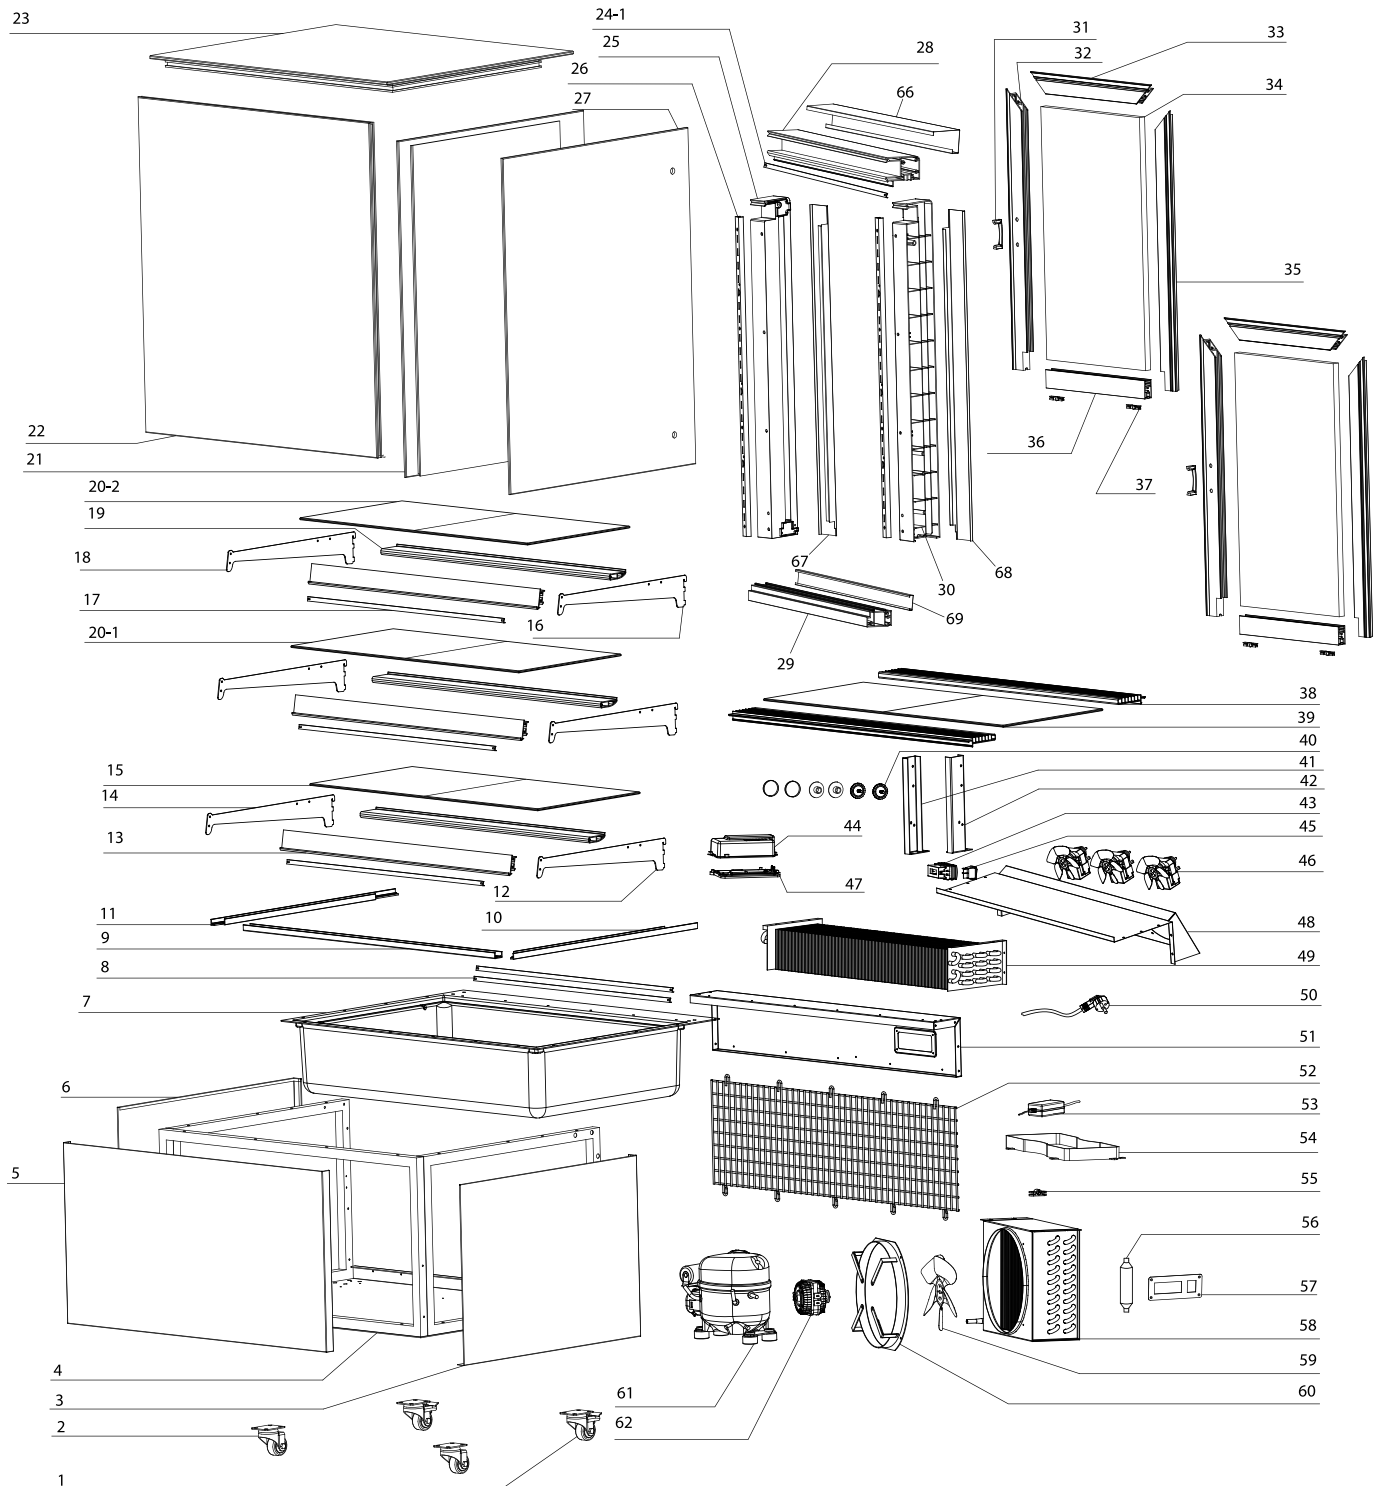


Parts Breakdown

Model RS-CN-0271-S 44382

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
71042	Rear Swivel Caster with Brake for 44382	1	68204	Top LED for 44382	24	71081	Evaporator Motor for 44382	46
79763	Swivel Front Caster without Brake for 44382	2	68184	Left Pole for 44382	25	71082	Thermostat Base for 44382	47
68164	Right Cover for 44382	3	68185	Shelf Holder for 44382	26	68197	Evaporator Cover for 44382	48
68165	Base for 44382	4	68205	Right Glass for 44382	27	71084	Evaporator for 44382	49
68166	Right Cover for 44382	5	68187	Top Frame for 44382	28	71085	Power Cord for 44382	50
68167	Left Cover for 44382	6	68188	Bottom Frame for 44382	29	71086	Rear Frame for 44382	51
71046	Evaporator Insulation for 44382	7	68189	Right Pole for 44382	30	71087	Back Grill for 44382	52
68168	Bottom LED for 44382	8	71110	Door Handle for 44382	31	64750	#4 LED Transformer for 44382	53
68169	Front Glass Fixer for 44382	9	68190	Left Door Frame for 44382	32	71089	Water Tray for 44382	54
68170	Right Glass Fixer for 44382	10	71068	Top Upper Door Frame for 44382	33	71133	Power Cord Fixer for 44382	55
68171	Left Glass Fixer for 44382	11	68191	Door Glass for 44382	34	71083	Dryer Filter for 44382	56
68172	Right Bottom Shelf Holder for 44382	12, 14	68192	Right Door Frame for 44382	35	77434	Control Panel for 44382	57
68173	Metal Price Tags for 44382	13	71071	Bottom Door Frame for 44382	36	71135	Condenser for 44382	58
68174	Bottom Glass Shelf for 44382	15	71114	Door Glide Wheel for 44382	37	71136	Fan Bracket for 44382	59, 60
68175	Right Top Shelf Holder for 44382	16	68193	Air In/Outlet for 44382	38	68199	Compressor for 44382	61
68176	Middle LED for 44382	17	71074	Bottom Black Glass Frame for 44382	39	71137	Condenser Motor for 44382	62
68177	Left Top Shelf Holder for 44382	18	71121	Screw Cover for 44382	40	AF506	Top Back Frame for 44382	63
68178	Metal Shelf Support for 44382	19	68194	Pole Fixer Left for 44382	41	AF502	Left Back Frame for 44382	64
68179	Top Glass Shelf for 44382	20-1, 20-2	68195	Pole Fixer Right for 44382	42	AF503	Right Back Frame for 44382	65
68200	Left Glass for 44382	21	71123	Digital Control for 44382	43	AF509	Bottom Back Frame for 44382	66
68201	Front Glass for 44382	22	71079	Thermostat Lid for 44382	44			
68182	Top Glass for 44382	23	71080	Switch for 44382	45			

Parts Breakdown

Model RS-CN-0371 44502

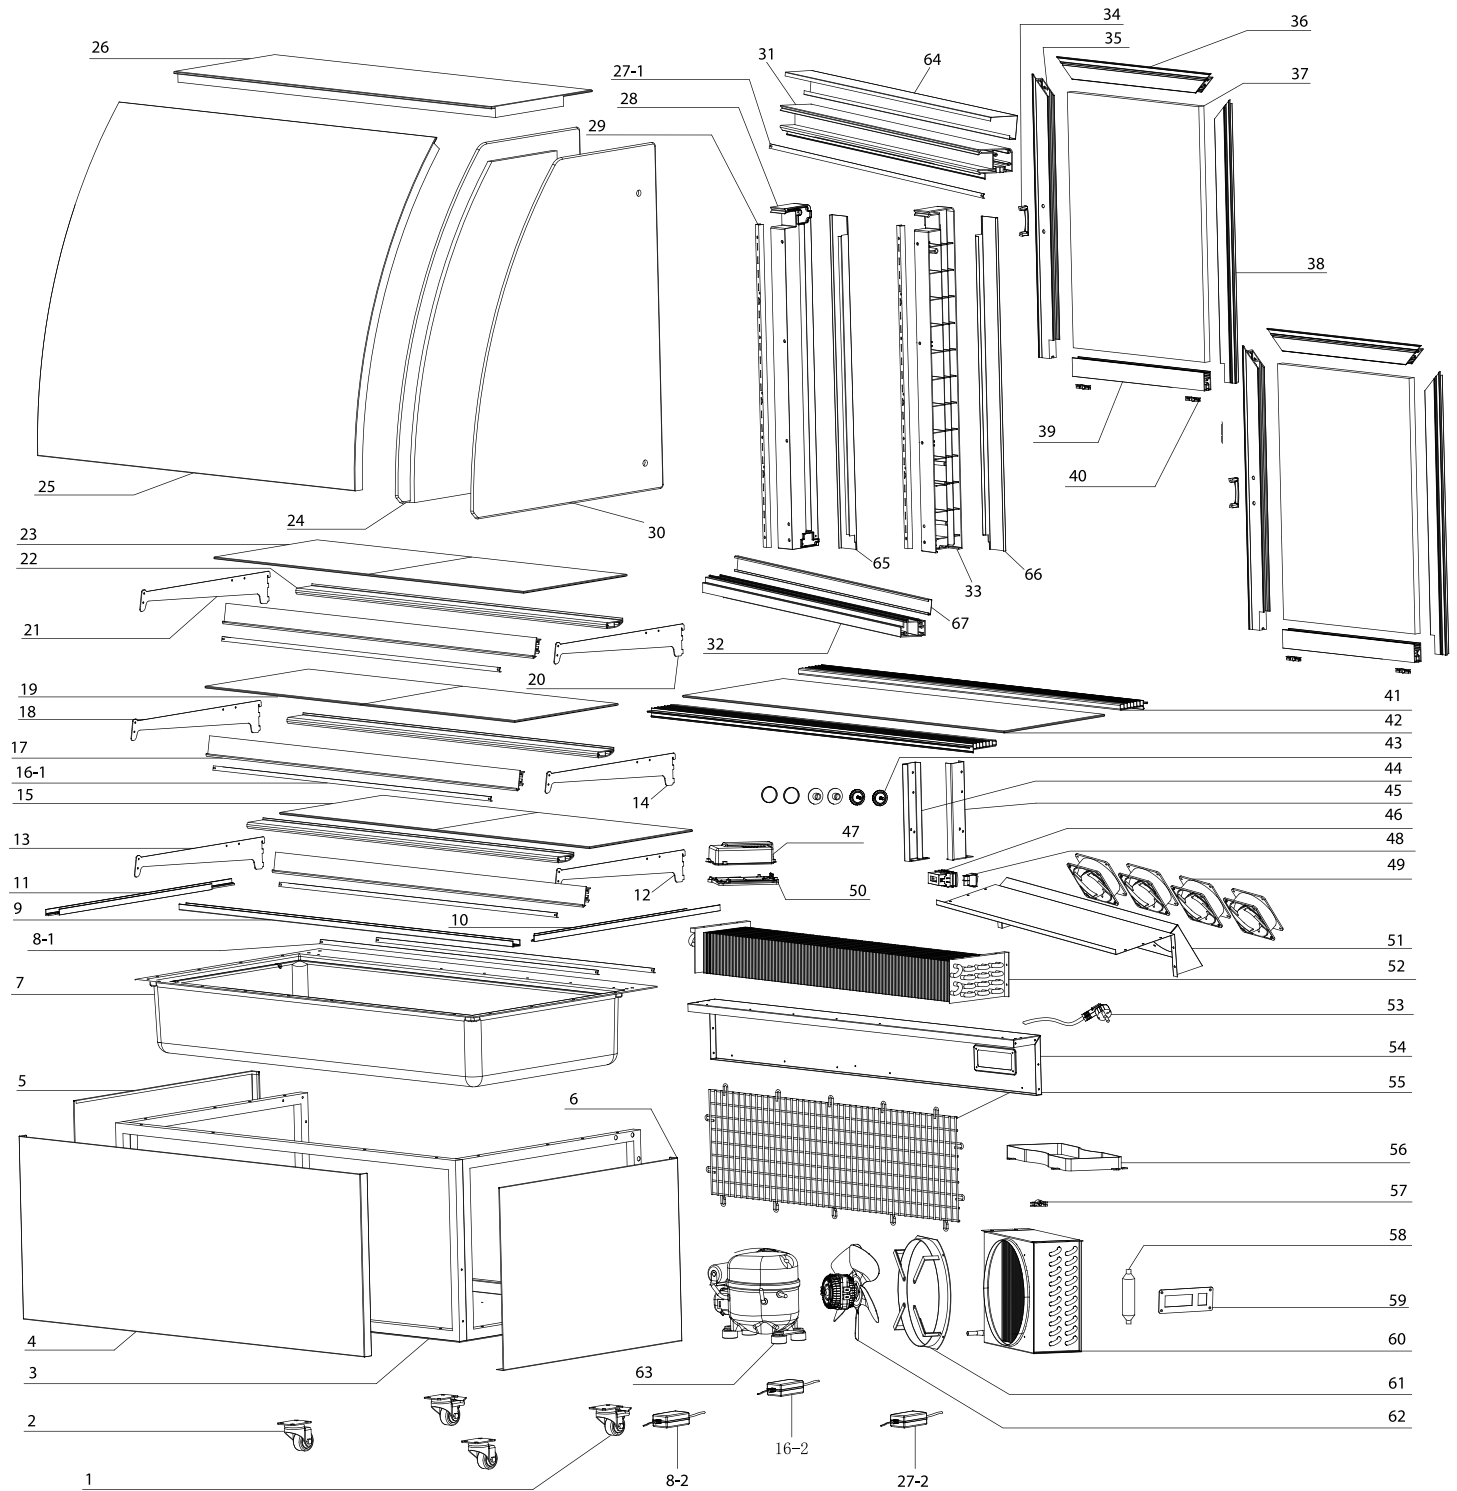


Parts Breakdown

Model RS-CN-0371 44502

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
71042	Rear Swivel Caster with Brake for 44502	1	AF510	Small Glass Shelf for 44502	23	68195	Pole Fixer Right for 44502	45
79763	Swivel Front Caster without Brake for 44502	2	68180	Left Glass for 44502	24	71123	Digital Control for 44502	46
68206	Base for 44502	3	68215	Front Glass for 44502	25	71079	Thermostat Lid for 44502	47
68207	Front Cover for 44502	4	68216	Top Glass for 44502	26	68220	Switch for 44502	48
68166	Right Cover for 44502	5	68176	Middle LED for 44502	27-1	71081	Evaporator Motor for 44502	49
68167	Left Cover for 44502	6	64751	#2 LED Transformer for 44502	27-2	71082	Thermostat Base for 44502	50
71094	Evaporator Insulation for 44502	7	68184	Left Pole for 44502	28	68221	Evaporator Cover for 44502	51
68208	Bottom LED for 44502	8-1	68185	Shelf Holder for 44502	29	71127	Evaporator for 44502	52
68222	#4 LED Driver for 44502	8-2, 16-2	68186	Right Glass for 44502	30	71085	Power Cord for 44502	53
68209	Front Glass Fixer for 44502	9	68217	Top Frame for 44502	31	71129	Rear Frame for 44502	54
68171	Left Glass Fixer for 44502	10	68218	Bottom Frame for 44502	32	71130	Back Grill for 44502	55
68170	Right Glass Fixer for 44502	11	68189	Right Pole for 44502	33	71089	Water Tray for 44502	56
68172	Right Bottom Shelf Holder for 44502	12	71110	Door Handle for 44502	34	71133	Power Cord Fixer for 44502	57
68211	Left Bottom Shelf Holder for 44502	13	68190	Left Door Frame for 44502	35	71083	Dryer Filter for 44502	58
68175	Right Top Shelf Holder for 44502	14	71111	Upper Door Frame for 44502	36	77434	Control Panel for 44502	59
68212	Bottom Glass Shelf for 44502	15	71112	Glass Door for 44502	37	71135	Condenser for 44502	60
71149	LED Lighter for 44502	16-1	68192	Right Door Frame for 44502	38	71136	Fan Bracket for 44502	61
68210	Metal Price Tags for 44502	17	71114	Door Glide Wheel for 44502	39	71137	Condenser Motor for 44502	62
68177	Left Top Shelf Holder for 44502	18	71167	Bottom Door Frame for 44502	40	68199	Compressor for 44502	63
68214	Top Glass Shelf for 44502	19	68219	Air In/Outlet for 44502	41	AF501	Top Back Frame for 44502	64
68276	Left Top Shelf Holder for 44502	20	79761	Bottom Black Glass Frame for 44502	42	AF507	Left Back Frame for 44502	65
68274	Right Top Shelf Holder for 44502	21	71121	Screw Cover for 44502	43	AF508	Right Back Frame for 44502	66
68213	Metal Shelf Support for 44502	22	68194	Pole Fixer Left for 44502	44	AF504	Bottom Back Frame for 44502	67

Parts Breakdown

Model RS-CN-0371-S 44383

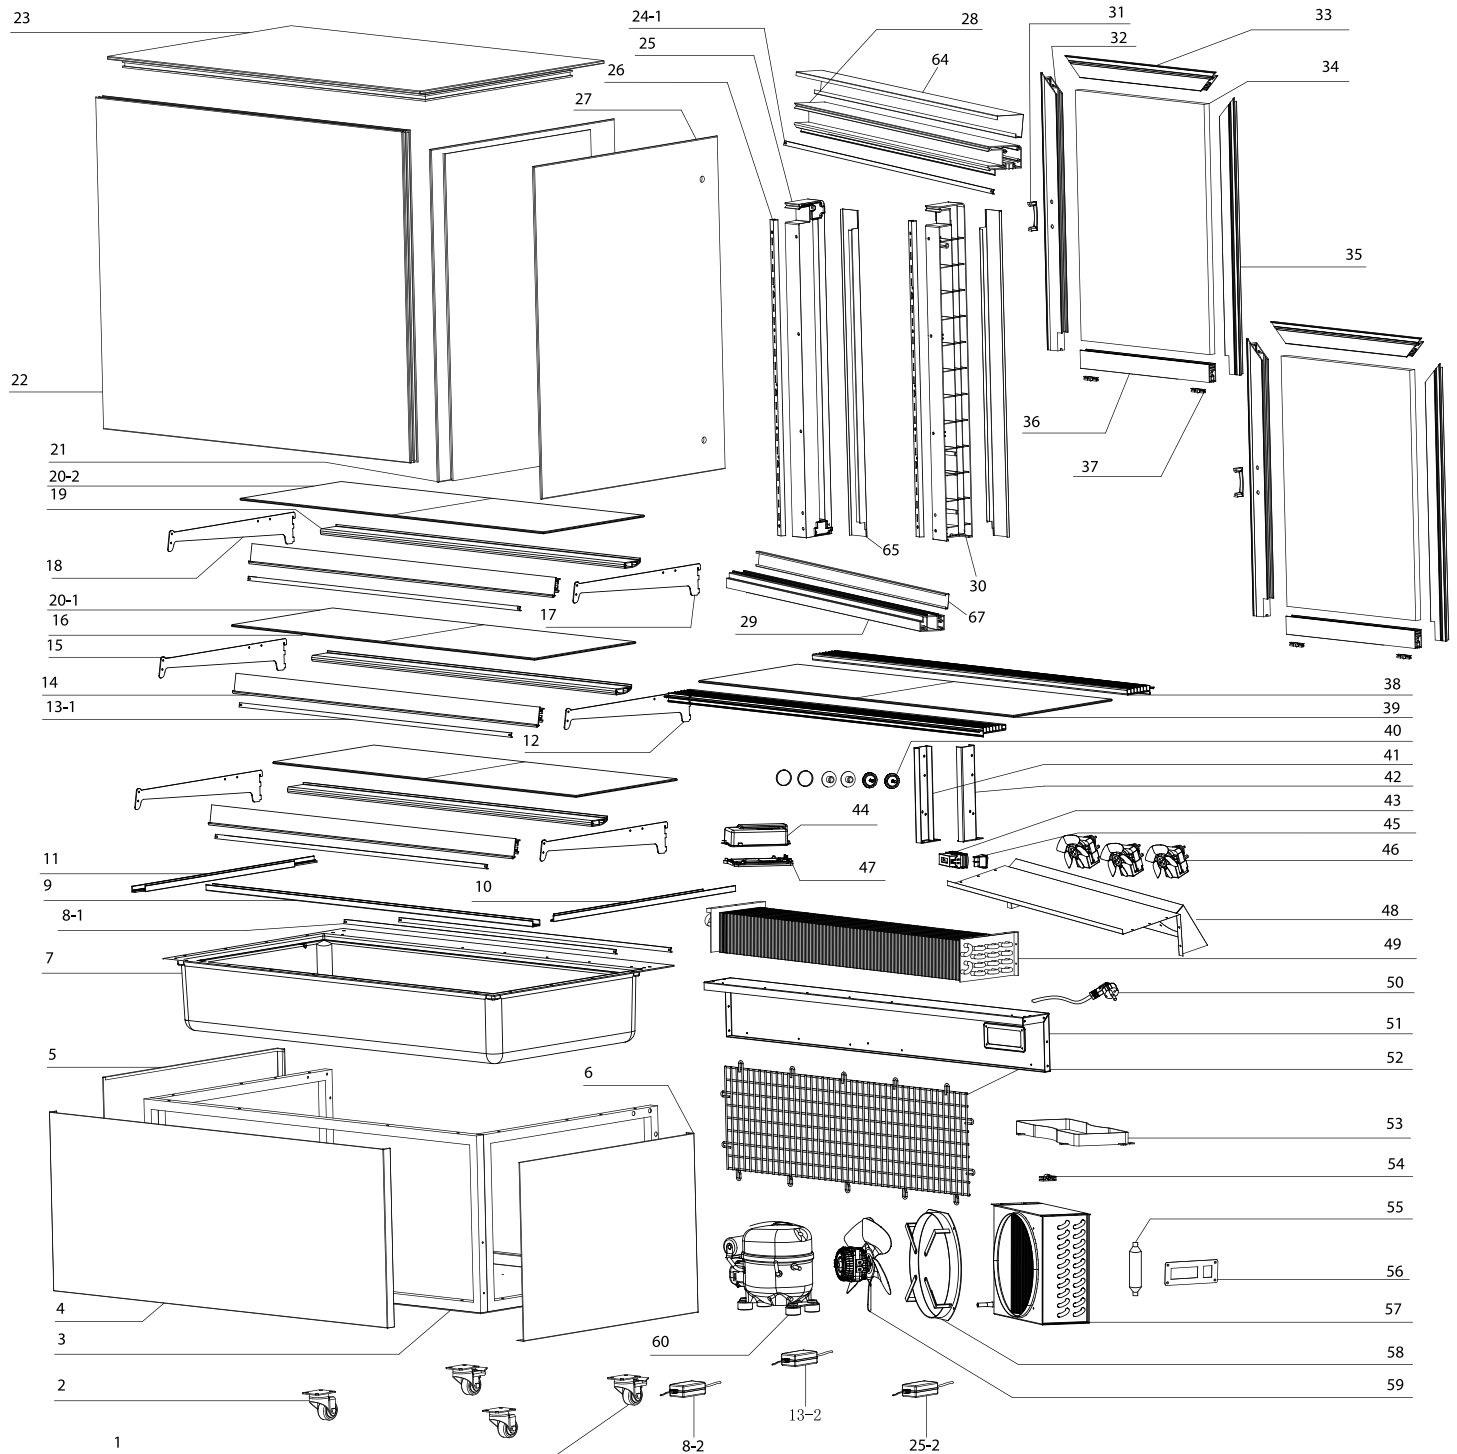


Parts Breakdown

Model RS-CN-0371-S 44383

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
71042	Rear Swivel Caster with Brake for 44383	1	79762	Front Upper Beam for 44383	23	71123	Digital Control for 44383	44
79763	Swivel Front Caster without Brake for 44383	2	AF499	Top Glass for 44383	24	71079	Thermostat Lid for 44383	45
68206	Base for 44383	3	AF496	Top LED for 44383	25-1	71080	Switch for 44383	46
68207	Front Cover for 44383	4	64751	#2 LED Transformer for 44383	25-2	71081	Evaporator Motor for 44383	47
68167	Left Cover for 44383	5, 6	68184	Left Pole for 44383	26	71082	Thermostat Base for 44383	48
71094	Evaporator Insulation for 44383	7	68185	Shelf Holder for 44383	27	68227	Evaporator Cover for 44383	49
68208	Bottom LED for 44383	8-1	68205	Right Glass for 44383	28	71127	Evaporator for 44383	50
64750	#4 LED Transformer for 44383	8-2, 13-2	68217	Top Frame for 44383	29	71085	Power Cord for 44383	51
68209	Front Glass Fixer for 44383	9	68218	Bottom Frame for 44383	30	71129	Rear Frame for 44383	52
68171	Left Glass Fixer for 44383	10	68189	Right Pole for 44383	31	71130	Back Grill for 44383	53
68170	Right Glass Fixer for 44383	11	71110	Door Handle for 44383	32	71089	Water Tray for 44383	54
68172	Right Bottom Shelf Holder for 44383	12	68190	Left Door Frame for 44383	33	71133	Power Cord Fixer for 44383	55
71149	LED Lighter for 44383	13-1	71111	Upper Door Frame for 44383	34	71083	Dryer Filter for 44383	56
71093	Right Side Cover for 44383	14	AF500	Door Glass for 44383	35	77434	Control Panel for 44383	57
68211	Left Bottom Shelf Holder for 44383	15	68192	Right Door Frame for 44383	36	71135	Condenser for 44383	58
68212	Bottom Glass Shelf for 44383	16	71167	Bottom Door Frame for 44383	37	71136	Fan Bracket for 44383	59
68175	Right Top Shelf Holder for 44383	17	71114	Door Glide Wheel for 44383	38	71137	Condenser Motor for 44383	60
68177	Left Top Shelf Holder for 44383	18	68219	Air In/Outlet for 44383	39	68199	Compressor for 44383	61
68213	Metal Shelf Support for 44383	19	AD842	Bottom Glass for 44383	40	AF501	Top Back Frame for 44383	62
68214	Top Glass Shelf for 44383	20-1, 20-2	71121	Screw Cover for 44383	41	AF502	Left Back Frame for 44383	63
68200	Left Glass for 44383	21	68194	Pole Fixer Left for 44383	42	AF503	Right Back Frame for 44383	64
68223	Front Glass for 44383	22	68195	Pole Fixer Right for 44383	43	AF504	Bottom Back Frame for 44383	65

Parts Breakdown

Model RS-CN-0471 44503

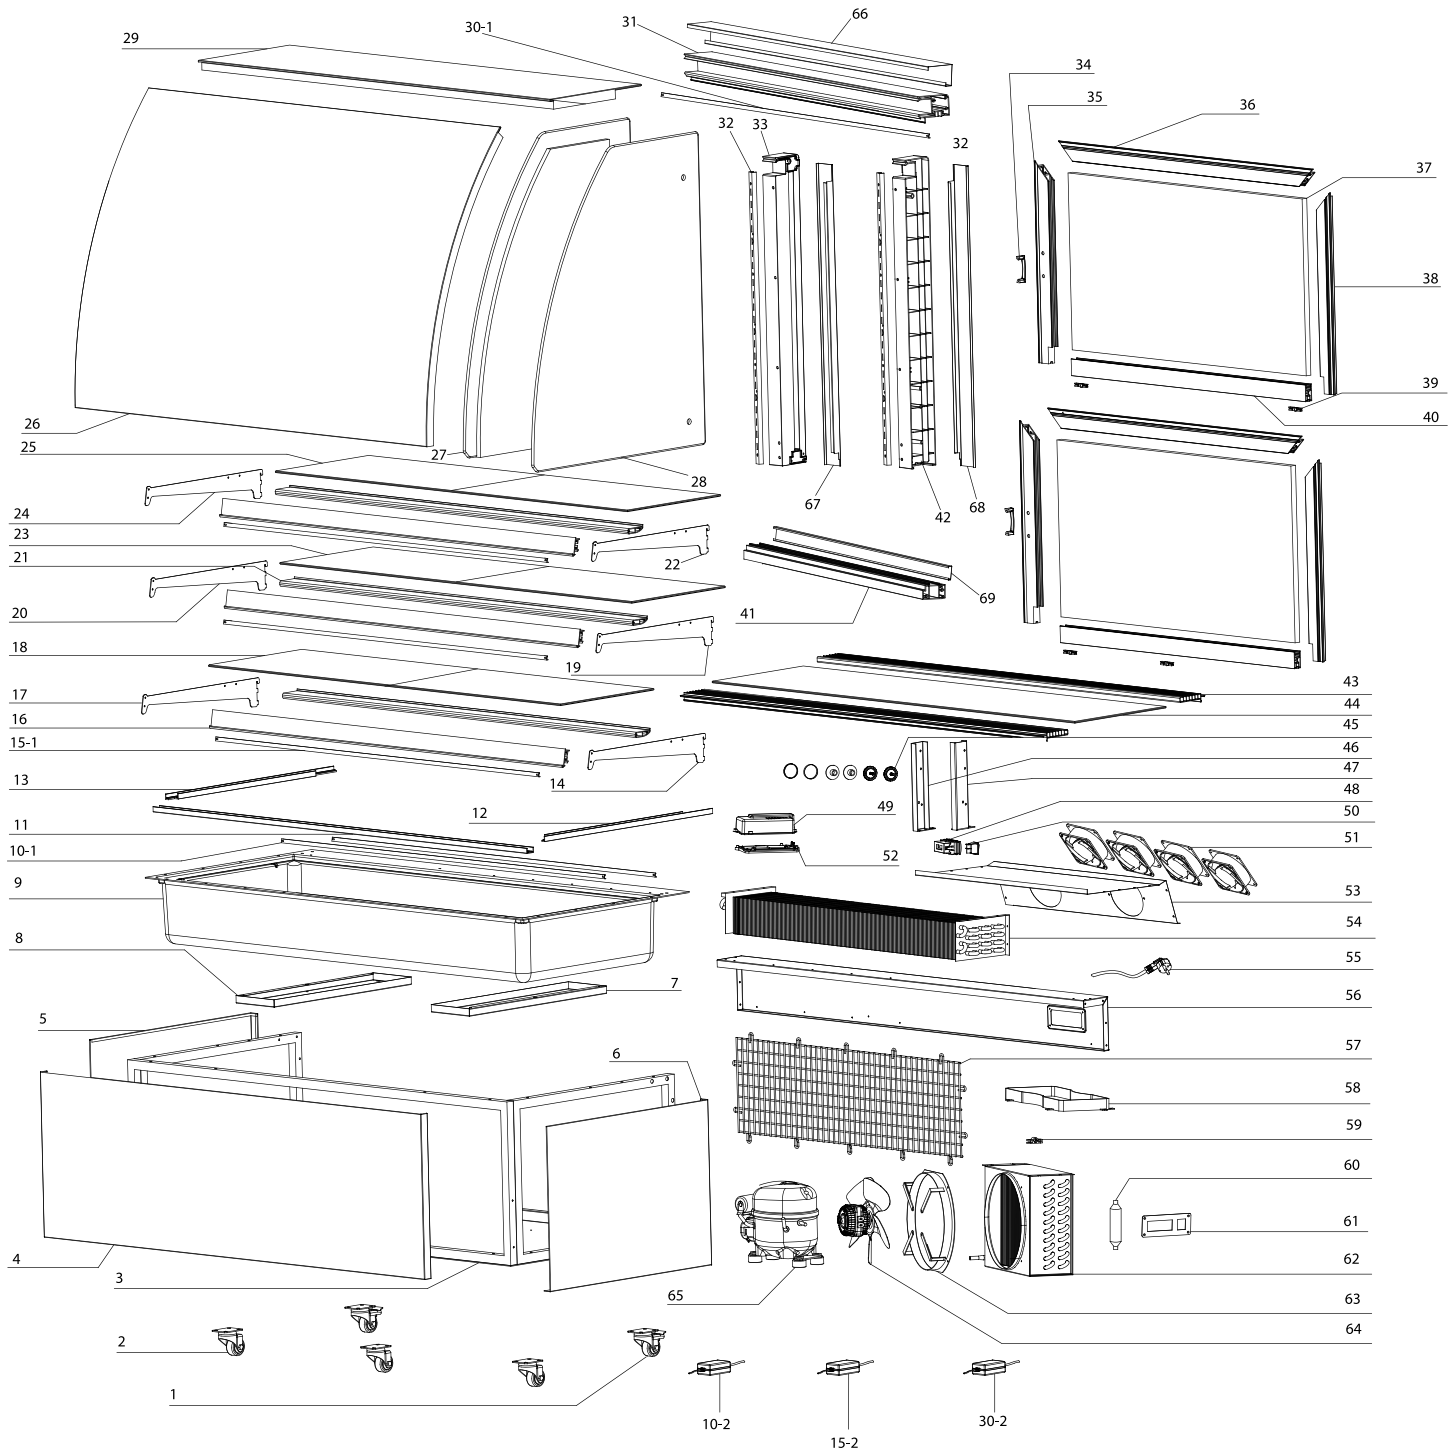


Parts Breakdown

Model RS-CN-0471 44503

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
71042	Rear Swivel Caster with Brake for 44503	1	68239	Glass Shelf for Top or Middle for 44503	23	68194	Pole Fixer Left for 44503	46
79763	Swivel Front Caster without Brake for 44503	2	68274	Right Top Shelf Holder for 44503	24	68195	Pole Fixer Right for 44503	47
68228	Base for 44503	3	AF511	Small Glass Shelf for 44503	25	71123	Digital Control for 44503	48
68167	Left Cover for 44503	4	68240	Front Glass for 44503	26	71079	Thermostat Lid for 44503	49
68229	Front Cover for 44503	5	68180	Left Glass for 44503	27	71082	Thermostat Base for 44503	50
68164	Right Cover for 44503	6	68186	Right Glass for 44503	28	68196	Switch for 44503	51
68230	Left Blister Barrel Fixing Plate for 44503	7	68241	Top Glass for 44503	29	71081	Evaporator Motor for 44503	52
68231	Right Blister Barrel Fixing Plate for 44503	8	68242	Top LED for 44503	30-1	68227	Evaporator Cover for 44503	53
68232	Evaporator Insulation for 44503	9	64751	#2 LED Transformer for 44503	30-2	71127	Evaporator for 44503	54
68208	Bottom LED for 44503	10-1	68243	Top Frame for 44503	31	71085	Power Cord for 44503	55
68222	#4 LED Driver for 44503	10-2	68185	Shelf Holder for 44503	32	68249	Rear Frame for 44503	56
68233	Front Glass Fixer for 44503	11	68184	Left Pole for 44503	33	68250	Back Grill for 44503	57
71048	Right Glass Fixer for 44503	12	71110	Door Handle for 44503	34	71089	Water Tray for 44503	58
71049	Left Glass Fixer for 44503	13	71162	Left Door Frame for 44503	35	71133	Power Cord Fixer for 44503	59
68172	Right Bottom Shelf Holder for 44503	14	71111	Upper Door Frame for 44503	36	71083	Dryer Filter for 44503	60
68234	Middle LED for 44503	15-1	68244	Door Glass for 44503	37	77434	Control Panel for 44503	61
68235	#2 LED Driver for 44503	15-2	68192	Right Door Frame for 44503	38	68286	Condenser for 44503	62
68236	Metal Price Tags for 44503	16	71114	Door Glide Wheel for 44503	39	71136	Fan Bracket for 44503	63
68211	Left Bottom Shelf Holder for 44503	17	68245	Bottom Door Frame for 44503	40	68287	Condenser Fan Motor for 44503	64
68237	Bottom Glass Shelf for 44503	18	68246	Bottom Frame for 44503	41	68199	Compressor for 44503	65
68175	Right Top Shelf Holder for 44503	19	68189	Right Pole for 44503	42	AF512	Top Back Frame for 44503	66
68177	Left Top Shelf Holder for 44503	20	68247	Air In/Outlet for 44503	43	AF507	Left Back Frame for 44503	67
68238	Metal Shelf Support for 44503	21	68248	Bottom Black Glass Frame for 44503	44	AF508	Right Back Frame for 44503	68
68276	Left Top Shelf Holder for 44503	22	71121	Screw Cover for 44503	45	AF513	Bottom Back Frame for 44503	69

Parts Breakdown

Model RS-CN-0471-S 44384

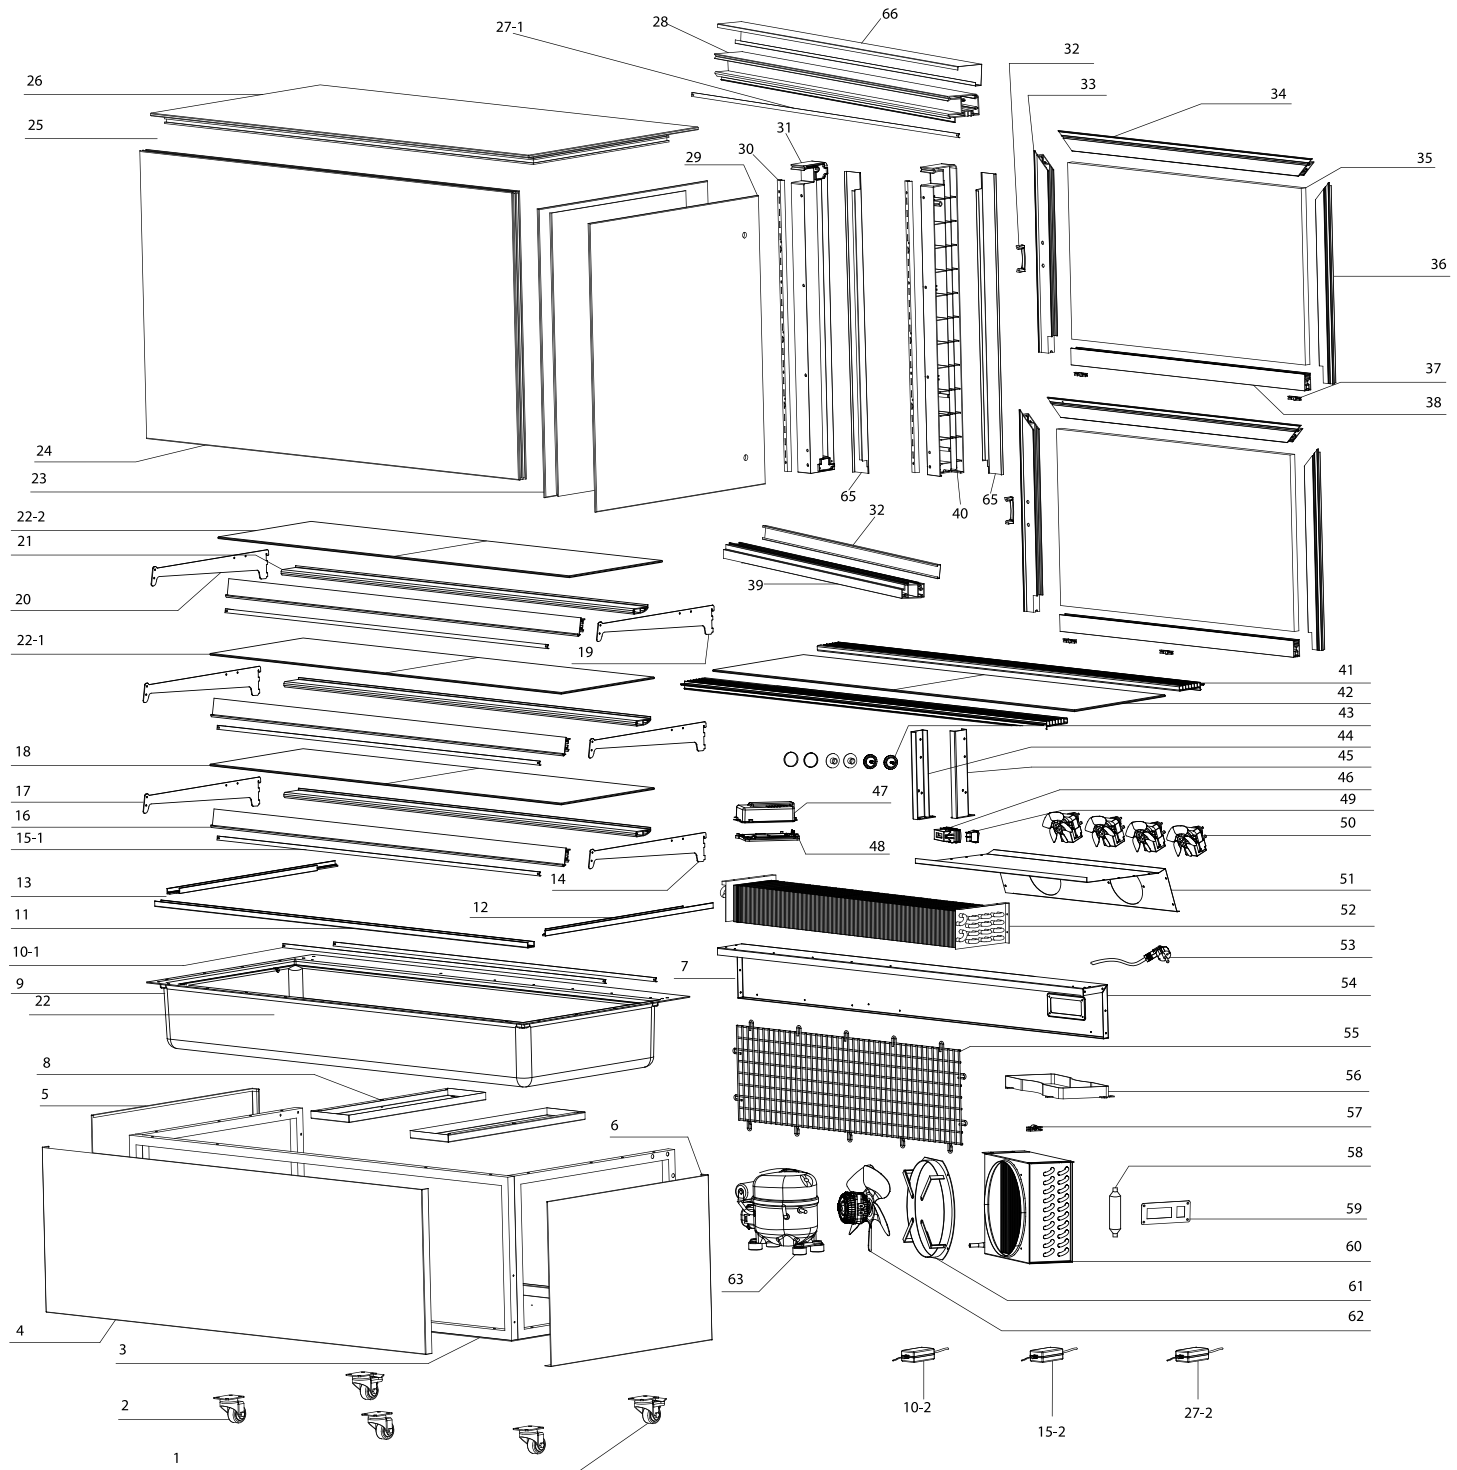


Parts Breakdown

Model RS-CN-0471-S 44384

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
71042	Rear Swivel Caster with Brake for 44384	1	68239	Glass Shelf for Top or Middle for 44384	22-1, 22-2	68195	Pole Fixer Right for 44384	44
79763	Swivel Front Caster without Brake for 44384	2	68200	Left Glass for 44384	23	71123	Digital Control for 44384	45, 58
68228	Base for 44384	3	68252	Front Glass for 44384	24	71079	Thermostat Lid for 44384	46
68167	Left Cover for 44384	4	68254	Top Glass for 44384	25	71082	Thermostat Base for 44384	47
68229	Front Cover for 44384	5	68242	Top LED for 44384	26	68196	Switch for 44384	48
68164	Right Cover for 44384	6	68243	Top Frame for 44384	27-1	71081	Evaporator Motor for 44384	49
68230	Left Blister Barrel Fixing Plate for 44384	7	64751	#2 LED Transformer for 44384	27-2	68255	Evaporator Cover for 44384	50
68231	Right Blister Barrel Fixing Plate for 44384	8	68205	Right Glass for 44384	28	71127	Evaporator for 44384	51
68232	Evaporator Insulation for 44384	9	68185	Shelf Holder for 44384	29	68198	Power Cord for 44384	52
68208	Bottom LED for 44384	10-1	68184	Left Pole for 44384	30	68249	Rear Frame for 44384	53
68251	#4 LED Driver for 44384	10-2	71110	Door Handle for 44384	31	68250	Back Grill for 44384	54
68233	Front Glass Fixer for 44384	11	68190	Left Door Frame for 44384	32	71089	Water Tray for 44384	55
71048	Right Glass Fixer for 44384	12	AF514	Top Door Frame for 44384	33	71133	Power Cord Fixer for 44384	56
71049	Left Glass Fixer for 44384	13	AF515	Door Glass for 44384	34	71083	Dryer Filter for 44384	57
68172	Right Bottom Shelf Holder for 44384	14	68192	Right Door Frame for 44384	35	AF517	Condenser for 44384	59
68234	Middle LED for 44384	15-1	71114	Door Glide Wheel for 44384	36	71136	Fan Bracket for 44384	60
64750	#4 LED Transformer for 44384	15-2	68245	Bottom Door Frame for 44384	37	68287	Condenser Fan Motor for 44384	61
68236	Metal Price Tags for 44384	16	68246	Bottom Frame for 44384	38	AF518	Compressor for 44384	62
68211	Left Bottom Shelf Holder for 44384	17	68189	Right Pole for 44384	39	AF512	Top Back Frame for 44384	63
68237	Bottom Glass Shelf for 44384	18	68247	Air In/Outlet for 44384	40	AF502	Left Back Frame for 44384	64
68175	Right Top Shelf Holder for 44384	19	AF516	Bottom Black Glass Frame for 44384	41	AF503	Right Back Frame for 44384	65
68177	Left Top Shelf Holder for 44384	20	71121	Screw Cover for 44384	42	AF513	Bottom Back Frame for 44384	66
68238	Metal Shelf Support for 44384	21	68194	Pole Fixer Left for 44384	43			

Parts Breakdown

Model RS-CN-0571 44504

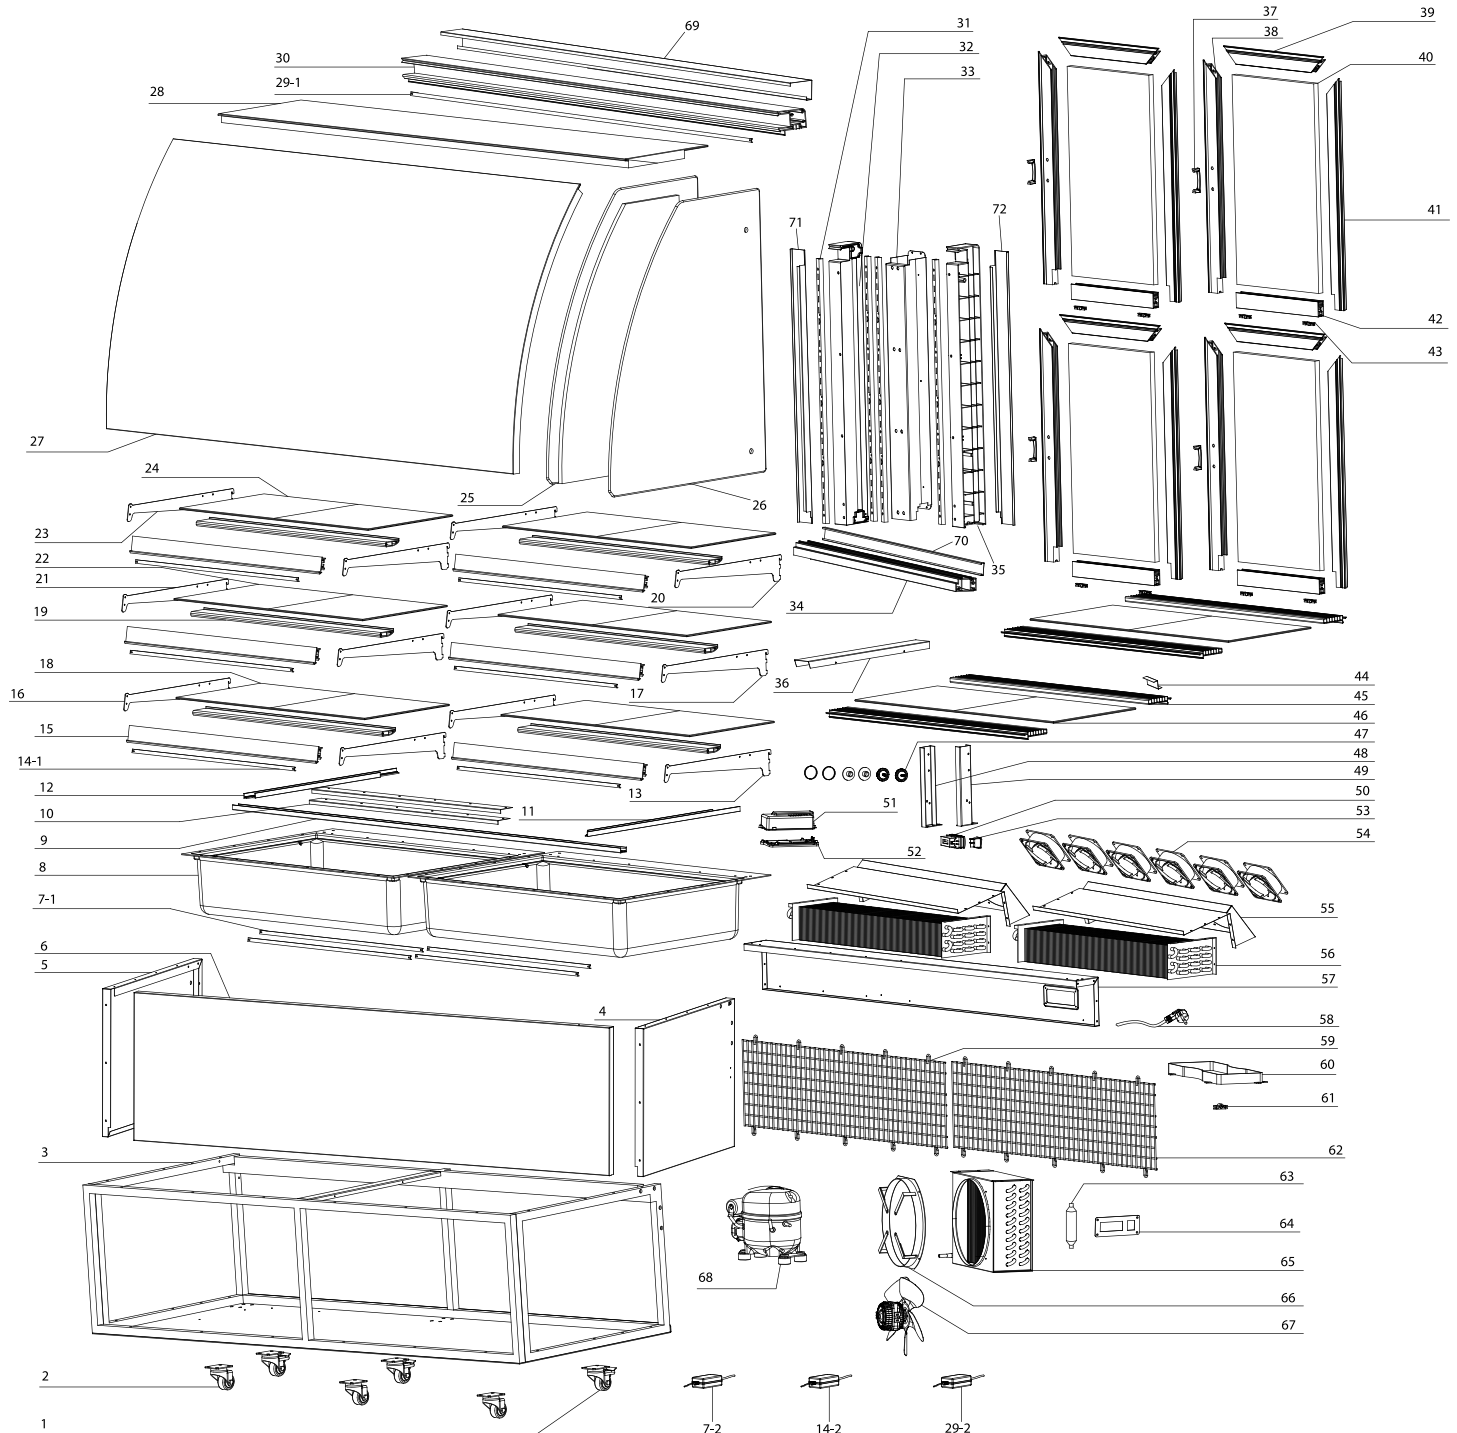


Parts Breakdown

Model RS-CN-0571 44504

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
71042	Rear Swivel Caster with Brake for 44504	1	71155	Left Side Glass for 44504	25	71077	Right Pole Fixer for 44504	49
79763	Swivel Front Caster without Brake for 44504	2	64880	Right Side Glass for 44504	26	71123	Digital Control for 44504	50
68203	Base for 44504	3	68277	Front Glass for 44504	27	71079	Thermostat Lid for 44504	51
68225	Right Cover for 44504	4	68278	Top Glass for 44504	28	71082	Thermostat Base for 44504	52
68226	Left Cover for 44504	5	68279	Top LED for 44504	29-1	68196	Switch for 44504	53
68268	Front Cover for 44504	6	64751	#2 LED Transformer for 44504	29-2	71081	Evaporator Motor for 44504	54
68168	Bottom LED for 44504	7-1	68280	Top Frame for 44504	30	71126	Evaporator Cover for 44504	55
68235	#2 LED Driver for 44504	7-2, 14-2	71153	Shelf Holder for 44504	31	71127	Evaporator for 44504	56
71046	Evaporator Insulation for 44504	8	71164	Left Pole Cover for 44504	32	68285	Rear Frame for 44504	57
68269	Front Glass Fixer for 44504	9	68281	Middle Column for 44504	33	71085	Power Cord for 44504	58
68270	After Air Vent Fixed Parts for 44504	10	68282	Bottom Frame for 44504	34	71087	Back Grill for 44504	59, 62
68271	Right Glass Fixer for 44504	11	71065	Right Pole for 44504	35	71089	Water Tray for 44504	60
68272	Left Glass Fixer for 44504	12	68283	Middle Cover Plate for 44504	36	71133	Power Cord Fixer for 44504	61
68172	Right Bottom Shelf Holder for 44504	13	71110	Door Handle for 44504	37	71083	Dryer Filter for 44504	63
68176	Middle LED for 44504	14-1	71162	Left Door Frame for 44504	38	77434	Control Panel for 44504	64
71052	Metal Price Tags for 44504	15	71068	Top Upper Door Frame for 44504	39	68286	Condenser for 44504	65
68211	Left Bottom Shelf Holder for 44504	16	68244	Door Glass for 44504	40	71136	Fan Bracket for 44504	66
68175	Right Top Shelf Holder for 44504	17	71113	Right Door Frame for 44504	41	68287	Condenser Fan Motor for 44504	67
68273	Bottom Glass Shelf for 44504	18	71071	Bottom Door Frame for 44504	42	68199	Compressor for 44504	68
71057	Metal Shelf Support for 44504	19	71114	Door Glide Wheel for 44504	43	AF521	Top Back Frame for 44504	69
68274	Right Top Shelf Holder for 44504	20	68284	Glass Strutting Piece for 44504	44	AF507	Left Back Frame for 44504	70
68177	Left Top Shelf Holder for 44504	21	AF520	Air In/Outlet for 44504	45	AF508	Right Back Frame for 44504	71
68275	Middle/Top Glass Shelf for 44504	22	71074	Bottom Black Glass Frame for 44504	46	AF522	Bottom Back Frame for 44504	72
68276	Left Top Shelf Holder for 44504	23	71121	Screw Cover for 44504	47			
AF519	Small Glass Shelf for 44504	24	71171	Left Pole Fixer for 44504	48			

Parts Breakdown

Model RS-CN-0571-S 44505

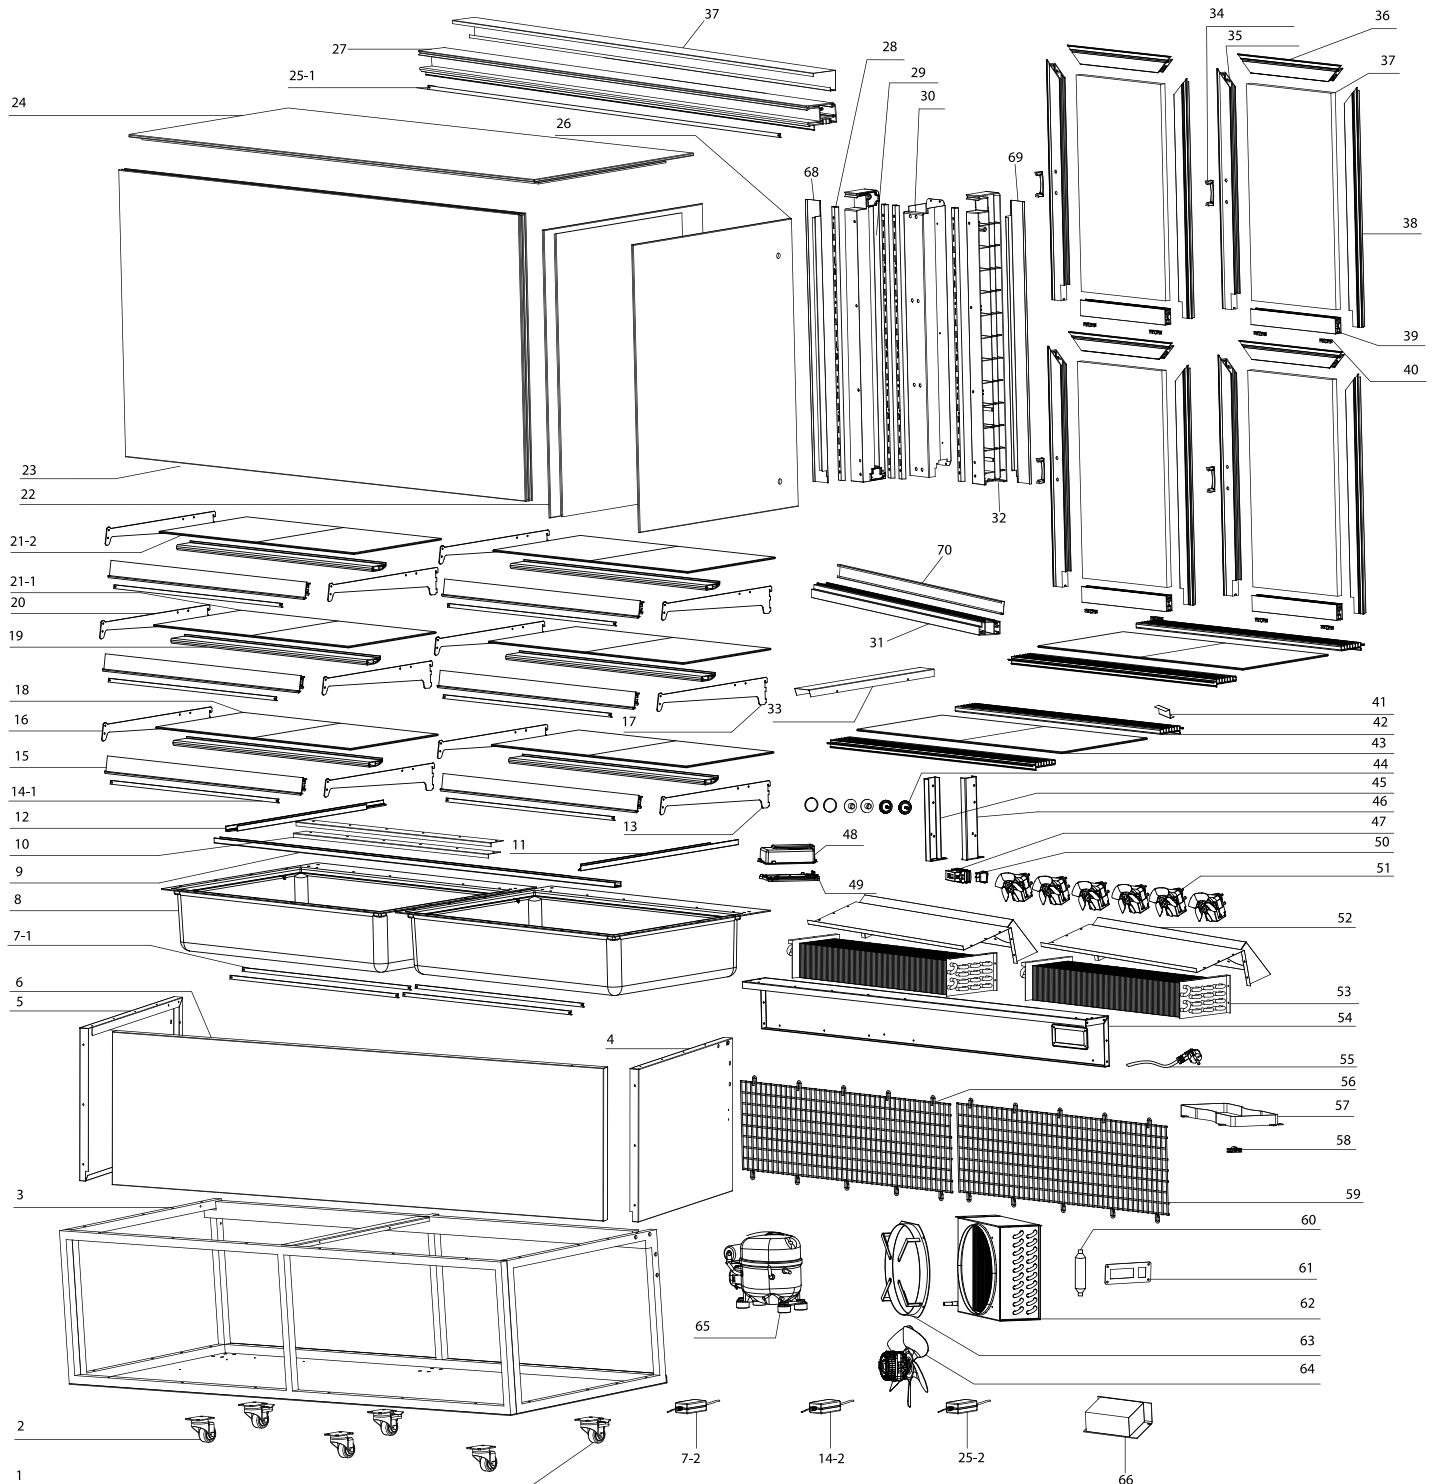

Parts Breakdown


Model RS-CN-0571-S 44505

Item No.	Description	Position	Item No.	Description	Position	Item No.	Description	Position
71042	Rear Swivel Caster with Brake for 44505	1	AF524	Top Glass for 44505	24	71123	Digital Control for 44505	47, 61
79763	Swivel Front Castor without Brake for 44505	2	AF525	Top LED for 44505	25-1	71079	Thermostat Lid for 44505	48
68203	Base for 44505	3	64751	#2 LED Transformer for 44505	25-2	71082	Thermostat Base for 44505	49
68225	Right Cover for 44505	4	68205	Right Glass for 44505	26	68196	Switch for 44505	50
68226	Left Cover for 44505	5	68280	Top Frame for 44505	27	71081	Evaporator Motor for 44505	51
68268	Front Cover for 44505	6	71153	Shelf Holder for 44505	28	71126	Evaporator Cover for 44505	52
68168	Bottom LED for 44505	7-1	71164	Left Pole Cover for 44505	29	71127	Evaporator for 44505	53
68235	#2 LED Driver for 44505	7-2, 14-2	68281	Middle Column for 44505	30	68285	Rear Frame for 44505	54
71046	Evaporator Insulation for 44505	8	68282	Bottom Frame for 44505	31	71085	Power Cord for 44505	55
68269	Front Glass Fixer for 44505	9	71065	Right Pole for 44505	32	71087	Back Grill for 44505	56, 59
68270	After Air Vent Fixed Parts for 44505	10	68283	Middle Cover Plate for 44505	33	71089	Water Tray for 44505	57
68271	Right Glass Fixer for 44505	11	71110	Door Handle for 44505	34	71133	Power Cord Fixer for 44505	58
68272	Left Glass Fixer for 44505	12	68190	Left Door Frame for 44505	35	71083	Dryer Filter for 44505	60
68172	Right Bottom Shelf Holder for 44505	13	71068	Top Upper Door Frame for 44505	36	68286	Condenser for 44505	62
68176	Middle LED for 44505	14-1	AF526	Door Glass for 44505	37	71136	Fan Bracket for 44505	63
71052	Metal Price Tags for 44505	15	68192	Right Door Frame for 44505	38	68287	Condenser Fan Motor for 44505	64
68211	Left Bottom Shelf Holder for 44505	16	71071	Bottom Door Frame for 44505	39	68199	Compressor for 44505	65
68175	Right Top Shelf Holder for 44505	17	71114	Door Glide Wheel for 44505	40	68288	Transformer for 44505	66
68273	Bottom Glass Shelf for 44505	18	68284	Glass Strutting Piece for 44505	41	AF521	Top Back Frame for 44505	67
71057	Metal Shelf Support for 44505	19	AF520	Air In/Outlet for 44505	42	AF502	Left Back Frame for 44505	68
68177	Left Top Shelf Holder for 44505	20	AD841	Bottom Glass for 44505	43	AF503	Right Back Frame for 44505	69
68275	Middle/Top Glass Shelf for 44505	21-1, 21-2	71121	Screw Cover for 44505	44	AF522	Bottom Back Frame for 44505	70
68200	Left Glass for 44505	22	71171	Left Pole Fixer for 44505	45			
AF523	Front Glass for 44505	23	71077	Right Pole Fixer for 44505	46			

Electrical Schematics

Model RS-CN-0271 44387

Model RS-CN-0271-S 44382

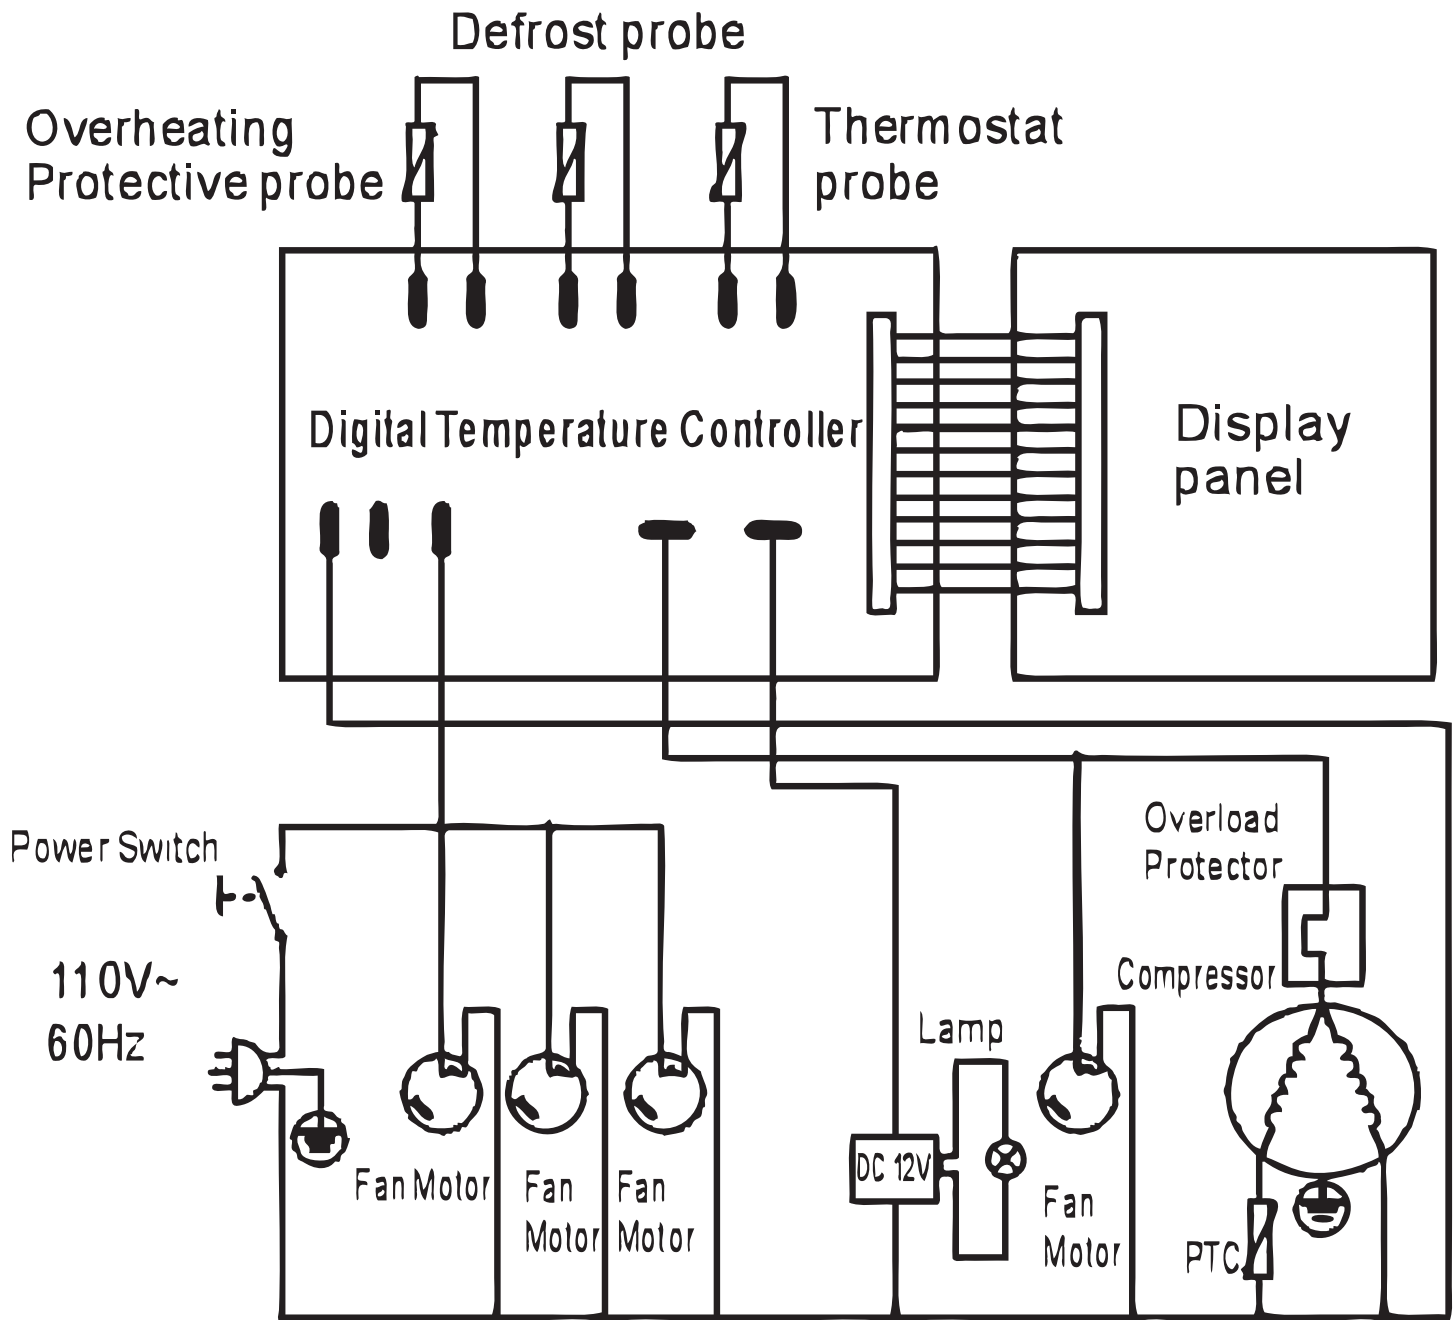


Electrical Schematics

Model RS-CN-0371 44502

Model RS-CN-0371-S 44383

Model RS-CN-0471 44503


Model RS-CN-0471-S 44384

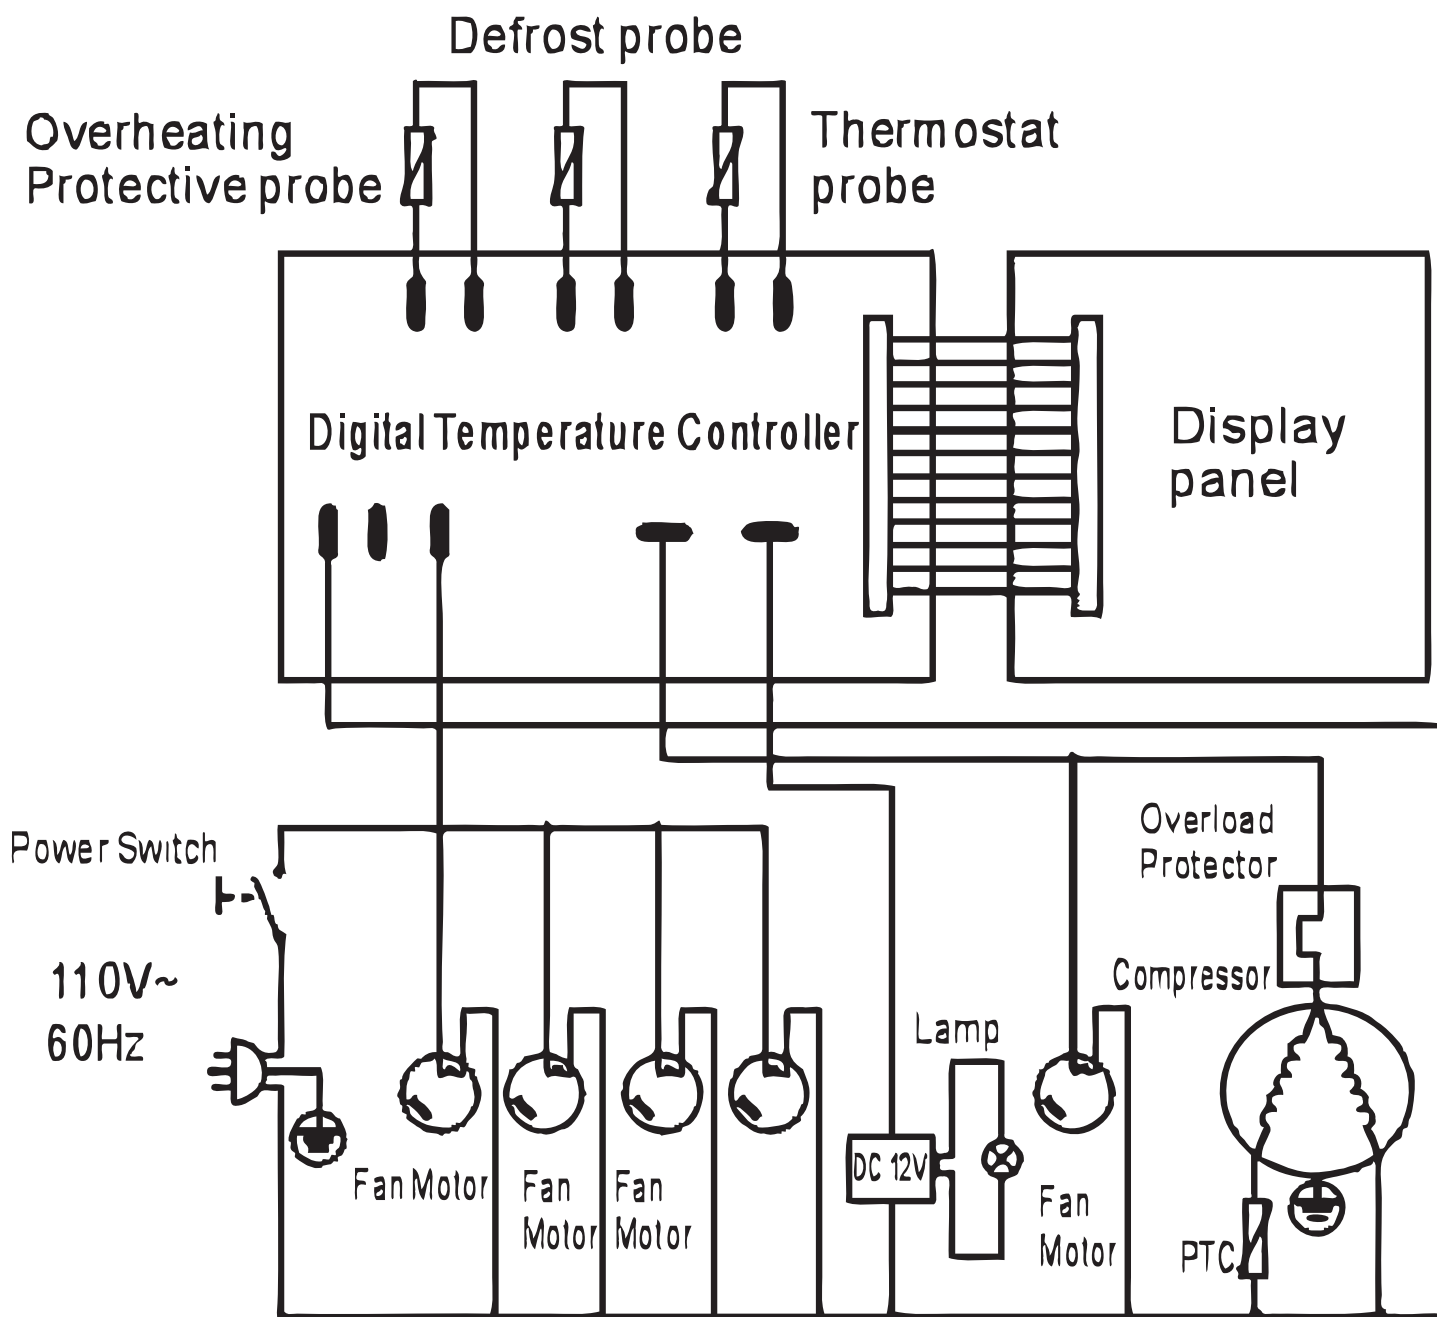

Electrical Schematics

Model RS-CN-0571 44504

Model RS-CN-0571-S 44505

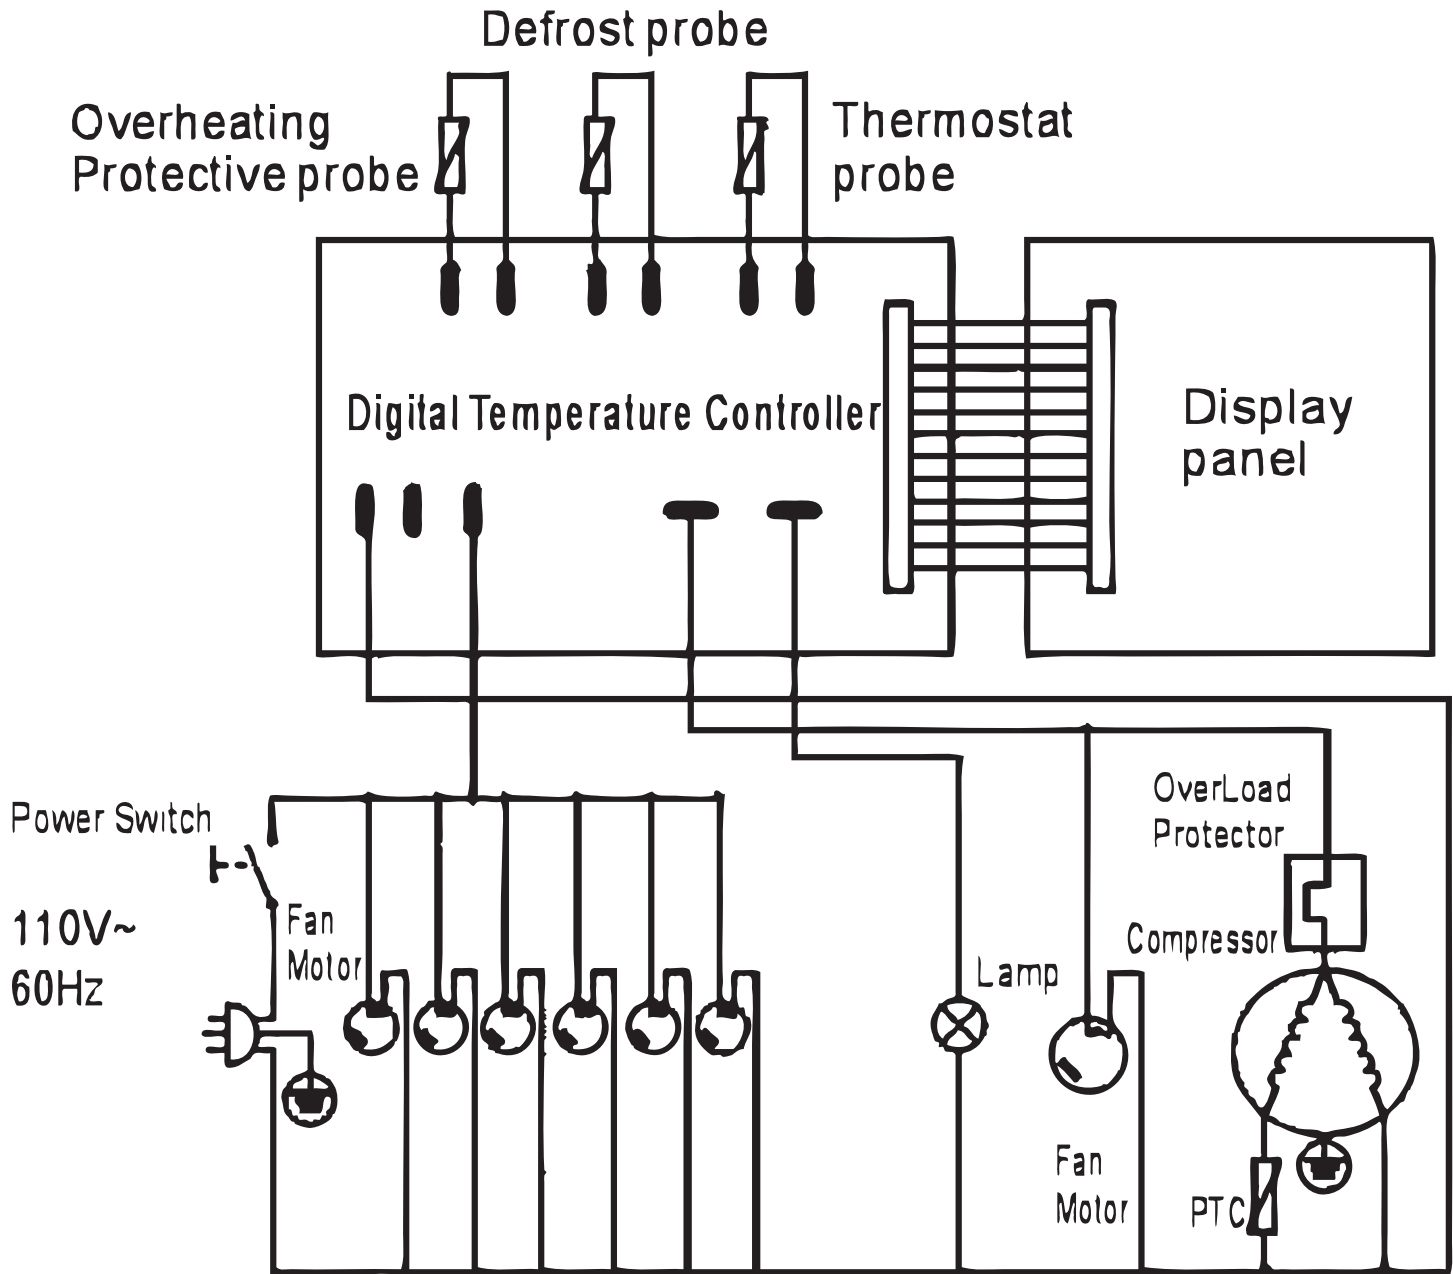

Notes

[illegible]

Notes

[illegible]



Warranty Registration

Thank you for purchasing an Omcan product. To register your warranty for this product, complete the information below, tear off the card at the perforation and then send to the address specified below. You can also register online by visiting:

Merci d'avoir acheté un produit Omcan. Pour enregistrer votre garantie pour ce produit, complétez les informations ci-dessous, détachez la carte au niveau de la perforation, puis l'envoyer à l'adresse spécifiée ci-dessous. Vous pouvez également vous inscrire en ligne en visitant:

Gracias por comprar un producto Omcan usted. Para registrar su garantía para este producto, complete la información a continuación, cortar la tarjeta en la perforación y luego enviarlo a la dirección indicada a continuación. También puede registrarse en línea en:

<https://omcan.com/warranty-registration/>

For mailing in Canada

Pour postale au Canada

Por correo en Canadá

OMCAN

PRODUCT WARRANTY REGISTRATION

3115 Pepper Mill Court,

Mississauga, Ontario

Canada, L5L 4X5

For mailing in the US

Pour diffusion aux États-Unis

Por correo en los EE.UU.

OMCAN

PRODUCT WARRANTY REGISTRATION

4450 Witmer Industrial Estates, Unit 4,

Niagara Falls, New York

USA, 14305

or email to: service@omcan.com



Purchaser's Information

Name: _____

Address: _____

City: _____ Province or State: _____ Postal or Zip: _____

Country: _____

Dealer from which Purchased: _____

Dealer City: _____ Dealer Province or State: _____

Invoice: _____

Company Name: _____

Telephone: _____

Email Address: _____

Type of Company:

☐ Restaurant ☐ Bakery ☐ Deli

☐ Butcher ☐ Supermarket ☐ Caterer

☐ Institution (specify): _____

☐ Other (specify): _____

Model Name: _____ Model Number: _____ Serial Number: _____

Machine Description: _____

Date of Purchase (MM/DD/YYYY): _____ Date of Installation (MM/DD/YYYY): _____

Would you like to extend the warranty? ☐ Yes ☐ No

Thank you for choosing Omcan | Merci d'avoir choisi Omcan | Gracias por elegir Omcan



Since 1951 Omcan has grown to become a leading distributor of equipment and supplies to the North American food service industry. Our success over these many years can be attributed to our commitment to strengthen and develop new and existing relationships with our valued customers and manufacturers. Today with partners in North America, Europe, Asia and South America, we continually work to improve and grow the company. We strive to offer customers exceptional value through our qualified local sales and service representatives who provide convenient access to over 6,500 globally sourced products.

Depuis 1951 Omcan a grandi pour devenir un des “leaders” de la distribution des équipements et matériel pour l’industrie des services alimentaires en Amérique du Nord. Notre succès au cours de ces nombreuses années peut être attribué à notre engagement à renforcer et à développer de nouvelles et existantes relations avec nos clients et les fabricants de valeur. Aujourd’hui avec des partenaires en Amérique du Nord, Europe, Asie et Amérique du Sud, nous travaillons continuellement à améliorer et développer l’entreprise. Nous nous efforçons d’offrir à nos clients une valeur exceptionnelle grâce à nos ventes locales qualifiées et des représentants de service qui offrent un accès facile à plus de 6500 produits provenant du monde entier.

Desde 1951 Omcan ha crecido hasta convertirse en un líder en la distribución de equipos y suministros de alimentos en América del Norte industria de servicios. Nuestro éxito en estos años se puede atribuir a nuestro compromiso de fortalecer y desarrollar nuevas relaciones existentes con nuestros valiosos clientes y fabricantes. Hoy con socios de América del Norte, Europa, Asia y América del Sur, que trabajan continuamente para mejorar y crecer la empresa. Nos esforzamos por ofrecer a nuestros clientes valor excepcional a través de nuestro local de ventas y representantes de los servicios que proporcionan un fácil acceso a más de 6,500 productos con origen a nivel mundial.

