

JFT/JFT-S SERIES

*RACKLESS CONVEYOR
FLIGHT TYPE
DISHMACHINE*



TECHNICAL MANUAL



FOR JACKSON MODEL(S):

JFT/JFT-S

ONE YEAR LIMITED PARTS & LABOR

MANUFACTURERS WARRANTY

ALL NEW JACKSON DISHWASHERS ARE WARRANTED TO THE ORIGINAL PURCHASER TO BE FREE FROM DEFECTS IN MATERIAL OR WORKMANSHIP, UNDER NORMAL USE AND OPERATION FOR A PERIOD OF (1) ONE YEAR FROM DATE OF PURCHASE, BUT IN NO EVENT TO EXCEED (18) EIGHTEEN MONTHS FROM DATE OF SHIPMENT FROM THE FACTORY.

Jackson WWS agrees under this warranty to repair or replace, at its discretion, any original part which fails under normal use due to faulty material or workmanship during the warranty period, providing the equipment has been unaltered, and has been properly installed, maintained and operated in accordance with applicable factory instruction manual furnished with the machine and failure is reported to the authorized service agency within the warranty period. This includes the use of factory specified genuine replacement parts, purchased directly from a Jackson authorized parts distributor or service agency. Use of generic replacement parts may create a hazard and void warranty certification.

The labor to repair or replace such failed part will be paid by Jackson WWS, within the continental United States, Hawaii and Canada, during the warranty period provided a Jackson WWS authorized service agency, or those having prior authorization from the factory, performs the service. Any repair work by persons other than Jackson WWS authorized service agency is the sole responsibility of the customer. Labor coverage is limited to regular hourly rates; overtime premiums and emergency service charges will not be paid by Jackson WWS.

Accessory components not installed by the factory carry a (1) one year parts warranty only. Accessory components such as table limit switches, pressure regulators, pre-rinse units, etc. that are shipped with the unit and installed at the site are included. Labor to repair or replace these components is not covered by Jackson WWS.

This warranty is void if failure is a direct result from shipping, handling, fire, water, accident, misuse, acts of God, attempted repair by authorized persons, improper installation, if serial number has been removed or altered, or if unit is used for purpose other than originally intended.

TRAVEL LIMITATIONS

Jackson WWS limits warranty travel time to (2) two hours and mileage to (100) one hundred miles. Jackson WWS will not pay for travel time and mileage that exceeds this, or any fees such as those for air or boat travel without prior authorization.

WARRANTY REGISTRATION

To register your product go to www.jacksonwws.com or call 1-888-800-5672. Failure to register your product will void the warranty.

REPLACEMENT PARTS WARRANTY

Jackson replacement parts are warranted for a period of 90 days from date of installation or 180 days from the date of shipment from the factory, whichever occurs first.

PRODUCT CHANGES AND UPDATES

Jackson WWS reserves the right to make changes in design and specification of any equipment as engineering or necessity requires.

THIS IS THE ENTIRE AND ONLY WARRANTY OF JACKSON WWS. JACKSON'S LIABILITY ON ANY CLAIM OF ANY KIND, INCLUDING NEGLIGENCE, WITH RESPECT TO THE GOODS OR SERVICES COVERED HEREUNDER, SHALL IN NO CASE EXCEED THE PRICE OF THE GOODS OR SERVICES OR PART THEREOF WHICH GIVES RISE TO THE CLAIM.

THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING FOR FITNESS OR MERCHANTABILITY, THAT ARE NOT SET FORTH HEREIN, OR THAT EXTEND BEYOND THE DURATION HEREOF. UNDER NO CIRCUMSTANCES WILL JACKSON WWS BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, OR FOR THE DAMAGES IN THE NATURE OF PENALTIES, ARISING OUT OF THE USE OR INABILITY TO USE ANY OF ITS PRODUCTS.

ITEMS NOT COVERED

THIS WARRANTY DOES NOT COVER CLEANING OR DELIMING OF THE UNIT OR ANY COMPONENT SUCH AS, BUT NOT LIMITED TO, WASH ARMS, RINSE ARMS OR STRAINERS AT ANYTIME. NOR DOES IT COVER ADJUSTMENTS SUCH AS, BUT NOT LIMITED TO TIMER CAMS, THERMOSTATS OR DOORS, BEYOND 30 DAYS FROM THE DATE OF INSTALLATION. IN ADDITION, THE WARRANTY WILL ONLY COVER REPLACEMENT WEAR ITEMS SUCH AS CURTAINS, DRAIN BALLS, DOOR GUIDES OR GASKETS DURING THE FIRST 30 DAYS AFTER INSTALLATION. ALSO, NOT COVERED ARE CONDITIONS CAUSED BY THE USE OF INCORRECT (NON-COMMERICAL) GRADE DETERGENTS, INCORRECT WATER TEMPERATURE OR PRESSURE, OR HARD WATER CONDITIONS.

REVISION HISTORY

| Revision Letter | Revision Date | Made By | Applicable ECNs | Details |
|-----------------------|---------------|---------|--|--|
| C | 04-30-04 | CBW | N/A | Updated to new format; Added missing parts to steam booster assembly. |
| D | 12-16-04 | MAW | 7144, 7143 7145, 7156 | Added new tall door assembly parts. Added stop brackets to unloader stop assembly. Added keys and set screws for gears. Changed number for back strainer support. Changed drain handle number. Changed manifold, rinse arm and plumbing assemblies to reflect new design. Added the short door assemblies. Corrected number for switches on load end asm. Changed drawing for belt assembly. Added unload end assembly plumbing. Updated schematic to revision B. Added 600V machines. |
| E | 03-16-06 | MAW | 7316, 7176 7328, 7450 7197, 7263 7289, 7270 7331, 7343 7374 | Added spacer gaskets. Replaced level control parts with swing arm sensor. Added final rinse arm assembly for no pump final rinse units. Added service numbers for motor assemblies. Added new screws for door guides. Added regulator to final rinse tank. Added dish stabilizer to blower box assembly. Changed drain connection from 3 to 2 inches. Added new final rinse tank assembly. Updated dimensions page. |
| 58 | 12-18-06 | CS | 7889 | Replace 45KW Booster heater with 27KW booster heater. |
| 2, 3, 4 | 08-20-2007 | MAW | N/A | Updated electrical requirements from 45 KW to 27 KW. Changed flowrate from 3.7 to 2.3 gpm. |
| 35, 53, 55 | 09-13-2007 | MAW | 7836 | Updated peg part number from 05700-002-63-88 to 05700-003-25-80 . Added water pressure gauge to control box and parts list. |
| 2 THRU 11 | 09-14-2007 | MAW | N/A | Updated the specifications and added dimensions pages. |
| 77, 75, 60, 82, 39 | 10-11-2007 | MAW | 7673, 7818, 7816, 7804, 7826, 7806 | Updated heaters to 3Y. Replaced 4810-002-83-15 solenoid with 4820-011-87-39. Added Control box door brace and button guards. Added loader/unloader strainer weldment. Added sensor cover. Added slide stop lanyard assembly. |
| 86-90, 113-116 | 12-14-2007 | MAW | N/A | Updated schematic and added JFT-S 200V schematic. |
| 91-112 | 01-01-2008 | MAW | N/A | Updated schematics to include keyed switch option. |
| F | 08-18-2009 | ARL | 090820-1316-CW | Updated p/n's for door spring assembly. |
| G | 11-23-2010 | RLC | QOF 386 | Added CEC note to page 15 |
| H | 03-19-2013 | RLC | QOF NDB-219 | Updated manufacturer information. |
| I | 02-10-14 | MHH | QOF 386 | Updated manufacturer warranty. Removed "Stop" page. Corrected P/N of conveyer belt return on pg. 35. (#s were correct; arrows were pointing at wrong parts) |
| J | 12-16-14 | KAP | N/A | Corrected P/N and Description on pg. 83 for #5 of Unload Section 18" Expansion Assembly. |



JFT / JFT-S

JFT - Electrically-heated rackless conveyor dishmachine

JFT-S - Steam-heated rackless conveyor dishmachine

Model: _____

Serial No.: _____

Installation Date: _____

Service Rep. Name: _____

Phone Number: _____

Jackson WWS, Inc. provides technical support for all of the dishmachines detailed in this manual. We strongly recommend that you refer to this manual before making a call to our technical support staff. Please have this manual with you when you call so that our staff can refer you, if necessary, to the proper page. Technical support is not available on holidays. Contact technical support toll free at 1-888-800-5672.

Technical support is available for service personnel only.

SPECIFICATIONS

Performance/Capabilities of the JFT 1
 Electrical Requirements of the JFT..... 2
 Performance/Capabilities of the JFT-S 5
 Electrical Requirements of the JFT-S 6
 JFT Legend & Exhaust Fan Requirements..... 7
 JFT Left to Right Dimensions 8
 JFT Right to Left Dimensions 9
 JFT-S Legend & Exhaust Fan Requirements 10
 JFT-S Left to Right Dimensions 11
 JFT-S Right to Left Dimensions 12

INSTALLATION/OPERATIONS INSTRUCTIONS

Installing the JFT Machine 13
 Delimiting Operations 19
 Detergent Control 20
 Operating Instructions 21

PREVENTATIVE MAINTENANCE

Pre-Scrapping/Strainers 24
 Strainers (Cont) /Daily/Weekly Maintenance 25
 Weekly (Cont)/Monthly 26
 Quarterly/Annual Maintenance 27
 Items Not Requiring Maintenance 28

TROUBLESHOOTING SECTION

Common Problems..... 29

SERVICE PROCEDURES SECTION

Vacuum Breaker Repair Parts Kit..... 32

PARTS SECTION

Reference Diagram..... 35
 Load End Section 36
 Load End Assembly 38
 Load End Drain Plumbing Assembly 40
 Installation of Expansion Assemblies 42
 Shroud Assembly 43
 Conveyor Belt Assembly 45
Prewash Section 46
 Prewash Section Assembly 46
 Prewash Section - Control Box Assembly 47
 Prewash Section - Prewash Arm & Drain Plumbing Assembly..... 49

TABLE OF CONTENTS

| | |
|---|-----------|
| Wash Section | 51 |
| Wash Section Assembly | 51 |
| Wash Section - Control Box Assembly | 52 |
| Wash Section - Wash Arm & Drain Plumbing Assembly..... | 53 |
| Power Rinse Section | 56 |
| Power Rinse Section Assembly | 56 |
| Power Rinse Section - Control Box Assembly | 57 |
| Power Rinse Section - Rinse Arm & Drain Plumbing Assembly | 58 |
| Final Rinse & Electrical Sections | 60 |
| Final Rinse Assembly (With a pumped final rinse) | 60 |
| Final Rinse Arm Assembly | 61 |
| 3/4" Vacuum Breaker Repair Parts Kit/Air Gap Assemblies | 62 |
| Electrical Section Assembly..... | 64 |
| Electrical Control Box Assembly | 66 |
| Motor Overloads Chart | 70 |
| JFT Electrical Section - Booster Heater & Frame Assembly | 71 |
| JFT-S Electrical Section - Steam Booster Assembly | 73 |
| Blower Dryer Section | 76 |
| Blower Dryer Section Assembly..... | 78 |
| JFT Blower Assembly | 79 |
| Unload Expansion & Unload Section(s)..... | 80 |
| 18" Expansion Section Assembly | 82 |
| Unload End Assembly..... | 84 |
| Unload End Miscellaneous Assemblies | 88 |
| Slide Stop Assembly | 90 |
| Motor Assemblies & JFT Heaters | 91 |
| JFT-S Steam Coil Assembly | 93 |
| Door Assemblies, Tall Version | 94 |
| Door Assemblies, Short Version | 96 |
| Frame Assemblies | 98 |
| Strainers/Curtain Assemblies..... | 100 |
| Miscellaneous Prewash, Wash & Power Rinse Assemblies | 102 |
| Spare Parts Kit/GO*BOX Components..... | 104 |

ELECTRICAL SCHEMATICS

| | |
|--|-----|
| JFT 208-230-460 Volt/50-60 Hz/3 Phase | 105 |
| JFT 600 Volt/60 Hz/3 Phase | 109 |
| JFT (Pumped Final Rinse) 208-230-460 Volt/50-60 Hz/3 Phase | 113 |
| JFT-S 208-230-460 Volt/50-60 Hz/3 Phase | 117 |
| JFT-S 600 Volt/60 Hz/3 Phase..... | 121 |
| JFT-S (Pumped Final Rinse) 208-230-460 Volt/50-60 Hz/3 Phase | 125 |
| JFT-S 200 Volt/50-60 Hz/3 Phase | 129 |

Model Designation: JFT**Operating Capacity:**

| | |
|-------------------------------------|--------|
| Dishes or Glasses per Hour (8.6FPM) | 17,101 |
| Dishes or Glasses per Hour (6.4FPM) | 12,726 |

Tank Capacity (Gallons):

| | |
|--------------|----|
| Prewash Tank | 36 |
| Wash Tank | 36 |
| Rinse Tank | 36 |

Pump Capacity (GPM):

| | |
|--------------|-----|
| Prewash Tank | 260 |
| Wash Tank | 260 |
| Rinse Tank | 230 |

Venting Requirements (CFM)(100% CAP.)

| | |
|----------------|------|
| FPM (INDIRECT) | 1200 |
|----------------|------|

| | |
|--------------------------------------|-----|
| Conveyor Speed (FPM) High End | 8.6 |
| Conveyor Speed (FPM) Low End | 6.4 |

HOT WATER SANITIZING**Water Temperatures (Fahrenheit):**

| | |
|--------------------------|-----|
| Prewash Temperature | 140 |
| Minimum Wash Temperature | 152 |
| Power Rinse Temperature | 161 |
| Final Rinse Temperature | 180 |

Other Water Requirements:

| | |
|----------------------------|--------|
| Water Flow Pressure (PSIG) | 20 ± 5 |
| Flow Rate Minimum (GPM) | 2.3 |

NOTE: Always refer to the machine data plate for specific electrical and water requirements. The material provided on this page is for reference only and is subject to change without notice.

NOTE: Typical Electrical Circuit is based upon (1) 125% of the full amperage load of the machine and (2) typical fixed-trip circuit breaker sizes as listed in the NEC 2002 Edition. Local codes may require more stringent protection than what is displayed here. Always verify with your electrical service contractor that your circuit protection is adequate and meets all applicable national and local codes. These numbers are provided in this manual simply for reference and may change without notice at any given time.

All electrical ratings provided in this manual are for reference only. Always refer to the machine data plate to get exact electrical information for this machine. All electrical work performed on machines should be done in accordance with applicable local, state, territorial and national codes. Work should only be performed by qualified electricians and authorized service agents. A list of authorized service agencies is located in the back of this manual.

Where applicable, heating element amperage draws have been adjusted for the assumed input voltage. Jackson assumes incoming voltages will be either 208 or 230 volts. Some heating elements used in the machines are rated for other voltages, such as 240 volts. Always verify the amperage draw of the machine in operation when sizing circuit protection.

The electrical configurations of the JFT series of machines are as follows:

| | |
|-----------------------------|---------|
| WASH/PREWASH PUMP MOTOR (2) | 3 HP |
| POWER RINSE PUMP MOTOR (1) | 2 HP |
| FINAL RINSE PUMP MOTOR (1) | 1/2 HP |
| DRIVE MOTOR (1) | 1/4 HP |
| EXHAUST FAN MOTOR (1) | 0.31 KW |
| BLOWER DRYER MOTOR (1) | 2.1 KW |

58 Gallon/Hr

JFT - Electrical Requirements

CONTROLS, MOTORS, & BLOWER DRYER SECTION

| VOLTS | PH | HZ | BLOWER HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|-----------------------|------------|----------------------------|
| 208 | 3 | 60 | 9KW | 44 | 60 AMP |
| 230 | 3 | 60 | 9KW | 38 | 50AMP |
| 460 | 3 | 60 | 9KW | 19 | 25 AMP |
| 600 | 3 | 60 | 9KW | 16 | 20 AMP |

CONTROLS, MOTORS, (NO BLOWER DRYER SECTION)

| VOLTS | PH | HZ | BLOWER HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|-----------------------|------------|----------------------------|
| 208 | 3 | 60 | N/A | 12 | 15 AMP |
| 230 | 3 | 60 | N/A | 11 | 15 AMP |
| 460 | 3 | 60 | N/A | 6 | 15 AMP |
| 600 | 3 | 60 | N/A | 5 | 15 AMP |

FINAL RINSE & BOOSTER HEATER SECTION

| VOLTS | PH | HZ | BOOSTER HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|------------------------|------------|----------------------------|
| 208 | 3 | 60 | 18 KW | 48 | 60 AMP |
| 230 | 3 | 60 | 18 KW | 42 | 60 AMP |
| 460 | 3 | 60 | 18 KW | 21 | 30 AMP |
| 600 | 3 | 60 | 18 KW | 18 | 25 AMP |

WASH TANK SECTION

| VOLTS | PH | HZ | WASH HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|---------------------|------------|----------------------------|
| 208 | 3 | 60 | 24 KW | 67 | 90 AMP |
| 230 | 3 | 60 | 24 KW | 56 | 70 AMP |
| 460 | 3 | 60 | 24 KW | 31 | 40 AMP |
| 600 | 3 | 60 | 24 KW | 26 | 35 AMP |

POWER RINSE TANK SECTION

| VOLTS | PH | HZ | POWER RINSE TANK HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|---------------------------------|------------|----------------------------|
| 208 | 3 | 60 | 33 KW | 92 | 115 AMP |
| 230 | 3 | 60 | 33 KW | 77 | 100 AMP |
| 460 | 3 | 60 | 33 KW | 40 | 50 AMP |
| 600 | 3 | 60 | 33 KW | 33 | 45 AMP |

139 Gallon /Hr

JFT - Electrical Requirements

CONTROLS, MOTORS, & BLOWER DRYER SECTION

| VOLTS | PH | HZ | BLOWER HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|-----------------------|------------|----------------------------|
| 208 | 3 | 60 | 9KW | 44 | 60 AMP |
| 230 | 3 | 60 | 9KW | 38 | 50AMP |
| 460 | 3 | 60 | 9KW | 19 | 25 AMP |
| 600 | 3 | 60 | 9KW | 16 | 20 AMP |

CONTROLS, MOTORS, (NO BLOWER DRYER SECTION)

| VOLTS | PH | HZ | BLOWER HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|-----------------------|------------|----------------------------|
| 208 | 3 | 60 | N/A | 12 | 15 AMP |
| 230 | 3 | 60 | N/A | 11 | 15 AMP |
| 460 | 3 | 60 | N/A | 6 | 15 AMP |
| 600 | 3 | 60 | N/A | 5 | 15 AMP |

FINAL RINSE & BOOSTER HEATER SECTION

| VOLTS | PH | HZ | BOOSTER HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|------------------------|------------|----------------------------|
| 208 | 3 | 60 | 36 KW | 100 | 125 AMP |
| 230 | 3 | 60 | 36 KW | 83 | 110 AMP |
| 460 | 3 | 60 | 36 KW | 42 | 60 AMP |
| 600 | 3 | 60 | 36 KW | 35 | 50 AMP |

WASH TANK SECTION

| VOLTS | PH | HZ | WASH HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|---------------------|------------|----------------------------|
| 208 | 3 | 60 | 24 KW | 67 | 90 AMP |
| 230 | 3 | 60 | 24 KW | 56 | 70 AMP |
| 460 | 3 | 60 | 24 KW | 31 | 40 AMP |
| 600 | 3 | 60 | 24 KW | 26 | 35 AMP |

POWER RINSE TANK SECTION

| VOLTS | PH | HZ | POWER RINSE TANK HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|---------------------------------|------------|----------------------------|
| 208 | 3 | 60 | 26 KW | 73 | 100 AMP |
| 230 | 3 | 60 | 26 KW | 60 | 75 AMP |
| 460 | 3 | 60 | 26 KW | 33 | 50 AMP |
| 600 | 3 | 60 | 26 KW | 28 | 35 AMP |

Model Designation: JFT-S

Operating Capacity:

| | |
|-------------------------------------|--------|
| Dishes or Glasses per Hour (8.6FPM) | 17,101 |
| Dishes or Glasses per Hour (6.4FPM) | 12,726 |

Tank Capacity (Gallons):

| | |
|--------------|----|
| Prewash Tank | 36 |
| Wash Tank | 36 |
| Rinse Tank | 36 |

Pump Capacity (GPM):

| | |
|--------------|-----|
| Prewash Tank | 260 |
| Wash Tank | 260 |
| Rinse Tank | 230 |

Venting Requirements (CFM)(100% CAP.)

| | |
|----------------|------|
| FPM (INDIRECT) | 1200 |
|----------------|------|

| | |
|--------------------------------------|------------|
| Conveyor Speed (FPM) High End | 8.6 |
| Conveyor Speed (FPM) Low End | 6.4 |

HOT WATER SANITIZING

Water Temperatures (Fahrenheit):

| | |
|--------------------------|-----|
| Prewash Temperature | 140 |
| Minimum Wash Temperature | 152 |
| Power Rinse Temperature | 161 |
| Final Rinse Temperature | 180 |

Other Water Requirements:

| | |
|----------------------------|------|
| Water Flow Pressure (PSIG) | 20±5 |
| Flow Rate Minimum (GPM) | 2.3 |

STEAM BOOSTER REQUIREMENTS

| | |
|---|--------------|
| Steam Input Rate (Minimum) | 15 PSIG |
| Steam Input Rate (Maximum) | 20 PSIG |
| Consumption @ 110°F Incoming Water Temp | 145 lbs./hr. |
| Consumption WITH BLOWER DRYER | 245 lbs./hr. |

NOTE: Always refer to the machine data plate for specific electrical and water requirements. The material provided on this page is for reference only and is subject to change without notice.

The electrical configurations of the JFT-S series of machines are as follows:

| | |
|-----------------------------|---------|
| WASH/PREWASH PUMP MOTOR (2) | 3 HP |
| POWER RINSE PUMP MOTOR (1) | 2 HP |
| FINAL RINSE PUMP MOTOR (1) | 1/2 HP |
| DRIVE MOTOR (1) | 1/4 HP |
| EXHAUST FAN MOTOR (1) | 0.31 KW |
| BLOWER DRYER MOTOR (1) | 2.1 KW |

NOTE: Typical Electrical Circuit is based upon (1) 125% of the full amperage load of the machine and (2) typical fixed-trip circuit breaker sizes as listed in the NEC 2002 Edition. Local codes may require more stringent protection than what is displayed here. Always verify with your electrical service contractor that your circuit protection is adequate and meets all applicable national and local codes. These numbers are provided in this manual simply for reference and may change without notice at any given time.

CONTROLS, MOTORS, & BLOWER DRYER SECTION

| VOLTS | PH | HZ | RINSE HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|----------------------|------------|----------------------------|
| 208 | 3 | 60 | N/A | 22 | 30 AMP |
| 230 | 3 | 60 | N/A | 22 | 30 AMP |
| 460 | 3 | 60 | N/A | 11 | 15 AMP |
| 600 | 3 | 60 | N/A | 10 | 15 AMP |

CONTROLS, MOTORS, (NO BLOWER DRYER SECTION)

| VOLTS | PH | HZ | RINSE HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|----------------------|------------|----------------------------|
| 208 | 3 | 60 | N/A | 15 | 30 AMP |
| 230 | 3 | 60 | N/A | 15 | 30 AMP |
| 460 | 3 | 60 | N/A | 7 | 15 AMP |
| 600 | 3 | 60 | N/A | 6 | 15 AMP |


WASH/POWER RINSE SECTIONS (COMBINED)

| VOLTS | PH | HZ | RINSE HEATER RATINGS | TOTAL AMPS | TYPICAL ELECTRICAL CIRCUIT |
|-------|----|----|----------------------|------------|----------------------------|
| 208 | 3 | 60 | N/A | 16 | 20 AMP |
| 230 | 3 | 60 | N/A | 16 | 20 AMP |
| 460 | 3 | 60 | N/A | 8 | 15 AMP |
| 600 | 3 | 60 | N/A | 7 | 15 AMP |

JFT L-R & R-L LEGEND:


- Legend**
1. 1-1/2" NPT Machine Drain Connection
(floor drain - optional to either end)
 2. Wash Tank Electrical Connection
 3. Rinse Tank Electrical Connection
 4. Booster Heater Electrical Connection
 5. Motor Controls Electrical Connection
 6. 3/4" NPT Incoming Water Connection
 7. Condensate Connection - See Detail

Note: The condensate removal system built into the dishmachine consists of a fan that will remove 1200 CFM. A single condensate connections must be provided by the installing contractor. This is an indirect connection that must be capable of removing the 1200 CFM from the area.

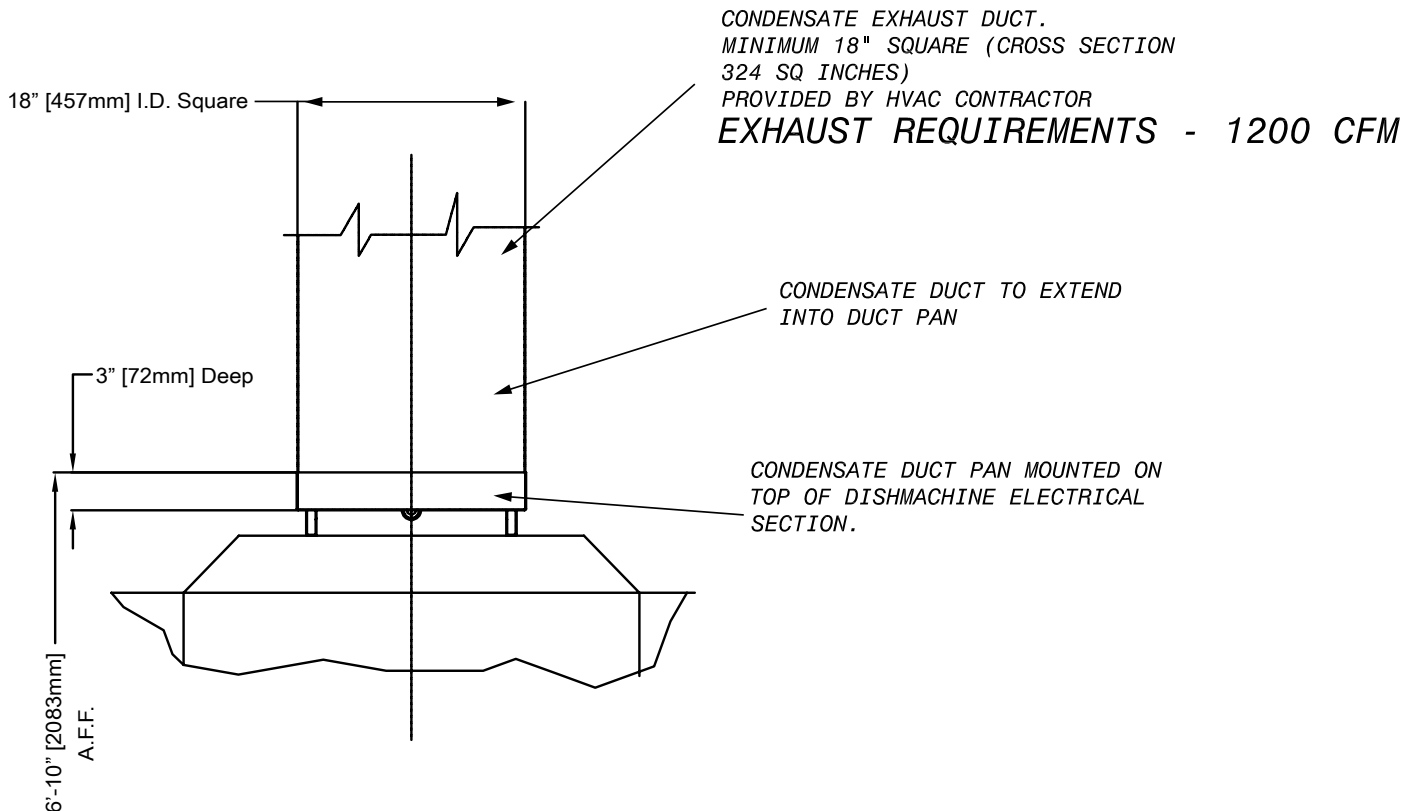

JFT RIGHT - LEFT DIMENSIONS

SPECIFICATIONS

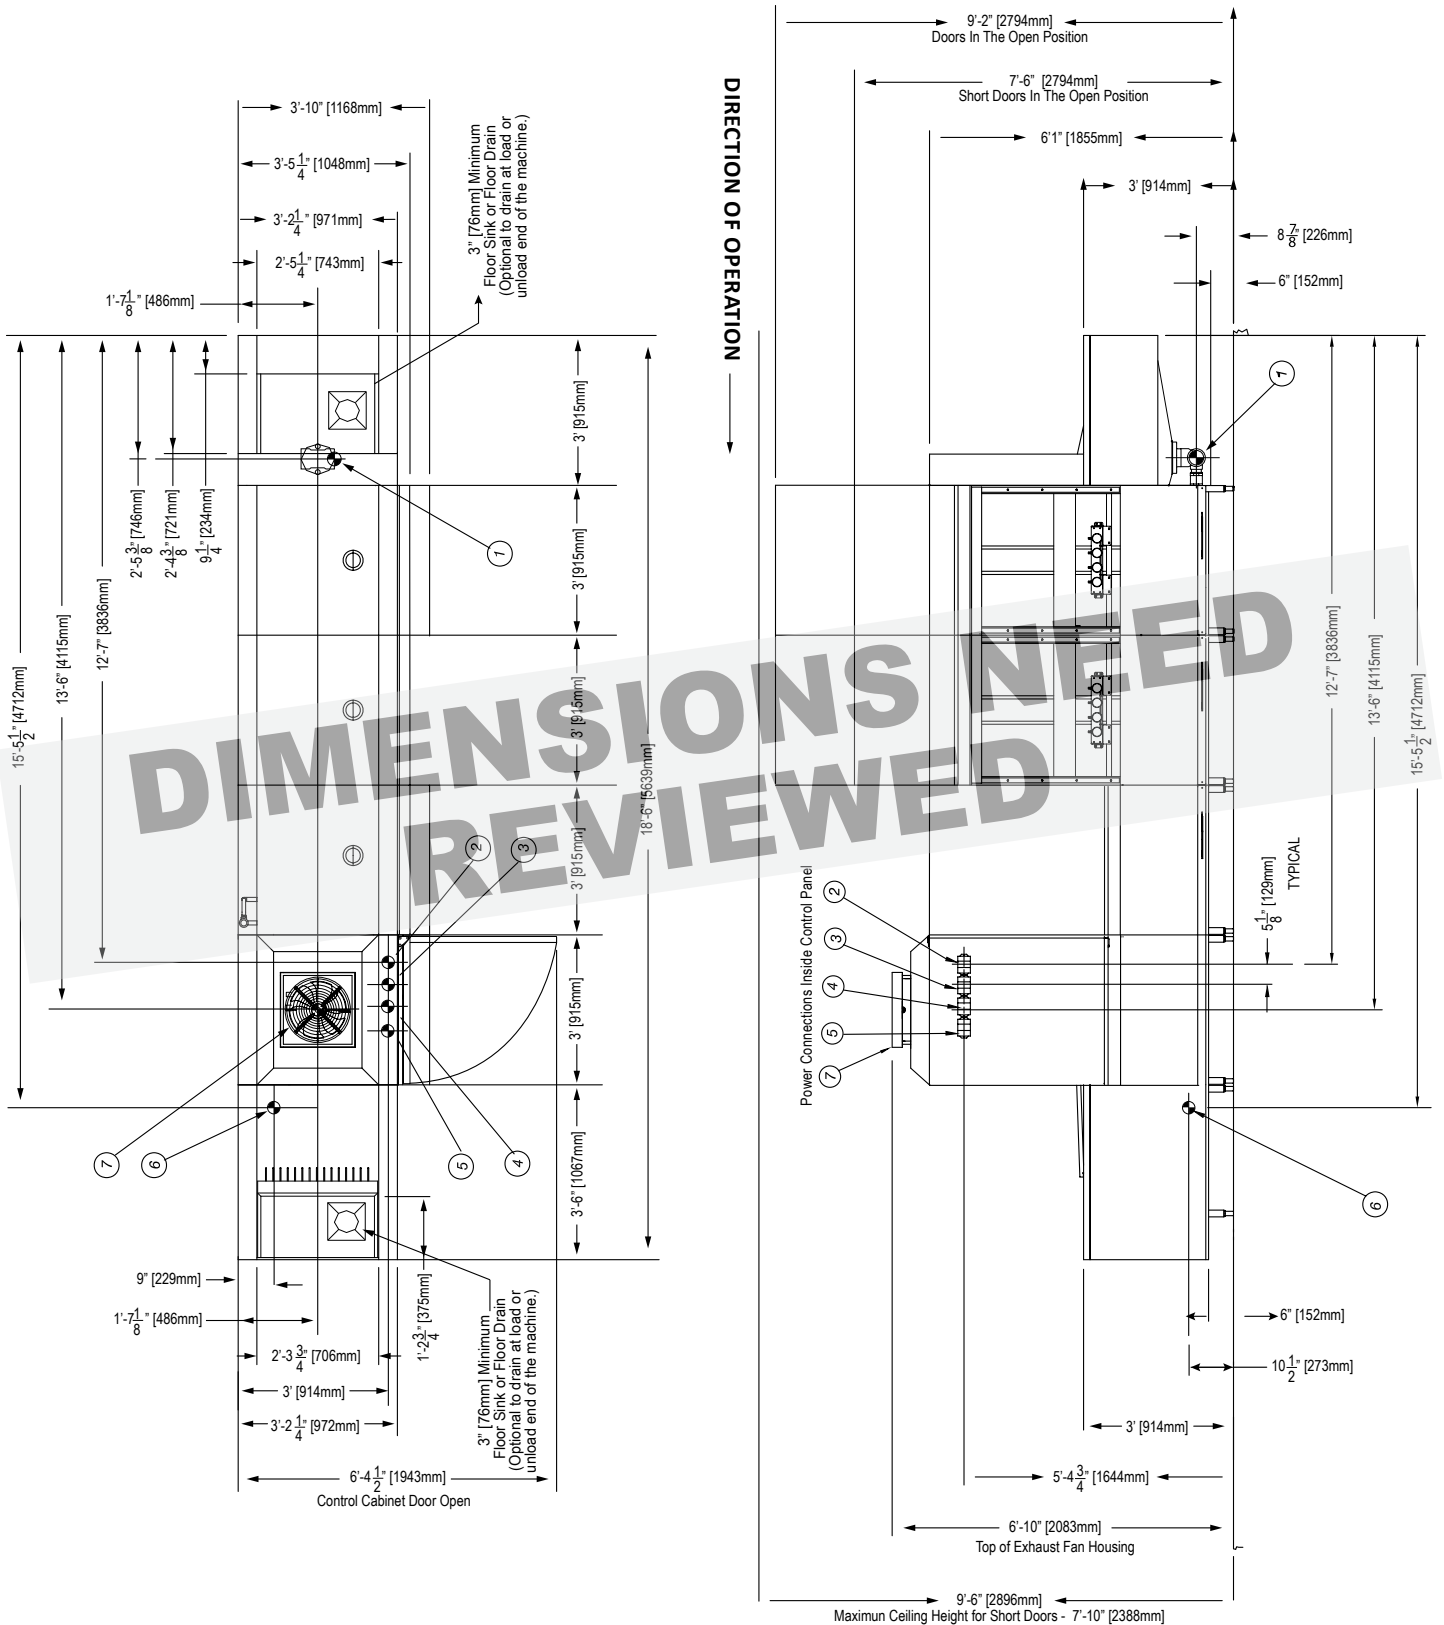


DIMENSIONS NEEDED REVIEWED

**JFT-S L-R & R-L
LEGEND:**

Legend


1. 1-1/2" NPT Machine Drain Connection
(floor drain - optional to either end)
2. Electrical Connection
3. 3/4" NPT Incoming Water Connection
4. 1-1/2" NPT Steam Connection
5. 3/4" NPT Wash Section Condensate Return
6. 3/4" NPT Power Rinse Section Condensate Return
7. 3/4" NPT Booster Heater Condensate Return
8. Condensate Connection - See Detail

Note: The condensate removal system built into the dishmachine consists of a fan that will remove 1200 CFM. A single condensate connections must be provided by the installing contractor. This is an indirect connection that must be capable of removing the 1200 CFM from the area.

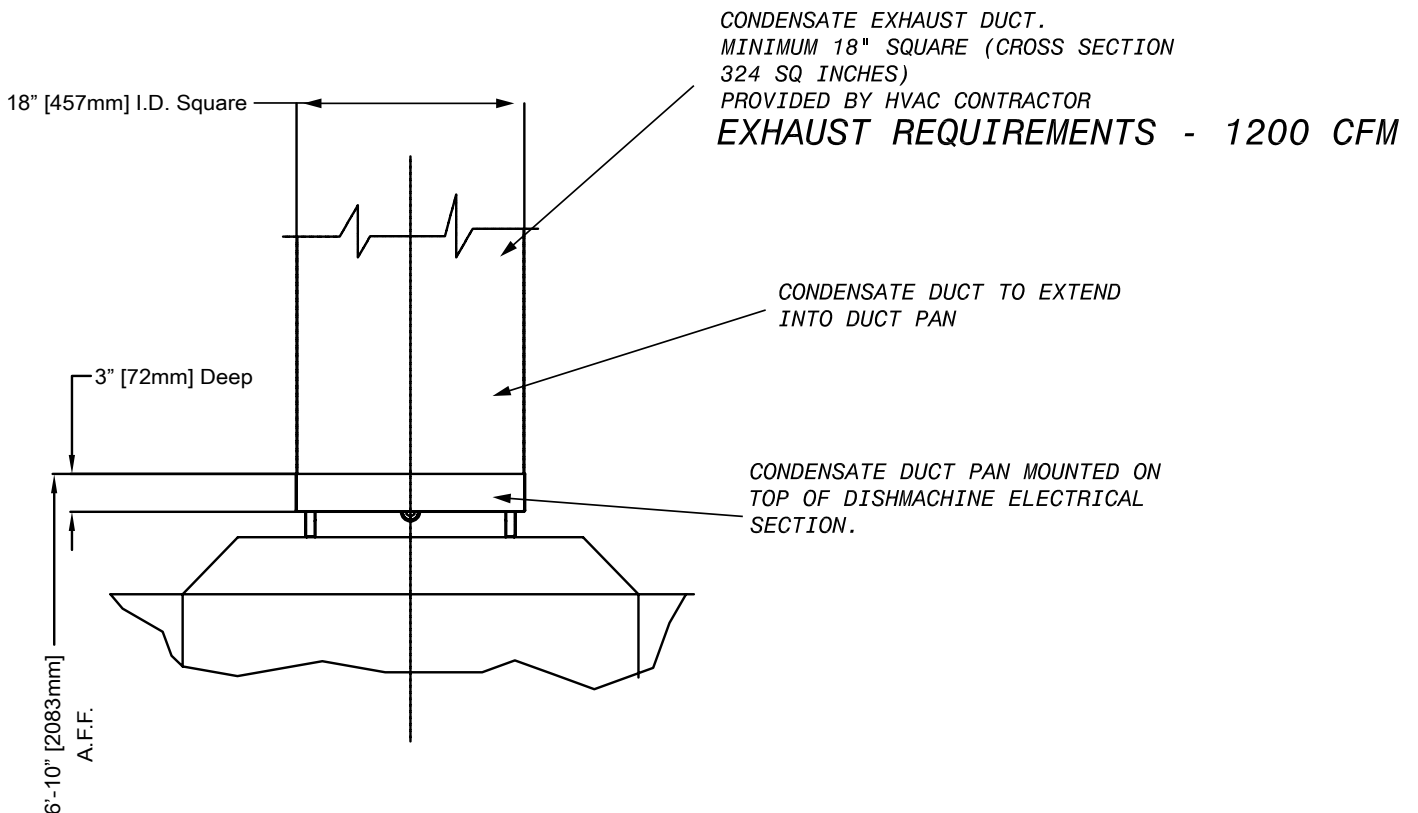


JFT-S LEFT - RIGHT DIMENSIONS


SPECIFICATIONS

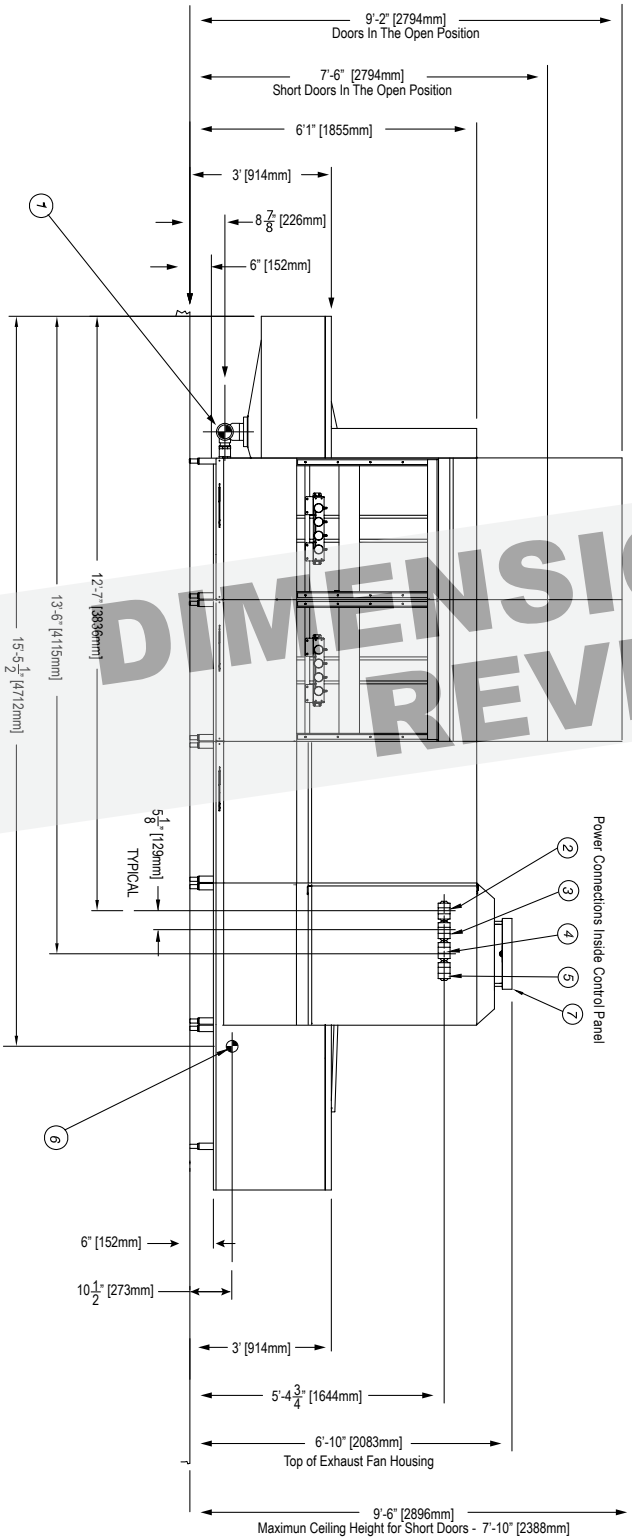


DIRECTION OF OPERATION →

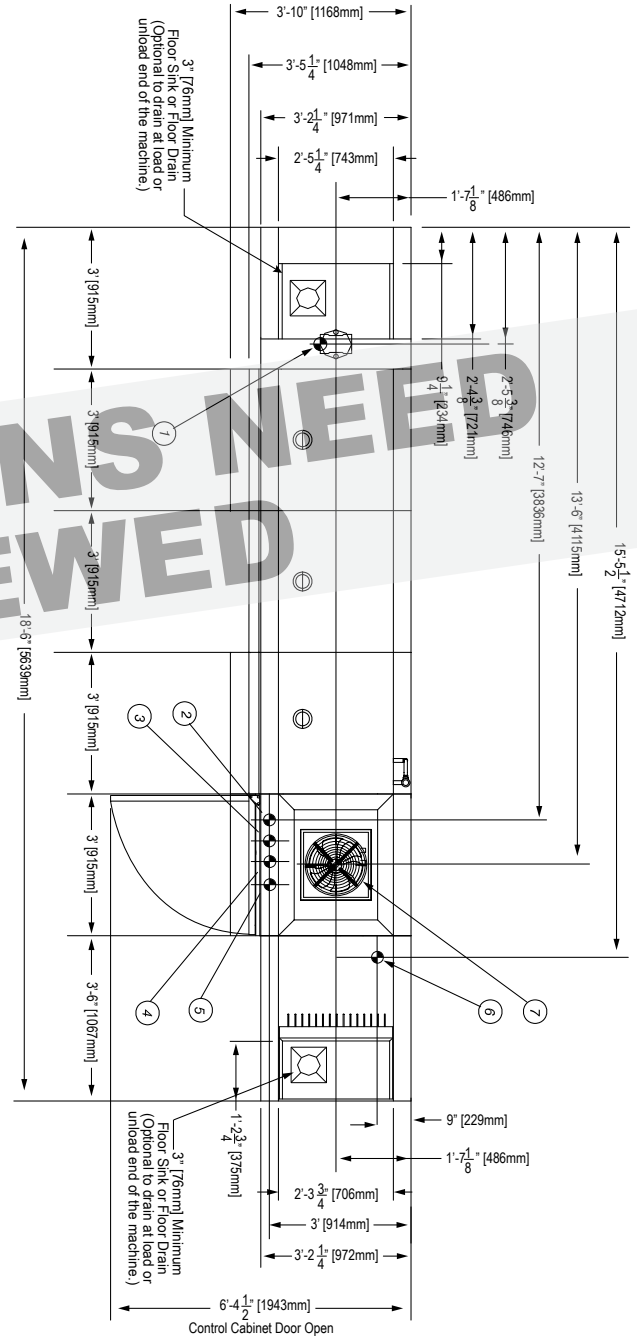

DIMENSIONS NEED REVIEWED

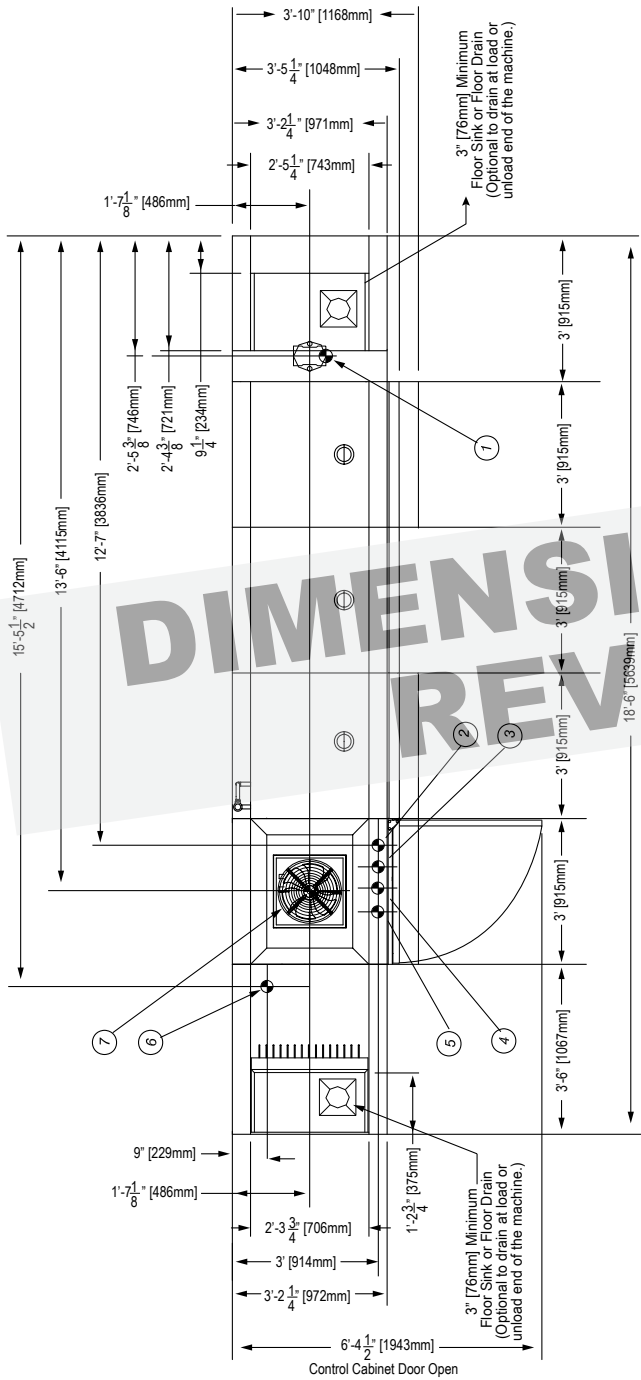

DIRECTION OF OPERATION

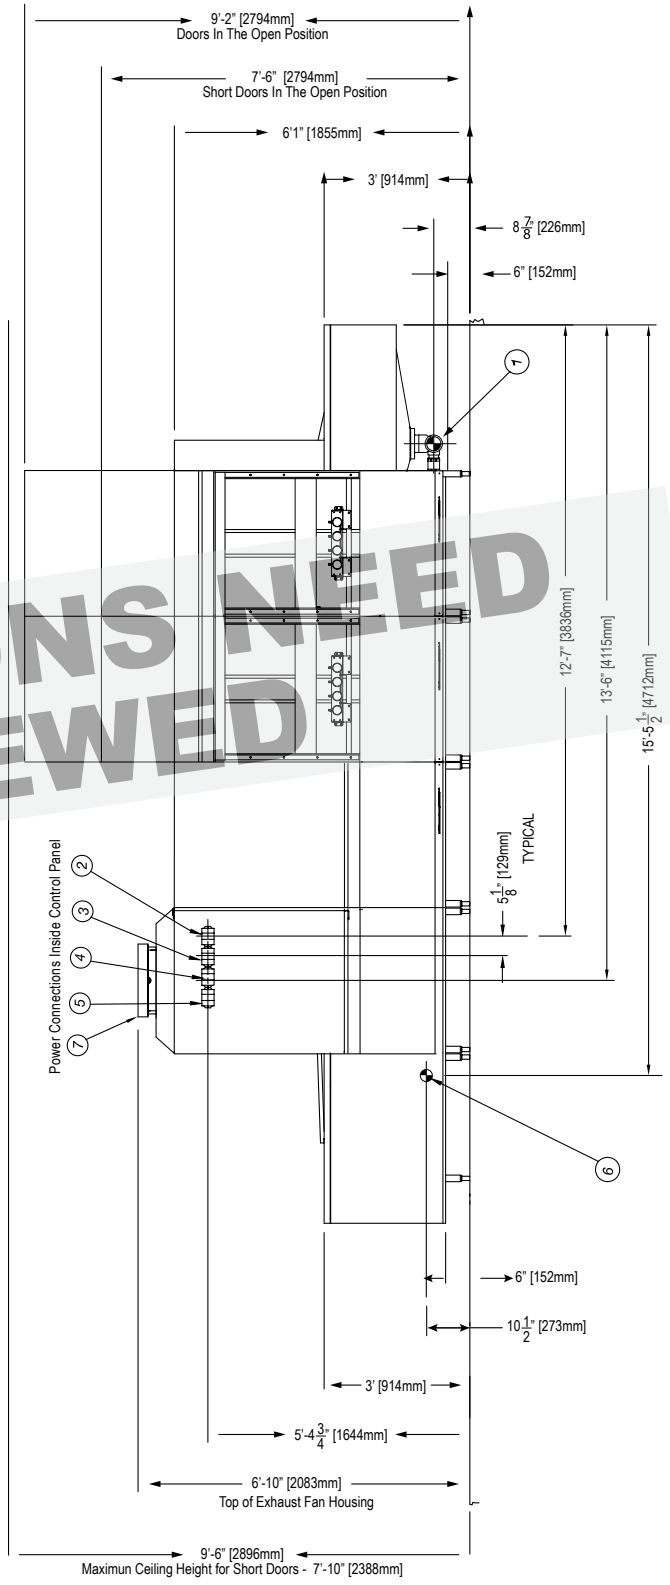

DIMENSIONS NEED REVIEWED



NOTE: All JFT models are accompanied by a certified Jackson technician for the initial installation. Many of the questions and problems that arise, as well as the proper procedures for installation, should be directed to this person.

VISUAL INSPECTION:

**DO NOT THROW AWAY
CONTAINER IF DAMAGE
IS EVIDENT**

Before installing the unit, check the container and machine for damage. A damaged container is an indicator that there may be some damage to the machine. If there is damage to both the container and machine, do not throw away the container. The dishmachine has been inspected and packed at the factory and is expected to arrive to you in new, undamaged condition. However, rough handling by carriers or others may result in there being damage to the unit while in transit. If such a situation occurs, do not return the unit to Jackson; instead, contact the carrier and ask them to send a representative to the site to inspect the damage to the unit and to complete an inspection report.


You must contact the carrier within 48 hours of receiving the machine.

**UNPACKING THE
MACHINE:**


Your JFT model dishmachine will come packaged in several containers as each individual section is packed separately. Once the machine sections have been removed from the container, ensure that there are no missing parts from the machine. This may not be obvious at first. If it is discovered that an item is missing, contact Jackson immediately.

**LEVEL THE
DISHMACHINE:**

The dishmachine is designed to operate while being level. This is important to prevent any damage to the machine during operation and to ensure the best results when washing ware. The unit comes with adjustable bullet feet, which can be turned using a pair of pliers or by hand if the unit can be raised safely. Ensure that the unit is level from side to side and from front to back before making any connections.

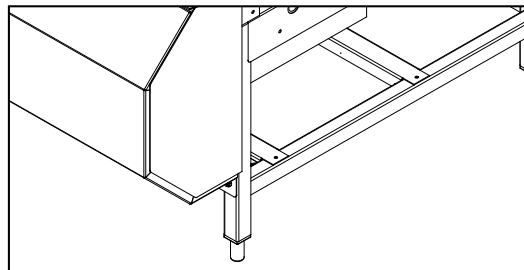

Bullet Foot

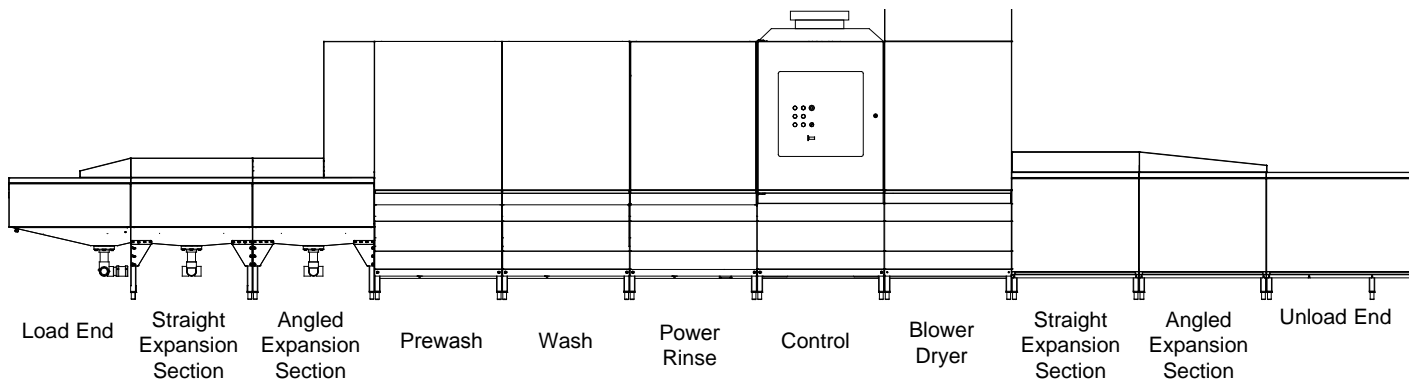

CONNECTION OF MACHINE COMPONENTS:

The dishmachine will arrive in separate pieces for ease of installation. Silicone will have to be used between each section for sealing purposes before each is bolted together. Apply the sealant onto each surface to be connected together. Observe that the openings and bolt holes are covered with the sealant. When connecting the sections, use pins or spikes to center components before clamping the machine together. Once clamped, the sealant will be squeezed from all cracks where applied. The sections are now ready to have the hardware inserted into place.



DO NOT TIGHTEN THE HARDWARE AT THIS POINT!

Check that all sheet joints, bends, and especially, guiding rails are properly aligned and if necessary, readjust at this point. After all connections are ready, tighten the hardware. Excess protruding sealant is to be removed with a plastic scraper. Once removed, smooth the sealant seam with the fingers and soapy water.


PLUMBING THE DISHMACHINE:

All plumbing connections must comply with all applicable local, state, and national plumbing codes. The plumber is responsible for ensuring that the incoming water line is thoroughly flushed prior to connecting it to any component of the dishmachine. It is necessary to remove all foreign debris from the water line that may potentially get trapped in the valves or cause an obstruction.

Any valves that are fouled as a result of foreign matter left in the water line, and any expenses resulting from this fouling, are not the responsibility of the manufacturer.

CONNECTING THE DRAIN LINE:

The drains for the models covered in this manual are gravity discharge drains. All piping from the 2" connection on the load section must be pitched (1/4" per foot) to the floor or sink drain. All piping from the machine to the drain must be a minimum 3" N.P.T. and shall not be reduced. There must also be an air gap between the machine drain line and the floor sink or drain. If a grease trap is required by code, it should have a flow capacity of 30 gallons per minute.

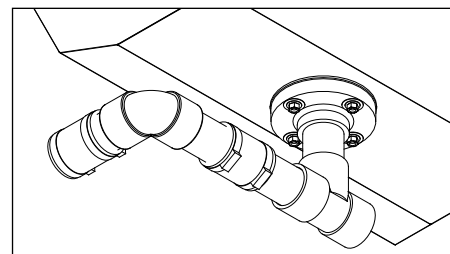



Load End Drain Connection

WATER SUPPLY CONNECTION:

Ensure that you have read the section entitled "PLUMBING THE DISHMACHINE" above before proceeding. Install the water supply line (3/4" pipe size minimum) to the dishmachine line strainer using copper pipe. It is recommended that a water shut-off valve be installed in the water line between the main supply and the machine to allow access for service. The water supply line is to be capable of 20A5 PSI "flow" pressure at the recommended temperature indicated on the data plate.

NOTE: Units equipped with electric final rinse boosters should have the power switch for the booster inspected to ensure it is in the ON position.


THE BOOSTER WILL NOT WORK UNLESS THIS IS ON.

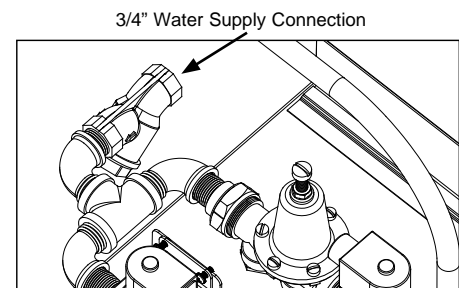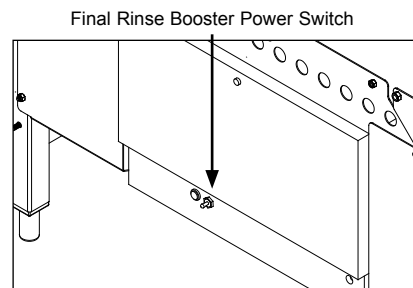

PRESSURE REGULATOR:

In areas where the water pressure fluctuates or is greater than the recommended pressure, it is suggested that a water pressure regulator be installed. The models covered in this manual do come with water pressure regulators as standard equipment. Please notify Jackson immediately if this component is not present on your machine.

If the water level is too low or too high, check the incoming water pressure. It should be 20 A 5 PSI. Too high of pressure results in too much water; too low of pressure results in too little water. To adjust the regulator, loosen the nut at the top, this will allow you to screw or unscrew the adjustment. With a screwdriver, turn the adjuster clockwise to increase pressure or counter clockwise to decrease it.

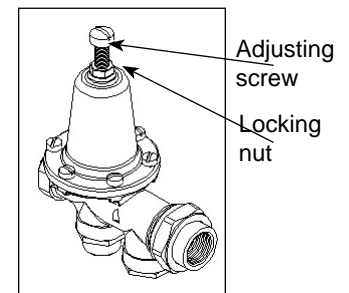

Water Pressure Regulator


Do not confuse static pressure with flow pressure. Static pressure is the line pressure in a "no flow" condition (all valves and services are closed). Flow pressure is the pressure in the fill line when the fill valve is opened during the cycle.

SHOCK ABSORBER:

It is also recommended that a shock absorber (not supplied) be installed in the incoming water line. This prevents line hammer (hydraulic shock), induced by the solenoid valve as it operates, from causing damage to the equipment.

STEAM LINE CONNECTIONS (JFT-S ONLY):


The JFT-S is designed to use low pressure steam as a source of heat for the water. The machines come with lines by which the source steam needs to be connected. The inlet steam is connected to the machine via a 1" FNPT Y-Strainer located underneath the Electrical Section. The 1" steam supply line is to be capable of 20A5 PSI. Connect all steam lines to the machine as all applicable codes provide. See machine data plate for information concerning steam flow pressure.

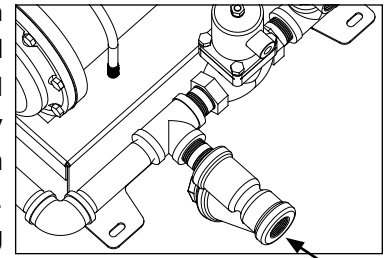

Steam Line Connection Y-strainer

STEAM TRAP CONNECTIONS:

There are steam traps provided on the discharge side of all steam heating devices. A typical unit will have traps on the following: wash section heating coil outlet, power rinse section heating coil outlet, rinse booster heater outlet, and an optional blower dryer section heating coil outlet. All steam traps can be seen by removing all of the above mentioned sections lower dress panels. The steam traps are 3/4" FNPT and should be plumbed together to provide condensate return to the building's boiler system.

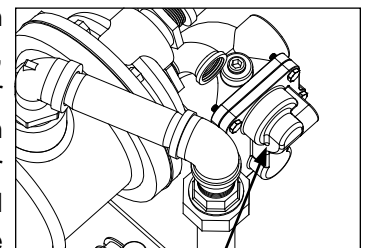

Steam Trap


PLUMBING CHECK:

Slowly turn on the water supply to the machine after the incoming fill line and the drain line have been installed. Check for any leaks and repair as required. All leaks must be repaired prior to placing the machine in operation.

ELECTRICAL POWER CONNECTION:

WARNING: Disconnect electrical power supply and place a tag at the disconnect switch to indicate that you are working on the circuit.

Electrical and grounding connections must comply with the applicable portions of the National Electrical Code ANSI/NFPA 70 (latest edition) and/or other electrical codes. Candian Electrical Code (CEC), Part 1, CSA. Refer to the data plate for machine operating requirements, machine voltage, total amperage load and serial number. To install the incoming power lines, open the control box. Install conduit into the pre-punched holes in the top of the control box. Route power wires and connect to power block and grounding lug. Tighten the connections. It is recommended that "DE-OX" or another similar anti-oxidation agent be used on all power connections.

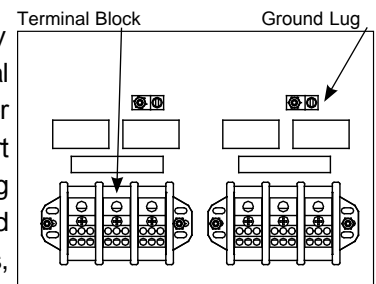

Control Box Electrical Connection

Please note that the individual sections require separate incoming power supplies and services. Refer to the machine data plate for information related to service circuit sizing. Ensure that services are labeled correctly. Ensure that service is sized correctly according to applicable local, state and national codes. Always refer to the machine data plate to get the total amperage load for each section.

VOLTAGE CHECK: Ensure that the power switch is in the OFF position and apply power to the dishmachine. Check the incoming power at the terminal block and ensure it corresponds to the voltage listed on the data plate. If not, contact a qualified service agency to examine the problem. Do not run the dishmachine if the voltage is too high or too low. Shut off the service breaker(s) and mark as being for the dishmachine. Advise all proper personnel of any problems and of the location of the service breaker. Close and lock the control box cover until authorized technicians can look at the problem and determine an appropriate solution.

The protective measures must be executed according to the conditions of the local power utilities. All electrical cable connections are to be provided with marked cables screwed in the electrical switch cabinet, according to the wiring diagram and to be connected to the respective terminals and contactors.


Please check the electrical tension.

- a. Check all motors for sense of direction.
- b. Retighten all terminal fixing screws before the setting in operation.


INSTALLATION OF THE MACHINE'S TRANSPORT BELT:

The transport belt is provided in sections of approximately 12 feet. One end of each section will have the belt rod inserted and the opposing end will have the belt fingers hanging down. To install the belt, stand at the load end section of the dishmachine. Remove the end cap


from one of the rods. Take the belt rod end of one 12 foot section and place on the top guide rails at the load end. Ensure that the fingers are pointing upward. Push the section into the machine until the loose finger end is approximately one foot from the entrance of the machine. The next 12 foot section of the transport belt can then be placed at the load end. Temporarily remove the belt rod and interlace the fingers of the two belt sections to conform with the arrangement of all belt fingers. Please refer to the diagram to see the order in which the provided washers, wheels, locknuts, and plate connectors are arranged for proper operation. Continue this process of pulling sections through and connecting sections until the belt is completely installed. Note: Take care that the belt wheels are guided correctly at the unload section and fall within the depressions on the drive wheels (Please refer to the page entitled "Unload End Assembly"). The wheels must be placed on top of the lower belt rails before continuing the process. When the lead end of the transport belt returns back to the load end of the machine, ensure that it will overlap the last section of the belt added. Remove as many rod sections of either end as to make the connection between both ends.

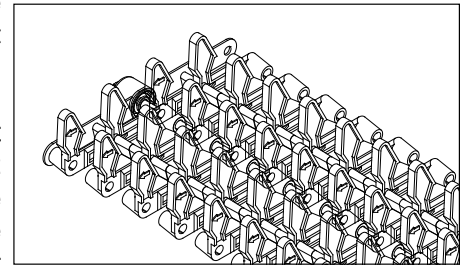

Transportation Belt

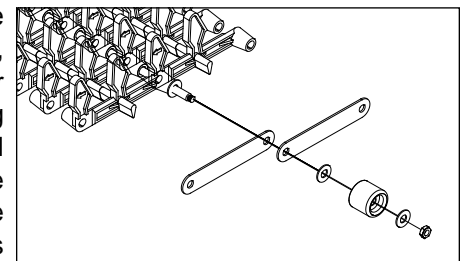

Transportation Belt Hardware

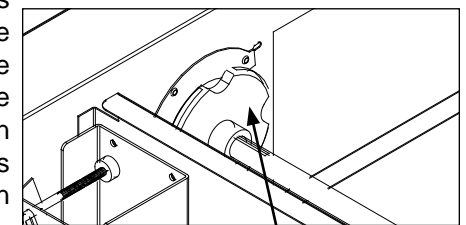

Unload End Assembly - Drive Wheel

Pay attention to the cross-struts of the machine. Be careful to not place fingers through the belt! Your hand could be injured.

The dishmachine has two transport speeds. The transport speed can be adjusted during operation from low to high or vice versa by adjusting the conveyor speed switch located on the electrical cabinet.

BELT TENSION: It must be possible to lift up the belt in the section of the free feeding or discharge zone by approximately 2" to 4". The tension station can be adjusted by loosening the three bolts on each of the two slotted adjusting plates. Pull each plate back until all wheels along the plates perimeter are firmly touching. Tighten the bolts. Visually inspect the belt for parallelism and ensure the plates are evenly tightened by measuring their distance from the runoff sheet or the end plate. Check tension by pulling the belt off of the top rails by hand. There should be no greater than a 4" separation. If there is, loosen the slotted adjusting plates, remove one rod section of the belt and repeat the tensioning process.

INSTALLATION OF DRIVE MOTOR CHAIN: Install chain around large gear. Lift gear motor from bottom to apply tension to drive springs. Install chain over small gear and release gear motor. Drive springs will automatically tighten chain to it's proper tension.


VENTILATION OF DISHMACHINE: The dishmachine should be located with provisions for venting into an adequate exhaust hood or ventilation system. This is essential to permit efficient removal of the condensation exhaust. Ensure that the exhaust system is acceptable in accordance with all applicable codes and standards.

NOTE: *Damage caused by steam or moisture due to improper ventilation is NOT covered under the warranty.*

The units covered in this manual have the following exhaust requirements:

FPM (INDIRECT) 1200

The exhaust system must be sized to handle this volume for the dishmachine to operate as it was designed to.

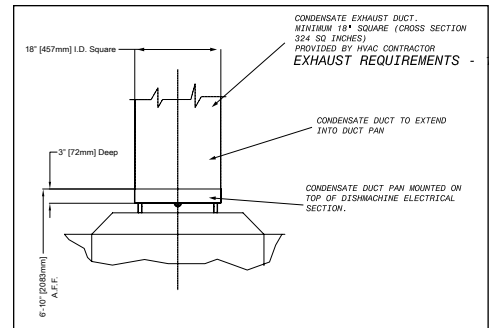

ELECTRIC HEAT: The thermostats are factory set. **They should not be adjusted except by an authorized service agent.**

CONNECTION FOR THE DETERGENT SUPPLIER: The detergent connection point is at the rear of the wash section on the machine. Chemical feeder equipment must not be mounted inside the main control box. Contact your local chemical distributor for more information regarding chemical feeders.



Detergent Connection

**DELIMING
OPERATIONS**

In order to maintain the dishmachine at its optimum performance level, it will be required to remove lime and corrosion deposits on a frequent basis. A deliming solution should be available from your detergent supplier. Read and follow all instructions on the label of the deliming solution.

To proceed with the deliming operation, fill the dishmachine and add the correct amount of deliming solution as recommended by the deliming solution manufacturer. The water capacity of the various tanks of the dishmachine can be verified on the specification pages of this manual.

Perform the following operations to delime the dishmachine:

1. Turn the machine on.
2. Disconnect or turn off all chemical feeder pumps.
3. Close all doors (after adding the deliming solution).
4. Run the machine for the recommended period of time.
5. Turn the unit off and open the doors.
6. Wait five minutes, then inspect the inside of the machine. If the machine is not delimed, run another time cycle as per the deliming solution's instructions.
7. When clean, drain and re-fill the machine.
8. Run in MANUAL for 10 minutes to remove residual deliming solution.
9. Drain and re-fill the machine.

**DELIMING
THE ELECTRIC
BOOSTER HEATER:**

In order to maintain the electric booster heater at its optimum performance level, it will be required to remove lime and corrosion deposits on a frequent basis. To delime, please refer to the instruction manual that came with your particular electric booster heater. A deliming solution should be available from your detergent supplier. Read and follow all instructions on the label of the deliming solution.

DETERGENT CONTROL: Detergent usage and water hardness are two factors that contribute greatly to how efficiently your dishmachine will operate. Using detergent in the proper amount can become, in time, a source of substantial savings. A qualified water treatment specialist can tell you what is needed for maximum efficiency from your detergent, but you should still know some basics so you'll understand what they are talking about.

First, you must understand that hard water greatly effects the performance of the dishmachine. Water hardness is the amount of dissolved calcium and magnesium in the water supply. The more dissolved solids in the water, the greater the water hardness. Hard water works against detergent, thereby causing the amount of detergent required for washing to increase. As you use more detergent, your costs for operating the dishmachine will increase and the results will decrease. The solids in hard water also may build-up as a scale on wash and rinse heaters, decreasing their ability to heat water. Water temperature is important in removing soil and sanitizing dishes. If the water cannot get hot enough, your results may not be satisfactory. This is why Jackson recommends that if you have installed the machine in an area with hard water, that you also install some type of water treatment equipment to help remove the dissolved solids from the water before it gets to the dishmachine.

Second, hard water may have you adding drying agents to your operating cycle to prevent spotting, when the real problem is deposited solids on your ware. As the water evaporates off of the ware, the solids will be left behind to form the spotting and no amount of drying agent will prevent this. Again, using treated water will undoubtedly reduce the occurrences of this problem.

Third, treated water may not be suitable for use in other areas of your operation. For instance, coffee made with soft water may have an acid or bitter flavor. It may only be feasible to install a small treatment unit for the water going into the dishmachine itself. Discuss this option with your qualified water treatment specialist.

Even after the water hardness problems have been solved, there still must be proper training of dishmachine operators in how much detergent is to be used per cycle. Talk with your water treatment specialist and detergent vendor and come up with a complete training program for operators. Using too much detergent has as detrimental effects as using too little. The proper amount of detergent must be used for job. It is important to remember that certain menu items may require extra detergent by their nature and personnel need to be made aware of this. Experience in using the dishmachine under a variety of conditions, along with good training in the operation of the machine, can go a long way in ensuring your dishmachine operates as efficiently as possible.

Certain dishmachine models require that chemicals be provided for proper operation and sanitization. Some models even require the installation of third-party chemical feeders to introduce those chemicals to the machine. Jackson does not recommend or endorse any brand name of chemicals or chemical dispensing equipment. Contact your local chemical distributor for questions concerning these subjects.

Some dishmachines come equipped with integral solid detergent dispensers. These dispensers are designed to accommodate detergents in a certain sized container. If you have such a unit, remember to explain this to your chemical distributor upon first contacting them.

As explained before, water temperature is an important factor in ensuring that your dishmachine functions properly. The data plate located on each unit details what the minimum temperatures must be for either the incoming water supply, the wash tank and the rinse tank, depending on what model of dishmachine you have installed. These temperatures may also be followed by temperatures that Jackson recommends to ensure the highest performance from your dishmachine. However, if the minimum requirements are not met, the chances are your dishes will not be clean or sanitized. Remember, a dish can look clean, but it may not be sanitized. Instruct your dishmachine operators to observe the required temperatures and to report when they fall below the minimum allowed. A loss of temperature can indicate a much larger problem such as a failed heater or it could also indicate that the hot water heater for your operation is not up to capacity and a larger one may need to be installed.

There are several factors to consider when installing your dishmachine to ensure that you get



Before the first start up of the machine, check that all tools, cleaning rags, and all foreign parts are removed from the operation areas of the machine.

PREPARATION: Before proceeding with the start-up of the unit, verify the following:

1. Ensure wash arms, rinse arms, pump suction strainers, pan strainers, and curtains are all installed correctly.
2. Close all doors on dishmachine.
3. Close the drain valve(s).
4. Open the main stop valves for water.
5. Pull out all Emergency Stop Switches. Switch on the main switch at the control panel.

POWER UP: To energize the unit, turn on the power at the service breakers. The voltage should have been previously verified as being correct. If not, the voltage will have to be verified.

For electrical booster operation, ensure that the electric booster heater's power switch is in the "ON" position. Can be seen when electrical sections lower dress panel is removed. Check that the power light is illuminated.

For steam booster heater operation, ensure switch below front control door is in the "ON" position. The light beside of the switch should be illuminated to indicate on and the light beside of the steam gauge will turn on and off depending as to whether steam is cycling to the booster.

WARE PREPARATION: Proper preparation of ware will help ensure good results and less re-washes. If not done properly, ware may not come out clean and the efficiency of the dishmachine will be reduced. It is important to remember that a dishmachine is not a garbage disposal and that simply throwing unscrapped dishes into the machine simply defeats the purpose altogether of washing the ware. Scraps should be removed from ware prior to being loaded into a rack. Pre-rinsing and pre-soaking are good ideas, especially for silverware and casserole dishes. Place cups and glasses upside down in the track so that they do not hold water during the cycle. The dishmachine is meant not only to clean, but to sanitize as well, to destroy all of the bacteria that could be harmful to human beings. In order to do this, ware must be properly prepared prior to being placed in the machine.

FILLING THE WASH TUB:

Close all doors. Press the white “On Fill/Heat” button. As soon as the green indication lamp “Tank Filled” lights up, the filling and heating cycle is completed and the machine is ready for operation. The operation cycle can begin. Press the green “Start” button at the switch cabinet door or press the green “Start” button at the feeding or discharge ends. Now the transport belt can be loaded with dishes in the feeding section.

Two transport speeds can be selected. During operation, the transport speed can be changed from low to high or vice versa. Transport speed “low” moves slower through the machine which is more suitable for heavily soiled dishware. Transport speed “high” moves quicker though the machine and is more suitable for lightly soiled dishware. The transport speed must be selected according to the soiling of the dishware, the belt load and the washing results.



BREAK SWITCHING:

By means of the red “Stop” button (located on the electrical control box, and at each end of the machine), the operation cycle is temporarily interrupted, (i.e. the wash pumps and transport are switched off), however the tank heatings continue running. Press the black push button “Off Fill/Heat” at the switch cabinet door. The green indication lamp “Tank Filled” continuous lighting, as the machine is still ready for operation. The operation cycle is only temporarily interrupted and remains ready for operation. The machine is in stand-by operation and can start operation at any time. After an interruption of operation, you can continue the wash cycle by pressing the white “On Fill/Heat” button. Press the white push button “On Fill/Heat” at the switch cabinet door or the feeding or discharge end to continue washing.


DAILY MACHINE PREPARATION:

Refer to the section entitled “PREPARATION” at the top of this page and follow the instructions there. Afterwards, check that all of the chemical levels are correct and/or that there is plenty of detergent available for the expected workload.

WASHING WARE:

It is important to let operating personnel know that ware that comes out of the JFT dishmachines will be hot and appropriate measures should be taken to ensure that personnel are not harmed.

To wash, simply place ware on the track at the load end of the machine. Glasses should be placed upside down and plates should have the eating side facing the unload end. Silverware and utensils should be placed in appropriate baskets/racks for transport through the unit.

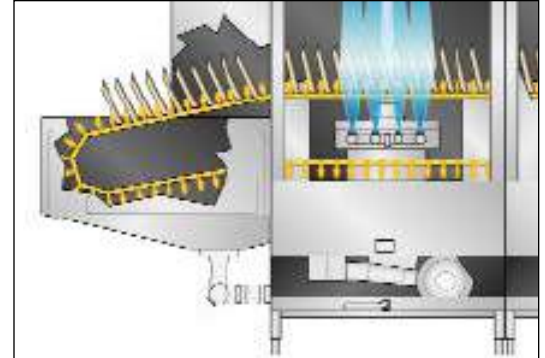

Cut-a-way detail showing direction of plates.

OPERATIONAL INSPECTION:

Do not spray the machine, electrical cabinets, or other electrical parts with a water hose or high pressure hose.

Based upon usage, the strainers may become clogged with soil and debris as the workday progresses. Operators should regularly inspect the strainers to ensure they have not become clogged. If the strainers do, they will reduce the washing capability of the machine. Instruct operators to clean out the strainers at regular intervals or as required by work load.

Just after the draining of the dishmachine, the tank heater elements will still be HOT! Therefore causing danger of burns during the manual cleaning of the dishmachine.

SHUTDOWN AND CLEANING:

At the end of the workday, push the black "Off Fill/Heat" button. Open the door(s). Open the drain valves and allow the machine to drain completely. Remove all pan strainers, run off sheets and scrap basket strainer. Remove the wash, prewash arms and the rinse arms and verify that the nozzles and arms are free from obstructions. Flush the arms with fresh water. Remove the pump suction strainers and clean out as required. Remove the rinse tray assembly and clean. Remove the curtains and scrub with a mild detergent and warm water. When replacing the curtains, please note proper locations for re-installation. Wipe out the inside of the unit and then reassemble with the components previously removed.



Preventative maintenance should only be performed by authorized service personnel. If you have questions about who is authorized then please contact Jackson Technical Service. Maintenance performed by unauthorized personnel can void a warranty.

Note: No maintenance should be performed during normal operation of the machine. Maintenance personnel responsible for performing any sort of preventative maintenance need to schedule their checks when the machine is not in use. Unauthorized personnel should not be operating or attempting to operate the machine during any maintenance function!

**PRE-SCRAPPING/
STRAINERS:**

The concept of preventative maintenance is to perform small checks and procedures that will limit the catastrophic failures your dishmachine will experience. By catastrophic failure, it is meant anything that will keep you from using your machine for an extended period of time. Dishmachines, regardless of size, are very simple machines and do not require very much in the way of preventative maintenance. Listed here are some items that the manufacturer recommends in order to prolong the life of your machine.

PRE-SCRAPPING:

It cannot be stressed enough that in order for the machine to work at peak efficiency, the introduction of food and soil must be limited. Though the JFT is a large machine, it is not a garbage disposal, and it contains several parts that have very small openings. These openings can become clogged very quickly if large food particles are introduced to the machine. Train operating personnel in proper scrapping techniques. This includes scrapping excess food from plates and bowls, and removing straws from glasses.

Some ware may require soaking before being placed in the machine, especially silverware. Soaking helps loosen stuck-on food particles and aids the dishmachine in removing such soil. You can discuss soak sink options with your Jackson authorized dealer if you wish.

STRAINERS:

Dishmachines should be cleaned at least daily and one of the most important aspects of this task is the removal, cleaning and REPLACEMENT of the various strainers located throughout the machine. Strainers are added to try and prevent any debris from getting inside the pumps or in the arms of the dishmachine. Both the pumps and the arms have very close tolerances manufactured into their design in order to deliver optimum performance.

There are generally three problems associated with strainers:

1. Not removed for cleaning. Many operators are simply unaware that the strainers can be and should be removed for cleaning. How often this should be done is really based upon the usage of the machine and is generally something that can be determined with experience. It is important, however, to not only tell the operators about the strainers, but to show them where they are at and remind them that they should be cleaned regularly.

2. Damaged strainers. Often times the first impulse for cleaning strainers is to take them and beat them on the side of a garbage can. Unfortunately, the strainers for the JFT are made from stainless steel and delivering such blows to them will eventually warp them. A warped strainer does not sit flush and creates gaps that debris and soil can get through. The proper method of cleaning a strainer is to wipe it out and then rinse it under a water faucet to get any debris out. Remember that it is much easier and inexpensive to clean out a strainer than it is to replace a pump!

STRAINERS: (CONT)

3. Missing strainers. It is easy to forget to put the strainers back after you have removed them, so it is important to train operating personnel on the importance of putting everything back when you are finished. If the strainer was not important, it would never have been incorporated into the machine design. Strainers are implemented to prevent failure of the more expensive components of the dishmachine (i.e. pumps) and should always be replaced before operating the machine. Jackson strongly recommends that you do not operate the machine without the strainers as doing so may not only allow damage to occur to your machine, but it could also void your warranty. Train personnel to report whenever a strainer is missing or damaged so that replacements can be ordered immediately.

DAILY MAINTENANCE:

The following is a suggested schedule for a basic preventative maintenance program:

1. Drain and clean the dishmachine as per the cleaning instructions supplied with this manual. During cleaning, any items that may appear to be broken or failed should be reported to authorized service personnel.

WEEKLY MAINTENANCE:

1. Delime the machine. NOTE: The deliming agent that you may use may require more or less frequency in application. Because water conditions vary from installation to installation, it may be necessary to delime the machine more often or perhaps even less. Follow the deliming agent manufacturers instructions regarding frequency of application and adjust the maintenance schedule as required.

2. Verify there are no leaks. This includes inspecting the integrity of all gaskets, including the ones inside the machine, as well as ensuring that none of the silicone used between the individual sections has frayed or been removed. Any torn gaskets should be immediately replaced. Re-apply silicone as required. The machine should be completely turned off and drained for this procedure so that gaskets in the lower parts of the tub(s) can be examined.

3. Verify the operation of the Emergency Stop Switches. Simply start the unit with all personnel standing clear and push in Emergency Stop Switch to verify that they stop the machine. Do this for each switch. NOTE: The Emergency Stop Switch stops the conveyor belt and the pumps, but the heaters will remain on. If the Emergency Stop Switch fails to halt the machine, then the wiring to the switch should be verified. If, according to the schematic, the switch is wired correctly, then it is most likely faulty and should be replaced. Immediately inform operating personnel of the defect and instruct them as to where the other Emergency Stop Switch is at as well as the main stop switch on the front control panel.

4. Verify the operation of the door safety switches. Start the unit with all personnel standing clear and open each door one at a time to verify that the unit will shut off. Do this for all prewash, wash and power rinse doors. You should not have to lift the door more than 6 inches to achieve the desired result. Be very careful as hot water may spray out from the bottom of the door. NOTE: The door interlock switches stop the conveyor belt and the pumps, but the heaters remain on.

**WEEKLY
MAINTENANCE:
(CONT)**

5. Verify that the prewash, wash and power rinse doors open all of the way.
6. Verify the conveyor belt tension as per the instructions given in the installation section of this manual.
7. Verify the operation of the temperature display. Operate the unit normally and ensure that the display cycles as it is supposed to, through each required parameter. If it does not cycle or it appears that it is not reading the temperature, it must be replaced.
8. Verify the operation of all green start switches and red stop switches. With the unit energized, depress the start switch as the control box and allow the unit to start. After approximately sixty seconds, press the stop switch. The unit should stop. Verify that the lights in the switches are working as well. Any problems should be investigated immediately to see of components need to be replaced. Perform this check on the switches located at the load and unload ends as well.
9. Verify drive motor stop switch, and slide stop switches.

**MONTHLY
MAINTENANCE:**

1. Inspect the gear drive gears for missing or damaged teeth. If there has been any sort of damage, the gear should be replaced immediately.
2. Inspect seals used in final rinse arms to ensure they are in good condition. Any that have nicks, tears or are missing should be replaced.
3. Inspect the conveyor drive belt for damaged or missing pegs. Any that are suspect should be replaced. Loss of pegs decreases the number of dishes per hour that the machine will wash. Check end caps to rods and ensure that none are missing.
4. Visual inspection of electrical boxes. With power to the unit shut off at the service breaker, open the main control box and the control boxes for each section and make a visual inspection of the components. Verify that there are no loose wires, there is no carbon scoring and that all components are secure. Replace the covers and re-energize the unit if no problems are found. Correct any deficiencies before returning the unit to an operating status.
5. Verify that the conveyor operates in both high and low speed. Start the machine as normal, ensuring that all personnel are clear. Put the machine in low speed using the Speed Selector Switch located on the front panel. Allow the unit to operate normally for five minutes ensuring that the speed appears to remain constant. Without turning off the unit, place the switch in the high speed position and allow to run for another five minutes, checking for a constant speed. Once completed, place the selector switch in the desired position and turn the unit off.
6. Inspect the vacuum breaker to ensure that the valve disc is not damaged, limed up or misaligned. With power and water secured to the dishmachine, verify that the small disc inside the vacuum breaker moves freely and seats well.
7. Inspect and clean the steam supply y-strainer on steam models.

QUARTERLY MAINTENANCE:

1. Check the amperage draw for each connection point; this should be done only by qualified electricians since this involves working with energized components. Compare the amperage draw for each section to what is listed on the data plate and/or to maintenance records. Any significant change in amperage draw could be indicative of a major component (motor or heater) failing and should be investigated further to determine the exact cause of the change.

2. Verify that the machine is maintaining proper temperatures as indicated on the machine data plate. Start the machine and allow it to run in low speed with the exhaust fan and blower turned on. Do not load any ware onto the machine. Let run for approximately fifteen minutes before starting to observe temperatures. Compare the temperatures to what is listed on the machine data plate. If there is a discrepancy, investigate and correct.

3. Verify that the dishmachine is still level. A level machine is required for peak efficiency as water levels can be affected due to any sort of inclination. This should be done with the machine off, cooled down and drained.

4. Delime the electric booster heater. In order to maintain the electric booster heater at its optimum performance level, it will be required to remove lime and corrosion deposits on a frequent basis. To delime, please refer to the instruction manual that came with your particular electric booster heater. A deliming solution should be available from your detergent supplier. Read and follow all instructions on the label of the deliming solution.

ANNUAL MAINTENANCE:

1. Jackson recommends that at least once a year that a general, overall inspection of the dishmachine take place. With the unit drained and power secured at the service breaker, service personnel should look for any items that should be addressed that may not be specifically pointed out in the preventative maintenance procedures. Examples of things to look for include:

- a. Loose screws
- b. Frayed wires
- c. Broken lights or switches.
- d. Torn curtains

Experience will dictate to service personnel specific items that should be examined and Jackson encourages scheduling inspections as often as needed to ensure certain problems do not become catastrophic.

1. Thermostats - the thermostats for your JFT machine are factory set so that your machine will operate in accordance with accepted regulatory parameters. Upon initial installation, your Jackson representative may adjust the the thermostats if required but otherwise they should never need to be corrected again. If you find yourself in a situation where you have to adjust the thermostat to maintain the same temperatures, then you most likely have a problem somewhere else. Scale build-up in the tub and on

ITEMS THAT SHOULD NOT REQUIRE MAINTENANCE:

the heaters can affect the operation of the machine as can a variety of other factors. Thermostats, once they fail, cannot be repaired and should be replaced.

2. Gear drive - the drive motor is connected to a gear drive that is oil filled. Jackson does not recommend draining the gear drive for any reason. If the gear drive fails, then it should be replaced, not repaired. If for any reason the oil is drained from the gear drive the component should be replaced.

ITEMS OF NOTE:

1. The final rinse heater is a third-party self-contained unit and should come with its own instruction manual. Refer to that manual for any information regarding troubleshooting or maintenance.

2. The Motor Fault Light on the main control panel is a catch-all warning for all motors associated with this machine. If the Motor Fault Light illuminates, the machine must be shut down completely and service personnel contacted. A motor fault can be for any number of reasons and could apply to any one or more of the motors on the machine. Do not operate the dishmachine if the Motor Fault Light is illuminated.



WARNING: Inspection, testing and repair of electrical equipment should be performed only by qualified service personnel. Certain procedures in this section require electrical tests or measurements while power is applied to the machine. **Exercise extreme caution at all times.** If test points are not easily accessible, disconnect power, attach test equipment and reapply power to test. When replacing electrical parts, disconnect power at source circuit breaker.

| PROBLEM | POSSIBLE CAUSE | REMEDY |
|---|--|---|
| Nothing on dishmachine operates. The power switch is ON and the power indicator light is OFF. | <ol style="list-style-type: none"> 1. Machine is not wired correctly to incoming power source. 2. Machine circuit breaker(s) is/are tripped. Reset the circuit breaker(s). If it trips again, contact an electrician to verify the machine amp draw. 3. Service breaker(s) are tripped. Reset the service breaker(s). If it trips again, contact an electrician to verify the machine amp draw. | <ol style="list-style-type: none"> 1. Have an electrician verify wiring. 2. If it trips again, contact an electrician to verify the machine amp draw. 3. Reset the service breaker(s). If it trips again, contact an electrician to verify the machine amp draw. |
| Machine will not fill. The power switch is ON and the power indicator light is ON. | <ol style="list-style-type: none"> 1. No water supply to machine. 2. Incoming water solenoid valve damaged/faulty. 3. Water level indicators are giving a false reading. See if the green "Tank Filled" light is on. Verify the wiring of the water level indicators and if correct, replace component. | <ol style="list-style-type: none"> 1. Verify that water lines have been connected to the machine. 2. Verify that the valve is operating. If not, replace. 3. See if the green "Tank Filled" light is on. Verify the wiring of the water level indicators and if correct, replace component. |
| Low wash tank/power rinse tank temperature. | <ol style="list-style-type: none"> 1. Low wash tank/power rinse tank temperature. 2. Low incoming water temperature. 3. Heater not energizing. Verify that the wash tank heater is operating. If not, replace. 4. Low incoming voltage. 5. Heater has scale and lime build-up. 6. Check installation of flow restrictor at discharge of final rinse pump. 7. Float has failed, in the prewash tank, wash tank, and/or power rinse tank causing the unit to fill continuously. | <ol style="list-style-type: none"> 1. Verify electric booster heater is energized. 2. Verify that the incoming water temperature matches what is indicated on the machine data plate. 3. Verify that the wash tank heater is operating. If not, replace. 4. Have an electrician verify that the power coming to the machine is the same as indicated on the data plate. 5. Try deliming the machine. If this does not correct the problem, the heater(s) should be replaced. |
| Inadequate rinse. | <ol style="list-style-type: none"> 1. Low incoming water pressure. 2. Incoming water solenoid is clogged. 3. Check final rinse pump operation. 4. Incoming water y-strainer is clogged. 5. Clogged rinse arm nozzles. Verify that nozzles are not clogged with debris. If so, remove debris. | <ol style="list-style-type: none"> 1. Verify that incoming water pressure to rinse tank during fill is 20 ± 5 PSI. 2. Verify that debris is not entrapped in valve. If so, remove debris. 3. Replace pressure transducer. 4. Remove Debris from y-strainer. 5. Verify that nozzles are not clogged with debris. If so, remove debris. |

| PROBLEM | POSSIBLE CAUSE | REMEDY |
|--|---|---|
| <p>Problem: Ware is coming out dirty.</p> | <ol style="list-style-type: none"> 1. Improper pre-scapping procedures. 2. Verify that the chemical concentrations are correct. 3. Wash pumps are clogged with debris. 4. Water level is too low and pumps are cavitating (drawing in air). Verify that water levels are correct by observing whether or not the "Tank Filled" light is illuminated. If so and problem continues, visually verify that the water level is correct. 5. Strainers are clogged with debris. 6. Prewash, wash or power rinse nozzles are clogged. | <ol style="list-style-type: none"> 1. Verify that proper pre-scapping procedures are being followed. Allowing excessive food waste to enter the machine diminishes the cleaning capabilities. 2. Refer to the page entitled "Detergent Control" in this manual. If there appears to be a problem with the chemicals, contact your chemical representative. 3. Remove debris if pump is not permanently damaged. 4. Verify that water levels are correct by observing whether or not the "Tank Filled" light is illuminated. If so and problem continues, visually verify that the water level is correct. 5. Strainer should be removed and cleaned. |
| <p>An excessive amount of vapor is exiting the machine through the load and/or unload ends.</p> | <ol style="list-style-type: none"> 1. Exhaust fan is turned off as well as the room ventilation. 2. Verify the correct placement of the curtains within the machine. 3. Water temperatures may be too hot. Verify water temperatures and ensure they comply to what is marked on the machine data plate. | <ol style="list-style-type: none"> 1. Ensure that the exhaust fan is turned on as well as the room ventilation. 2. Correct as necessary. 3. Verify water temperatures and ensure they comply to what is marked on the machine data plate 4. Check correct damper positioning in the electrical section. |
| <p>Machine continues to fill and does not stop. Green "Tank Filled" light does not come on.</p> | <ol style="list-style-type: none"> 1. No water coming to the machine. 2. Drain valves are open. Verify the position of the valves and shut if necessary. 3. Water level controls are faulty. 4. Leak in the tub. 5. Drain valve indicates closed but in reality is not. 6. Level control sensors may need the sensitivity adjusted. | <ol style="list-style-type: none"> 1. Verify that the power is on and that the water supply is also turned on. 2. Verify the position of the valves and shut if necessary. 3. Verify the wiring of the water level controls to the schematic and if correct, replace. 4. Inspect under the machine to verify that there are no holes or cracks. 5. Replace or repair the drain valve. 6. Level control sensors may need the sensitivity adjusted. |

| PROBLEM | POSSIBLE CAUSE | REMEDY |
|---|---|--|
| <p>Water level will not remain constant (tanks appear to be losing water).</p> | <ol style="list-style-type: none"> 1. Drain valve is open and draining the tub. 2. Low water pressure. 3. Machine is not level. 4. Faulty water level control or control probe. 5. Check placement of splash shield runoffs.. Adjust if necessary. 6. Check curtain placement. Adjust if necessary. | <ol style="list-style-type: none"> 1. Verify that all drain valves are shut. 2. Verify that incoming water is flowing to the machine and at the pressure indicated on the data plate. 3. Verify that the dishmachine is level. 4. Replace as required. 5. Adjust if necessary. 6. Adjust if necessary. |
| <p>Water level will not remain constant (tanks appear to be losing water).</p> | <ol style="list-style-type: none"> 1. Drain valve is open and draining the tub 2. Low water pressure. 3. Machine is not level. 4. Faulty water level control or control probe. 5. Check placement of splash shield runoffs. Adjust if necessary. 6. Check curtain placement. Adjust if necessary. | <ol style="list-style-type: none"> 1. Verify that all drain valves are shut. 2. Verify that incoming water is flowing to the machine and at the pressure indicated on the data plate. 3. Verify that the dishmachine is level. 4. Replace as required. 5. Adjust if necessary. 6. Adjust if necessary. |
| <p>Machine is running and suddenly stops. Motor fault light may be on.</p> | <ol style="list-style-type: none"> 1. Power may have been lost to the dishmachine. 2. Turn off the machine and open the doors. It is possible that the conveyor track became bound up or jammed during operation. Ensure there are no obvious jams or obstructions preventing the conveyor belt from moving. 3. Conveyor drive chain is broken or has come off. 4. Conveyor drive motor could be faulted. 5. Failure of drive motor switch or slide stop switch. 5. Failure of drive motor switch or slide stop switch. | <ol style="list-style-type: none"> 1. If the control box lights are on, it is safe to assume that there is power. 2. It may be necessary to remove all ware from the conveyor rack before proceeding. Try pulling up on the conveyor belt at various locations in the event it became misaligned. be careful, this may cause the conveyor belt to snap back into place instantly! Another sign of a jammed belt will be the conveyor drive motor will be pulled against the unit and it's spring bracket will be compressed. 3. Secure the machine and remove the cover to expose the drive motor, gearing and chain. If the chain is broken, it may be possible to put it back together, otherwise a new one should be ordered. 4. Chain may need to be replaced. 5. Failure of drive motor switch or slide stop switch. 6. Slide stop at end of machine pushed in by dishes on racks (normal). |

These dishmachines are equipped with vacuum breakers to serve as back-flow prevention devices. ASSE requirements specify what type of back-flow prevention is necessary on dishmachines. Vacuum breakers, unlike air gaps, have certain parts that have specific tolerances and design aspects that must be met in order to function properly.

Ecolab offers repair kits for replacing some of the wear items associated with vacuum breakers which will allow you to save money in that replacement of these parts can take place *without* removing the vacuum breaker from the plumbing assembly.

The instructions provided here are for maintenance personnel only. Unauthorized persons should not attempt any of the steps contained in these instructions.



Warning: many of the instructions and steps within this document require the use of tools. Only authorized personnel should ever perform any maintenance procedure on the dishmachine!

- PREPARATION:**
1. Power must be secured to the unit at the service breaker. Tag or lock out the service breaker to prevent accidental or unauthorized energizing of the machine.
 2. Ensure that incoming water to the machine is secured either by use of a shut-off valve or disconnecting the incoming water line.

-
- TOOLS REQUIRED:** The following tools will be needed to perform this maintenance evolution:
1. Small flathead screwdriver
 2. Needle nose pliers

-
- TIME REQUIRED:** It is estimated that it will take (1) person twenty minutes to perform this task, not including all of the items indicated in the section entitled "PREPARATION".

-
- STEPS:**
1. Note: These instructions only apply to vacuum breakers (1/2" NPT and 3/4" NPT) as pictured below. The repair kits indicated in these instructions will only work on those style of back-flow preventers. If you have a machine with a different style of vacuum breaker, contact your Ecolab representative about replacement components.
 2. Note: Even though the photos in these instructions show a vacuum breaker that has been removed from the plumbing assembly, these maintenance steps could be performed with it installed so long as the requirements in the section entitled "PREPARATION" have been met.

Read these instructions thoroughly before attempting this maintenance evolution. Become familiar with the parts and what actions need to be taken. This will save time in the long run!



Vacuum breaker

STEPS: 3. Remove the top cap by gripping firmly and turning to the left. The cap should come off after a few turns.
(CONTINUED)

4. Set the cap to the side.

5. Using the needle nose pliers, gently lift out the plunger and set to the side. Examine the brass seating surface inside the vacuum breaker. The plunger is required to sit flat on this surface so it must be free of defects, imperfections and the like. If there is debris, remove it. If it is chipped or cracked then the vacuum breaker must be replaced. Failure to do so may result in the vacuum breaker not working according to its design and could result in damage to the dishmachine.

6. Your repair kit comes with a new plunger. Examine the old one and ensure that the mating surface is not damaged or cut. Also inspect the rubber seal on the top of the plunger to ensure it is in good condition and not torn.

7. If any of these conditions are present, replace the old plunger with the new one from your kit. Verify that the new plunger is also free from defects. If it is not, contact your Ecolab representative immediately.

8. The plunger should drop into the vacuum breaker and seat. Ensure it is not flipped upside down (the orange seal ring should be up towards the top of the vacuum breaker).



Removing the cap



Removing the plunger



Examining the plunger seating surface



Examining the seal ring on the plunger

9. Pick up the cap and examine it. With a soft towel, remove any grit, grime or debris that may have gotten caught in the threads of both the cap retainer or the vacuum breaker body. There is an O-ring that should be present on the cap retainer as well. Regardless of the condition of the plunger, this O-ring should be replaced once the cap is removed. Using a small flathead screwdriver, remove the old O-ring.



Replacing the O-ring

10. With the new O-ring in place, screw the cap back on the vacuum breaker body. The cap needs to only be hand tight (snug).


**AFTER
MAINTENANCE
ACTIONS**



1. Reconnect the incoming water (if disconnected) and turn on. Then restore power to the unit. Run the unit for at least 10 minutes to ensure there are no leaks. If any problems arise please contact your Ecolab representative.

SPECIAL PARTS


Vacuum breaker repair kit:
For 1/2" NPT order [06401-003-06-23](#)
For 3/4" NPT order [06401-003-06-24](#)

Complete Vacuum Breaker Assembly
For 1/2" NPT order [04820-003-06-13](#)
For 3/4" NPT order [04820-002-53-77](#)

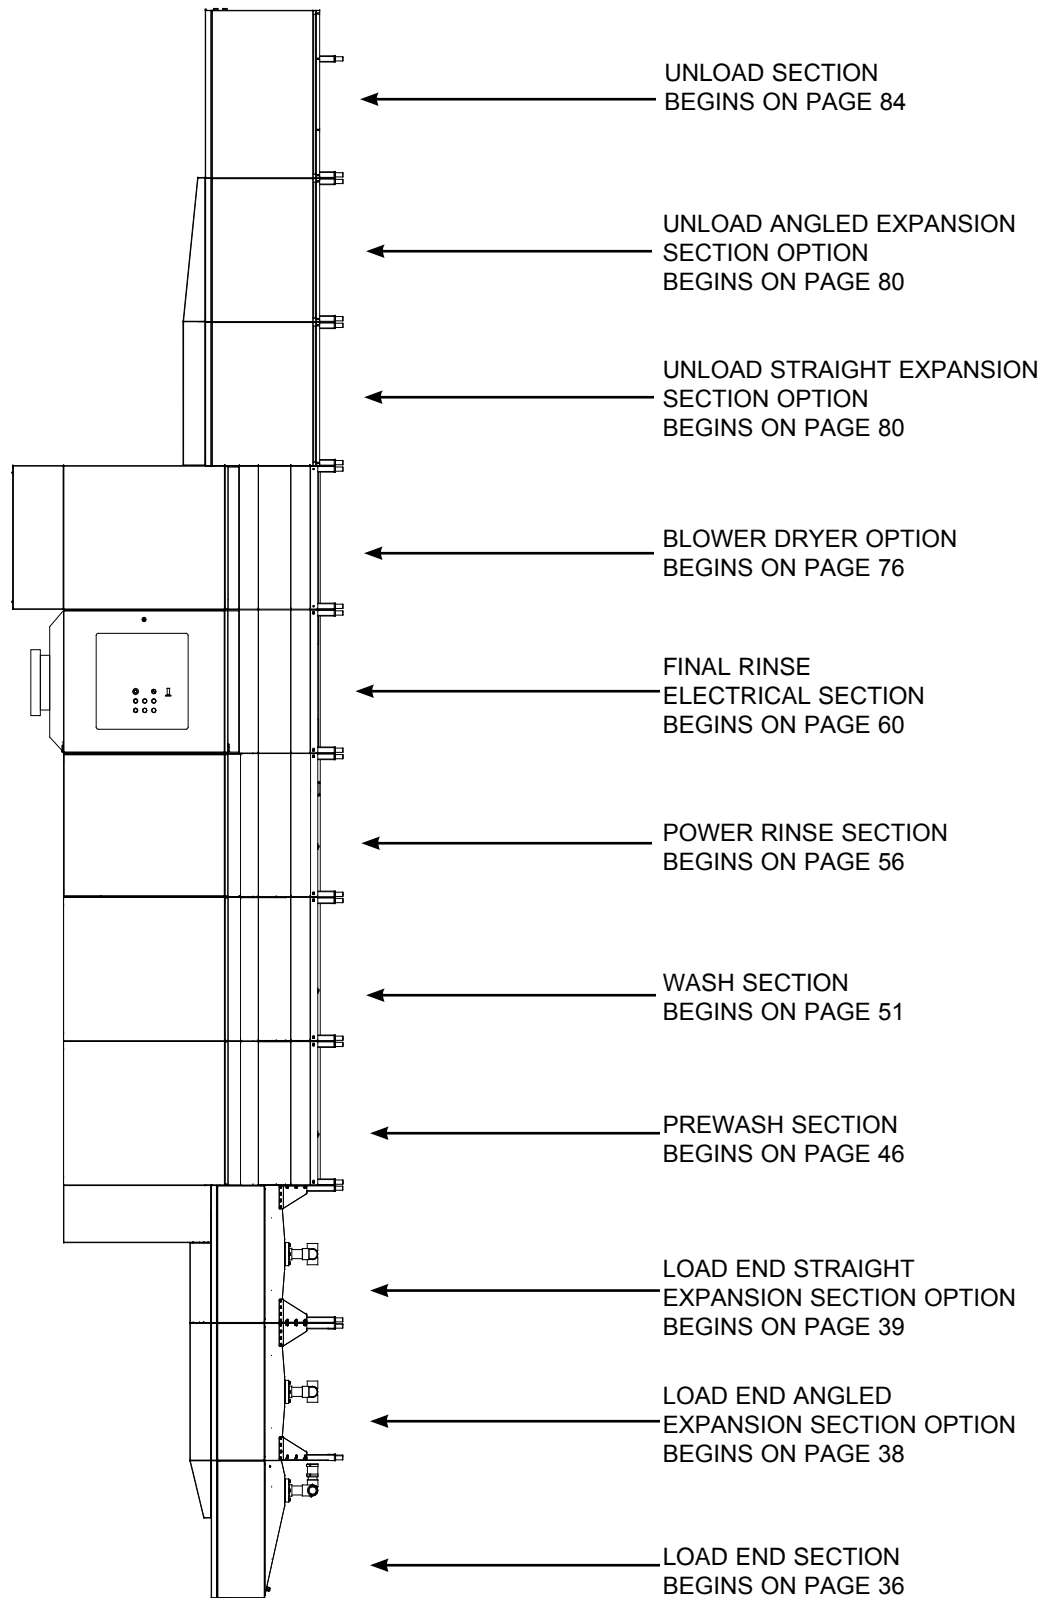

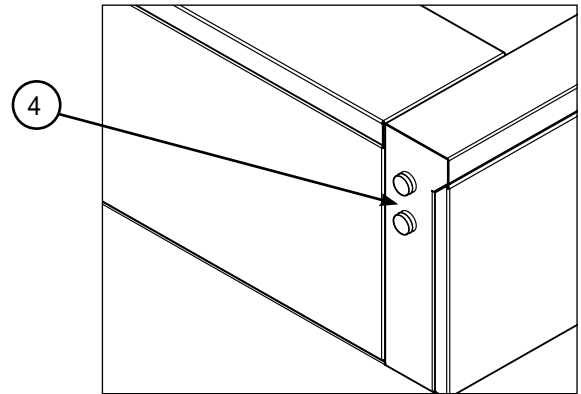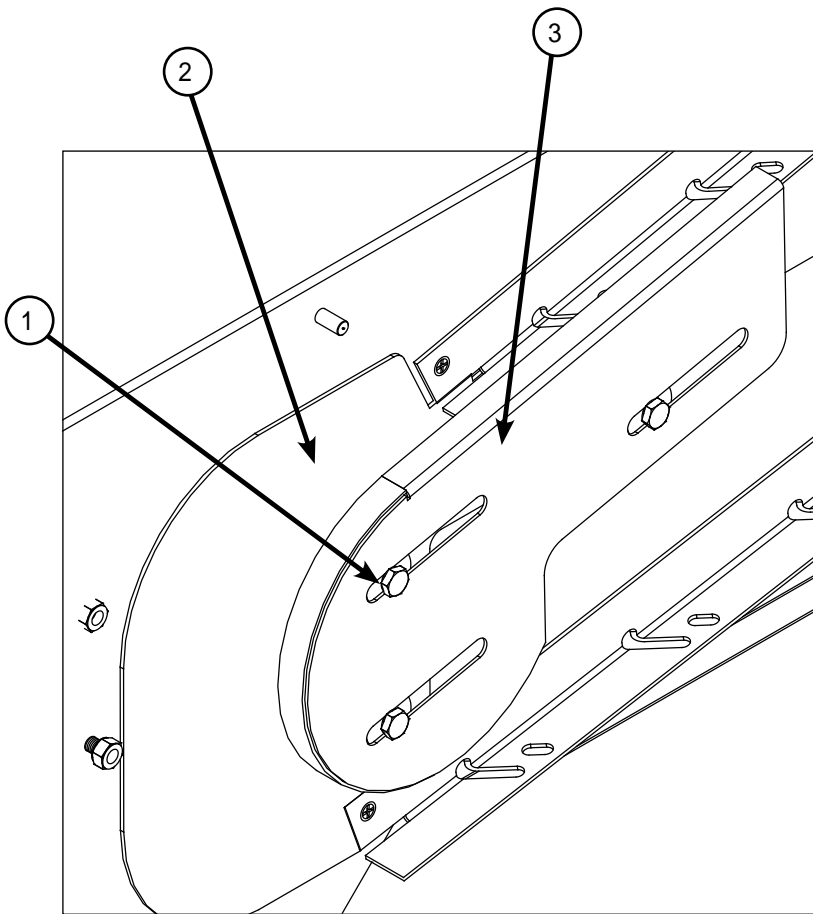


Old Style With Extended Switches

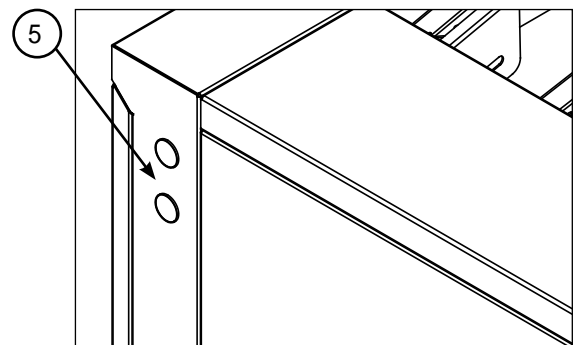


Old Style Heyco Plug

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|------------|---|---------------------------------|
| 1 | 3 per side | *Standoff, Belt Return | 05700-002-82-27 |
| 2 | 1 | Plate, Rail | 05700-002-65-82 |
| 3 | 1 | Back, Conveyor Belt Return | 05700-002-72-57 |
| | 1 | Front, Conveyor Belt Return (not shown) | 05700-002-72-58 |
| 4 | 1 | Plug, Heyco | 05975-011-47-81 |
| 5 | 1 | Cover, Switch (Not Shown) | 05700-002-97-85 |

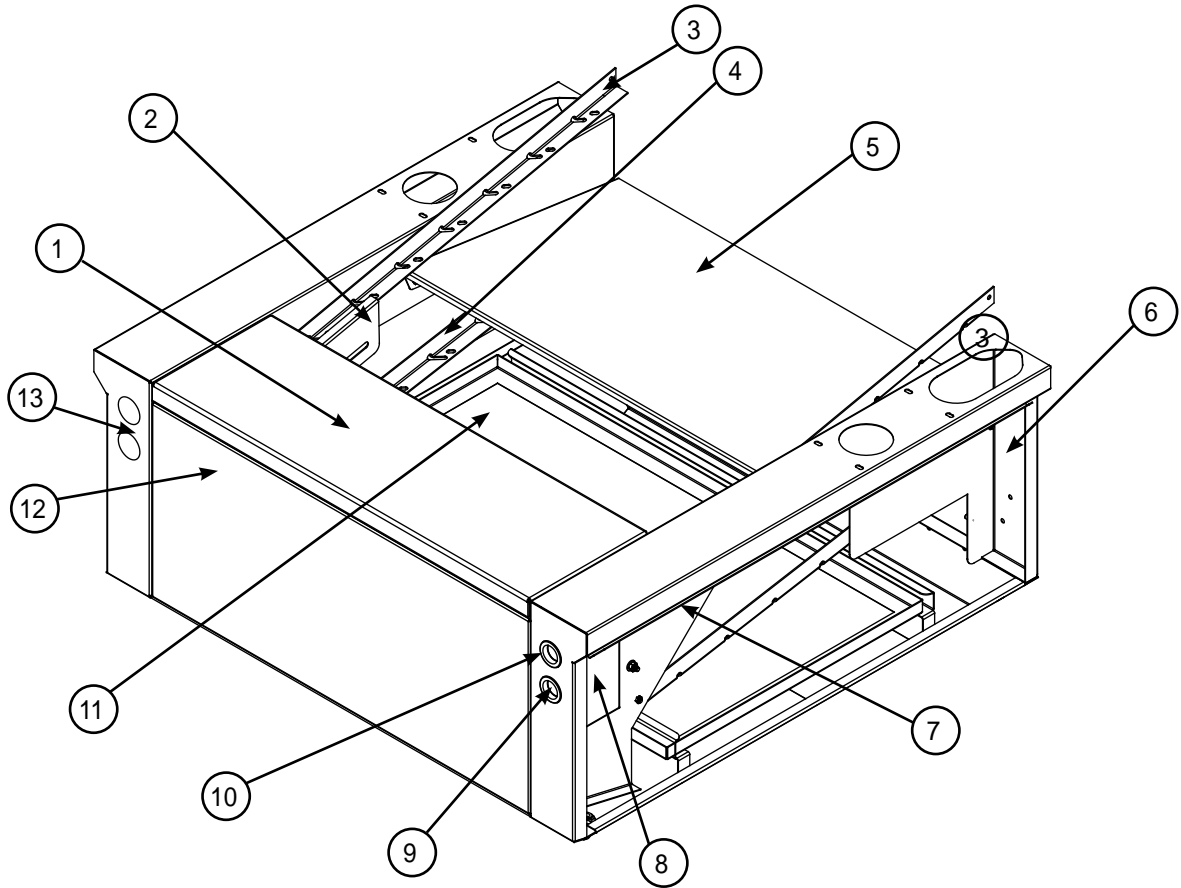


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--------------------------------|---------------------------------|
| 1 | 1 | End Cap | 05700-003-09-08 |
| 2 | 1 | Refer to Detail "A" on page 36 | |
| 3 | 2 | Upper Rail | 05700-002-66-29 |
| 4 | 2 | Rack Lower Rail | 05700-002-65-87 |
| 5 | 1 | Inlet/Outlet Run Off | 05700-002-81-99 |
| 6 | 2 | Side Cover | 05700-003-09-09 |
| 7 | | Refer to Detail "A" on page 36 | |
| 8 | 1 | Switch Cover | 05700-003-09-10 |
| | | Switch Holding Bracket | 05700-003-09-11 |
| 9 | 1 | Red Stop Switch | 05930-002-80-73 |
| | 1 | Snap 1 1/2" Bushing | 05975-003-10-46 |
| 10 | 1 | Green Start Switch | 05930-002-80-60 |
| | 1 | Snap 1 1/2" Bushing | 05975-003-10-46 |
| 11 | 1 | Strainer | 05700-002-94-24 |
| 12 | 1 | End Plate | 05700-002-84-40 |
| 13 | 1 | Domed Plug | 05975-003-10-45 |

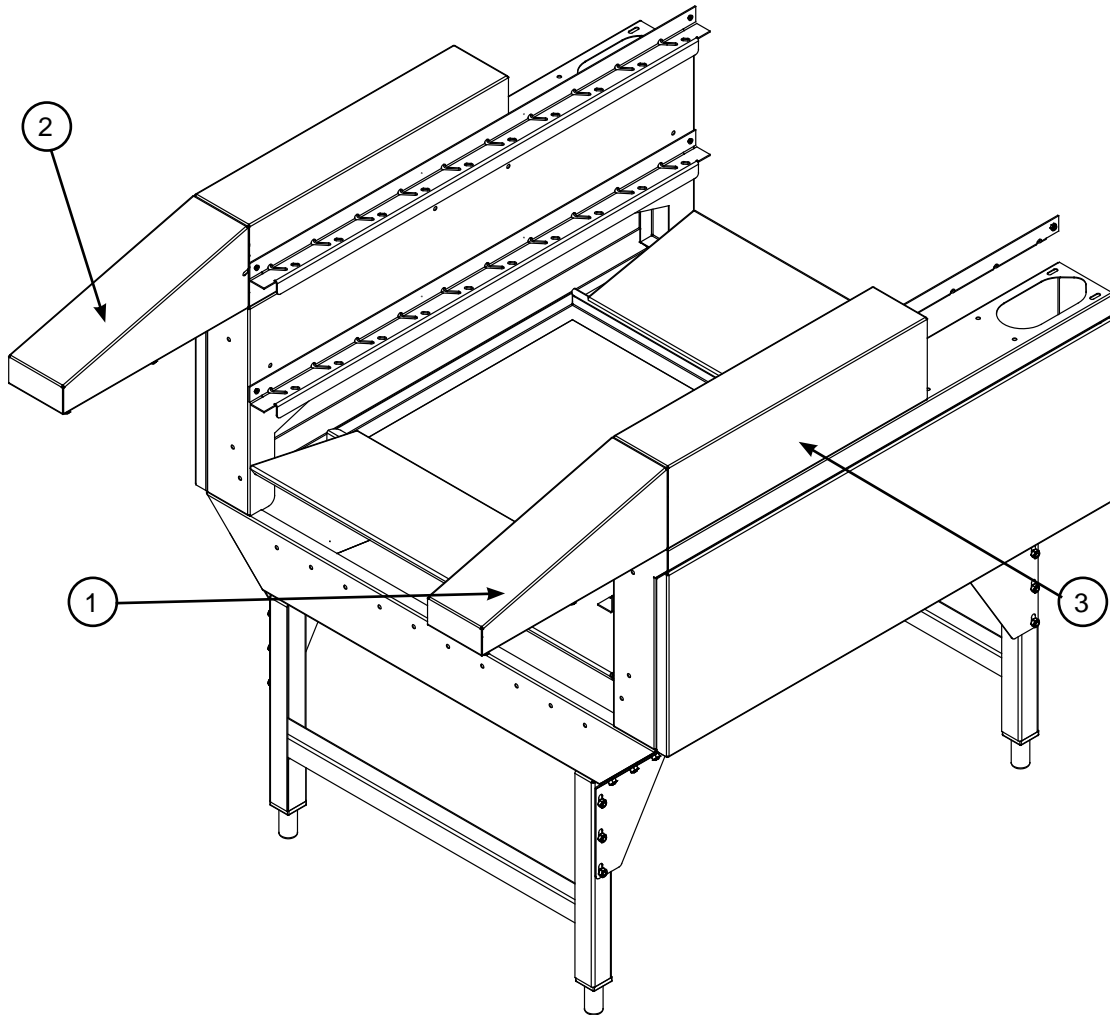ANGLED EXPANSION ASSEMBLY


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|----------------------------------|-----------------|
| 1 | 1 | Angled Top Right, Load Expansion | 05700-003-09-19 |
| 2 | 1 | Angled Top Left, Load Expansion | 05700-003-09-20 |
| 3 | 1 | Top, Load Expansion Section | 05700-003-09-21 |

STRAIGHT EXPANSION ASSEMBLY

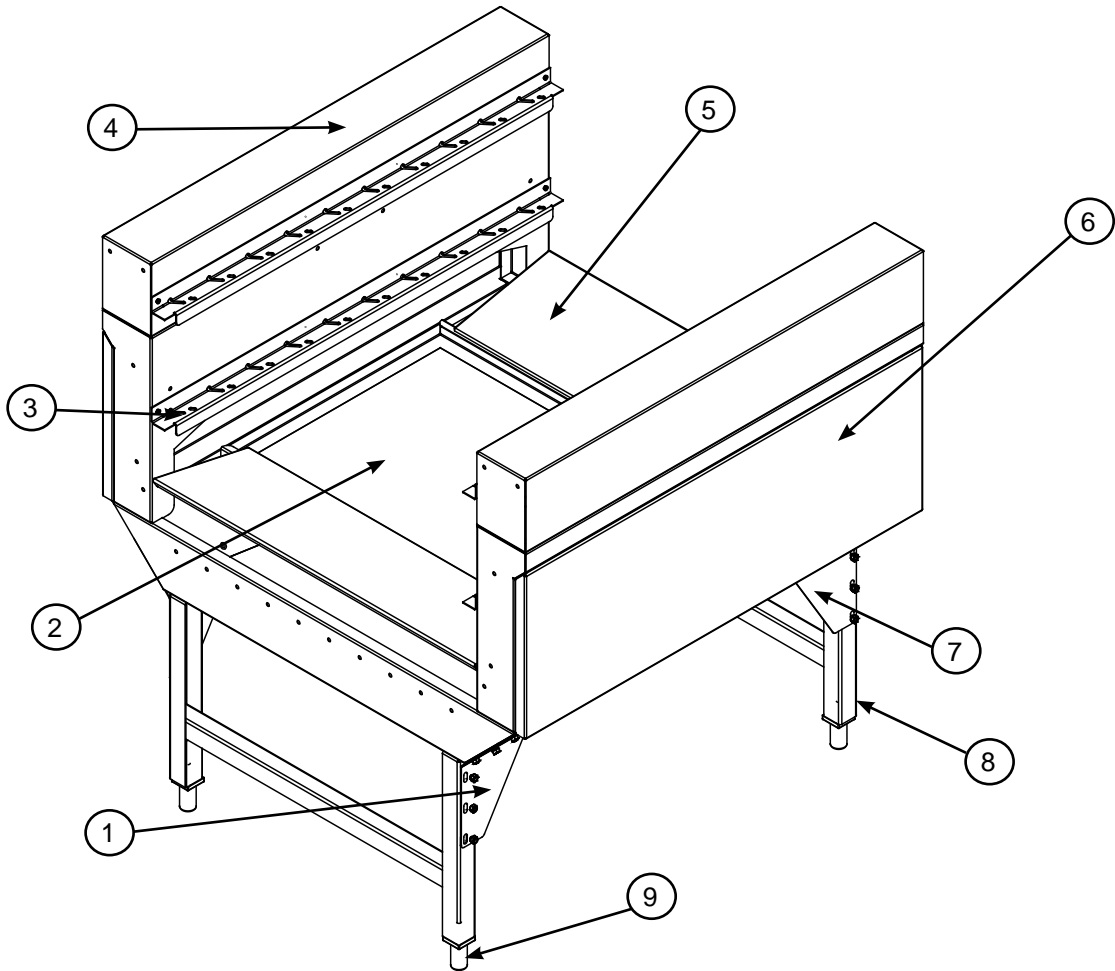


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-------|------------------------------|---------------------------------|
| 1 | 2 per | Left Support, Expansion Leg | 05700-003-09-27 |
| 2 | 1 | Loader Section Strainer | 05700-002-94-24 |
| 3 | 1 | Rail, Lower | 05700-002-65-07 |
| 4 | 2 per | Rail Guard, Upper | 05700-002-65-07 |
| 5 | | Run Off Sheet | 05700-003-09-17 |
| 6 | 1 | Panel, Side Dress | 05700-003-09-09 |
| 7 | 2 per | Right Support, Expansion Leg | 05700-003-09-26 |
| 8 | 2 per | Leg Weldment | 05700-003-09-28 |
| 9 | 2 per | Bullet Feet | 05340-108-02-06 |

EXPANSION SECTIONS DRAIN PLUMBING

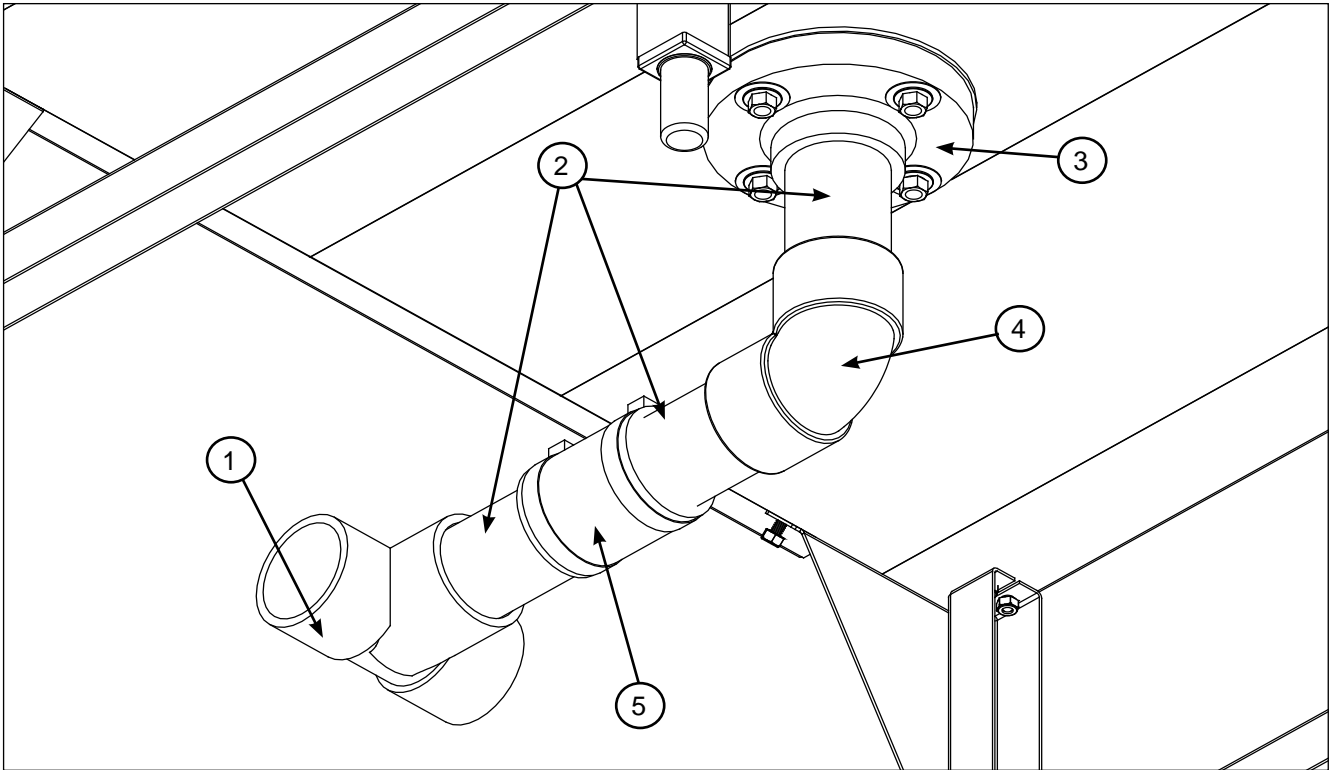


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-------|-------------------------|---------------------------------|
| 1 | 1 | CPVC, 2" Tee | 04730-002-66-09 |
| 2 | 1 | Tube, CPVC 2" x 6" Long | 05700-003-05-00 |
| 3 | 1 | Flange, 2 Inch | 04730-003-04-25 |
| | 1 | Gasket, Drain | 05330-003-04-26 |
| 4 | 1 | Elbow, 2", 90B, CPVC | 04730-002-72-25 |
| 5 | 2 per | 2" No Hub | 04730-002-66-87 |

LOAD SECTION DRAIN PLUMBING

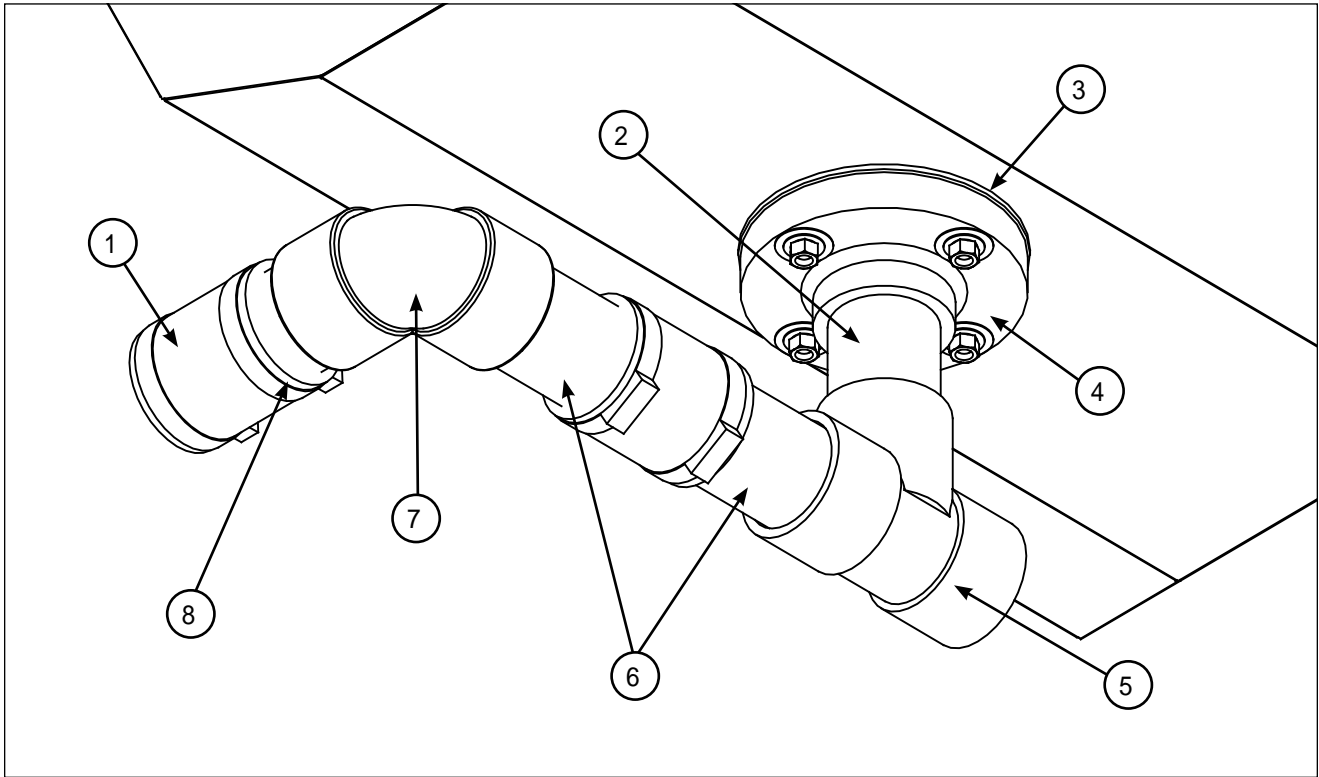



| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-------|---------------------------|---------------------------------|
| 1 | 2 per | 2" No Hub | 04730-002-66-87 |
| 2 | 1 | Tube, CPVC 2" x 6" Long | 05700-003-05-00 |
| 3 | 1 | Gasket, Drain | 05330-003-04-26 |
| 4 | 1 | Flange, 2 Inch | 04730-003-04-25 |
| 5 | 1 | CPVC, 2" Tee | 04730-002-66-09 |
| 6 | 1 | Tube, CPVC 2" x 6" Long | 05700-003-05-00 |
| 7 | 1 | Elbow, 2", 90B, CPVC | 04730-002-72-25 |
| 8 | 1 | CPVC, 2" ID x 3 3/4" Long | 05700-002-69-58 |

When assembling the angled and/or straight expansion sections to the load end, you will have to move some parts from one section to another. Shown below is how the sections look when all three are combined.

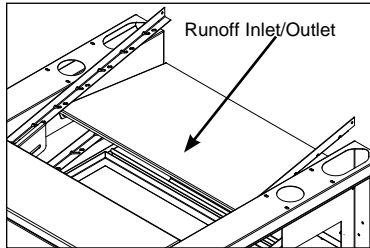


Load section shown with runoff inlet/outlet.


Whether you add one or both expansion sections, the runoff inlet/outlet has to be removed from the load section and installed on the end of the expansion section next to the prewash.

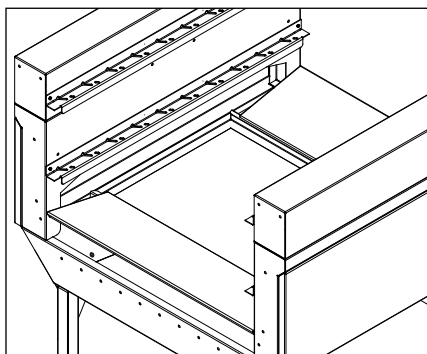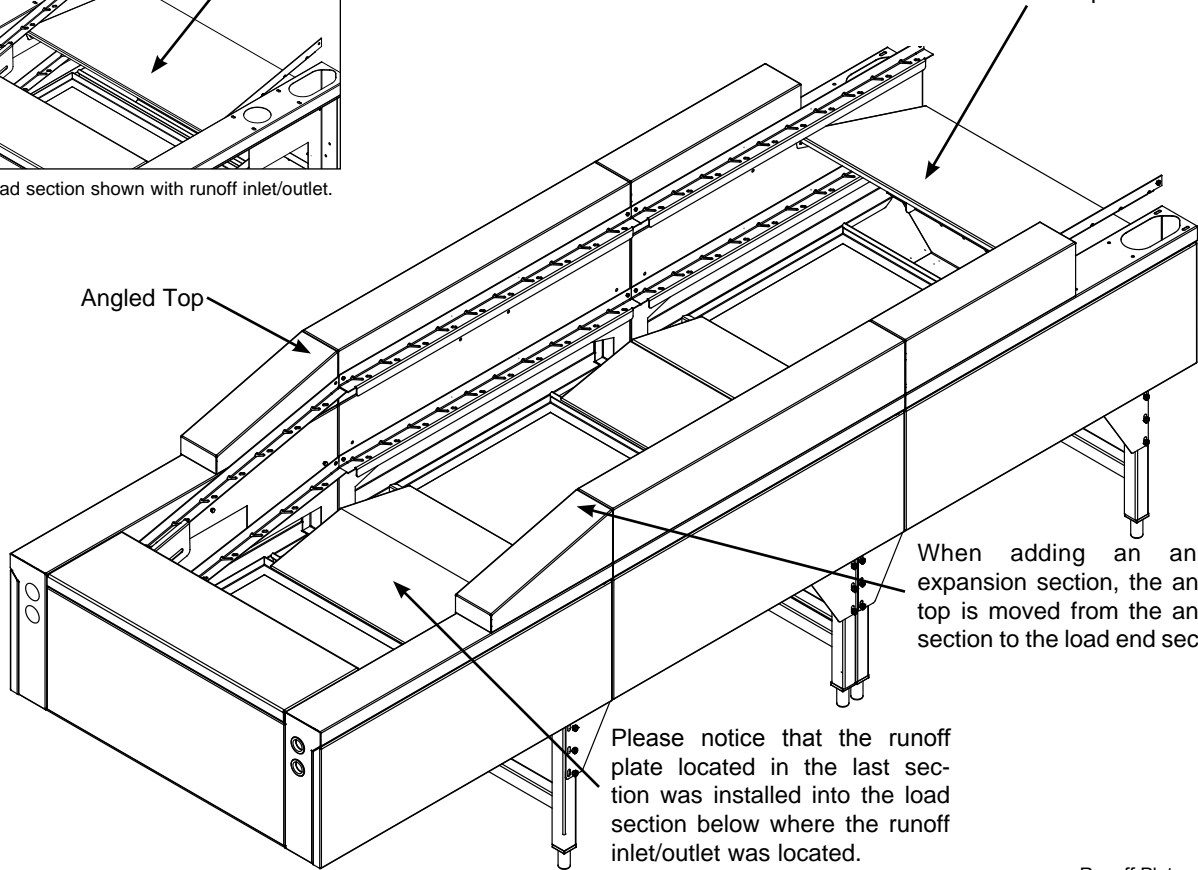


Straight expansion shown with both runoff plates.

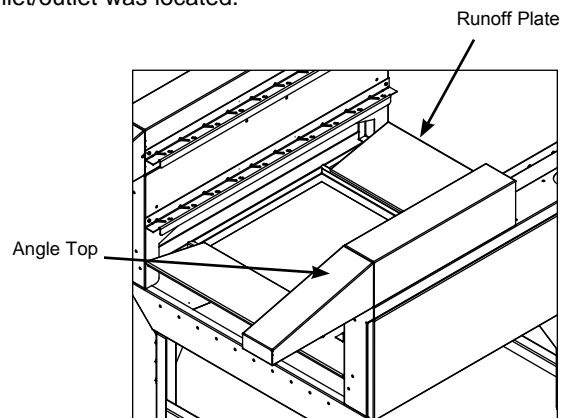

Angled expansion shown with both runoff plates and the angled top.

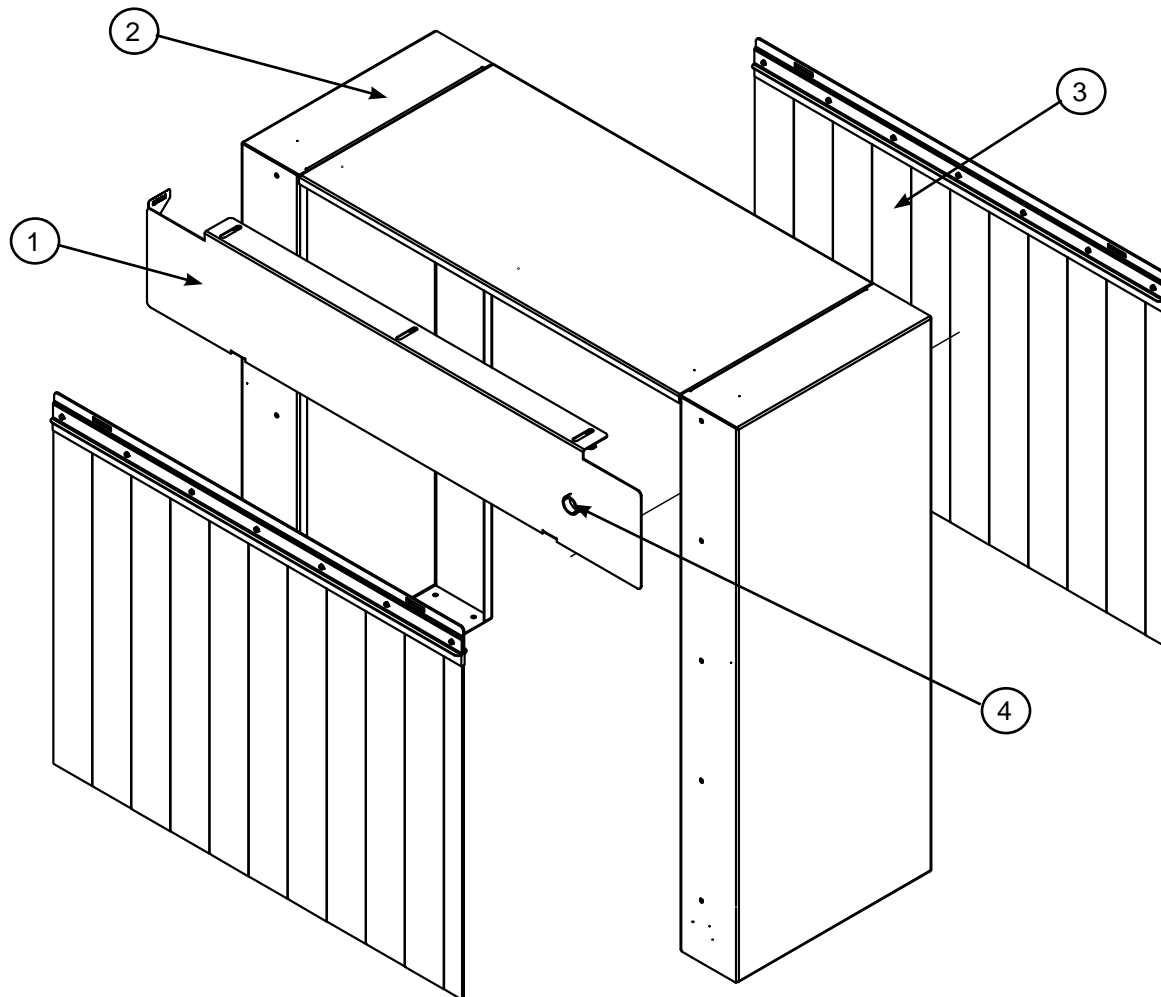

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-------|-----------------------|---------------------------------|
| 1 | 1 | Shroud Buffer | 05700-002-69-16 |
| 2 | 1 | Shroud Weldment | 05700-002-69-15 |
| 3 | 2 per | Long Curtain Assembly | 05700-002-79-70 |
| 4 | 2 per | Grommet, 1-1/8" | 05975-210-08-00 |

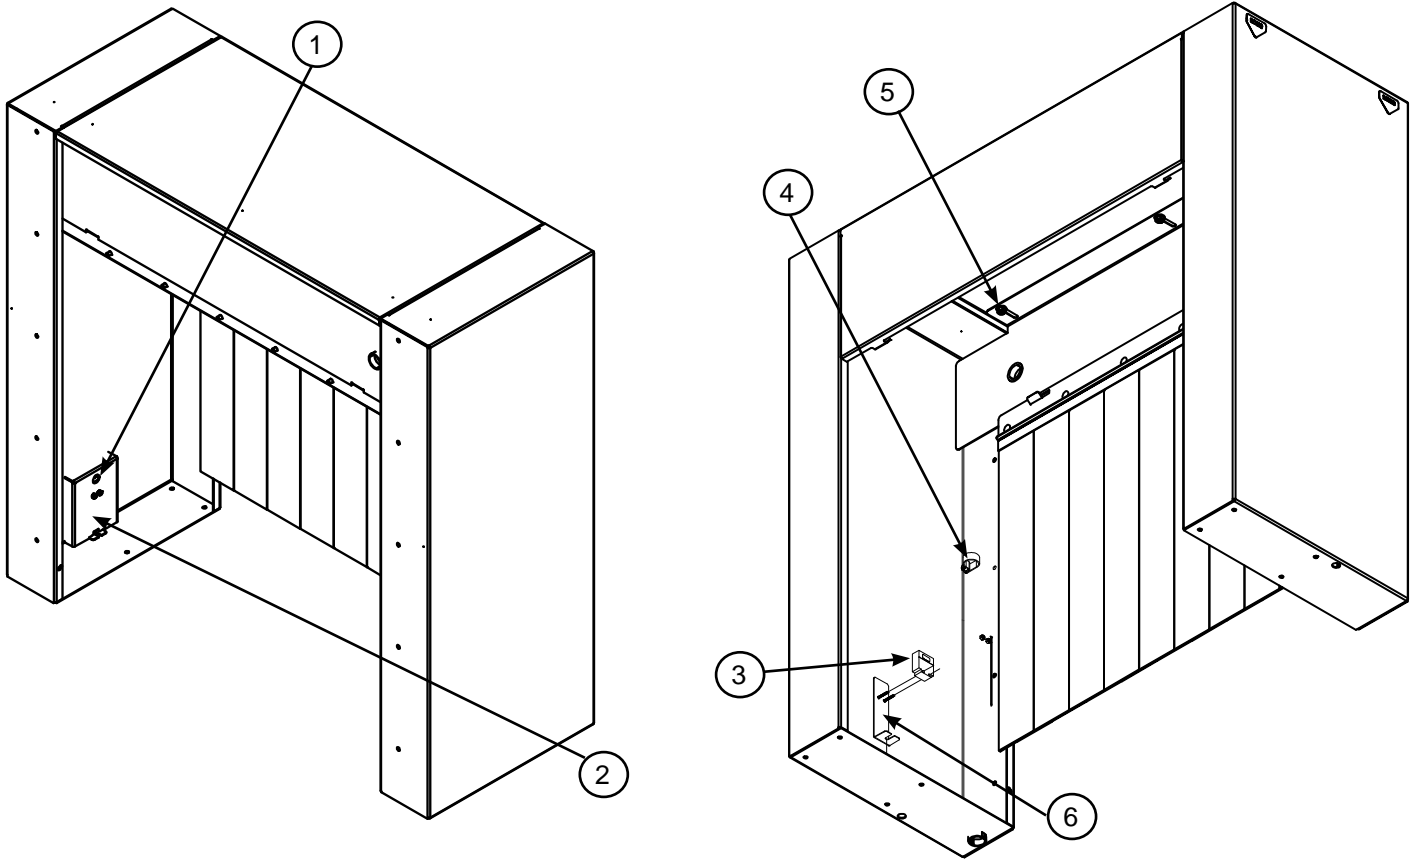


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|-------------------------------------|---------------------------------|
| 1 | 1 | Receiver Sensor | 05945-003-05-69 |
| 2 | 1 | Locknut, 10-24 Hex w/Nylon Insert | 05310-373-01-00 |
| 3 | 1 | Emitter Senso | 05945-003-05-68 |
| 4 | 1 | Clamp, Cable .875 ID | 05975-003-04-84 |
| | 1 | Locknut, 10-24 Hex w/Nylon Insert | 05310-373-01-00 |
| 5 | 1 | Locknut, 1/4"-20 Hex w/Nylon Insert | 05310-374-01-00 |
| | 1 | Washer, 1/4"-20 ID | 05311-174-01-00 |


CONVEYOR BELT ASSEMBLY

PARTS



When ordering replacement conveyor belt assemblies, please have your machine serial number available and contact Jackson WWS, Inc. technical support toll free at 1-888-800-5672. Technical support is available from 8:00 a.m. to 5:00 p.m. (EST), Monday through Friday. Technical support is not available on holidays. Your machine serial number can be found on the machine data plate.

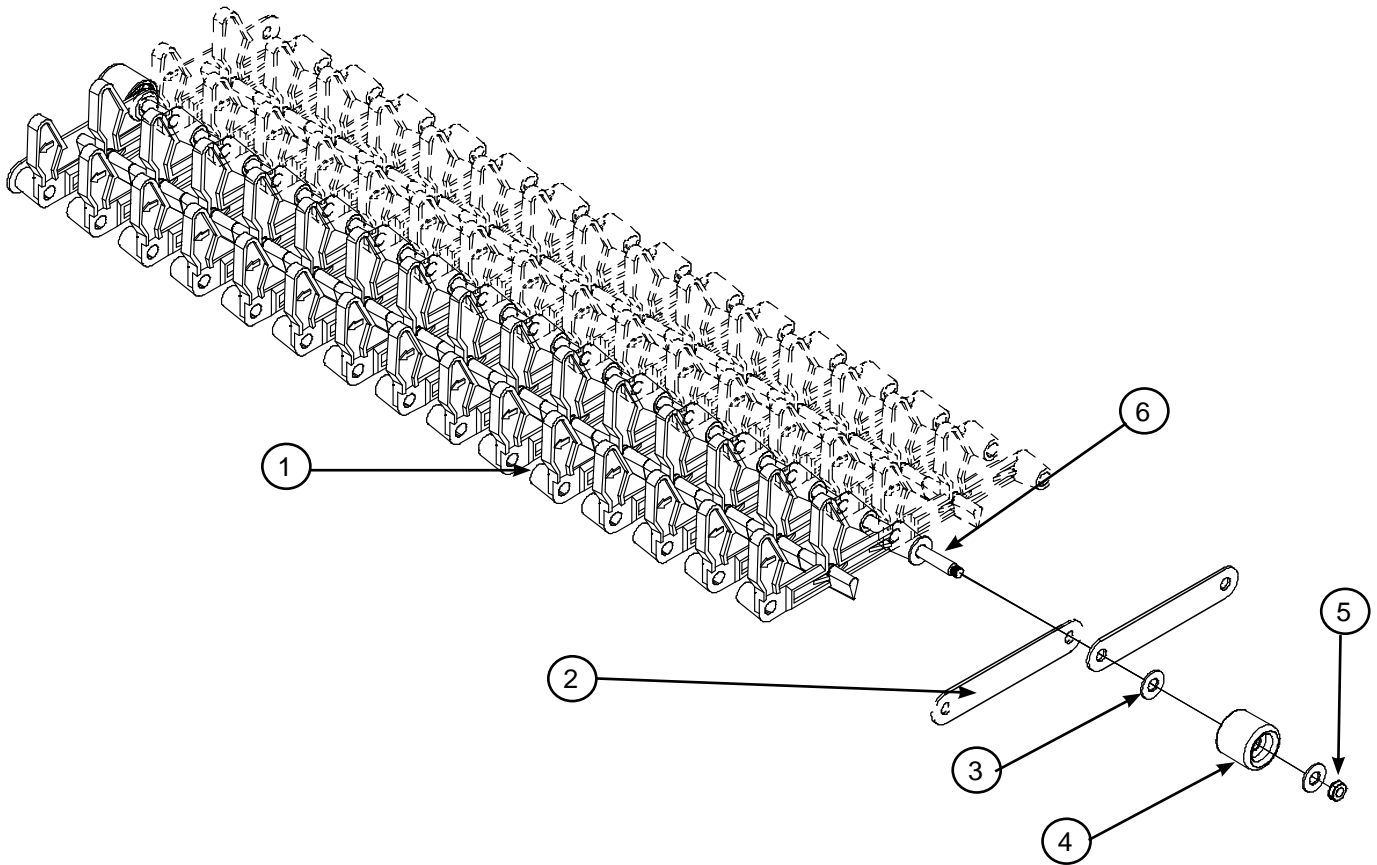


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---|---------------------------------|
| | 1 | Complete 12 Foot Rod Assembly | 05700-002-85-37 |
| 1 | 15 | Peg, Belt | 05330-011-42-10 |
| 2 | 2 | Plate, Connector | 05340-112-01-11 |
| 3 | 6 | Washer | 05330-002-60-69 |
| 4 | 2 | Wheel, PVC | 04730-004-01-07 |
| 5 | 2 | Locknut, 1/4"-20, Low Profile with Nylon Insert | 05700-004-05-23 |
| 6 | 1 | Rod, Conveyor | 05700-002-81-56 |

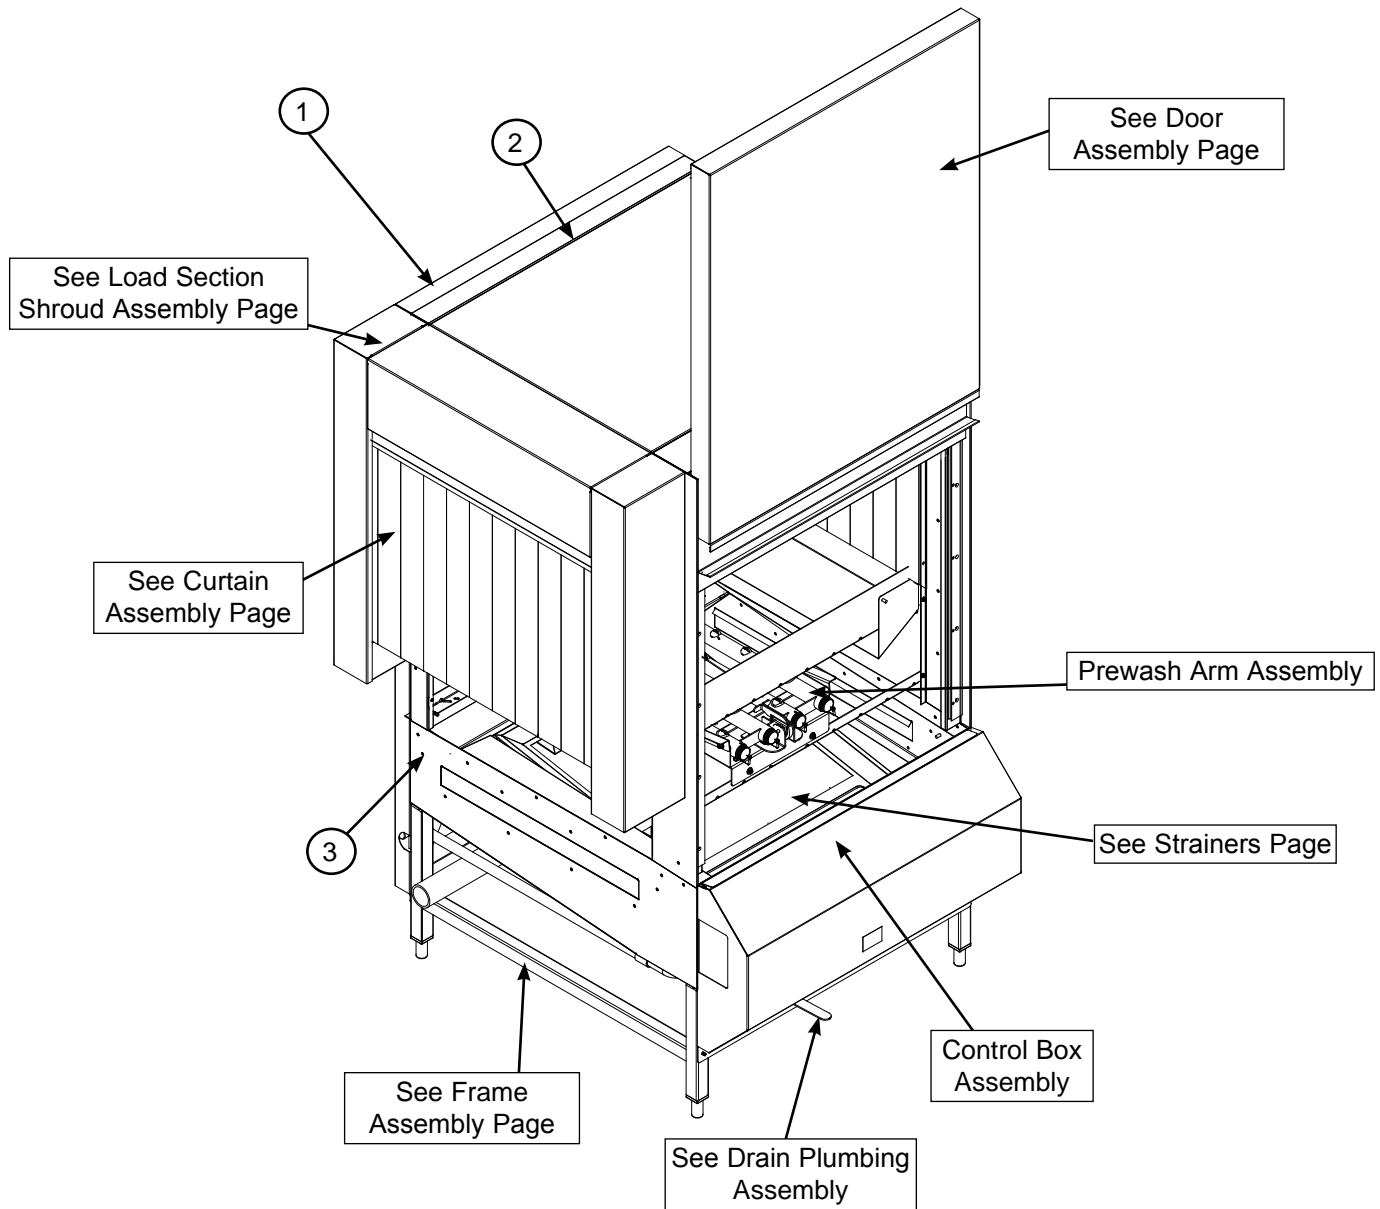

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|------------------------------|---------------------------------|
| 1 | 6 | Cover, Back | 05700-002-64-41 |
| | 1 | Foam, Back Cover | 08115-002-71-33 |
| 2 | 1 | Top Panel Cover | 05700-002-64-40 |
| | 1 | Top Panel Handle (not shown) | 05700-002-67-21 |
| 3 | 38 | Gasket Spacers (not shown) | 05330-003-04-12 |

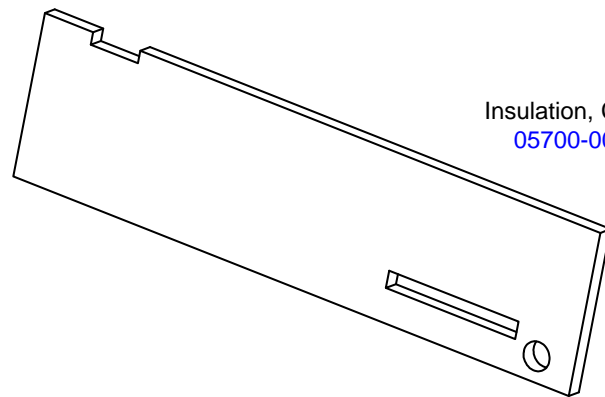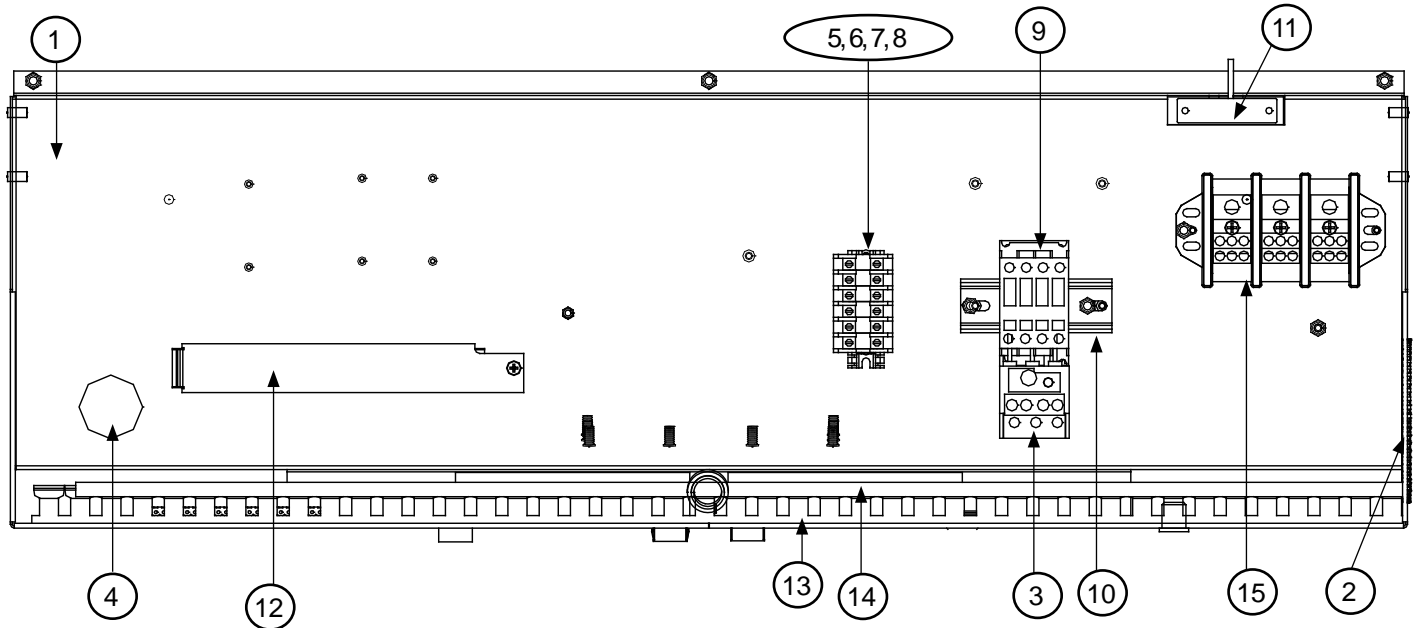

Insulation, Control Box
05700-002-80-47

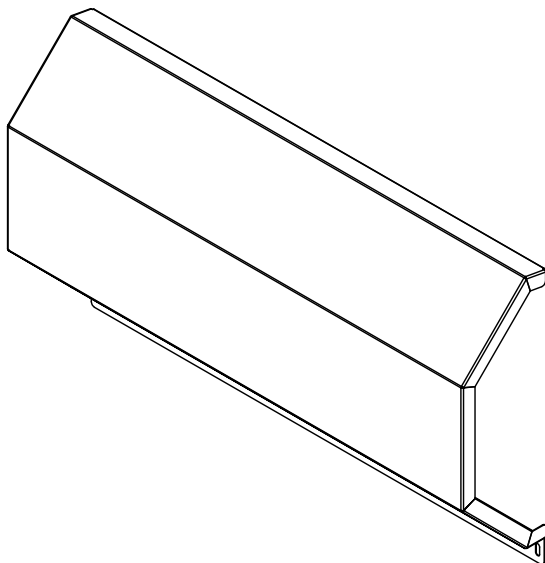


Cover, Control Box Weldment, L-R
05700-002-88-27

Cover, Control Box Weldment, R-L
05700-002-88-28


Decal, Warning-Disconnect Power
09905-100-75-93

Decal, Drain Handle
05700-003-12-80


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| 1 | 1 | Control Box Weldment | 05700-002-70-62 |
| 2 | 1 | Grommet, 3 1/2 Dia. Rubber | 05700-002-83-05 |
| 3 | 1 | Overload, Prewash Motor, 10 - 16 Amp, 208-230V Units | 05945-011-84-59 |
| 3 | 1 | Overload, Prewash Motor, 5.5-8.5 Amp, 460V Units | 05945-111-68-40 |
| 3 | 1 | Overload, Prewash Motor, 4.0-6.3 Amp, 600V Units | 05945-111-81-33 |
| 4 | 6 | Sensor, Swing Arm Level | 06680-002-98-62 |
| 5 | 1 | Channel, Mounting | 05700-002-83-23 |
| 6 | 1 | Block, Terminal | 05940-500-11-05 |
| 7 | 1 | End Barrier | 05940-500-21-05 |
| 8 | 1 | Retaining Clip | 05945-500-02-05 |
| 9 | 1 | Contactor, Wash Motor | 05945-111-68-38 |
| 10 | 1 | Din Rail | 05700-002-16-00 |
| 11 | 1 | Switch, Reed | 05930-002-36-80 |
| 12 | 1 | Thermostat Cover | 05700-002-70-61 |
| 13 | 1 | Panduit Bottom 3" x 35 1/8" | 05700-002-84-95 |
| 14 | 1 | Panduit Cover 3" x 34" | 05700-002-84-94 |
| 15 | 1 | Block, Terminal | 05940-011-48-27 |

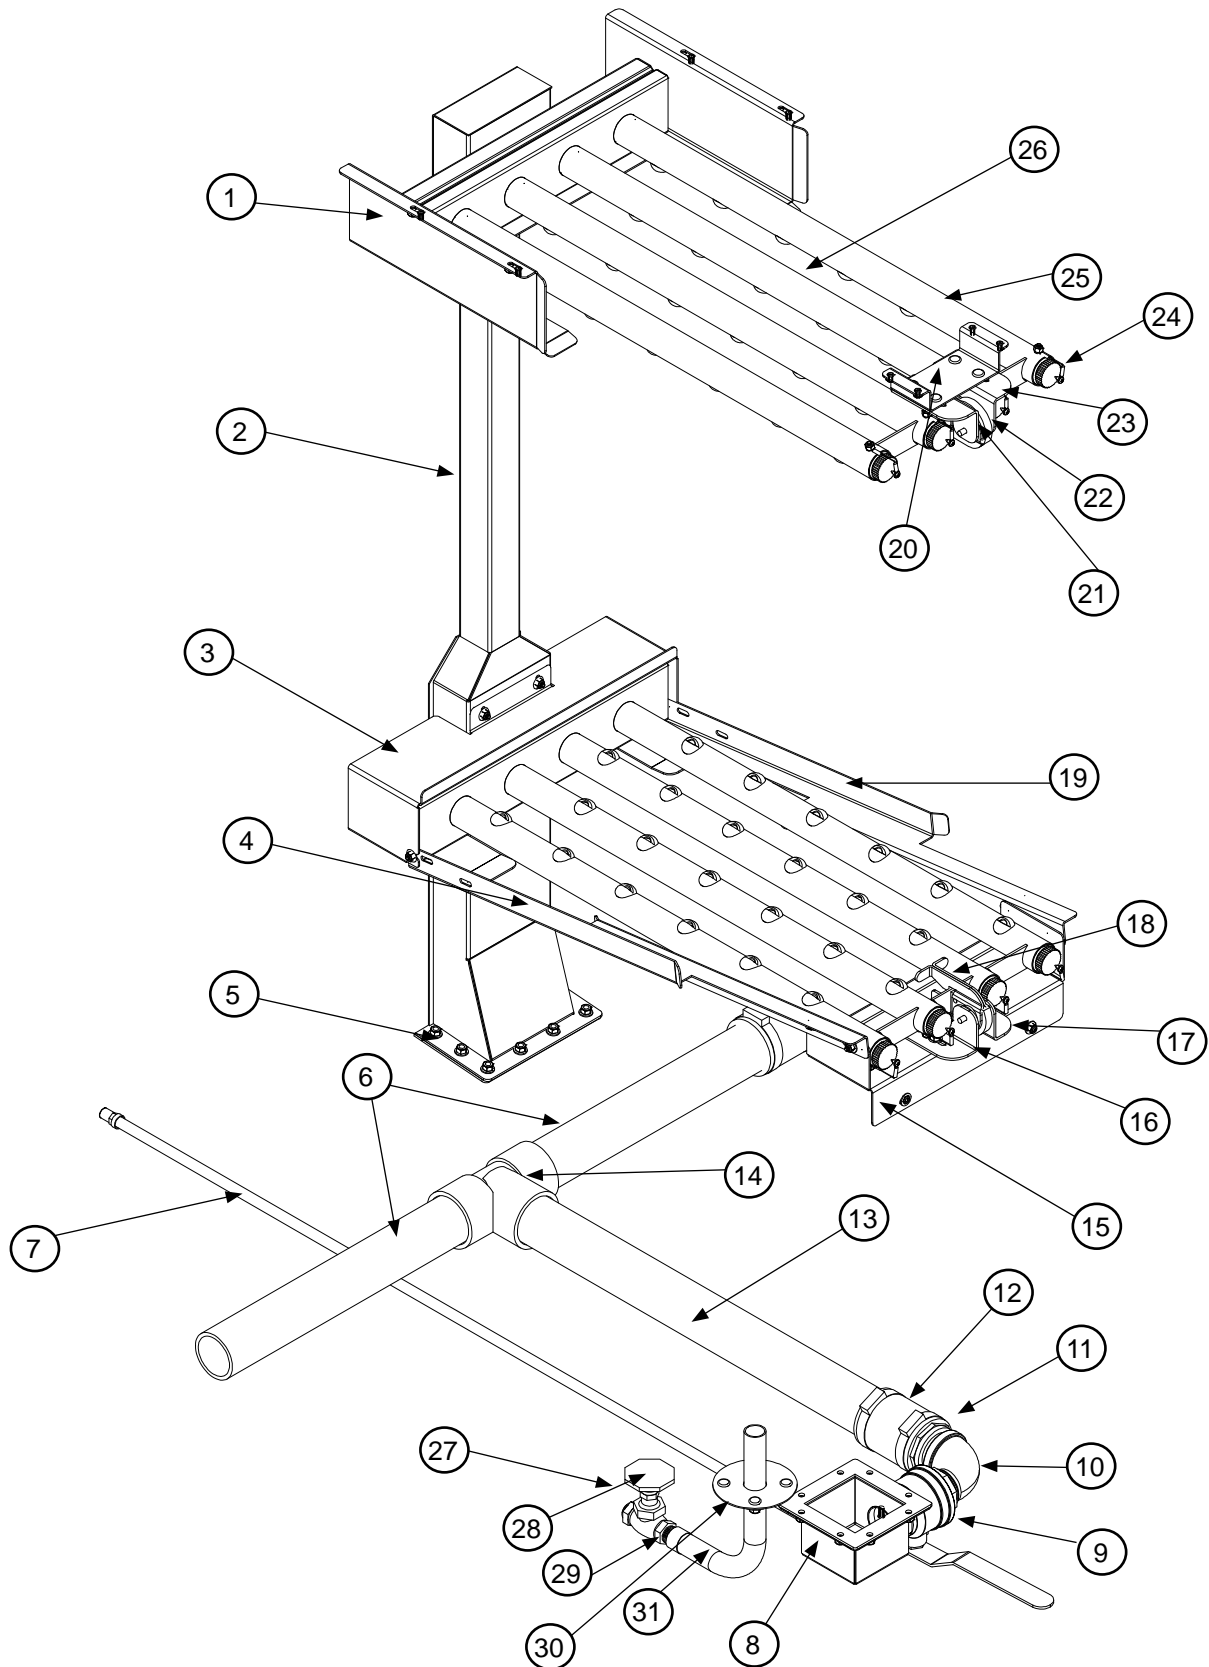


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| | | Complete Drain Plumbing Assembly | 05700-002-79-16 |
| 1 | 1 | Shield, Upper Wash Arm | 05700-002-89-37 |
| 2 | 1 | Wash Manifold Weldment | 05700-002-96-95 |
| 3 | 1 | Shield, Lower Wash Arm | 05700-002-89-38 |
| 4 | 1 | Rail, Left Lower Wash Arm Weldment | 05700-002-90-53 |
| 5 | 1 | Gasket, Wash Manifold Mounting | 05330-002-89-84 |
| 6 | 2 | Tube, Main Drain | 05700-002-66-12 |
| 7 | 1 | Drain Pump Tube Assembly | 05700-002-91-19 |
| 8 | 1 | Drain Cup Weldment | 05700-002-73-72 |
| | 1 | Gasket, Drain Cup | 05330-002-73-47 |
| 9 | 1 | Valve, Ball, 1 1/2" | 04820-111-71-46 |
| | 1 | Handle, Ball Valve | 05700-002-98-10 |
| 10 | 1 | Elbow, 1 1/2" Brass | 04730-206-32-00 |
| 11 | 1 | 1 1/2" MNPT x 1 1/2" Slip | 04730-002-74-06 |
| 12 | 2 | Connector, 2" No Hub | 04730-002-66-87 |
| 13 | 1 | Tube, Main Drain | 05700-002-67-01 |
| 14 | 1 | Tee, 2" PVC | 04730-002-66-09 |
| 15 | 1 | Bracket, Front Lower Wash Arm Weldment | 05700-002-89-96 |
| 16 | 1 | Bracket, Left, Locking Handle | 05700-002-89-35 |
| 17 | 1 | Bracket, Right, Locking Handle | 05700-002-89-38 |
| 18 | 2 | Handle, Arm Locking Weldment | 05700-002-89-93 |
| 19 | 1 | Rail, Right Lower Wash Arm Weldment | 05700-002-90-54 |
| 20 | 1 | Bracket, Front Upper Wash Arm Weldment | 05700-002-89-97 |
| 21 | 1 | Bracket, Right, Locking Handle | 05700-002-89-38 |
| 22 | 1 | Gasket, Locking Handle | 05330-002-89-94 |
| 23 | 1 | Bracket, Left, Locking Handle | 05700-002-89-35 |
| 24 | 4 | Lanyard, 6" Long | 05340-011-72-46 |
| | 4 | Cap, Threaded | 04730-603-12-00 |
| 25 | 1 | Wash Arm Weldment | 05700-002-83-51 |
| 26 | 2 | Wash Arm Assembly | 05700-002-65-45 |
| 27 | 1 | Prewash Transfer Tube Assembly | 05700-002-80-05 |
| 28 | 1 | Valve, Brass Globe | 04820-002-91-46 |
| 29 | 1 | Nipple, 1/2" Close Brass | 04730-207-15-00 |
| 30 | 1 | Transfer Tube Weldment | 05700-002-71-46 |
| 31 | 1 | Gasket, Final Rinse Plate | 05330-002-67-61 |

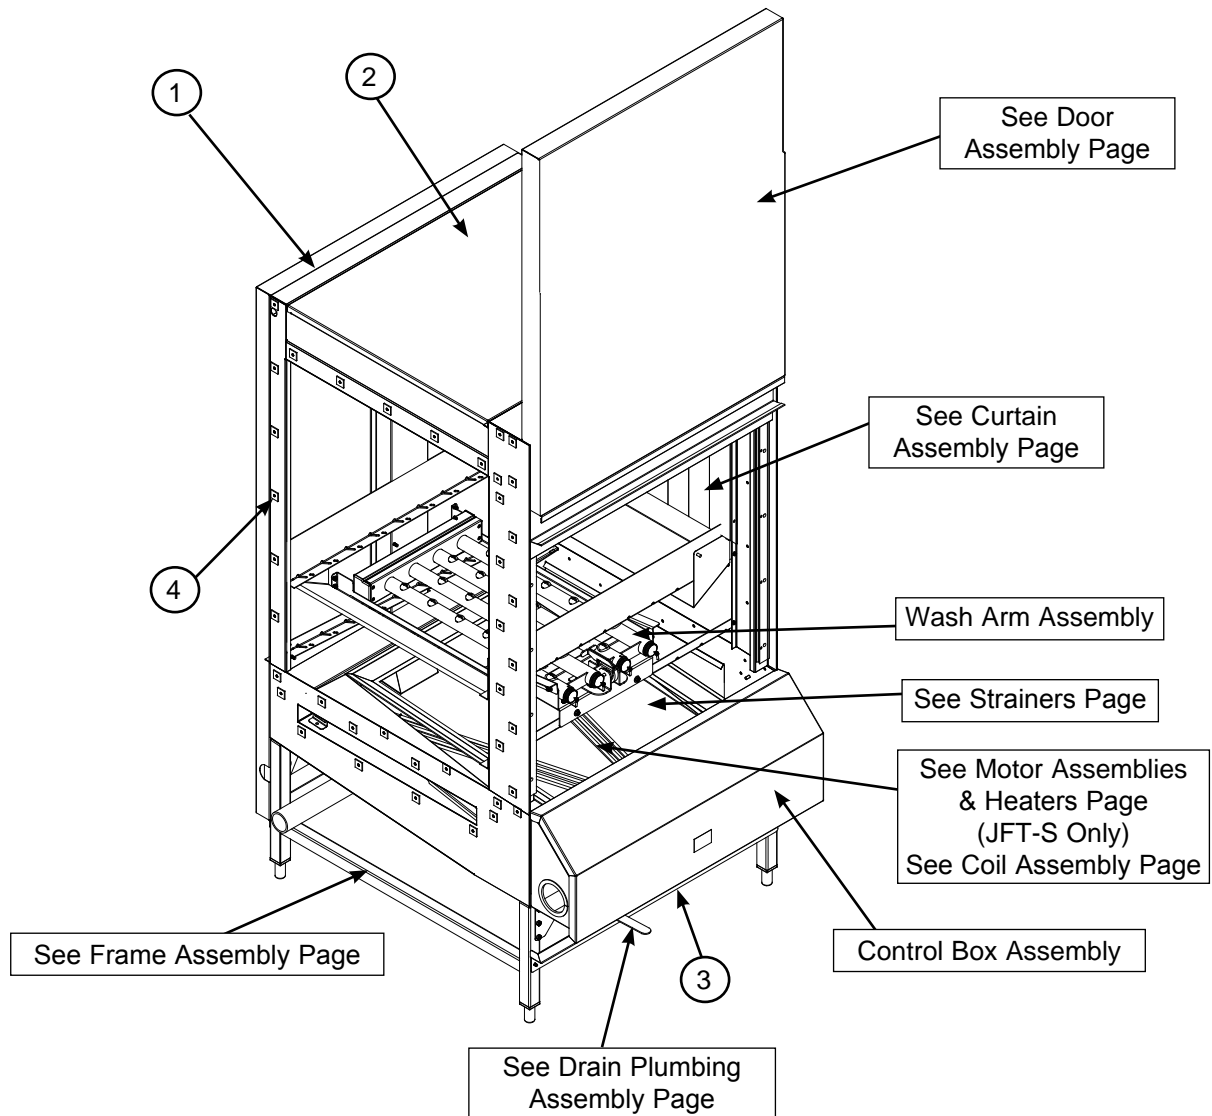


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| | | Gasket, Tub | 05700-002-86-10 |
| 1 | 6 | Cover, Back | 05700-002-64-41 |
| | 1 | Foam, Back Cover | 08115-002-71-33 |
| 2 | 1 | Top Panel Cover | 05700-002-64-40 |
| | 1 | Top Panel Handle (not shown) | 05700-002-67-21 |
| 3 | 1 | Hose Assembly, 65" Wash Steam Coil Supply (JFT-S Only) (Not Shown) | 05700-002-88-00 |
| 4 | 38 | Gasket Spacers | 05330-003-04-12 |

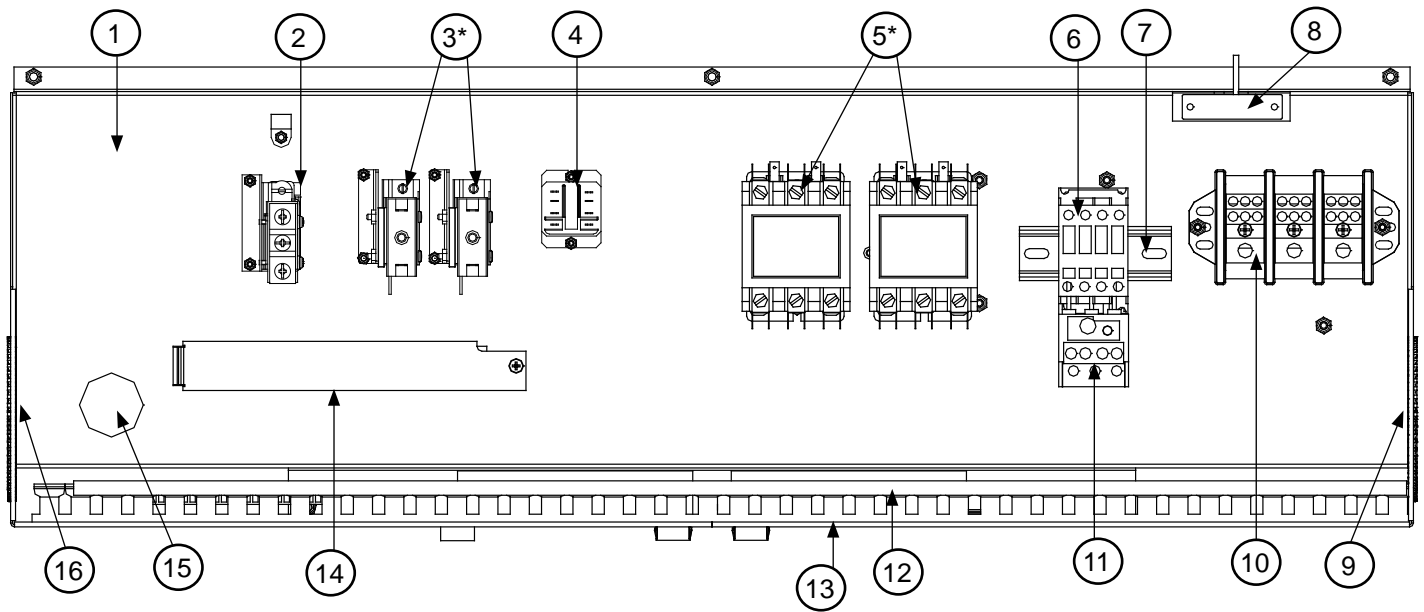

Insulation, Control Box
05700-002-80-47

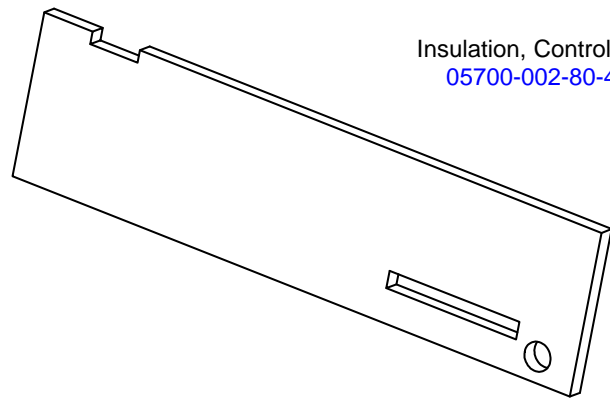

Cover, Control Box Weldment, L-R
05700-002-81-82

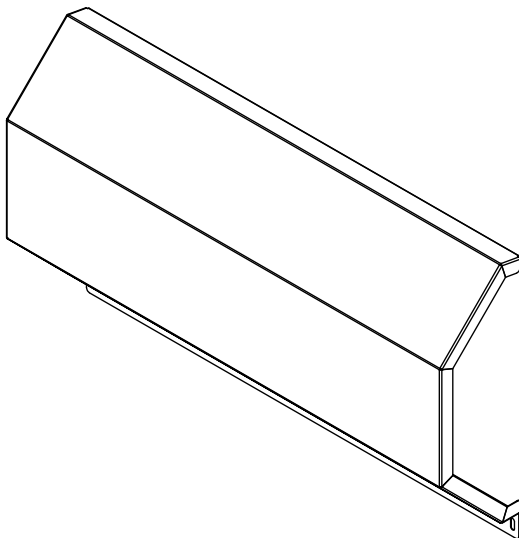

Decal, Warning-Disconnect Power
09905-100-75-93

Decal, Drain Handle
05700-003-12-80


* Not used on steam unit.

CONTROL BOX ASSEMBLY

WASH

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---|-----------------|
| 1 | 1 | Control Box Weldment | 05700-002-70-62 |
| 2 | 1 | Thermostat | 05930-003-16-65 |
| | 1 | Kit, Thermostat Replacement | 06401-003-18-66 |
| 3* | 2 | Thermostat, High Limit (JFT Only) | 05930-002-83-31 |
| 4 | 1 | Relay, 2 Pole | 05945-111-35-19 |
| 5* | 2 | Contactor, 3 Pole, 50 A (JFT Only) | 05945-002-24-70 |
| 6 | 1 | Contactor, Wash Motor | 05945-111-68-38 |
| 7 | 1 | Din Rail | 05700-002-16-00 |
| 8 | 1 | Switch, Reed | 05930-002-36-80 |
| 9 | 1 | Grommet, 3 1/2 Dia. Rubber | 05700-002-83-05 |
| 10 | 5 | Block, Terminal | 05940-011-48-27 |
| 11 | 1 | Overload, Wash Motor, 10 - 16 Amp, 208-230V Units | 05945-011-84-59 |
| | 1 | Overload, Wash Motor, 5.5-8.5 Amp, 460V Units | 05945-111-68-40 |
| | 1 | Overload, Wash Motor, 4.0-6.3 Amp, 600V Units | 05945-111-81-33 |
| 12 | 1 | Panduit Cover | 05700-002-84-94 |
| 13 | 1 | Panduit Bottom | 05700-002-84-95 |
| 14 | 1 | Thermostat Cover | 05700-002-70-61 |
| 15 | 1 | Sensor, Swing Arm Level | 06680-002-98-62 |
| 16 | 1 | Grommet, 3 1/2 Dia. Rubber | 05700-002-83-05 |


ELECTRICAL DIAGRAM

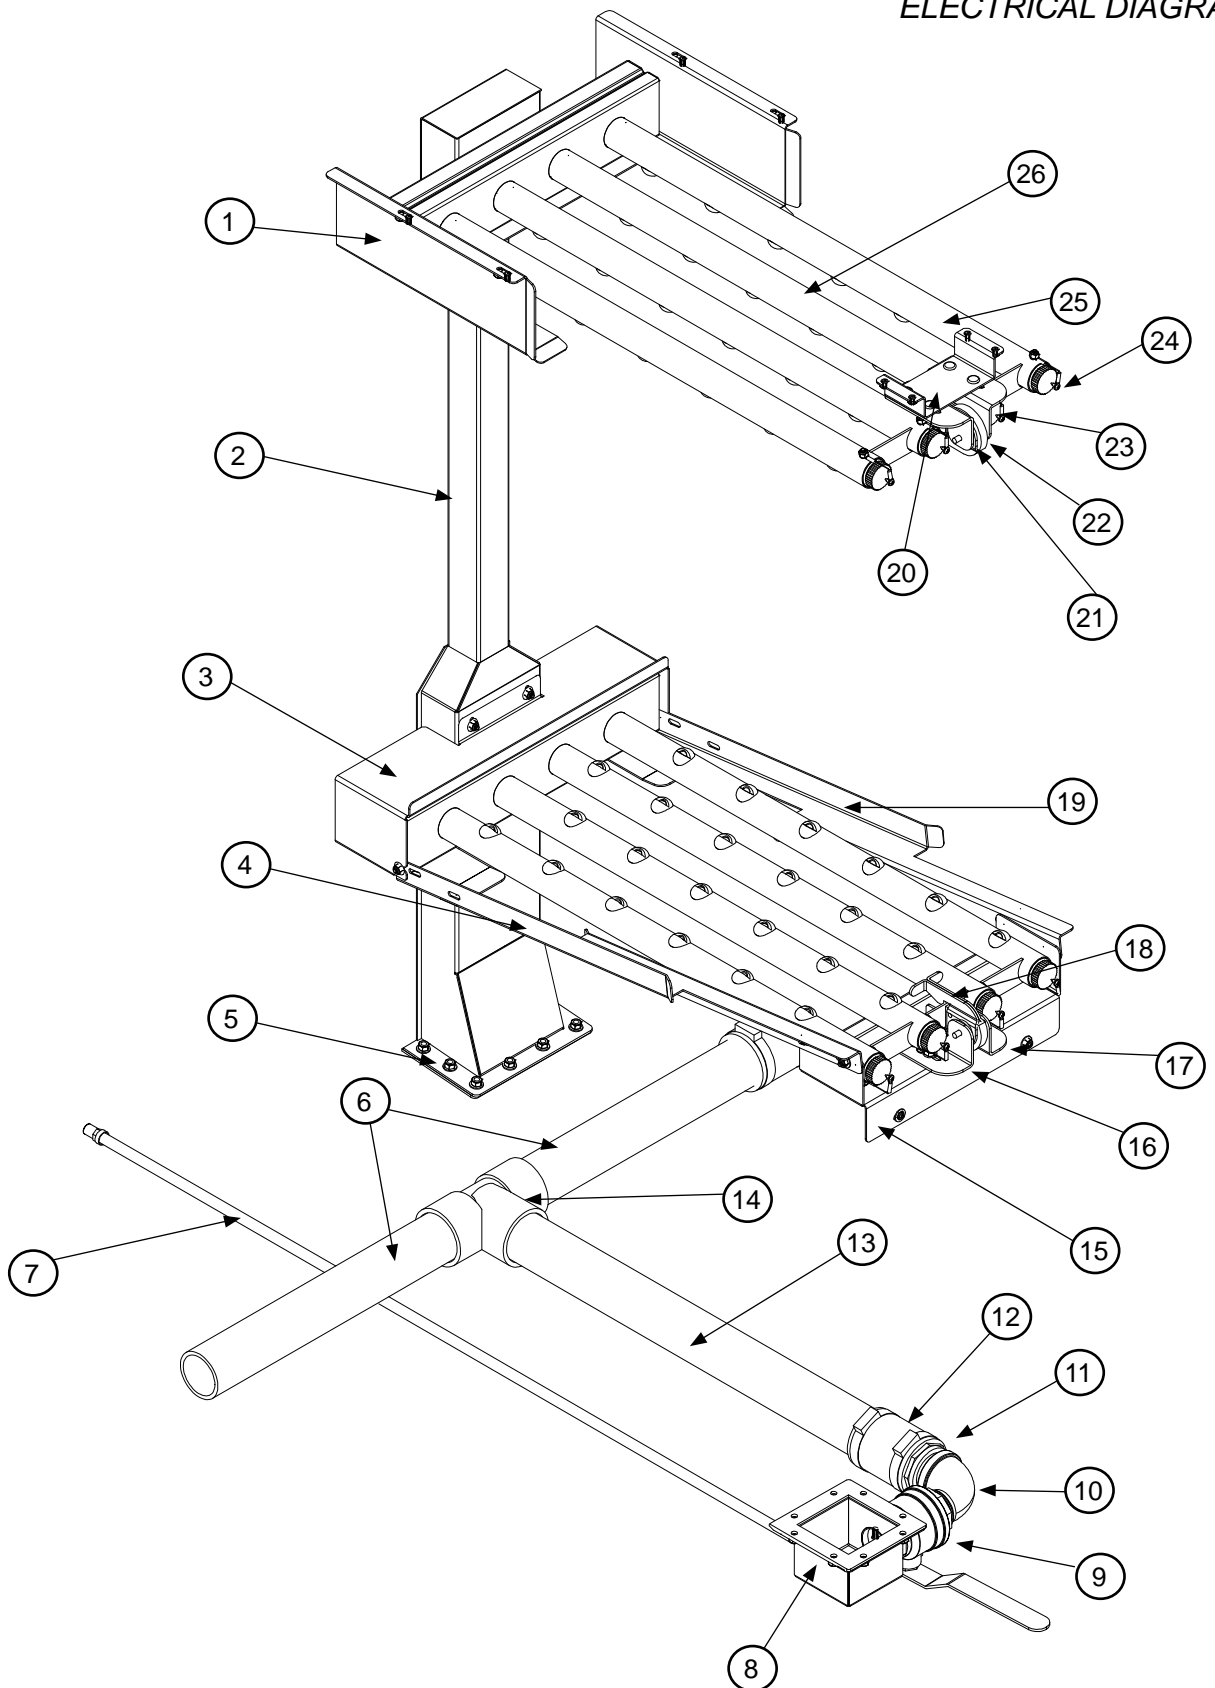

ARM & DRAIN PLUMBING ASSEMBLIES

WASH


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|-----------------|
| | | Complete Drain Plumbing Assembly | 05700-002-79-16 |
| 1 | 1 | Shield, Upper Wash Arm | 05700-002-89-37 |
| 2 | 1 | Wash Manifold Weldment | 05700-002-96-95 |
| 3 | 1 | Shield, Lower Wash Arm | 05700-002-89-38 |
| 4 | 1 | Rail, Left Lower Wash Arm Weldment | 05700-002-90-53 |
| 5 | 1 | Gasket, Wash Manifold Mounting | 05330-002-89-84 |
| 6 | 2 | Tube, Main Drain | 05700-002-66-12 |
| 7 | 1 | Drain Pump Tube Assembly | 05700-002-91-19 |
| 8 | 1 | Drain Cup Weldment | 05700-002-73-72 |
| | 1 | Gasket, Drain Cup | 05330-002-73-47 |
| 9 | 1 | Valve, Ball, 1 1/2" | 04820-111-71-46 |
| | 1 | Handle, Ball Valve | 05700-002-98-10 |
| 10 | 1 | Elbow, 1 1/2" Brass | 04730-206-32-00 |
| 11 | 1 | 1 1/2" MNPT x 1 1/2" Slip | 04730-002-74-06 |
| 12 | 2 | Connector, 2" No Hub | 04730-002-66-87 |
| 13 | 1 | Tube, Main Drain | 05700-002-67-01 |
| 14 | 1 | Tee, 2" PVC | 04730-002-66-09 |
| 15 | 1 | Bracket, Front Lower Wash Arm Weldment | 05700-002-89-96 |
| 16 | 1 | Bracket, Left, Locking Handle | 05700-002-89-35 |
| 17 | 1 | Bracket, Right, Locking Handle | 05700-002-89-38 |
| 18 | 2 | Handle, Arm Locking Weldment | 05700-002-89-93 |
| 19 | 1 | Rail, Right Lower Wash Arm Weldment | 05700-002-90-54 |
| 20 | 1 | Bracket, Front Upper Wash Arm Weldment | 05700-002-89-97 |
| 21 | 1 | Bracket, Right, Locking Handle | 05700-002-89-38 |
| 22 | 1 | Gasket, Locking Handle | 05330-002-89-94 |
| 23 | 1 | Bracket, Left, Locking Handle | 05700-002-89-35 |
| 24 | 4 | Lanyard, 6" Long | 05340-011-72-46 |
| | 4 | Cap, Threaded | 04730-603-12-00 |
| 25 | 1 | Wash Arm Weldment | 05700-002-83-51 |
| 26 | 2 | Wash Arm Assembly | 05700-002-65-45 |

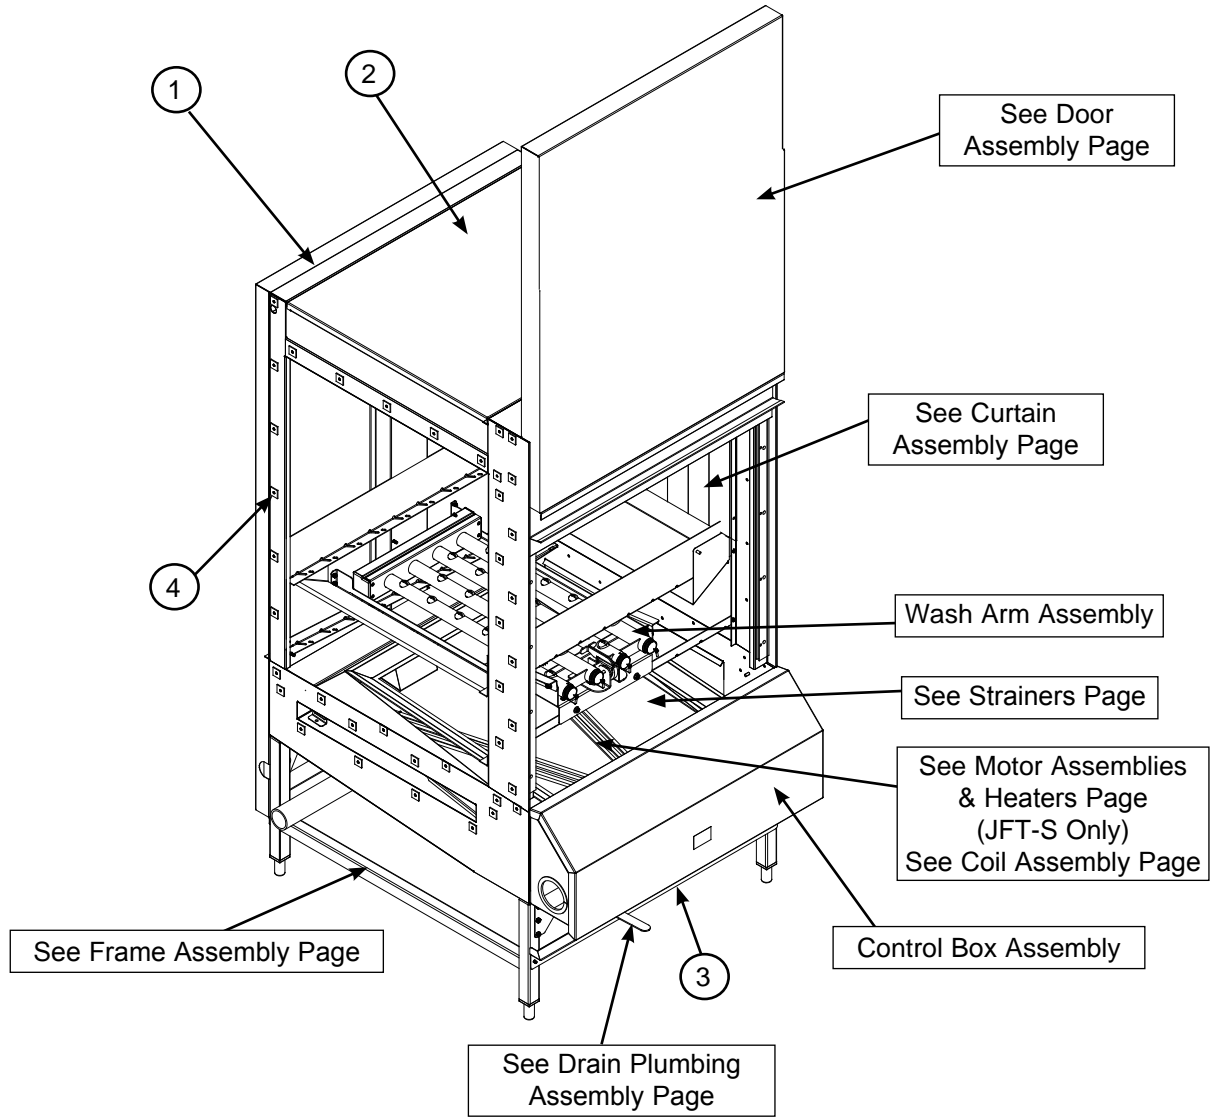

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| | | Gasket, Tub | 05700-002-86-10 |
| 1 | 6 | Cover, Back | 05700-002-64-41 |
| | 1 | Foam, Back Cover | 08115-002-71-33 |
| 2 | 1 | Top Panel Cover | 05700-002-64-40 |
| | 1 | Top Panel Handle (not shown) | 05700-002-67-21 |
| 3 | | Hose Assembly, 65" Wash Steam Coil Supply (JFT-S Only) (Not Shown) | 05700-002-88-00 |
| 4 | 38 | Gasket Spacers | 05330-003-04-12 |

CONTROL BOX ASSEMBLY

**POWER
RINSE**

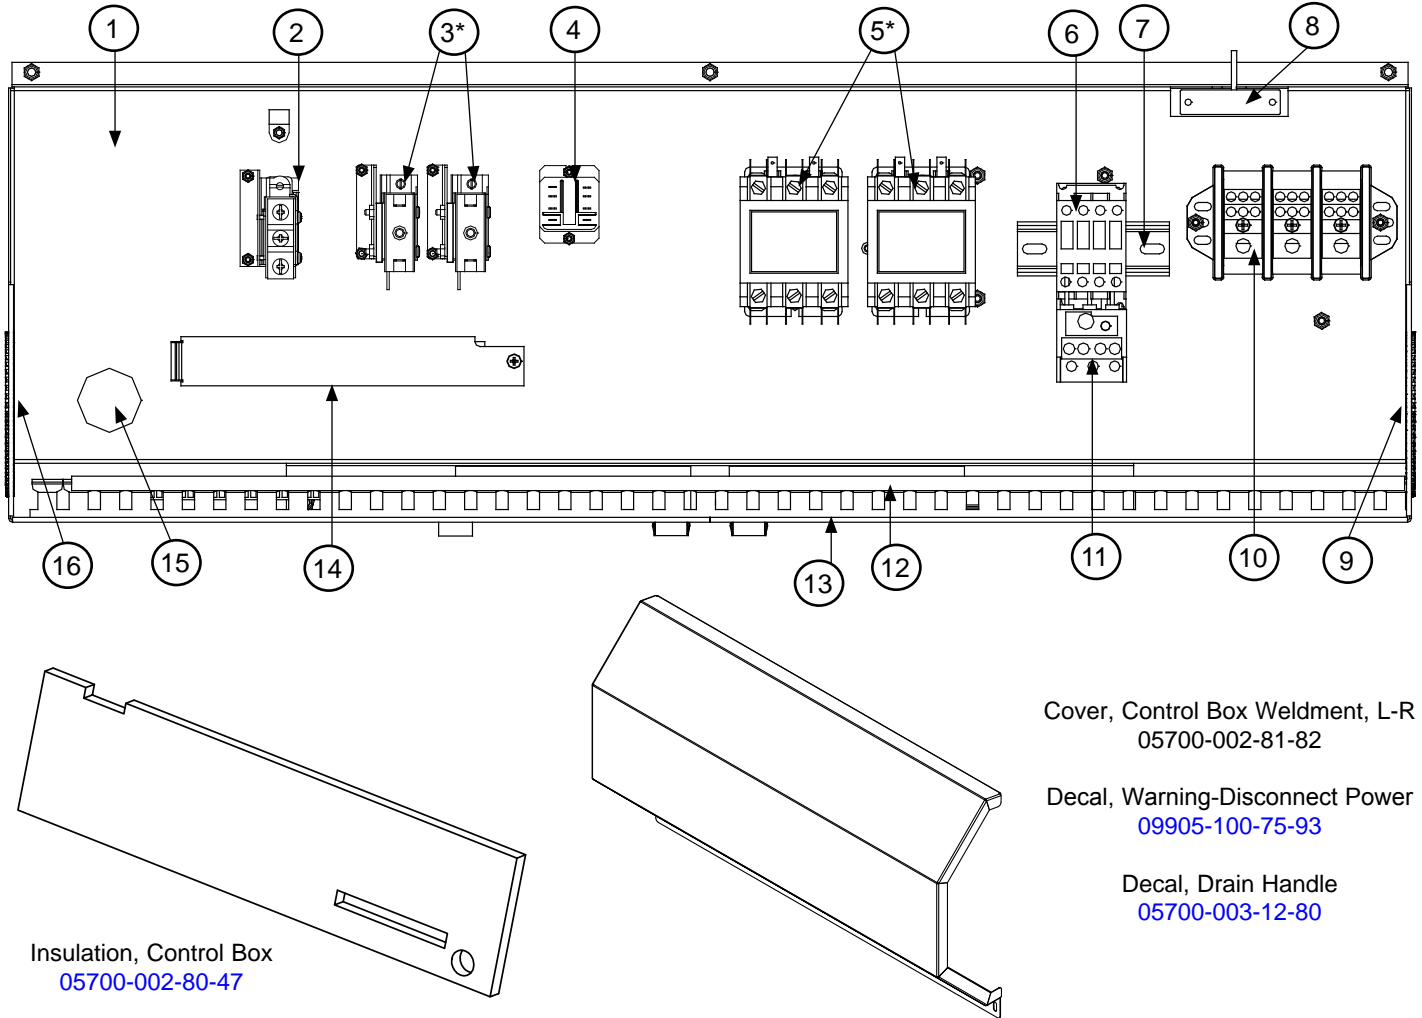

- Cover, Control Box Weldment, L-R
05700-002-81-82
- Decal, Warning-Disconnect Power
09905-100-75-93
- Decal, Drain Handle
05700-003-12-80

Insulation, Control Box
05700-002-80-47

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---|-----------------|
| 1 | 1 | Control Box Weldment | 05700-002-70-62 |
| 2 | 1 | Thermostat | 05930-003-16-65 |
| | 1 | Kit, Thermostat Replacement | 06401-003-18-66 |
| 3* | 2 | Thermostat, High Limit (JFT Only) | 05930-002-83-31 |
| 4 | 1 | Relay, 2 Pole | 05945-111-35-19 |
| 5* | 2 | Contactor, 3 Pole, 50 A (JFT Only) | 05945-002-24-70 |
| 6 | 1 | Contactor, Wash Motor | 05945-111-68-38 |
| 7 | 1 | Din Rail | 05700-002-16-00 |
| 8 | 1 | Switch, Reed | 05930-002-36-80 |
| 9 | 1 | Grommet, 3 1/2 Dia. Rubber | 05700-002-83-05 |
| 10 | 5 | Block, Terminal | 05940-011-48-27 |
| | 1 | Overload, Wash Motor, 10 - 16 Amp, 208-230V Units | 05945-011-84-59 |
| | 1 | Overload, Wash Motor, 5.5-8.5 Amp, 460V Units | 05945-111-68-40 |
| | 1 | Overload, Wash Motor, 4.0-6.3 Amp, 600V Units | 05945-111-81-33 |
| 12 | 1 | Panduit Cover | 05700-002-84-94 |
| 13 | 1 | Panduit Bottom | 05700-002-84-95 |
| 14 | 1 | Thermostat Cover | 05700-002-70-61 |
| 15 | 1 | Sensor, Swing Arm Level | 06680-002-98-62 |
| 16 | 1 | Grommet, 3 1/2 Dia. Rubber | 05700-002-83-05 |


* Not used on steam unit.

ARM & DRAIN PLUMBING ASSEMBLIES


**POWER
RINSE**

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|-----------------|
| | | Complete Drain Plumbing Assembly | 05700-002-79-16 |
| 1 | 1 | Shield, Upper Wash Arm | 05700-002-89-37 |
| 2 | 1 | Wash Manifold Weldment | 05700-002-96-95 |
| 3 | 1 | Shield, Lower Wash Arm | 05700-002-89-38 |
| 4 | 1 | Rail, Left Lower Wash Arm Weldment | 05700-002-90-53 |
| 5 | 1 | Gasket, Wash Manifold Mounting | 05330-002-89-84 |
| 6 | 2 | Tube, Main Drain | 05700-002-66-12 |
| 7 | 1 | Drain Pump Tube Assembly | 05700-002-91-19 |
| 8 | 1 | Drain Cup Weldment | 05700-002-73-72 |
| | 1 | Gasket, Drain Cup | 05330-002-73-47 |
| 9 | 1 | Valve, Ball, 1 1/2" | 04820-111-71-46 |
| | 1 | Handle, Ball Valve | 05700-002-98-10 |
| 10 | 1 | Elbow, 1 1/2" Brass | 04730-206-32-00 |
| 11 | 1 | 1 1/2" MNPT x 1 1/2" Slip | 04730-002-74-06 |
| 12 | 2 | Connector, 2" No Hub | 04730-002-66-87 |
| 13 | 1 | Tube, Main Drain | 05700-002-67-01 |
| 14 | 1 | Tee, 2" PVC | 04730-002-66-09 |
| 15 | 1 | Bracket, Front Lower Wash Arm Weldment | 05700-002-89-96 |
| 16 | 1 | Bracket, Left, Locking Handle | 05700-002-89-35 |
| 17 | 1 | Bracket, Right, Locking Handle | 05700-002-89-38 |
| 18 | 2 | Handle, Arm Locking Weldment | 05700-002-89-93 |
| 19 | 1 | Rail, Right Lower Wash Arm Weldment | 05700-002-90-54 |
| 20 | 1 | Bracket, Front Upper Wash Arm Weldment | 05700-002-89-97 |
| 21 | 1 | Bracket, Right, Locking Handle | 05700-002-89-38 |
| 22 | 1 | Gasket, Locking Handle | 05330-002-89-94 |
| 23 | 1 | Bracket, Left, Locking Handle | 05700-002-89-35 |
| 24 | 4 | Lanyard, 6" Long | 05340-011-72-46 |
| | 4 | Cap, Threaded | 04730-603-12-00 |
| 25 | 1 | Wash Arm Weldment | 05700-002-83-51 |
| 26 | 2 | Wash Arm Assembly | 05700-002-65-45 |


(FOR MODELS WITH A PUMPED FINAL RINSE)

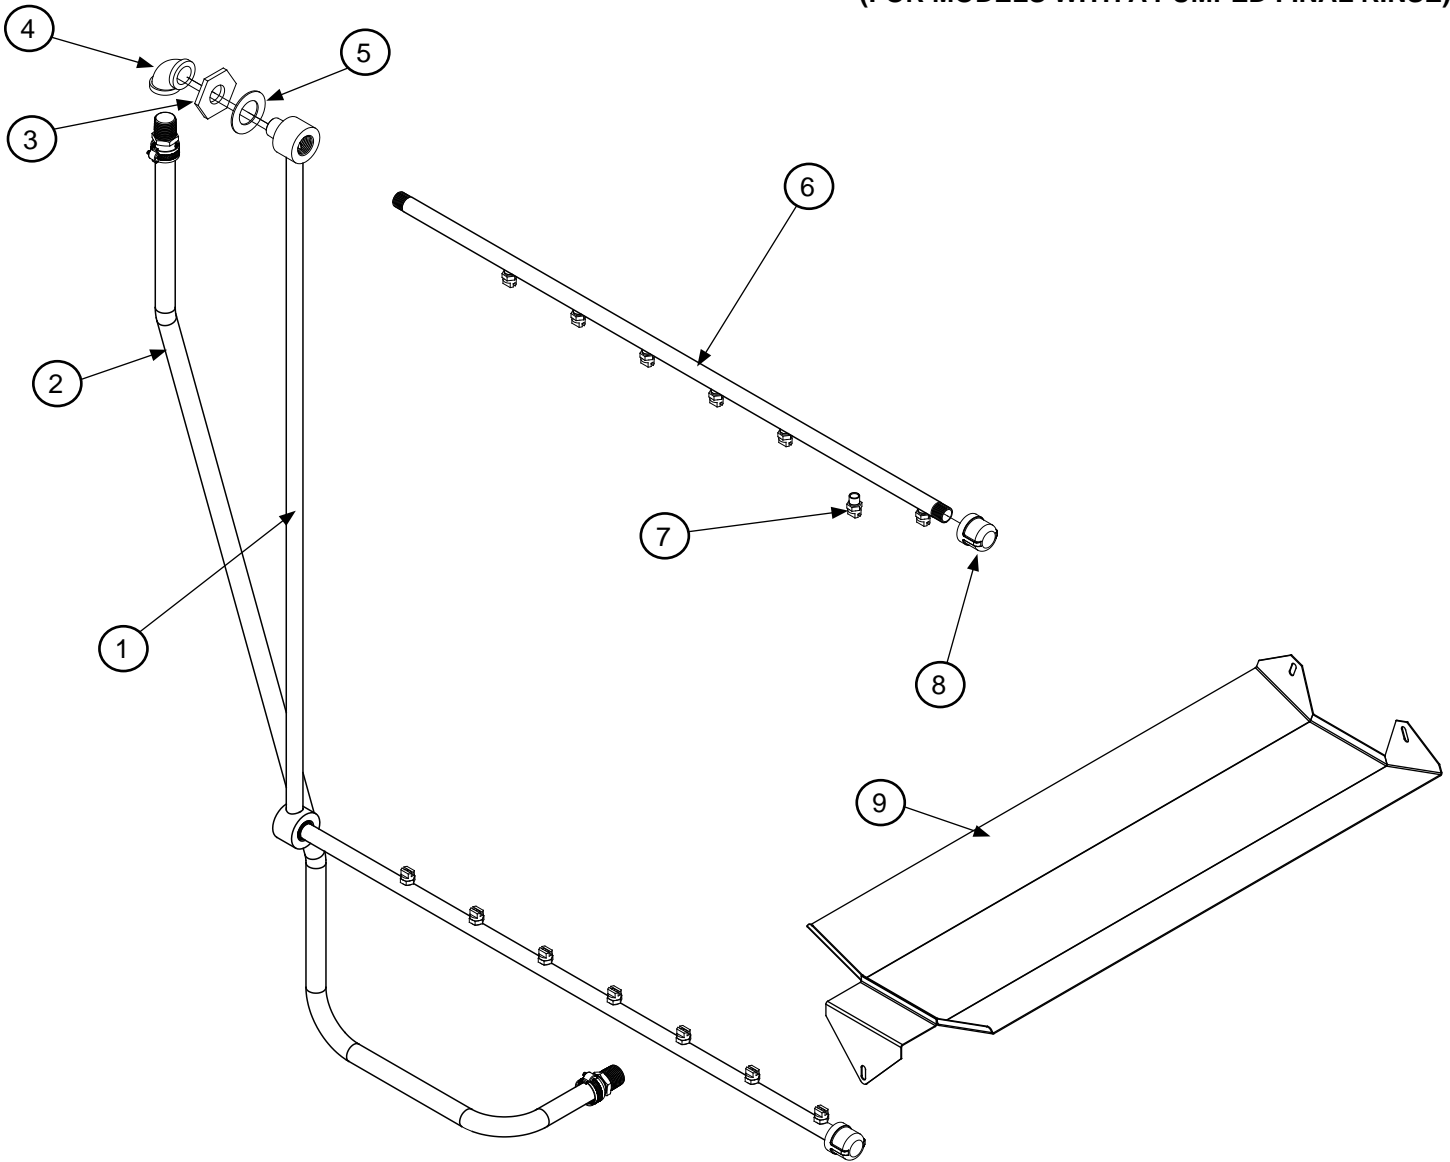

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|-------------------------------|-----------------|
| | 1 | Complete Final Rinse Assembly | 05700-002-67-36 |
| 1 | 1 | Rinse Manifold Weldment | 05700-002-67-50 |
| 2 | 1 | Final Rinse Hose Assembly | 05700-002-88-02 |
| 3 | 1 | Nut, 1/2" NSPT Brass | 04730-002-67-88 |
| 4 | 1 | Elbow, 1/2" NPT 90B Brass | 04730-011-42-96 |
| 5 | 1 | Gasket | 05700-001-17-86 |
| 6 | 2 | Final Rinse Arm | 05700-002-67-37 |
| 7 | 14 | Rinse Arm Jet | 04730-002-73-31 |
| 8 | 2 | Rinse Arm Cap | 05700-002-02-19 |
| 9 | 1 | Runoff Sheet Weldment | 05700-002-84-91 |

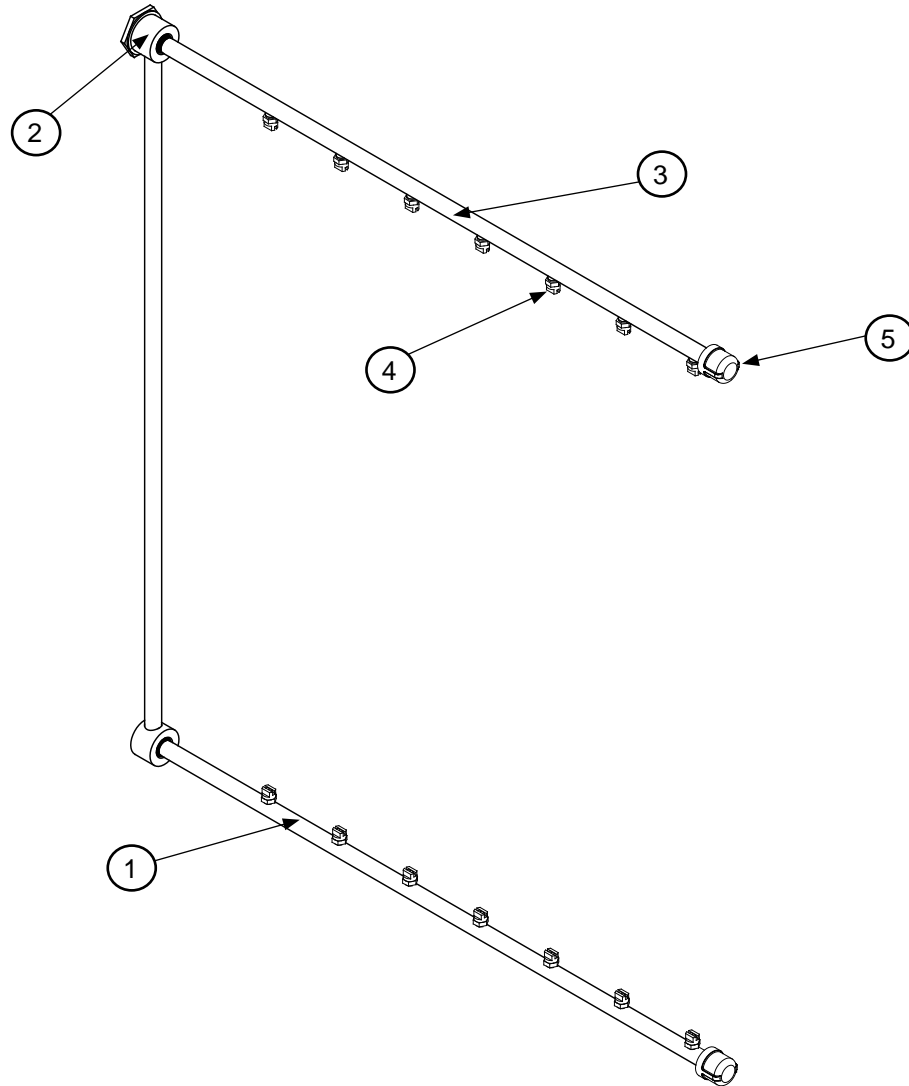


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|-------------------------|---------------------------------|
| 1 | 1 | Rinse Manifold Weldment | 05700-002-67-50 |
| 2 | 1 | Gasket, Steam Coil | 05700-002-67-50 |
| 3 | 1 | Final Rinse Arm | 05700-002-67-37 |
| 4 | 14 | Rinse Arm Jet | 04730-002-73-31 |
| 5 | 2 | Rinse Arm Cap | 05700-002-02-19 |

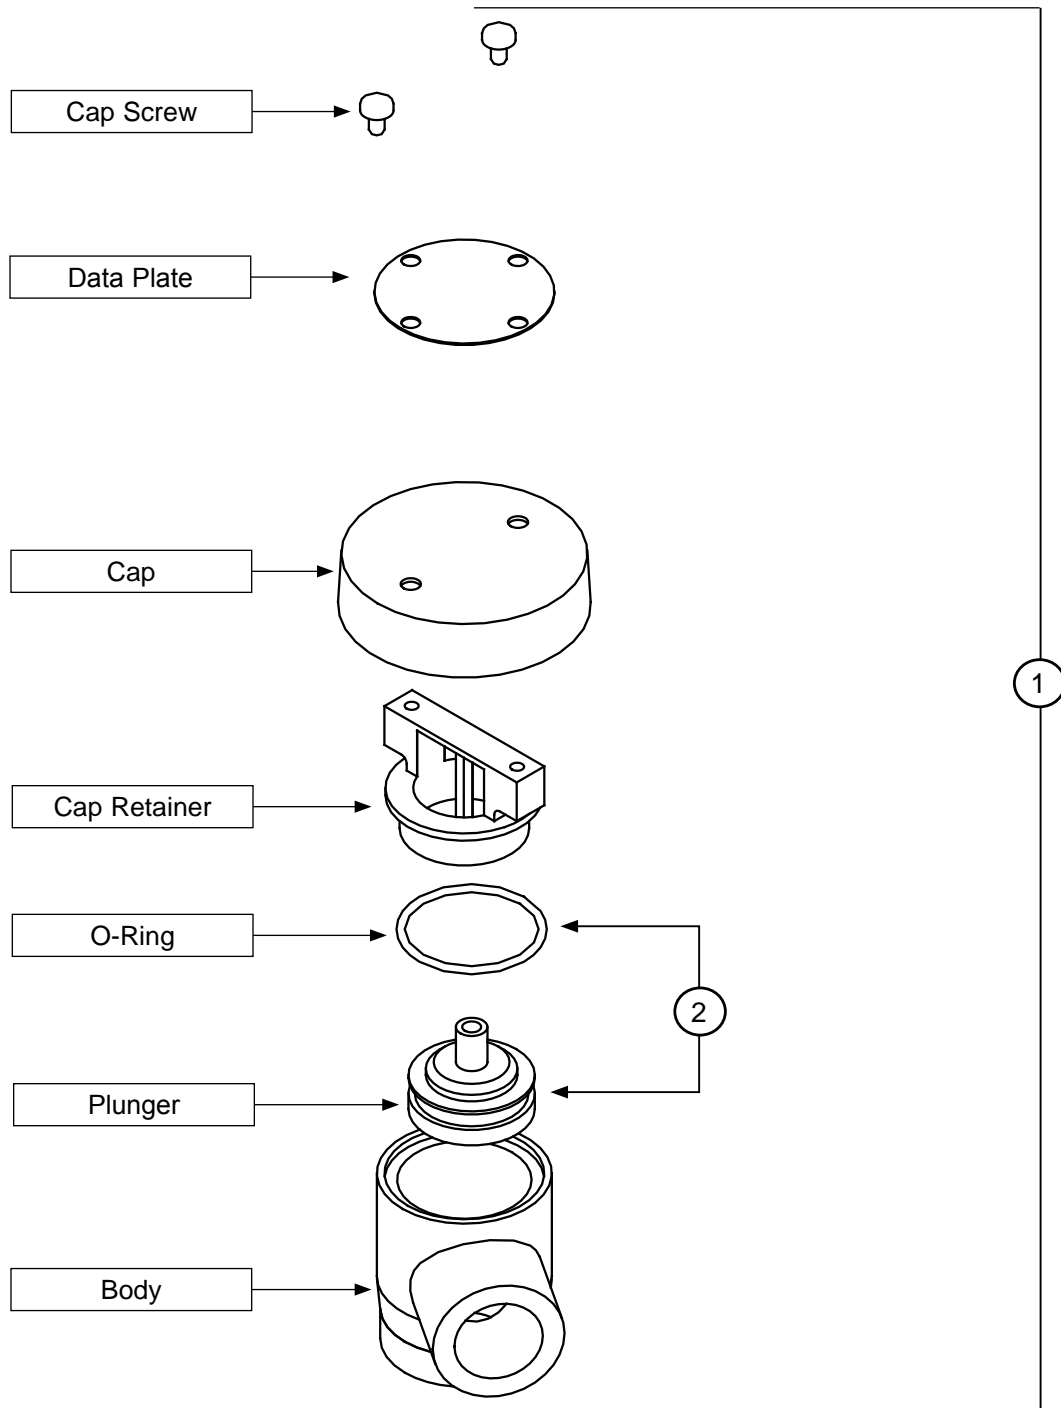


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|----------------------------------|---------------------------------|
| 1 | 1 | Complete Vacuum Breaker Assembly | 04820-002-53-77 |
| 2 | 1 | Components of Repair Kit | 06401-003-06-24 |


Rinse Air Gap Assembly

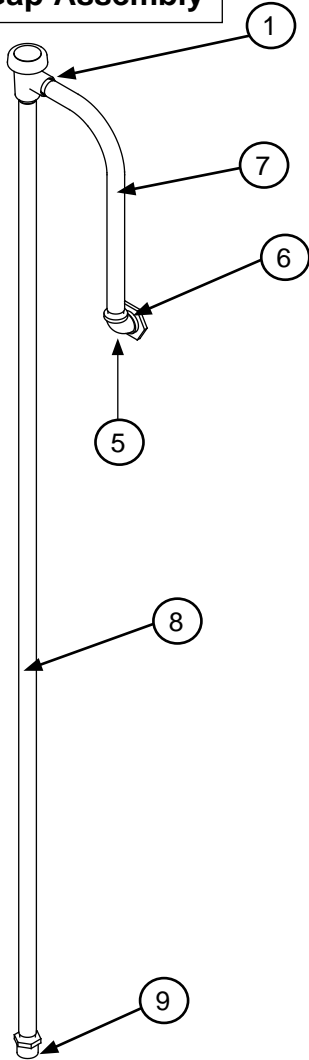

Air Gap Assembly

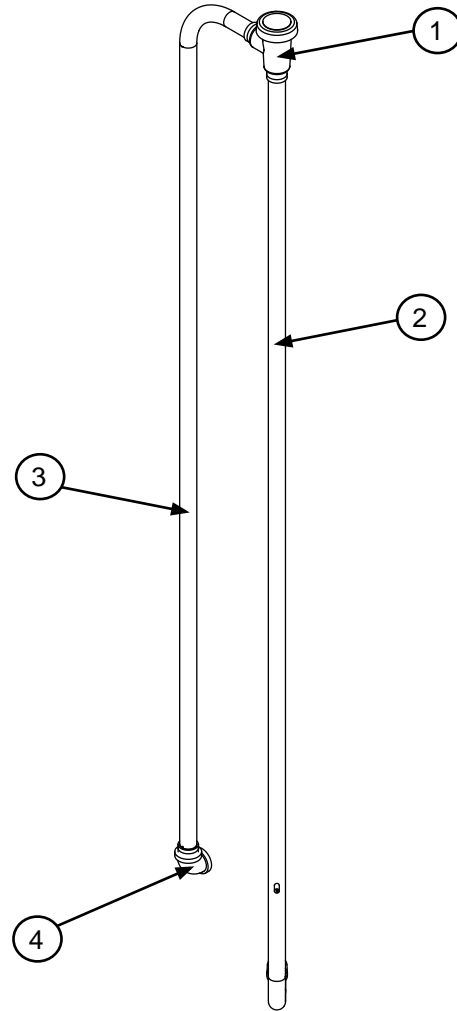

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| | | Rinse Air Gap Assembly | 05700-003-19-43 |
| | | Air Gap Assembly | 05700-003-19-44 |
| 1 | 2 | Vacuum Breaker Assembly | 04820-002-53-77 |
| 2 | 1 | Fill Tube Weldment | 05700-002-67-62 |
| 3 | 1 | Fill Tube Weldment, 53-1/2" | 05700-003-19-42 |
| 4 | 1 | Elbow, 3/4", 90B Brass | 04730-206-13-00 |
| 5 | 1 | Elbow, 1/2" NPT x 90 Deg. Brass | 04730-011-42-96 |
| 6 | 1 | Nut, Jam, 1/2" SPT | 04730-002-67-88 |
| 7 | 1 | Fill Tube Weldment | 05700-003-07-10 |
| 8 | 1 | Fill Tube Weldment, 56-1/2" | 05700-003-19-40 |
| 9 | 1 | Bushing, Hix 3/4" MNPT - 1/2" FNPT Brass | 04730-002-56-27 |

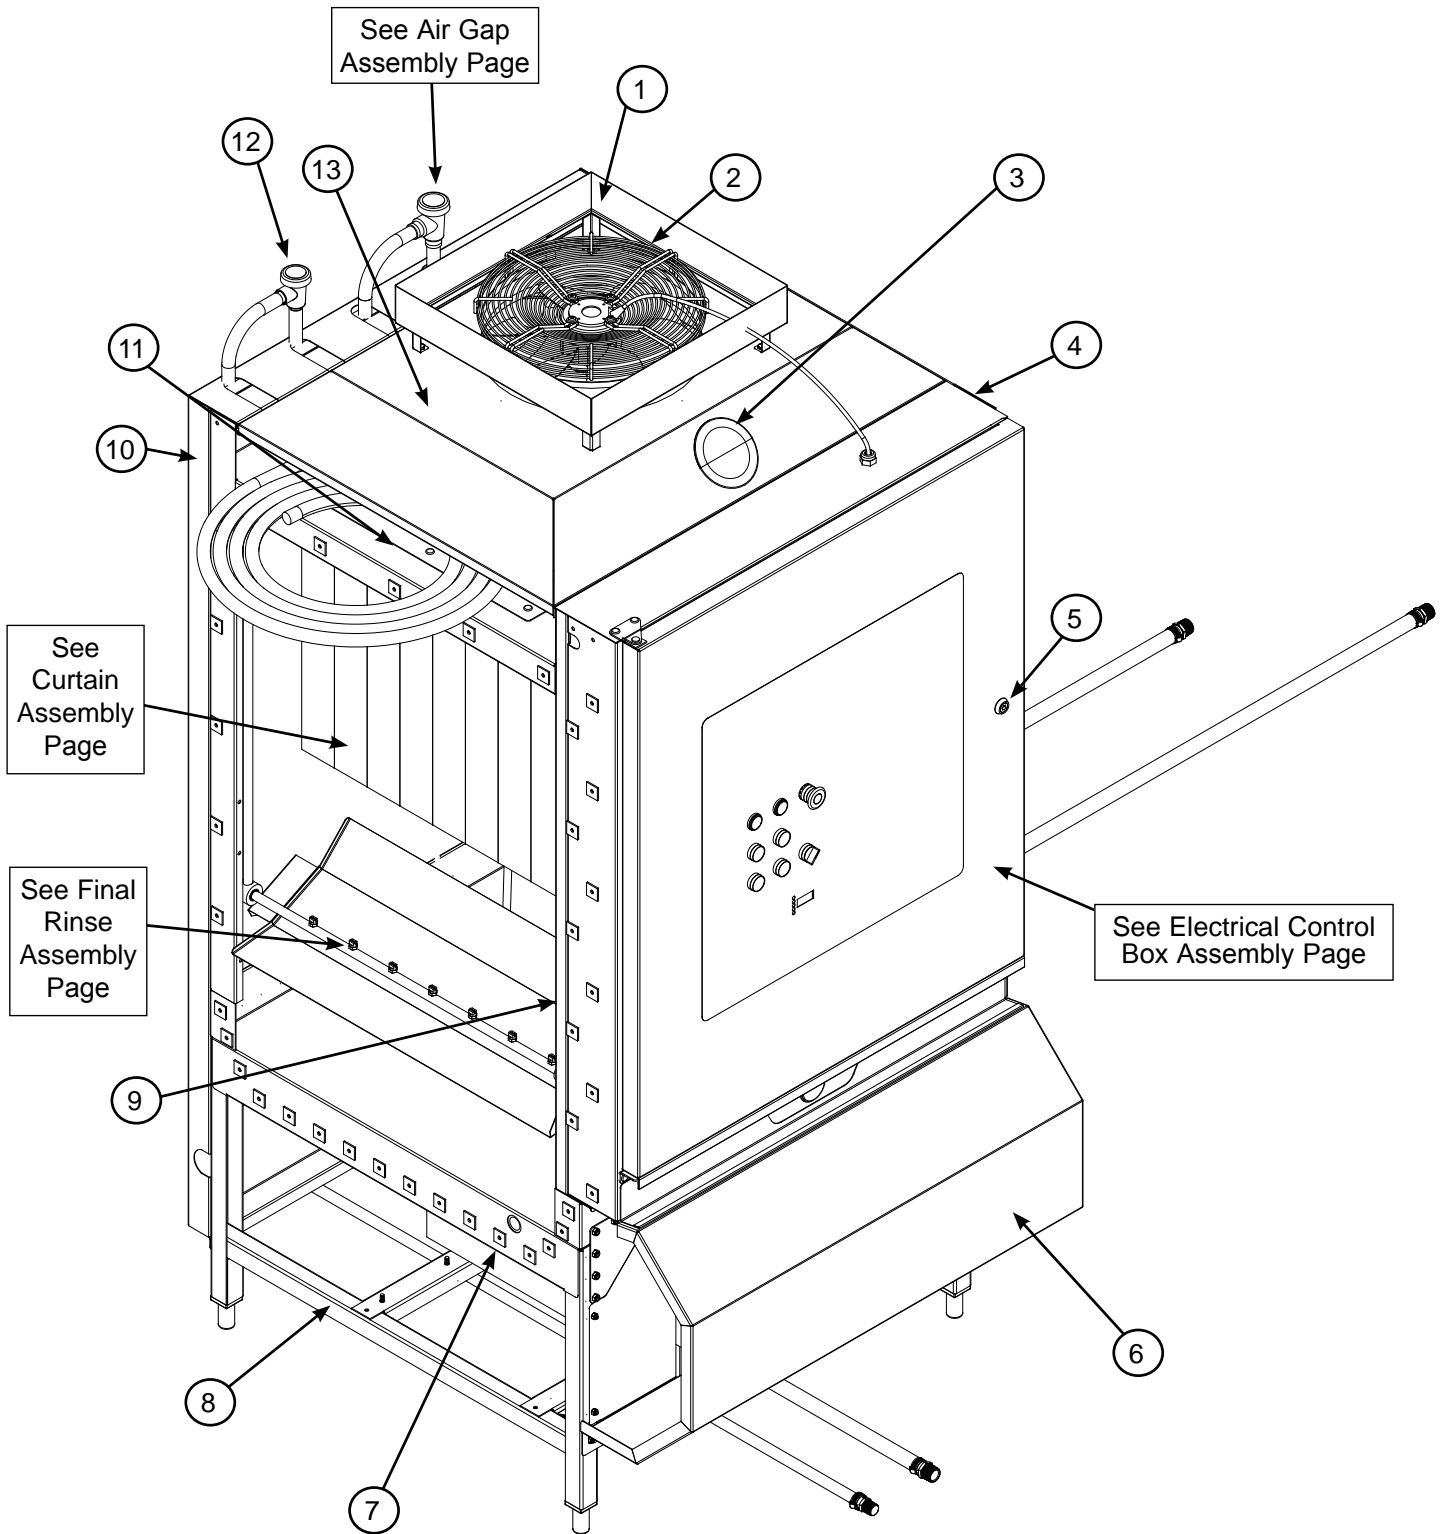


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| 1 | 1 | Adapter, Vent Weldment | 05700-003-04-37 |
| 2 | 1 | Vent Exhaust Fan | 06105-002-86-46 |
| 3 | 1 | Top Panel Handle | 05700-002-67-21 |
| 4 | 1 | End Cap Panel Weldment (not shown) | 05700-002-70-99 |
| 5 | 1 | Latch, Door Compression | 05340-002-80-97 |
| 6 | 1 | Lower Cover Weldment, L-R | 05700-002-71-63 |
| | 1 | Lower Cover Weldment, R-L | 05700-002-88-29 |
| 7 | 38 | Gasket Spacers (not shown) | 05330-003-04-12 |
| 8 | 1 | Frame Assembly | 05700-003-05-28 |
| 9 | 1 | Rail Addition (not shown) | 05700-002-85-78 |
| 10 | 1 | Rear Dress Panel | 05700-002-72-53 |
| | 1 | Foam, Back Cover | 08115-002-71-33 |
| 11 | 1 | Vent Damper, 2 per (Located beneath the Exhaust Panel) | 05700-002-83-78 |
| 12 | | No Pump Final Rinse Assembly | 05700-003-07-15 |
| 13 | 1 | Exhaust Panel Weldment | 05700-002-99-23 |

*Item not shown.

**Not used on the steam unit.

***Used on steam unit only.

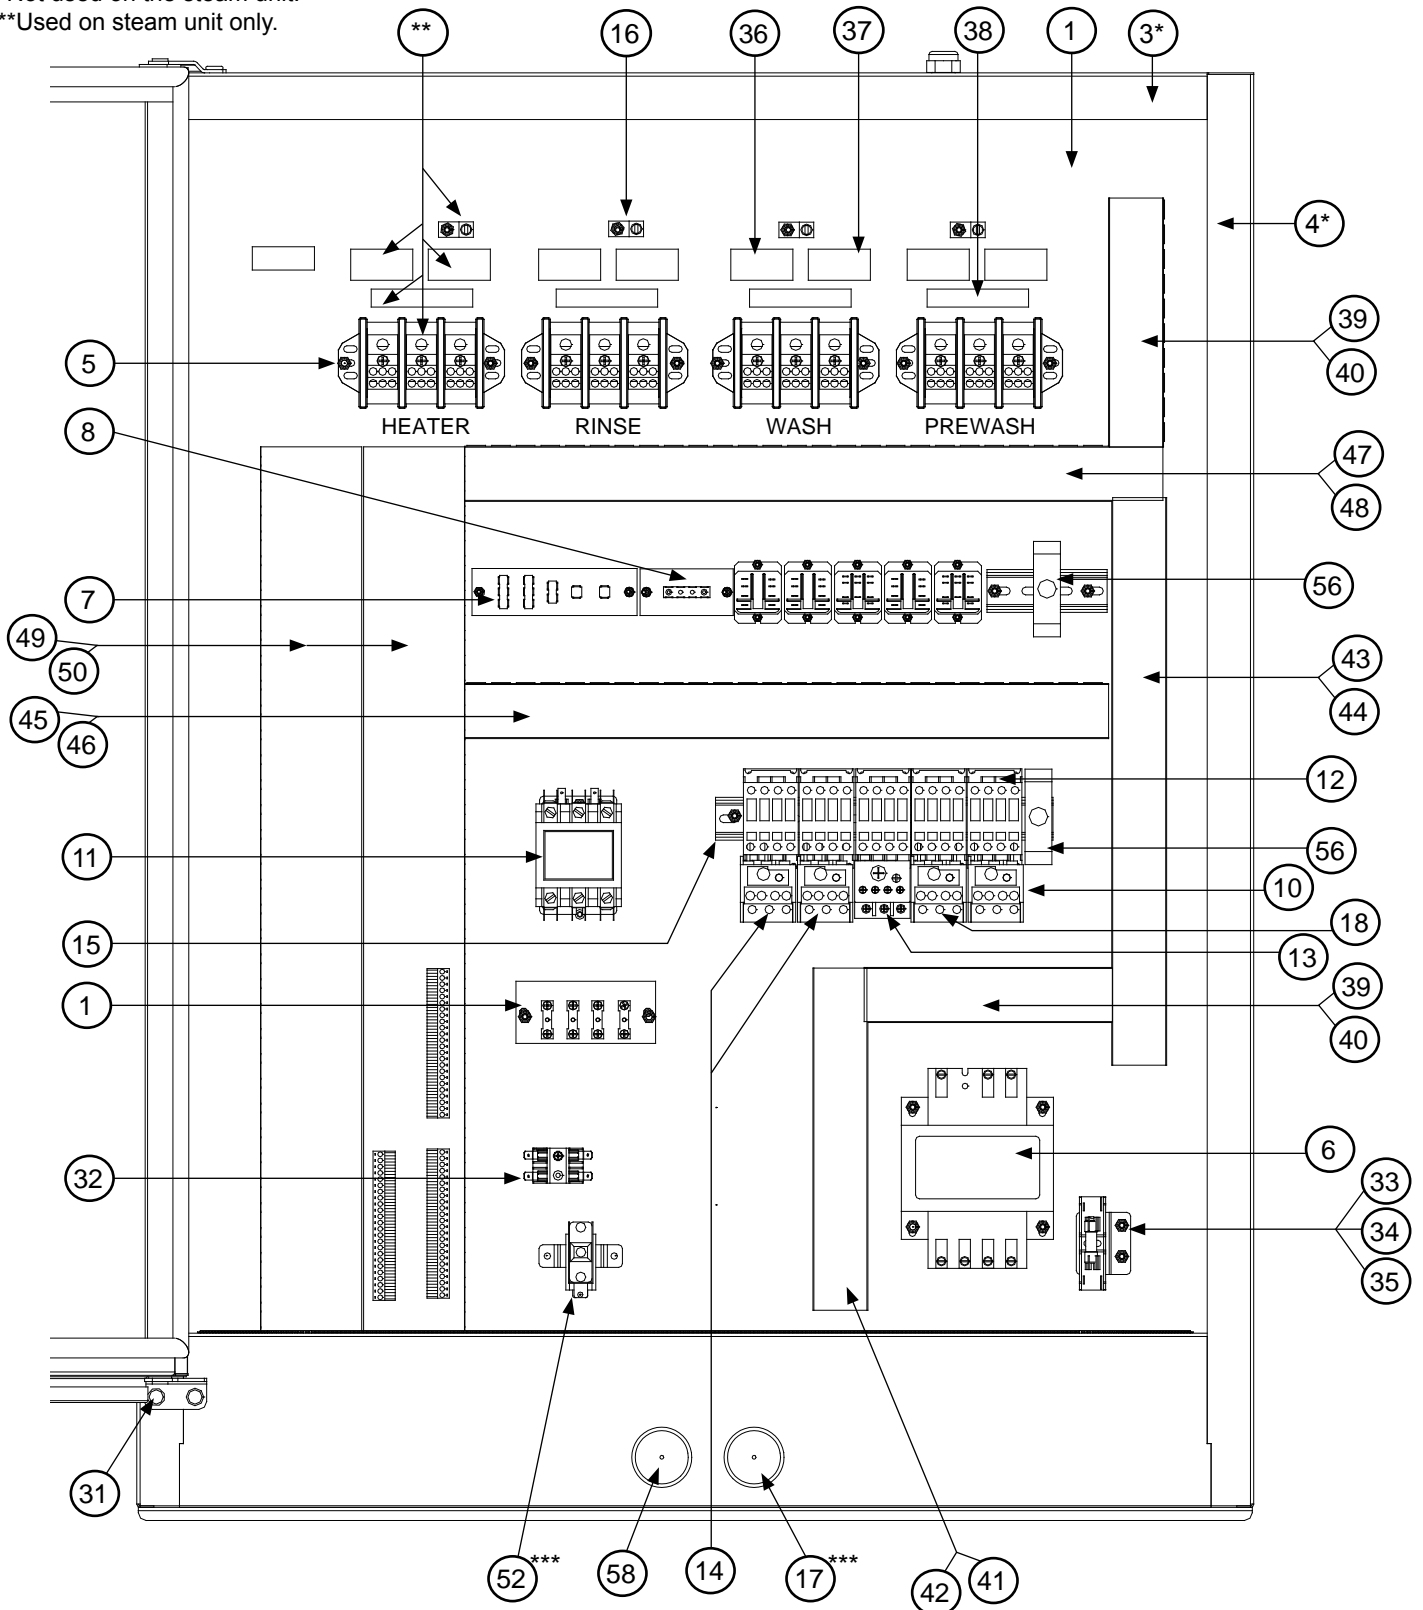

ELECTRICAL CONTROL BOX ASSEMBLY


PARTS

(CONTINUED)

*Item not shown.

**Not used on the steam unit.

***Used on steam unit only.

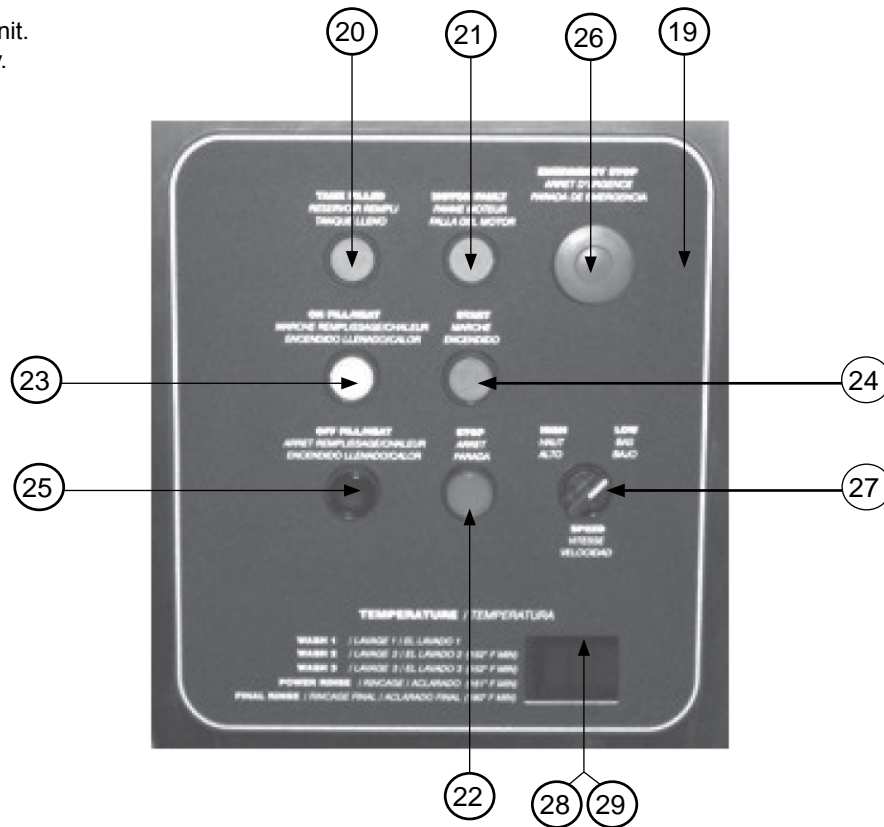

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|-----------------|
| 1 | 1 | Terminal Board | 05940-021-89-41 |
| 2 | 3 | Relay, 2 Pole | 05945-111-35-19 |
| 3* | 2 | Seal, Electrical Box Short (Not Shown) | 05700-002-86-48 |
| 4* | 2 | Seal, Electrical Box Long (Not Shown) | 05700-002-86-49 |
| 5 | 4 | Block (Only 3 used on JFT-S) | 05940-011-48-27 |
| 6 | 1 | Transformer, 208-115V, 500VA, 208 unit | 05950-002-95-32 |
| | 1 | Transformer, 240/480V-12, 5KVA, 240-460 unit | 05950-002-46-10 |
| 7 | 1 | Terminal Board | 05940-002-78-97 |
| 8 | 1 | Terminal Board, 8 Position | 05940-021-94-85 |
| 9 | 2 | Relay, 3 Pole | 05945-111-72-51 |
| 10 | 1 | Refer to page entitled Motor Overloads | N/A |
| 11** | 1 | Contactora, 3 Pole, 50A (JFT Only) | 05945-002-24-70 |
| 12 | 5 | Contactora, Wash Motor | 05945-111-68-38 |
| 13 | 1 | Refer to page entitled Motor Overloads | N/A |
| 14 | 2 | Refer to page entitled Motor Overloads | N/A |

(CONTINUED)

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|-------|-----|--|---------------------------------|
| 15 | 1 | Din Rail, 10 7/8" | 05700-002-93-96 |
| 16 | 4 | Ground Lug (Only 3 used on JFT-S) | 05940-200-76-00 |
| 17*** | 1 | Steam Pressure Gauge, 0-60 | 06685-002-93-43 |
| 18 | 1 | Refer to page entitled Motor Overloads | N/A |
| 19 | 1 | Decal, Flight Control Panel (Jackson) (not shown) | 09905-002-97-87 |
| 20 | 1 | Light, Green | 05945-002-80-79 |
| 21 | 1 | Light, Amber | 05945-002-80-83 |
| 22 | 1 | Switch, Stop | 05930-002-80-73 |
| 23 | 1 | Switch, ON/FILL Heat | 05930-002-80-59 |
| 24 | 1 | Switch, Start | 05930-002-80-60 |
| 25 | 1 | Switch, OFF/FILL Heat | 05930-002-80-69 |
| 26 | 1 | Switch, Emergency Stop | 05930-002-80-72 |
| 27 | 1 | Switch, Speed | 05930-002-80-74 |
| 28 | 1 | Gauge, Cyclic (Temperature) | 06685-002-74-86 |
| 29 | 1 | Gauge Cover | 05700-002-75-62 |
| 30 | 1 | Hinge, Upper Control Box | 05700-002-70-45 |
| 31 | 1 | Hinge, Lower Control Box | 05700-002-71-59 |
| 32 | 1 | Fuse Holder | 05920-401-03-14 |
| 33 | 1 | Bracket, Circuit Breaker Mounting | 05700-002-91-66 |
| 34 | 1 | Fuse Holder | 05920-011-72-89 |
| 35 | 1 | Fuse, 2A, 460V (208-240V units) | 05920-002-67-30 |
| | | Fuse, 1A, 460V (460-600V units) | 05920-002-67-23 |
| 36 | 4 | Decal, Connection Point Caution (Only 3 used on JFT-S) | 09905-002-87-00 |
| 37 | 4 | Decal, Connection Point Wiring (Only 3 used on JFT-S) | 09905-002-87-01 |
| 38 | 4 | Decal, L1, L2, L3 (Only 3 used on JFT-S) | 09905-101-12-66 |
| 39 | 2 | Top, Panduit 1 1/2" x 8" | 05700-002-87-28 |
| 40 | 2 | Bottom, Panduit 1 1/2" x 8" | 05700-002-91-61 |
| 41 | 1 | Top, Panduit 1 1/2" x 11" | 05700-002-87-27 |
| 42 | 1 | Bottom, Panduit 1 1/2" x 11" | 05700-002-87-26 |
| 43 | 1 | Top, Panduit 1 1/2" x 18 1/4" | 05700-002-91-62 |
| 44 | 1 | Bottom, Panduit 1 1/2" x 18 1/4" | 05700-002-91-63 |

ELECTRICAL CONTROL BOX ASSEMBLY

PARTS

(CONTINUED)

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|-------|-----|--|-----------------|
| 45 | 1 | Top, Panduit 1 1/2" x 20 3/4" | 05700-002-87-24 |
| 46 | 1 | Bottom, Panduit 1 1/2" x 20 3/4" | 05700-002-87-25 |
| 47 | 1 | Top, Panduit 1 1/2" x 22 1/2" | 05700-002-87-23 |
| 48 | 1 | Bottom, Panduit 1 1/2" x 22 1/2" | 05700-002-87-20 |
| 49 | 2 | Top, Panduit 3" x 28" | 05700-002-87-30 |
| 50 | 2 | Bottom, Panduit 3" x 28" | 05700-002-87-29 |
| 51 | | Key, Control Box 5/16 Hex | 05340-002-94-50 |
| 52*** | 1 | Thermostat, Corkscrew (Note: Placed in control box in upside down position) | 06680-500-01-77 |
| 53* | 3 | Plug, Female 24 Position | 05935-002-93-15 |
| 54* | 1 | Transformer, 600-208V, 3KVA, 600V unit (Used for the drive, blower, and exhaust fan) | 05950-002-94-68 |
| 55* | 1 | Transformer, 600-120V, .5KVA, 600V unit (Used for controls) | 05950-002-94-98 |
| 56 | 2 | Delay Timer (Uses 2 for a unit with a blower) | 05945-011-65-44 |
| | 1 | Din Rail | 05700-002-16-00 |
| 57* | 1 | Grommet, 34 1/2" Assembly | 05700-003-12-00 |
| 58 | 1 | Water Pressure Gauge, 0-100 | 06680-011-86-42 |
| 59* | 1 | Brace, control Box Door | 05700-003-24-58 |
| 60* | 4 | Button Guard, Control Box | 05700-003-23-24 |

*Item not shown.

**Not used on the steam unit.

***Used on steam unit only.

JFT

208V, 60HZ, 3PH
 240V, 60HZ, 3PH
 460V, 60HZ, 3PH
 600V, 60HZ, 3PH

Prewash Motor

05945-011-84-59
 05945-011-84-59
 05945-111-68-40
 05945-111-69-13

Wash Motor

05945-011-84-59
 05945-011-84-59
 05945-111-68-40
 05945-111-69-13

Rinse Motor

05945-111-68-40
 05945-111-68-40
 05945-111-68-41
 05945-111-69-12

Optional Final Rinse Motor

05945-111-68-41
 05945-111-68-41
 05945-111-69-13
 05945-111-68-39

JFT

208V, 60HZ, 3PH
 240V, 60HZ, 3PH
 460V, 60HZ, 3PH
 600V, 60HZ, 3PH

Drive Motor

05945-111-69-13
 05945-111-69-13
 05945-002-71-09
 05945-111-68-39

Exhaust Fan Motor

05945-111-68-39
 05945-111-68-39
 05945-111-69-12
 05945-111-68-39

Blower Dryer Motor

05945-111-68-40
 05945-111-68-40
 05945-111-68-41
 05945-111-68-40

JFT-S

208V, 60HZ, 3PH
 240V, 60HZ, 3PH
 460V, 60HZ, 3PH
 600V, 60HZ, 3PH

Prewash Motor

05945-011-84-59
 05945-011-84-59
 05945-111-68-40
 05945-111-69-13

Wash Motor

05945-011-84-59
 05945-011-84-59
 05945-111-68-40
 05945-111-69-13

Rinse Motor

05945-111-68-40
 05945-111-68-40
 05945-111-68-41
 05945-111-69-12

Optional Final Rinse Motor

05945-111-68-41
 05945-111-68-41
 05945-111-69-13
 05945-111-68-39

JFT-S

208V, 60HZ, 3PH
 240V, 60HZ, 3PH
 460V, 60HZ, 3PH
 600V, 60HZ, 3PH

Drive Motor

05945-111-69-13
 05945-111-69-13
 05945-002-71-09
 05945-111-69-13


Exhaust Fan Motor

05945-111-68-39
 05945-111-68-39
 05945-111-69-12
 05945-111-68-39

Blower Dryer Motor

05945-111-68-40
 05945-111-68-40
 05945-111-68-41
 05945-111-68-40


BOOSTER HEATER & FRAME ASSEMBLY

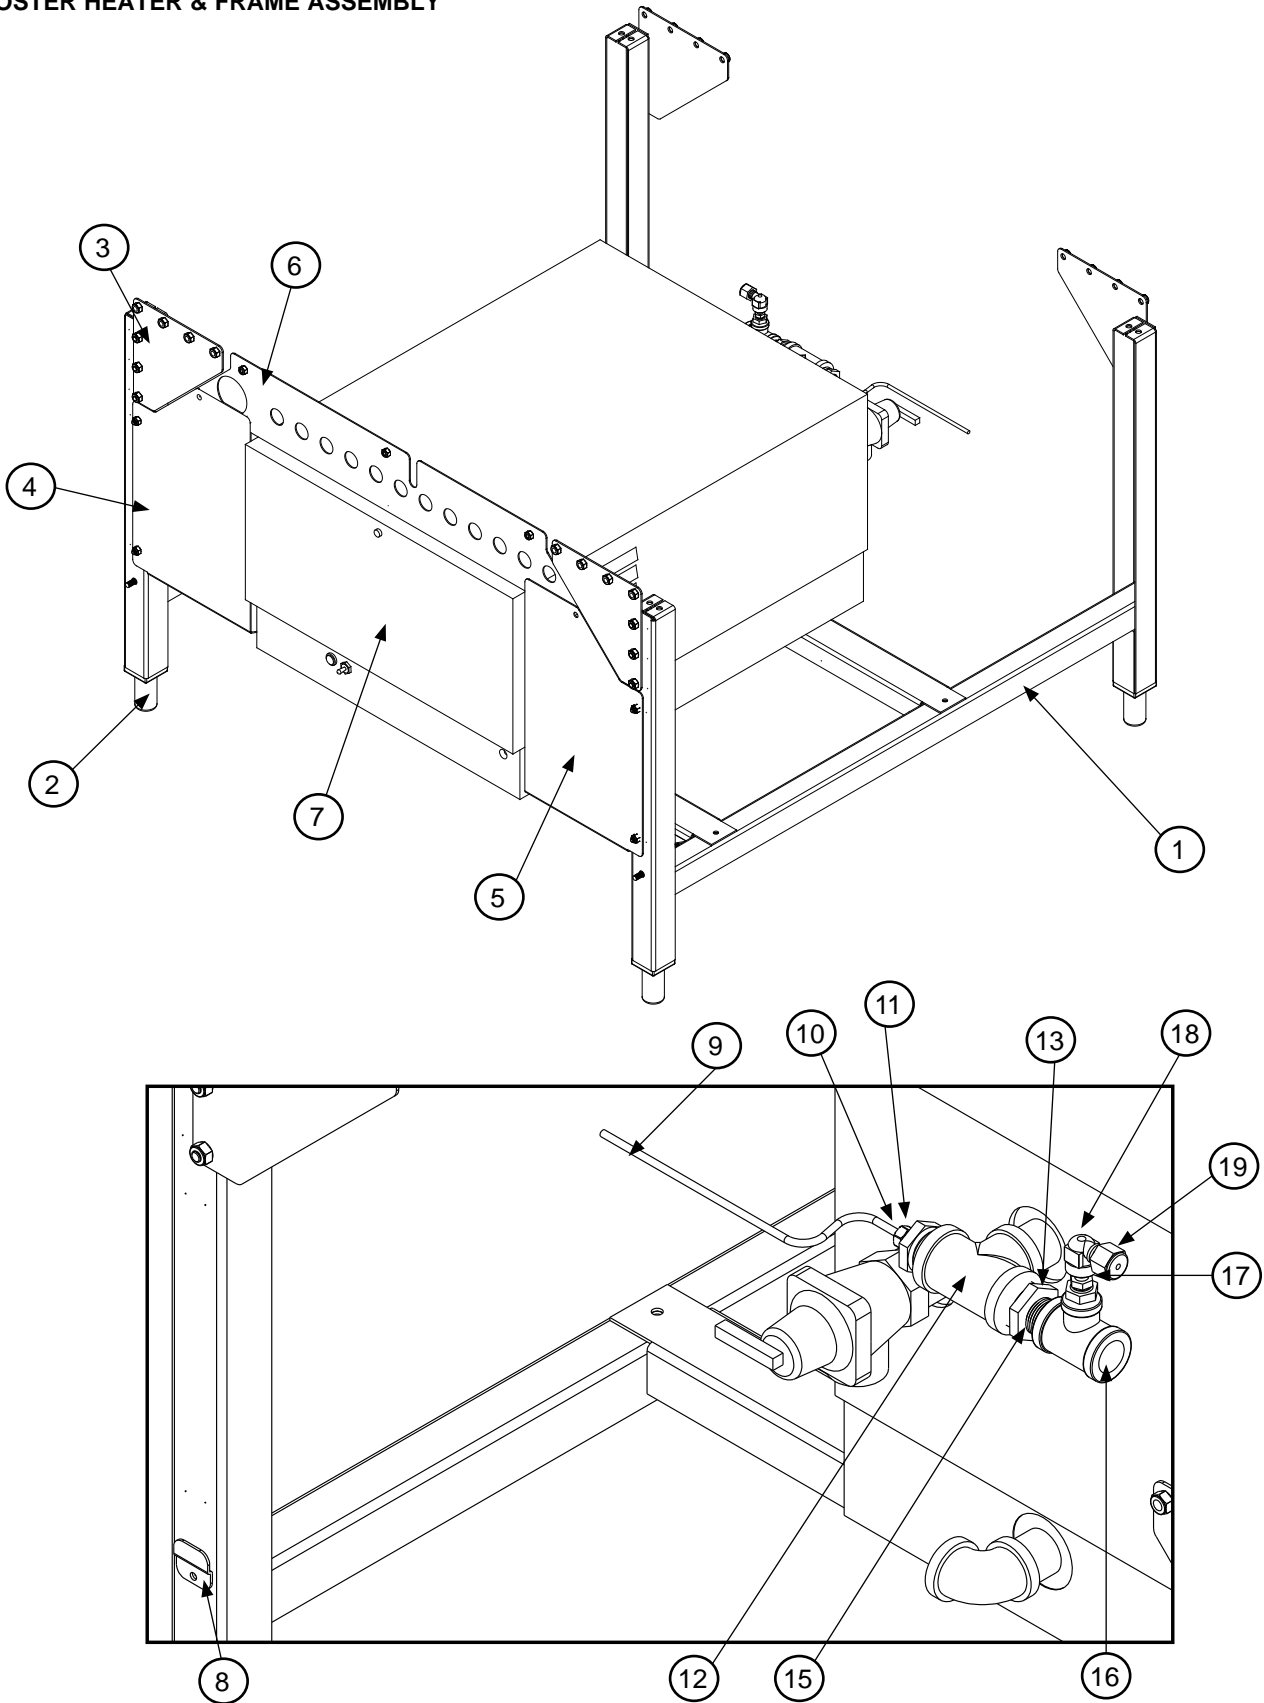

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| 1 | 1 | Stand, Weldment | 05700-002-70-51 |
| 2 | 4 | Bullet Foot | 05340-108-02-06 |
| 3 | 4 | Support Bracket | 05700-002-64-07 |
| 4 | 1 | Panel, Dryer Lower Left | 05700-002-72-04 |
| 5 | 1 | Panel, Dryer Lower Right | 05700-002-90-40 |
| 6 | 1 | Bracket, Conduit Electrical Section | 05700-002-86-96 |
| 7 | 1 | Heater, 27KW, 208V, 3PH Booster | 04540-500-05-00 |
| | 1 | Heater, 27KW, 240V, 3PH Booster | 04540-500-02-00 |
| | 1 | Heater, 27KW, 460V, 3PH Booster | 04540-500-12-00 |
| | 1 | Heater, 45KW, 600V, 3PH Booster | 04540-002-94-73 |
| 8 | 2 | Clip, Panel | 05700-002-90-41 |
| 9 | 1 | Temperature Probe | 06680-002-16-80 |
| 10 | 1 | Fitting, Imperial Brass | 05310-924-02-05 |
| 11 | 1 | Fitting, Thermostat Booster Heater | 05700-002-93-74 |
| 12 | 1 | Tee, 3/4" x 3/4" x 3/4" NPT Brass | 04730-211-01-34 |
| 13 | 1 | Bushing, Hex 3/4" MNPT x 1/2" FNPT Brass | 04730-002-56-27 |
| 14 | 1 | Nipple, Close 1/2" Brass | 04730-207-15-00 |
| 15 | 1 | Tee, 1/2" x 1/2" x 1/4" FNPT Brass | 04730-002-22-56 |
| 16 | 1 | Bushing, 1/4" x 1/8" Stainless | 04730-003-05-61 |
| 17 | 1 | Valve, Check | 04820-111-51-14 |
| 18 | 1 | Outlet Elbow Ftg. | 04820-111-51-18 |
| 19 | 1 | Nut, P/P For 1/8" Tubing | 04730-011-59-45 |
| 20 | 1 | Elbow, 3/4" 90B NPT Brass | 04730-206-13-00 |

STEAM BOOSTER ASSEMBLY

Bottom View of Steam Booster

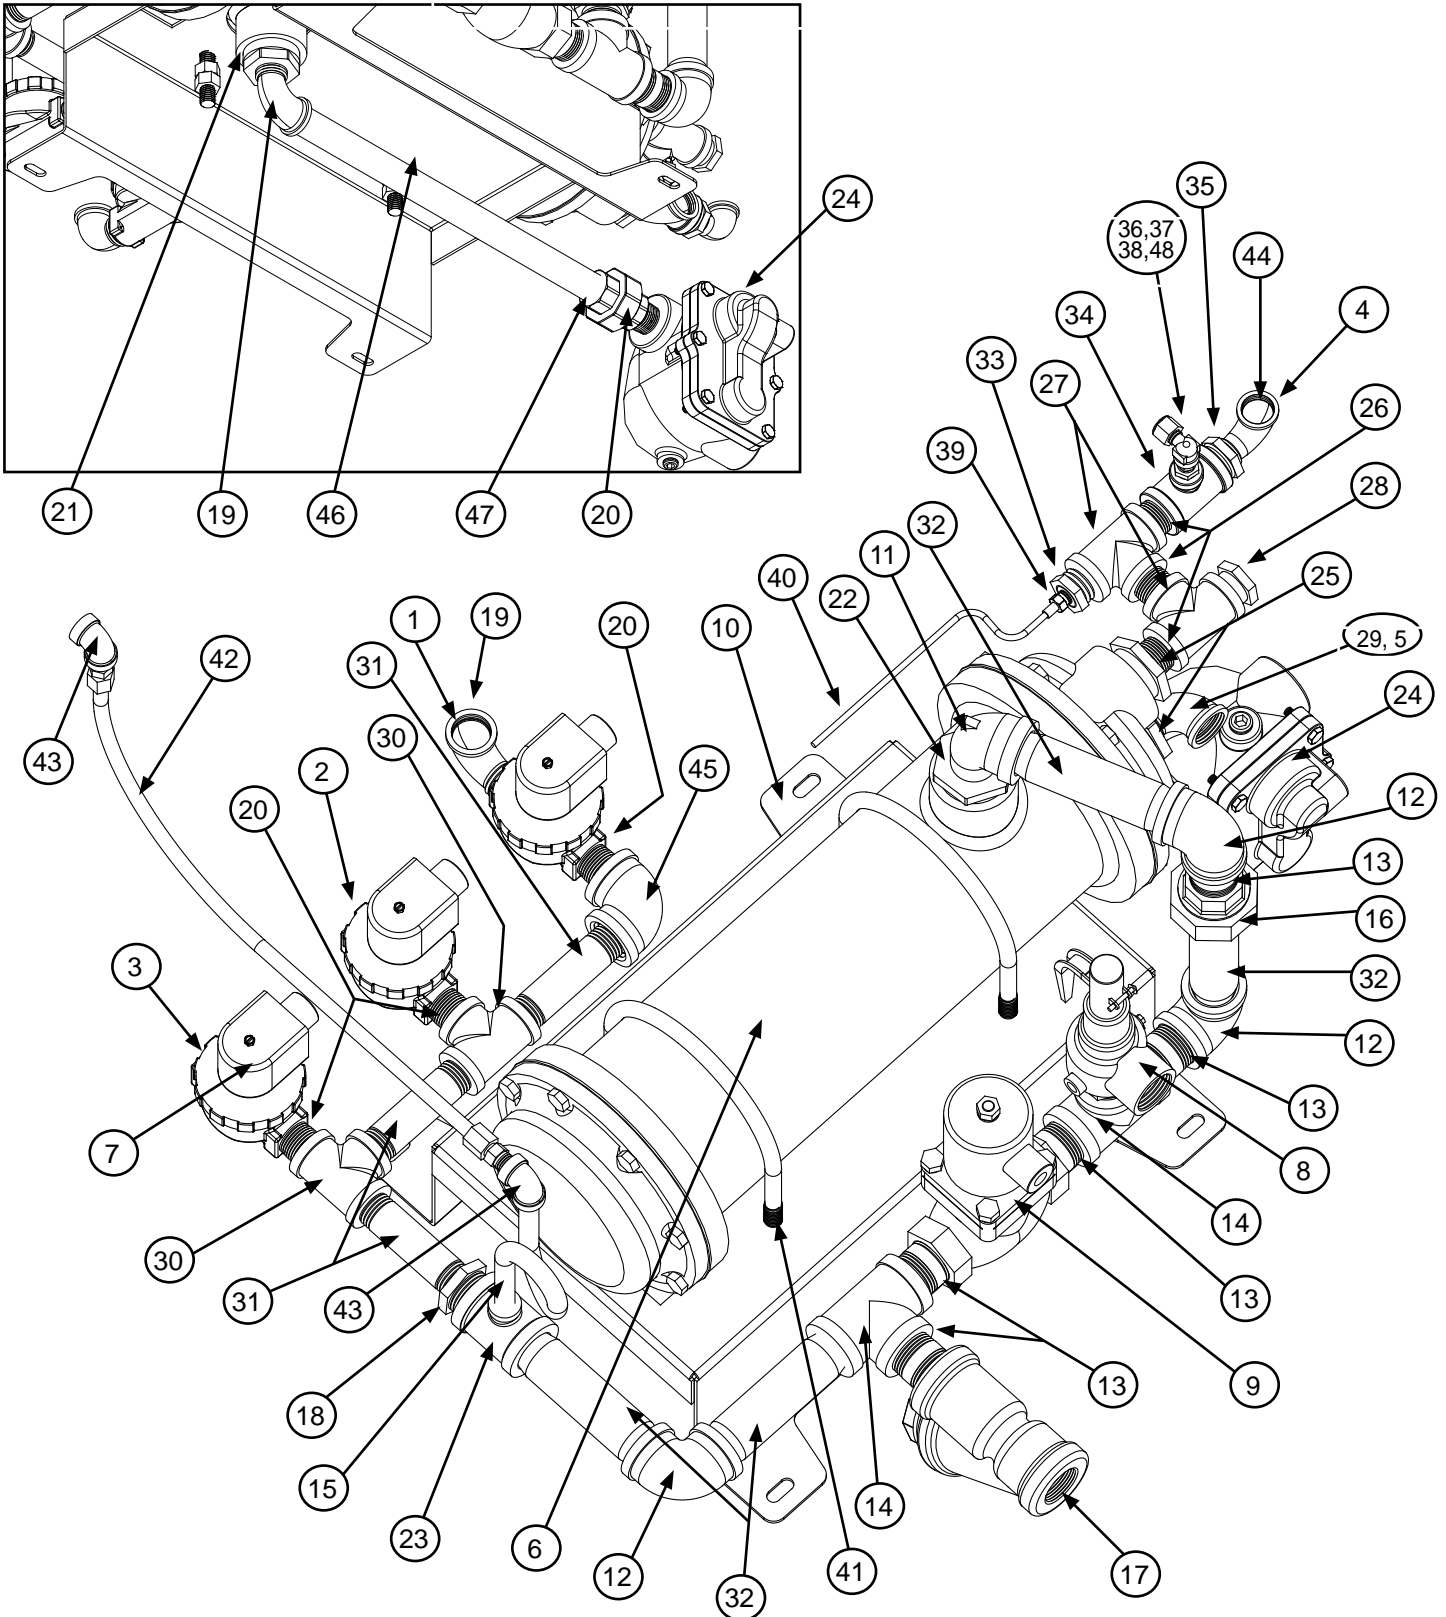


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| 1 | 1 | Hose Assembly, 34" Supply (Not Shown) | 05700-002-87-99 |
| 2 | 1 | Hose Assembly, 65" Wash Steam Coil Supply (Not Shown) | 05700-002-88-00 |
| 3 | 1 | Hose Assembly, 21" Power Rinse Steam Coil Supply (Not Shown) | 05700-002-88-01 |
| 4 | 1 | Hose Assembly, 1/2" x 50" Final Rinse (Not Shown) | 05700-002-88-02 |
| 5 | 1 | Hose Assembly, 109" Booster Heater Supply (Not Shown) | 05700-002-88-05 |
| 6 | 1 | Heat Exchanger, Steam M-120 | 04420-002-43-94 |
| 7 | 3 | Valve, Solenoid, Steam 120V, 3/4" | 04820-011-87-39 |
| 8 | 1 | Valve, Safety Relief 1" NPT | 04820-100-01-35 |
| 9 | 1 | Valve, Solenoid, 1" | 04820-002-92-23 |
| 10 | 1 | Bracket, Steam Support | 05700-002-86-93 |
| 11 | 1 | Elbow, Street, 1" Black Iron | 04730-002-86-58 |
| 12 | 3 | Elbow, 1" NPT 90B Black Iron | 04730-906-03-34 |
| 13 | 5 | Nipple, 1" NPT, Close Black Iron | 04730-907-08-34 |
| 14 | 2 | Tee, 1" x 1" x 1", Black Iron | 04730-911-01-34 |
| 15 | 1 | Nipple, Pigtail, 1/4" NPT Black Iron | 04730-907-14-34 |
| 16 | 1 | Union, 1" Black Iron | 04730-912-01-34 |
| 17 | 1 | Y-Strainer, 1" NPT Black Iron | 04730-217-02-32 |
| 18 | 1 | Reducer, 1" to 3/4" | 04730-011-95-66 |
| 19 | 2 | Elbow, 3/4" NPT 90B Street | 04730-011-87-37 |
| 20 | 4 | Nipple, Close 3/4" Black Iron | 04730-907-01-00 |
| 21 | 1 | Bushing, 1 1/2" x 3/4" Black Iron | 04730-002-36-81 |
| 22 | 1 | Bushing, 1 1/2" MNPT x 1" FNPT Black Iron | 04730-002-36-79 |
| 23 | 1 | Tee, 1" x 1" x 1/4" Black Iron | 04730-911-01-00 |
| 24 | 1 | Steam Trap, 3/4" NPT (F & T Type) | 06680-500-02-77 |
| 25 | 2 | Bushing, Hex 1 1/4" 3/4" Reducer | 04730-011-88-80 |
| 26 | 3 | Nipple, 3/4" NPT Close Brass Nipple | 04730-207-34-00 |
| 27 | 2 | Tee, 3/4" x 3/4" x 3/4" NPT Brass | 04730-211-01-34 |
| 28 | 1 | Bushing, 3/4" MNPT x 3/8" FNPT Brass | 04730-011-89-19 |
| 29 | 1 | Elbow, 3/4" Street Brass 90B | 04730-206-04-34 |
| 30 | 2 | Tee, 3/4" x 3/4" x 3/4" NPT Black Iron | 04730-002-74-14 |
| 31 | 3 | Nipple, 3/4" x 4" Black Iron | 04730-907-02-34 |


STEAM BOOSTER ASSEMBLY (CONTINUED)


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---|-----------------|
| 32 | 4 | Nipple, 1" NPT x 4" Long, Black Iron | 04730-907-09-34 |
| 33 | 1 | Fitting, Thermostat Weldment | 05700-002-93-74 |
| 34 | 1 | Tee, 3/4" x 3/4" x 1/4" NPT Brass | 04730-211-04-00 |
| 35 | 1 | Bushing, Hex 3/4" MNPT x 1/2" FNPT Brass | 04730-002-56-27 |
| 36 | 1 | Valve, Check | 04820-111-51-14 |
| 37 | 1 | Nut, P/P For 1/8" Tubing | 04730-011-59-45 |
| 38 | 1 | Fitting, Outlet Elbow | 04820-111-51-18 |
| 39 | 1 | Fitting, 1/4" Imperial Brass | 05310-924-02-05 |
| 40 | 1 | Probe, Temperature | 06680-002-16-80 |
| 41 | 2 | Bolt, U Type 1/2"-13 | 05306-002-89-27 |
| 42 | 1 | Hose, SS Braid | 04720-002-93-78 |
| 43 | 2 | Elbow, 90B 1/4" FNPT Black Iron | 04730-002-87-10 |
| 44 | 1 | Elbow, 1/2" NPT 90B Street | 04730-206-08-00 |
| 45 | 1 | Elbow, 3/4" NPT 90B Black Iron | 04730-906-10-34 |
| 46 | 1 | Nipple, 3/4" NPT x 14 3/4" Long, Black Iron | 05700-002-21-22 |
| 47 | 1 | Union, 3/4" Black Iron | 04730-912-01-01 |
| 48 | 1 | Bushing, 1/4" x 1/8" Stainless | 04730-003-05-61 |

Panel, Lower Steam Electric Section
05700-002-86-97

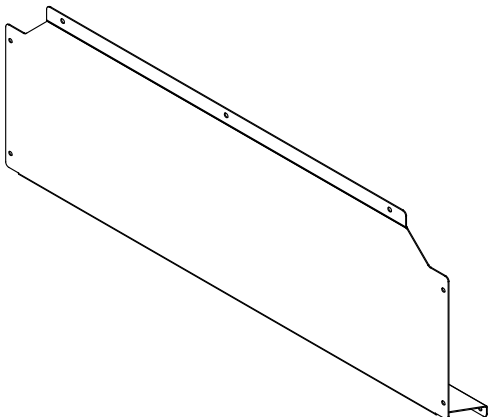

Panel, Lower Steam Electric Section
05700-002-86-97

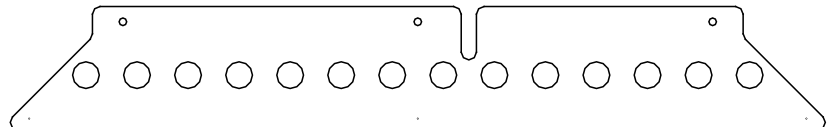


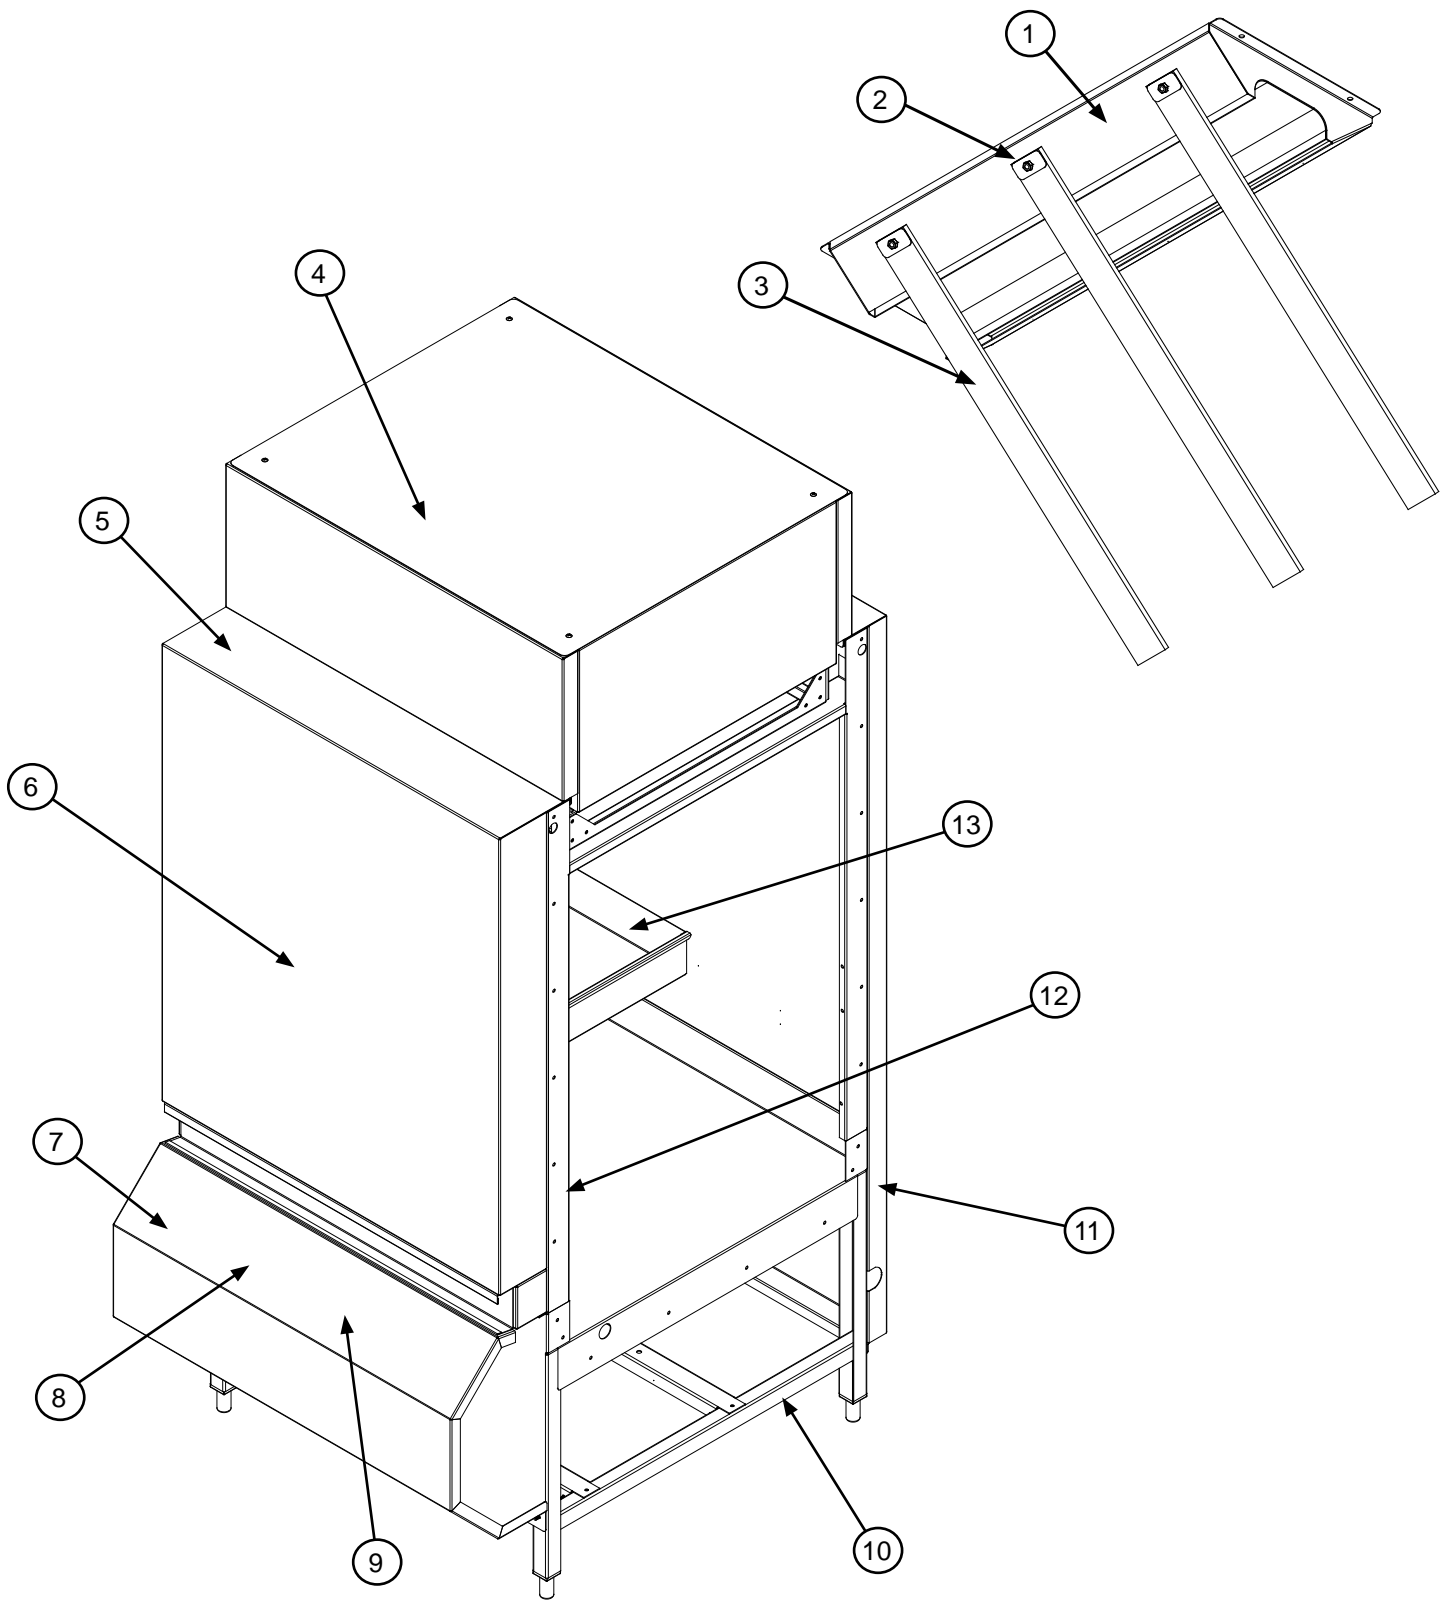

BLOWER DRYER SECTION ASSEMBLY



PARTS

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---|---------------------------------|
| 1 | 1 | Blower Air Knives Box Weldment | 05700-002-72-78 |
| 2 | 3 | Stabilizer Bracket | 05330-003-04-44 |
| 3 | 3 | Dish Stabilizers | 05330-003-04-43 |
| 4 | 1 | Blower Assembly, JFT | 05700-002-70-21 |
| | 1 | Blower Assembly, JFT-S | 05700-002-76-86 |
| 5 | 1 | Front Panel Weldment | 05700-002-88-26 |
| 6 | 1 | Hose, Blower Section Inlet Assembly (JFT-S Only) (not shown) | 05700-002-87-98 |
| | 1 | Nipple, Close 3/4" Black Iron (JFT-S Only) (not shown) | 04730-907-01-00 |
| | 1 | Elbow, 3/4" NPT 90B Street, Black Iron (JFT-S Only) (not shown) | 04730-011-87-37 |
| 7 | 1 | Lower Cover Weldment, L-R | 05700-002-71-63 |
| | 1 | Lower Cover Weldment, R-L | 05700-002-88-29 |
| 8 | 1 | Steam Trap (JFT-S Only) (not shown) | 06680-002-86-73 |
| | 1 | Nipple, Close 3/4" Black Iron (JFT-S Only) (not shown) | 04730-907-01-00 |
| 9 | 1 | Hose, Blower Steam Trap Assembly (JFT-S Only) (not shown) | 05700-002-87-97 |
| | 1 | Nipple, Close 3/4" Black Iron (JFT-S Only) (not shown) | 04730-907-01-00 |
| | 1 | Elbow, 3/4" NPT 90B Street, Black Iron (JFT-S Only) (not shown) | 04730-011-87-37 |
| 10 | 1 | Frame Assembly | 05700-002-86-26 |
| 11 | 1 | Cover, Back | 05700-002-64-41 |
| 12 | 2 | Rail Addition (not shown) | 05700-002-85-78 |
| 13 | 1 | Baffle, Lower Blower Air | 05700-002-84-92 |

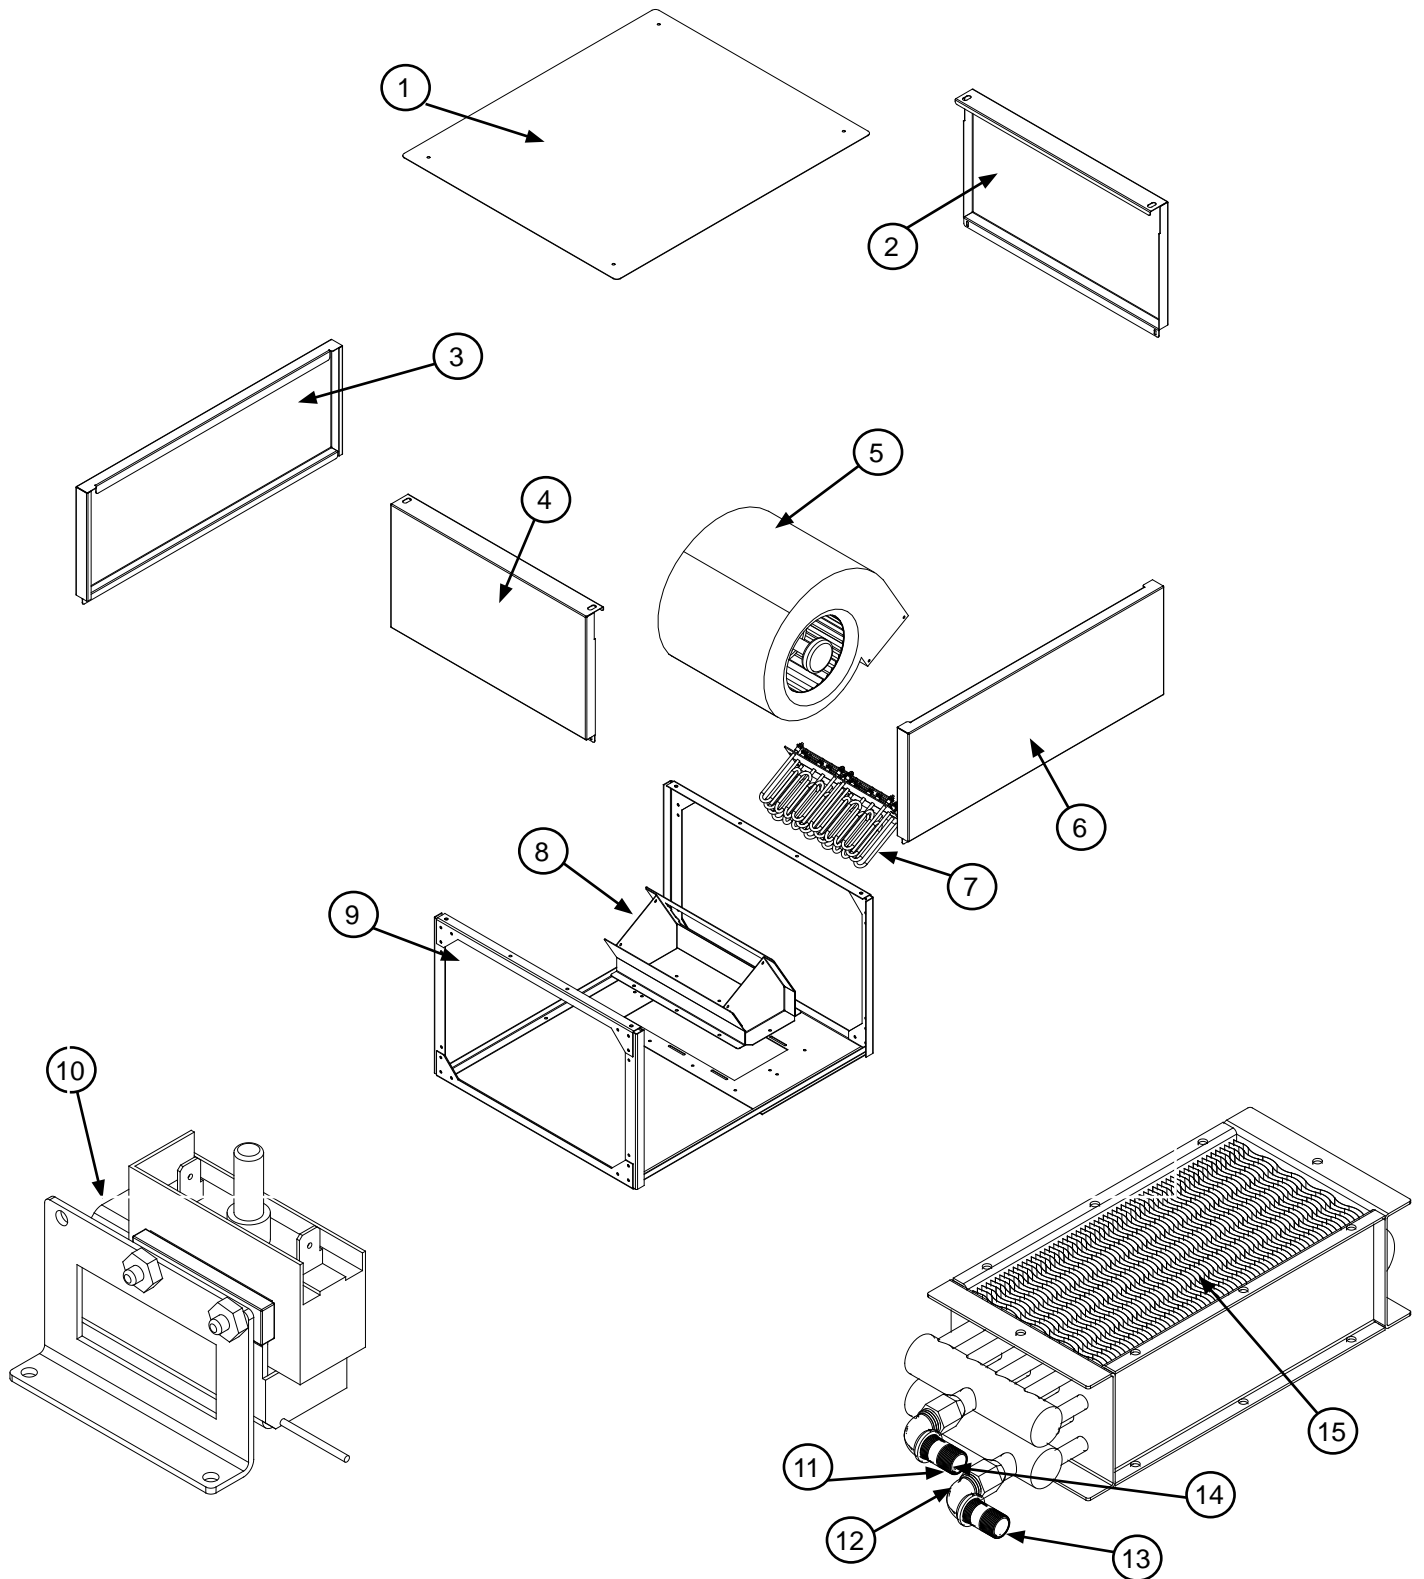


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| 1 | 1 | Panel, Blower Dryer Top | 05700-002-72-00 |
| 2 | 1 | Panel, Blower Dryer Side | 05700-002-71-99 |
| 3 | 1 | Panel, Blower Dryer Front & Back | 05700-002-71-98 |
| 4 | 1 | Panel, Blower Side | 05700-002-71-99 |
| 5 | 1 | Blower, 208-230/600V, 60HZ, Dual Cage | 06105-002-72-15 |
| | 1 | Blower, 460V, 60HZ, Dual Cage | 06105-002-88-36 |
| 6 | 1 | Panel, Blower Dryer Front & Back | 05700-002-71-98 |
| 7 | 1 | JFT Heater, 4.5 KW, 208V, Blower Air | 04540-002-74-29 |
| | 1 | JFT Heater, 4.5 KW, 240V, Blower Air | 04540-002-87-79 |
| | 1 | JFT Heater, 4.5 KW, 460V, Blower Air | 04540-002-91-60 |
| | 1 | JFT Heater, 4.5 KW, 600V, Blower Air | 04540-002-90-30 |
| 8 | 1 | Blower Dryer Heater Box Weldment, JFT | 05700-002-72-14 |
| | 1 | Blower Dryer Heater Box Weldment, JFT-S | 05700-002-76-85 |
| 9 | 1 | Frame, Blower Dryer Support Assembly | 05700-002-84-68 |
| 10 | 1 | High Limit Thermostat | 05930-002-83-31 |
| | | <u>The JFT-S uses the following components in place of the heaters used on the JFT.</u> | |
| 11 | 2 | Nipple, 3/4" x 2" Brass heat exchanger | 04730-207-46-00 |
| 12 | 2 | Elbow, 3/4" NPT 90B Street, Brass heat exchanger | 04730-206-04-34 |
| 13 | 1 | Hose Assembly, Outlet | 05700-002-87-95 |
| 14 | 1 | Hose Assembly, Inlet | 05700-002-87-96 |
| 15 | 1 | Heat Exchanger, Blower | 04420-002-76-68 |
| | 1 | Elbow, 3/4" NPT 90B Street, Brass hose assembly | 04730-206-04-34 |

STRAIGHT EXPANSION SECTION


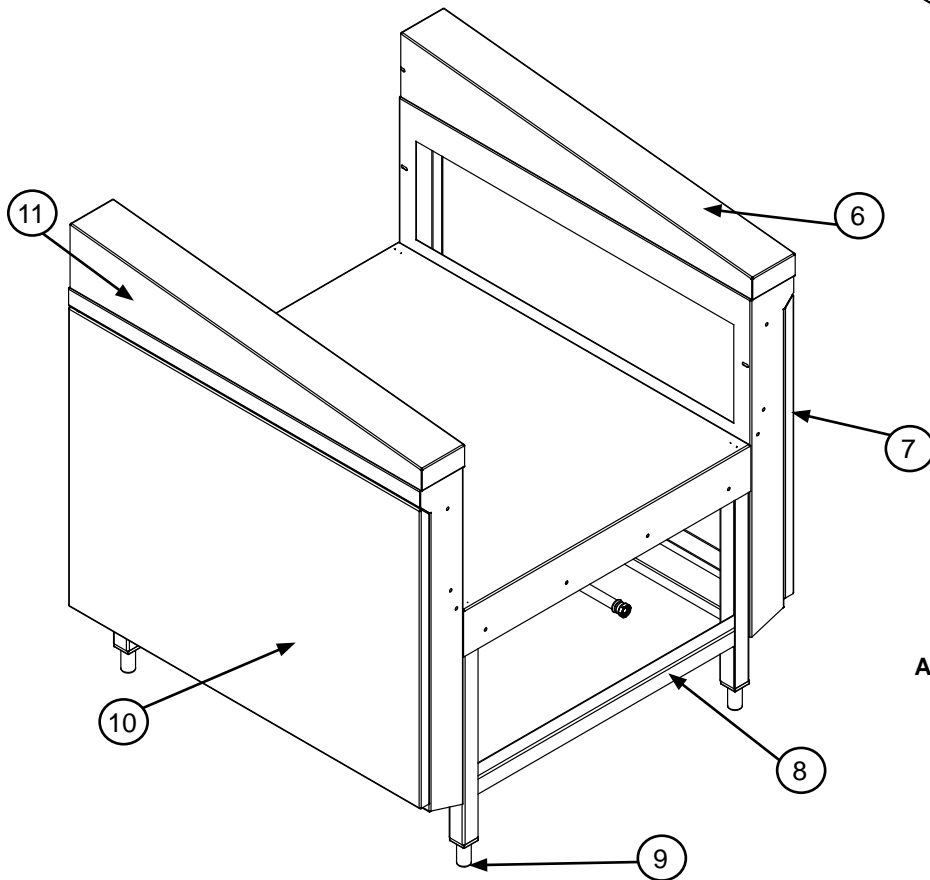
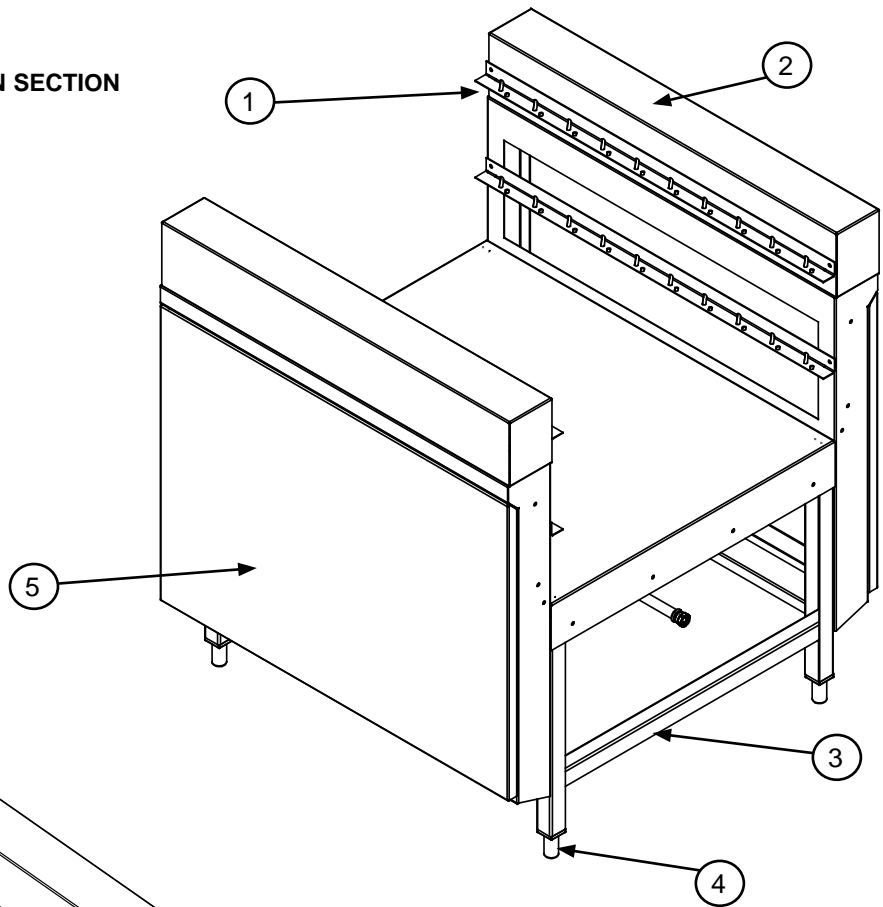


ANGLED EXPANSION SECTION

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|----------------------------|---------------------------------|
| 1 | 4 | Rail, Lower | 05700-002-65-07 |
| 2 | 2 | Rail Guard, Upper Weldment | 05700-002-85-58 |
| 3 | 2 | Frame Assembly | 05700-002-86-07 |
| | 1 | Frame Weldment | 05700-002-67-84 |
| 4 | 2 | Bullet Foot | 05340-108-02-06 |
| 5 | 2 | Panel, Dress Assembly | 05700-002-85-52 |
| 6 | 1 | Rail Guard Angled Weldment | 05700-002-85-55 |
| 7 | 1 | Panel, Dress | 05700-002-85-52 |
| 8 | 2 | Frame Assembly | 05700-002-86-07 |
| | 1 | Frame Weldment | 05700-002-67-84 |
| 9 | 2 | Bullet Foot | 05340-108-02-06 |
| 10 | 1 | Panel, Dress | 05700-002-85-52 |
| 11 | 1 | Rail Guard Angled Weldment | 05700-002-85-56 |

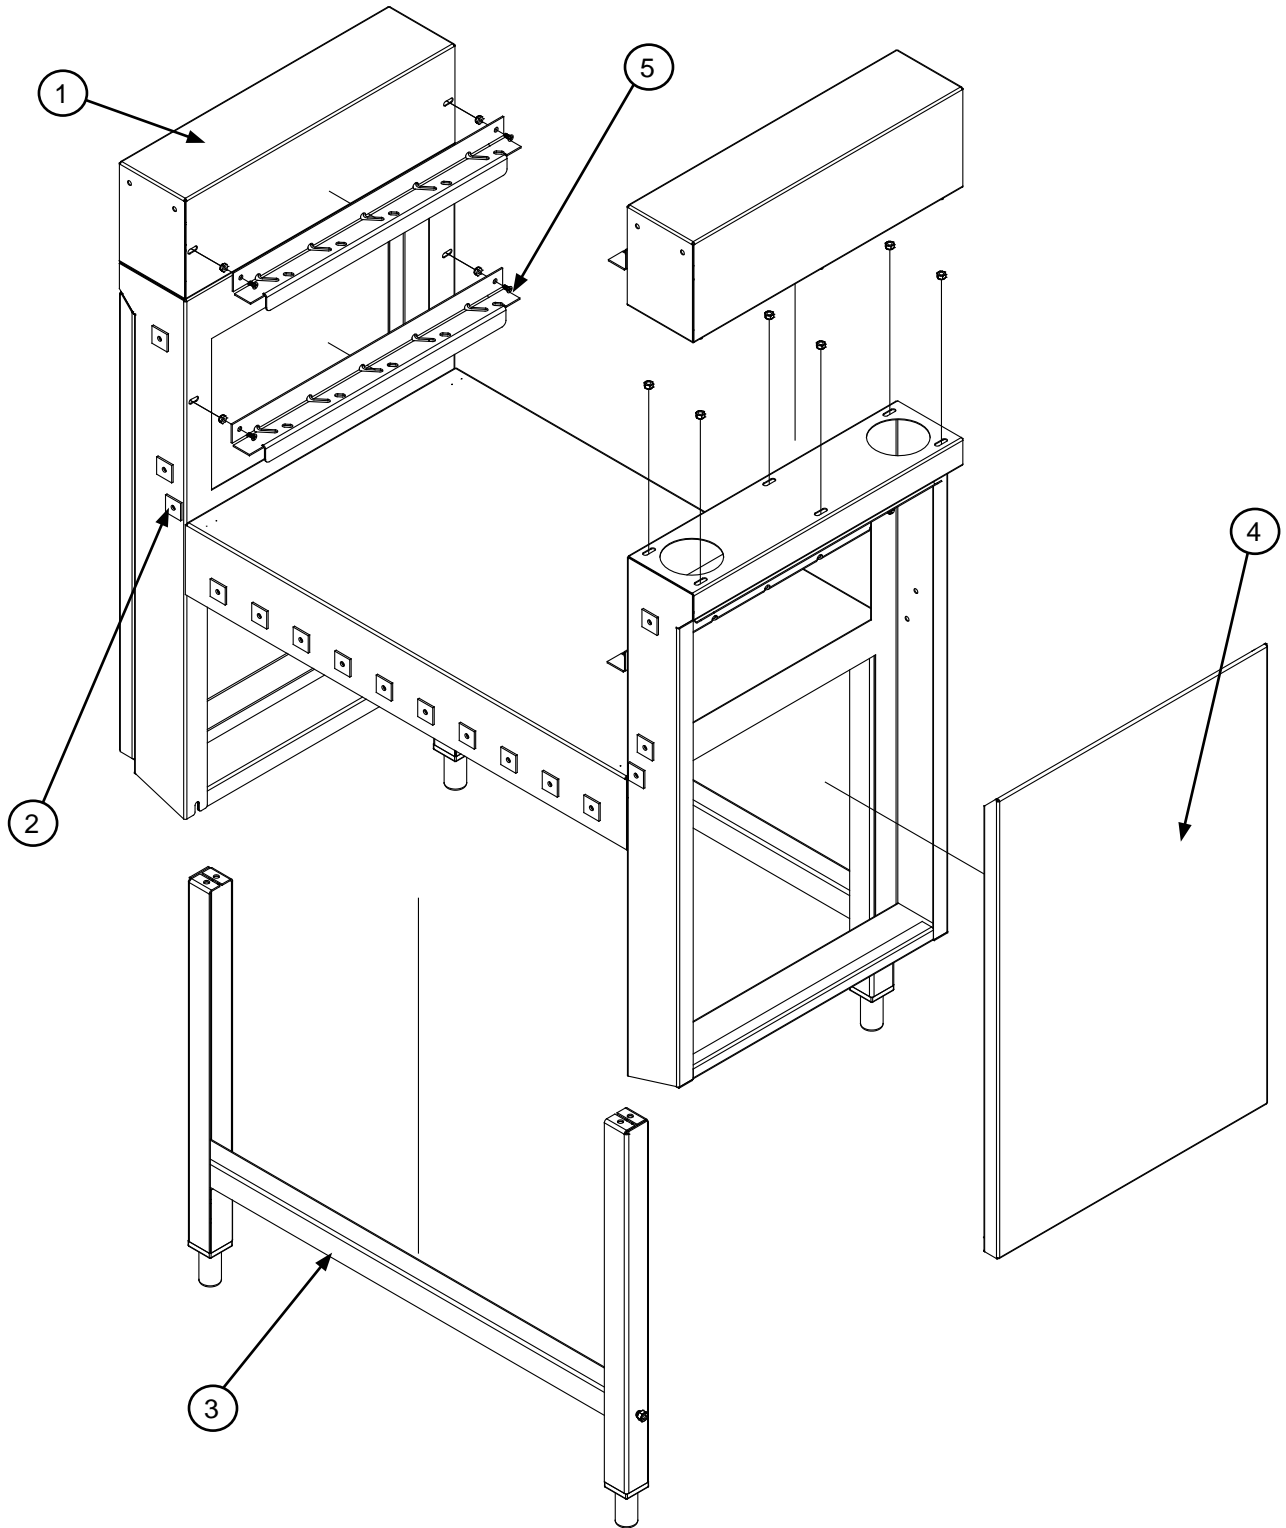


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--------------------------------|---------------------------------|
| 1 | 2 | Rail Guard, Upper Weldment | 05700-003-15-43 |
| 2 | 16 | Gasket Spacer | 05330-003-04-12 |
| 3 | 2 | Frame Assembly | 05700-002-86-07 |
| | 1 | Frame Weldment | 05700-002-67-84 |
| | 2 | Bullet Foot | 05340-108-02-06 |
| 4 | 1 | Panel, Dress | 05700-003-15-42 |
| 5 | 4 | F-Rail, Expansion Straight 18" | 05700-003-15-54 |

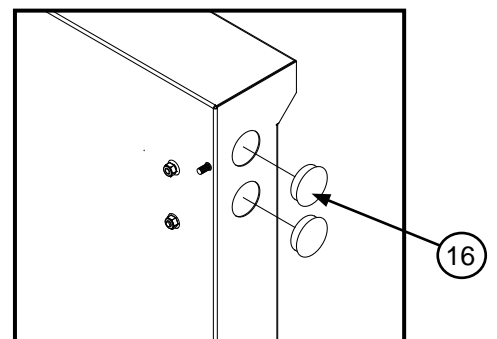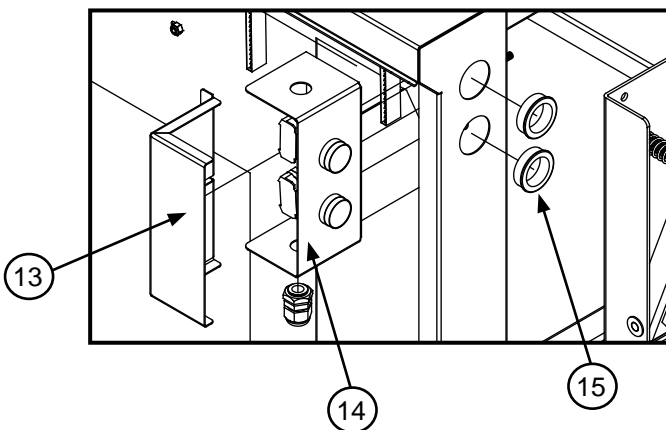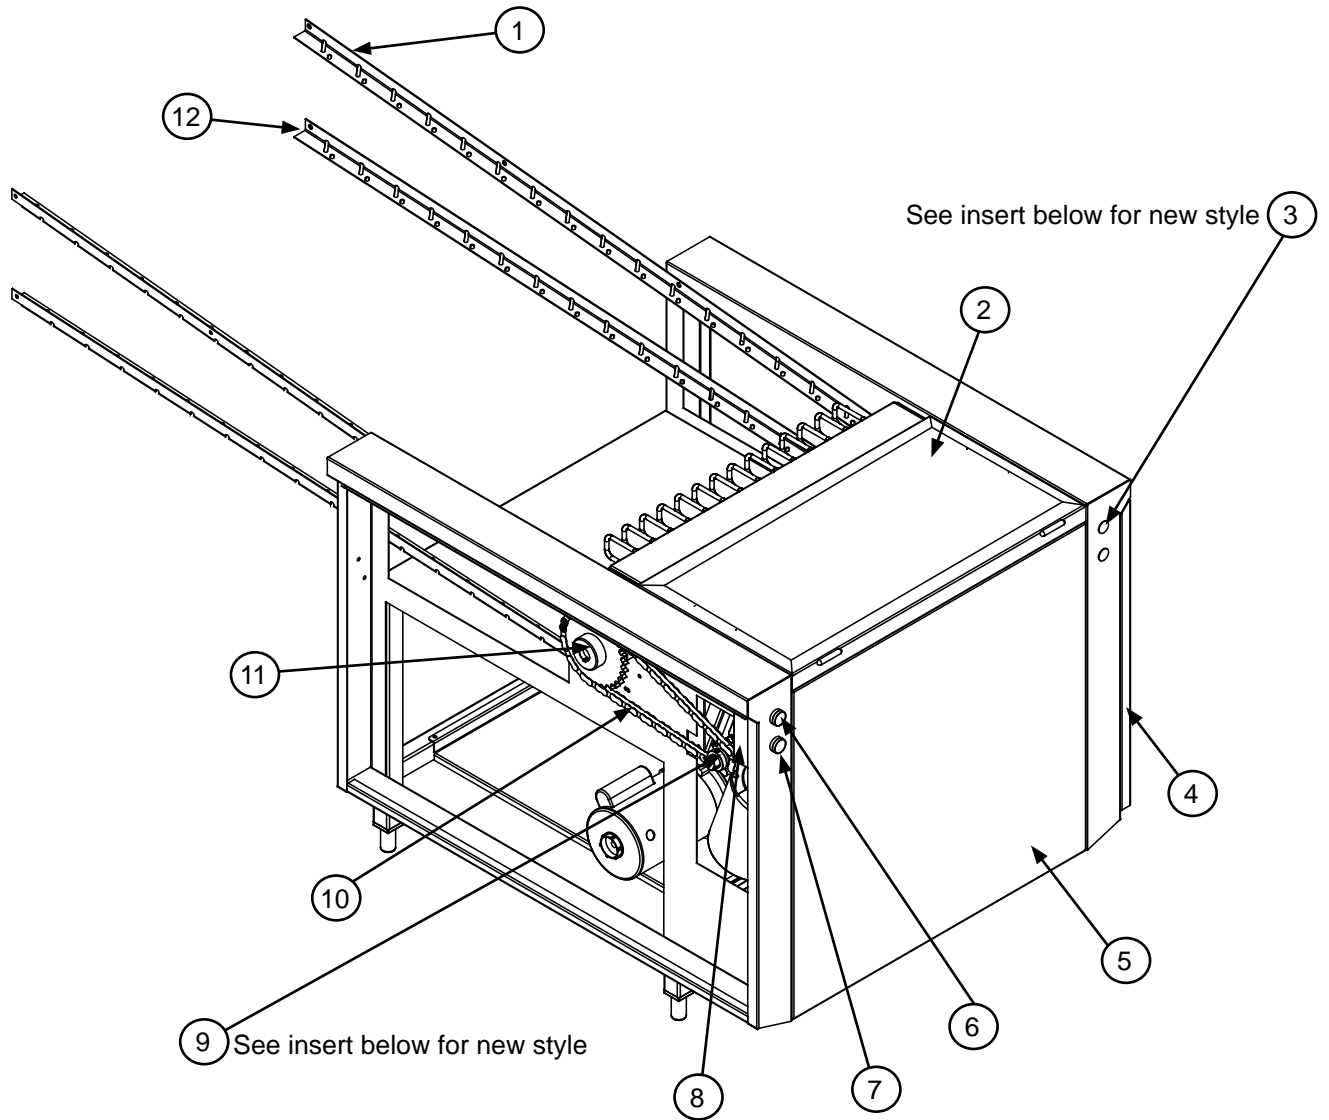


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---------------------------------|-----------------|
| 1 | 2 | Rail, Upper Front | 05700-002-69-11 |
| 2 | 1 | Slide Stop Assembly | 05700-002-82-16 |
| | 1 | Cover Weldment (not shown) | 05700-002-82-15 |
| | 1 | Slide Stop Weldment (not shown) | 05700-002-82-14 |
| | 14 | Slide Stop Finger (not shown) | 05700-002-82-13 |
| | 1 | Magnet (not shown) | 05930-002-88-42 |
| | 2 | Spring (not shown) | 05340-002-90-39 |
| | 1 | Bracket, Right (not shown) | 05700-002-97-54 |
| | 1 | Bracket, Left (not shown) | 05700-002-97-55 |
| 3 | 2 | Heyco Plug | 05975-011-47-81 |
| 4 | 2 | Panel, Dress | 05700-002-83-95 |
| 5 | 1 | Panel End Weldment | 05700-002-84-65 |
| 6 | 1 | Switch, Green Start | 05930-002-80-60 |
| 7 | 1 | Switch, Red Stop | 05930-002-80-73 |
| 8 | 7 | Cover, Switch | 05700-002-79-85 |
| 9 | 1 | Belt, Gear Small | 06105-002-75-21 |
| | 1 | Key, Drive Wheel | 05700-002-94-87 |
| | 1 | Set Screw | 05305-002-10-14 |
| 10 | 1 | Chain, Drive Motor | 05700-002-88-43 |
| 11 | 1 | Belt, Gear Large | 06105-002-75-22 |
| | | Key, Drive Wheel | 05700-002-94-87 |
| | | Set Screw | 05305-002-10-14 |
| 12 | 2 | Rail, Lower Front | 05700-002-69-12 |
| 13 | 1 | Cover, Switch | 05700-003-09-10 |
| 14 | 1 | Bracket, Switch Holding | 05700-003-09-11 |
| 15 | | Snap Bushing | 05975-003-10-46 |
| 16 | | Domed Plug | 05975-003-10-45 |

(CONTINUED)

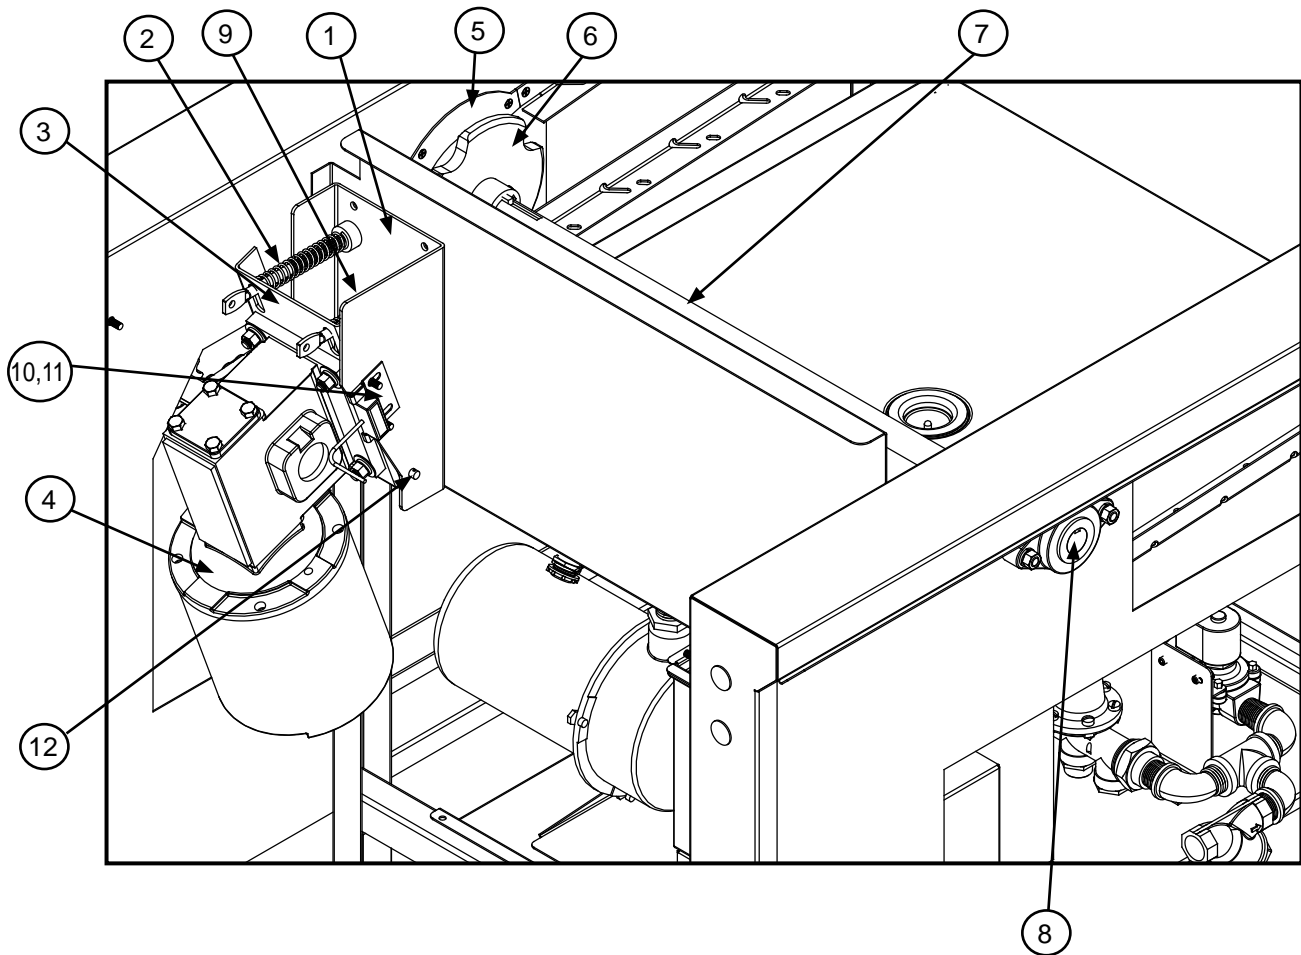


(CONTINUED)


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|-------------------------------------|-----------------|
| 1 | 1 | Drive Motor Support Bracket | 05700-002-84-66 |
| 2 | 2 | Bolt, Spring Holding, 3/8" | 05700-002-82-62 |
| | 2 | Spring | 05340-002-87-02 |
| 3 | 1 | Drive Motor Mounting Bracket | 05700-002-82-45 |
| 4 | 1 | Drive Motor Assembly (600 Volt) | 05700-002-95-62 |
| | 1 | Drive Motor Assembly (460 Volt) | 05700-002-68-55 |
| | 1 | Drive Motor Assembly (208-240 Volt) | 05700-002-66-38 |
| | 1 | Gear Drive | 06105-002-68-52 |
| | 1 | Drive Motor (208/230 Volt Models) | 06105-002-87-69 |
| | 1 | Drive Motor (460 Volt Models) | 06105-002-87-70 |
| | 1 | Drive Motor (600 Volt Models) | 06105-002-87-71 |
| 5 | 1 | Belt Centering Plate | 05700-002-82-08 |
| 6 | 1 | Drive Wheel | 05700-002-67-03 |
| 7 | 1 | Drive Rod | 05700-002-75-13 |
| 8 | 1 | Bearing, Two-Bolt Mounting Flange | 03120-002-69-31 |
| 9 | 1 | Magnet (Not Shown) | 05930-002-88-42 |
| 10 | 1 | Reed Switch | 05930-002-36-80 |
| 11 | | Limit Switch Mounting Bracket | 05700-011-71-18 |
| 12 | 1 | Pin, Drive Plate Weldment | 05700-002-92-06 |
| | 1 | Conduit Box (Not Shown) | 05700-002-93-09 |
| | 1 | Conduit Box Top (Not Shown) | 05700-002-93-10 |

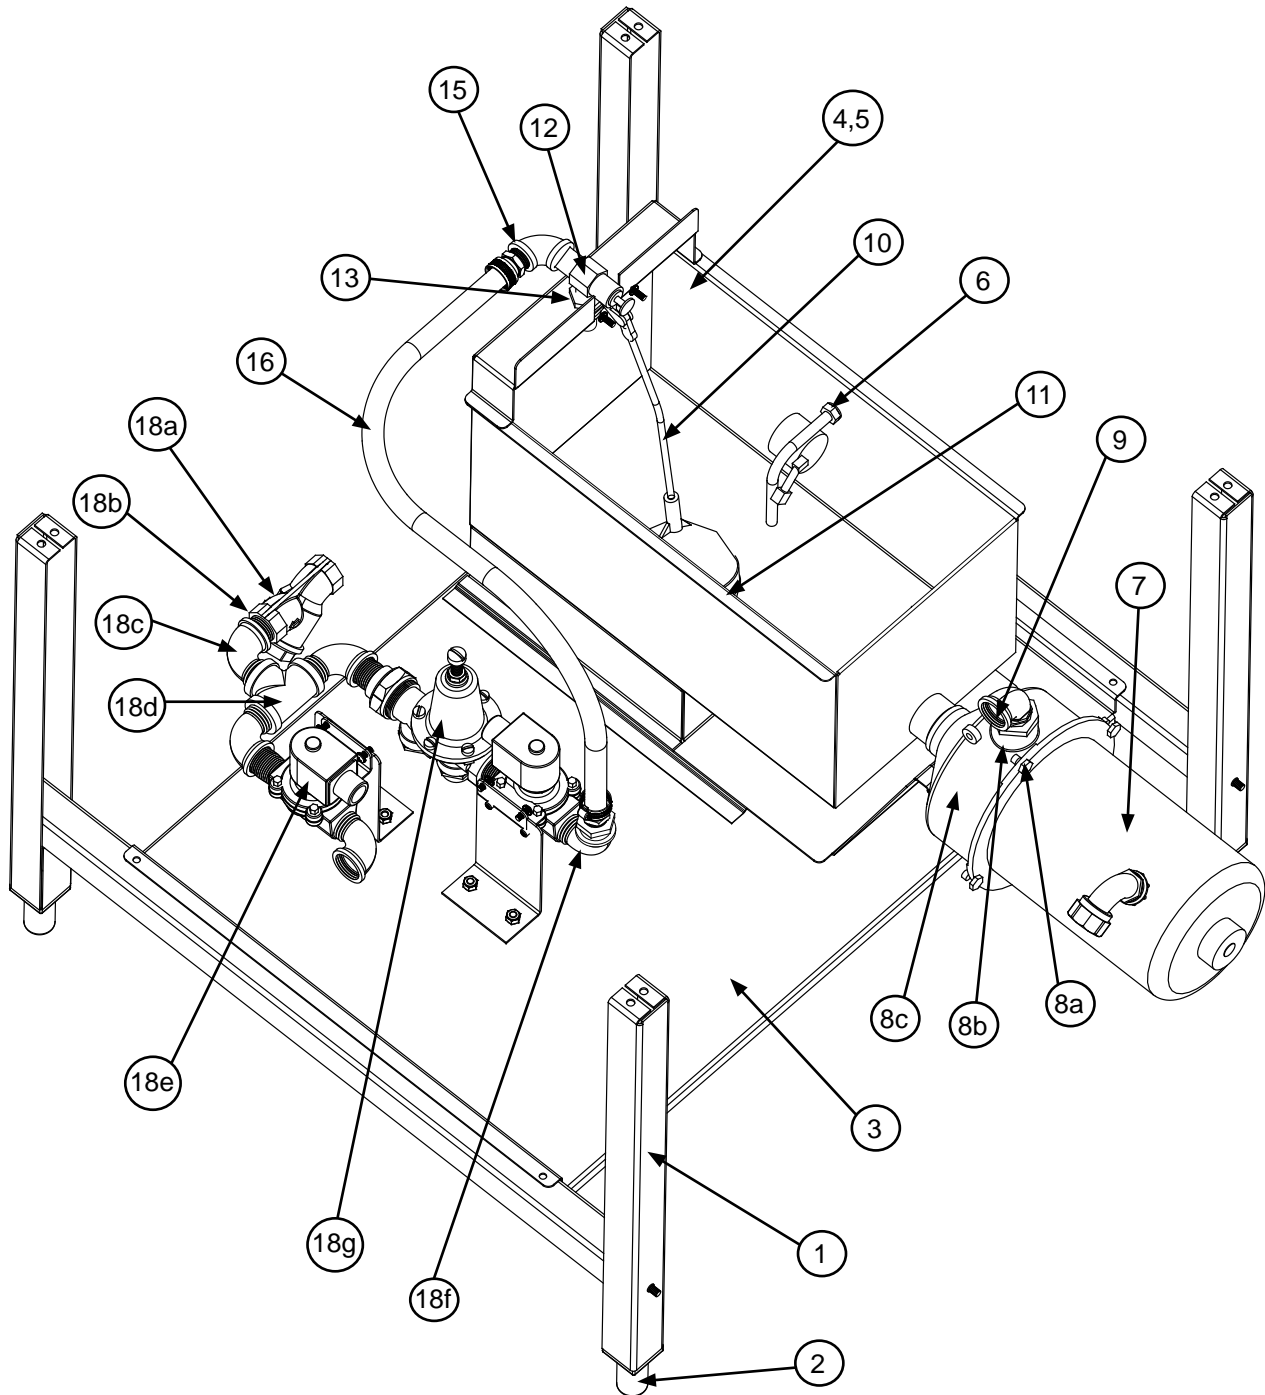

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---|---------------------------------|
| 1 | 2 | Frame Weldment | 05700-002-67-84 |
| 2 | 4 | Bullet Foot | 05340-108-02-06 |
| 3 | | Plate, Slide Rinse Weldment | 05700-002-88-51 |
| 4 | | Rinse Tank Weldment | 05700-002-88-50 |
| 5 | | Rinse Tank Cover (Not Shown) | 05700-003-05-43 |
| 6 | | Swing Arm Sensor | 05700-002-98-62 |
| 7 | | Motor, 1/2 HP, 208-230V | 06105-002-72-71 |
| | | Motor, 1/2 HP, 460V | 06105-002-72-71 |
| | | Motor, 1/2 HP, 600V | 06105-002-90-34 |
| 8 | | Plumbing, Rinse Motor | 05700-002-85-64 |
| 8a | | Bushing, Brass 1" FNPT x 3/4" MNPT | 04730-011-65-14 |
| 8b | | Elbow, 3/4" Street Brass | 04730-206-04-34 |
| 8c | | Restrictor, Rinse Pump Discharge | 05700-002-90-35 |
| 9 | | Hose Assembly, 109" Booster Heater Supply | 05700-002-88-05 |
| 10 | | Rod, Float Formed | 05700-003-05-58 |
| 11 | | Ball Float | 06680-003-05-56 |
| 12 | | Valve, Float 1/2" Brass | 06680-003-05-46 |
| 13 | | Nut, 1/2" NPT Brass | 04730-208-03-00 |
| 14 | | Adapter, 1/2" NPT x C Male | 04730-401-07-01 |
| 15 | | Elbow, 1/2" NPT 90 Deg. Brass | 04730-011-42-96 |
| 16 | | Hose Assembly, 24" Solenoid to Final Rinse Tank | 05700-002-88-04 |
| 17 | | Hose Assembly, 90" Machine Fill | 05700-002-88-03 |
| 18 | | Plumbing, Solenoid Assembly | 05700-002-85-62 |
| 18a | | Y-Strainer, 3/4" | 04730-717-02-06 |
| 18b | | Nipple, 3/4" Close Brass | 04730-207-34-00 |
| 18c | | Elbow, 3/4" Street | 04730-206-04-34 |
| 18d | | Tee, Brass 3/4" x 3/4" x 3/4" | 04730-211-01-34 |
| 18e | | Valve, 120V Solenoid | 04810-002-83-15 |
| 18f | | Bushing, Hex 3/4" to 1/2" | 04730-002-56-27 |
| 18g | | Regulator, 3/4" Pressure | 06685-011-58-22 |

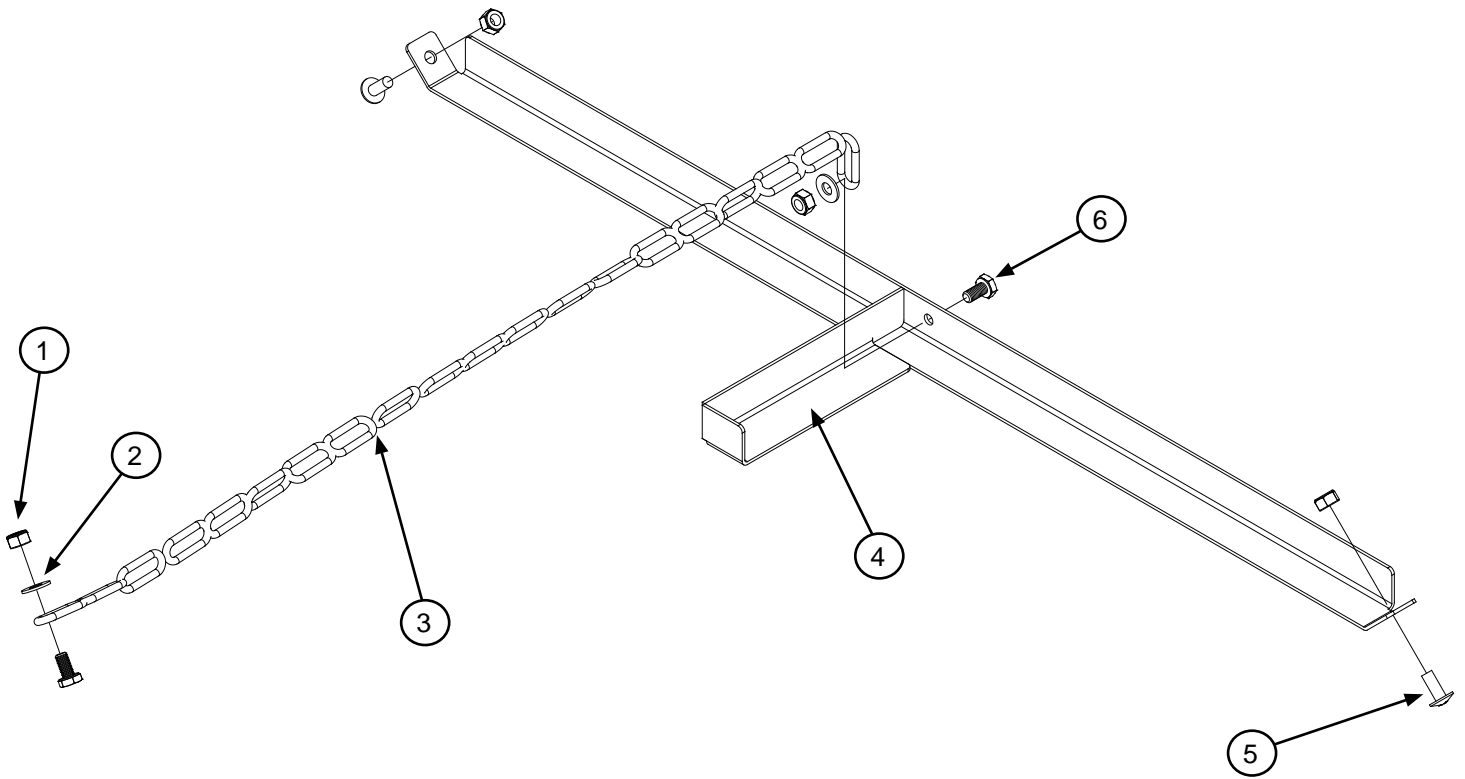

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---|---------------------------------|
| 1 | 4 | Locknut, 1/4"-20 Hex W/Nylon Insert | 05310-374-01-00 |
| 2 | 2 | Washer, 1/4-20 I.D. S/S | 05311-174-01-00 |
| 3 | 1 | Chain 1/8 x 20 Links | 05700-003-21-83 |
| 4 | 1 | Lanyard, Slide Stop Weldment | 05700-003-21-84 |
| 5 | 2 | Screw, 1/4"-20 x 5/8" Truss Phillips Head | 05305-174-04-00 |
| 6 | 2 | Bolt, 1/4"-20 x 1/2" Long | Bolt, 1/4"-20 x 1/2" Long |

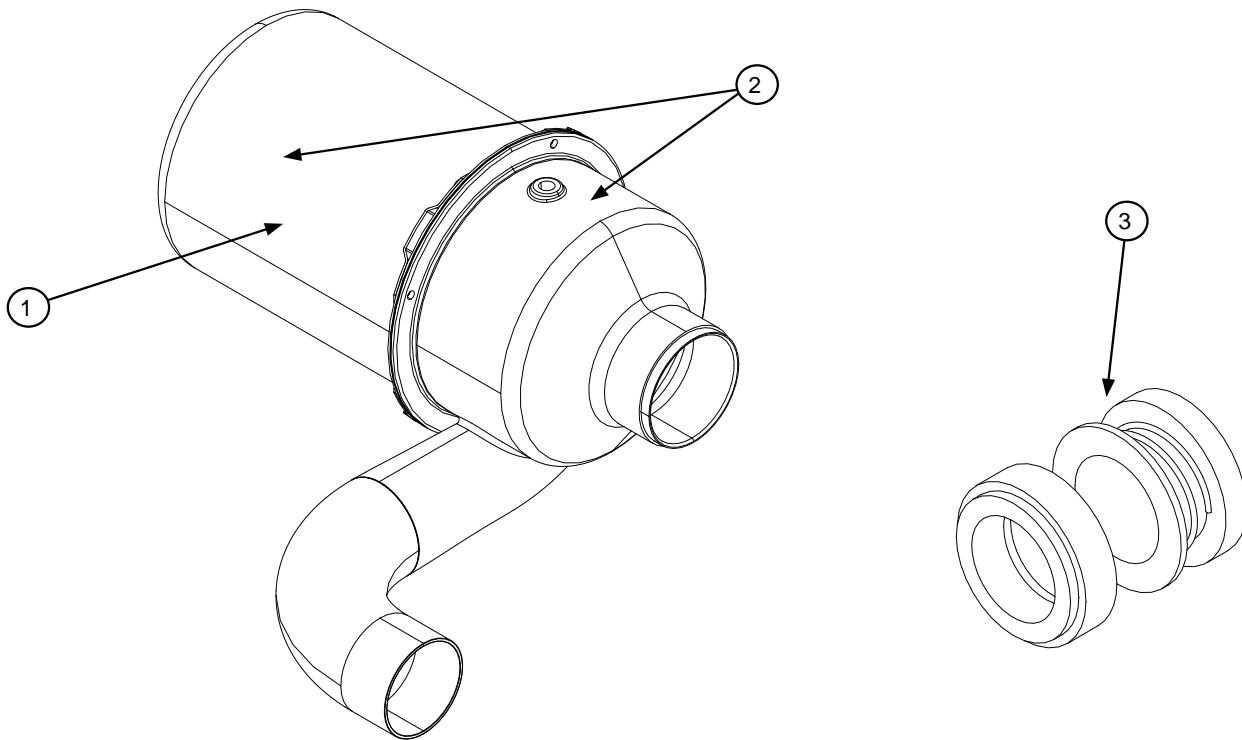


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|--|-----|--------------------------------------|---------------------------------|
| | | Kit, Motor & Seal 208-460V, 2HP | 06401-003-17-26 |
| | | Kit, Motor & Seal 208-460V, 3HP | 06401-003-17-28 |
| 1 | 1 | Motor Only, 208-460V, 2HP | 06105-003-19-15 |
| | 1 | Motor Only, 208-460V, 3HP | 06105-003-19-16 |
| 2 | 1 | Power Rinse Motor Kit, 208-460V, 2HP | 06105-003-15-51 |
| | 1 | Pump & Motor Assembly, 208-460V, 3HP | 06105-003-15-52 |
| 3 | 1 | Seal, Pump | 05330-002-34-22 |
| THE FOLLOWING ITEMS ARE NOT SHOWN | | | |
| | 1 | Hose, 2.83 OD x 4" Long | 05700-003-15-36 |
| | 1 | Hose, 3.33 OD x 4" Long | 05700-003-15-36 |
| | 1 | Barbed Fitting, 90 Deg. | 04730-003-15-57 |
| | 4 | Hose Clamp, 2-9/16" to 3-1/2" | 04730-003-15-40 |
| | 1 | Bracket, Motor Support | 05700-003-15-08 |
| | 2 | Locknut, 1/4"-20 Hex w/Nylon Insert | 05310-374-01-00 |
| | 2 | Washer, 1/4" ID x 3/4" OD | 05311-174-01-00 |
| | 1 | Gasket, Heater | 05330-011-47-79 |
| | 1 | Heater Support Bracket | 05700-002-78-92 |

(CONTINUED)


| Section | Volts | Hz | Phase | Heater (12 KW) | Heater (14KW) |
|-------------|-------|----|-------|-----------------|-----------------|
| Wash | 208 | 60 | 3 | 04540-003-17-05 | N/A |
| Wash | 240 | 60 | 3 | 04540-003-17-07 | N/A |
| Wash | 460 | 60 | 3 | 04540-003-17-10 | N/A |
| Wash | 600 | 60 | 3 | 04540-002-90-28 | N/A |
| Power Rinse | 208 | 60 | 3 | 04540-003-17-05 | 04540-003-17-06 |
| Power Rinse | 240 | 60 | 3 | 04540-003-17-07 | 04540-003-17-08 |
| Power Rinse | 460 | 60 | 3 | 04540-003-17-10 | 04540-003-17-11 |
| Power Rinse | 600 | 60 | 3 | 04540-002-90-28 | 04540-002-90-29 |

Service Note: For units prior to serial number 1032 please call Jackson Technical Service for motor replacements.

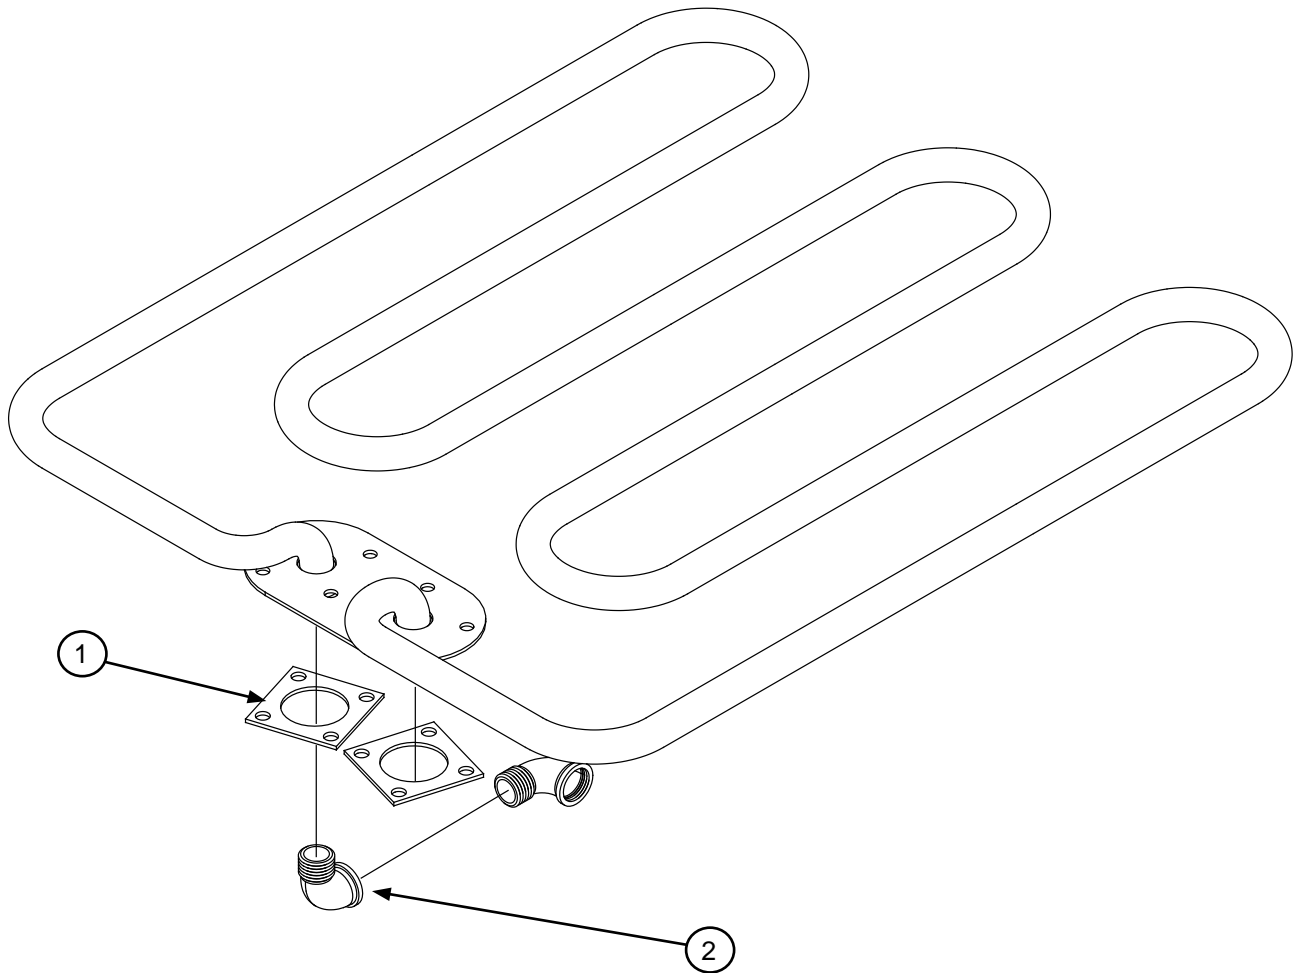

The steam coil assembly is used only in the JFT-S Wash & Power Rinse Sections.

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|-----------------------------------|---------------------------------|
| | | Steam Coil Assembly | 05700-002-86-50 |
| 1 | 1 | Steam Coil Gasket | 05330-011-47-79 |
| 2 | 2 | Elbow, 3/4" 90B Street Black Iron | 04730-011-87-37 |

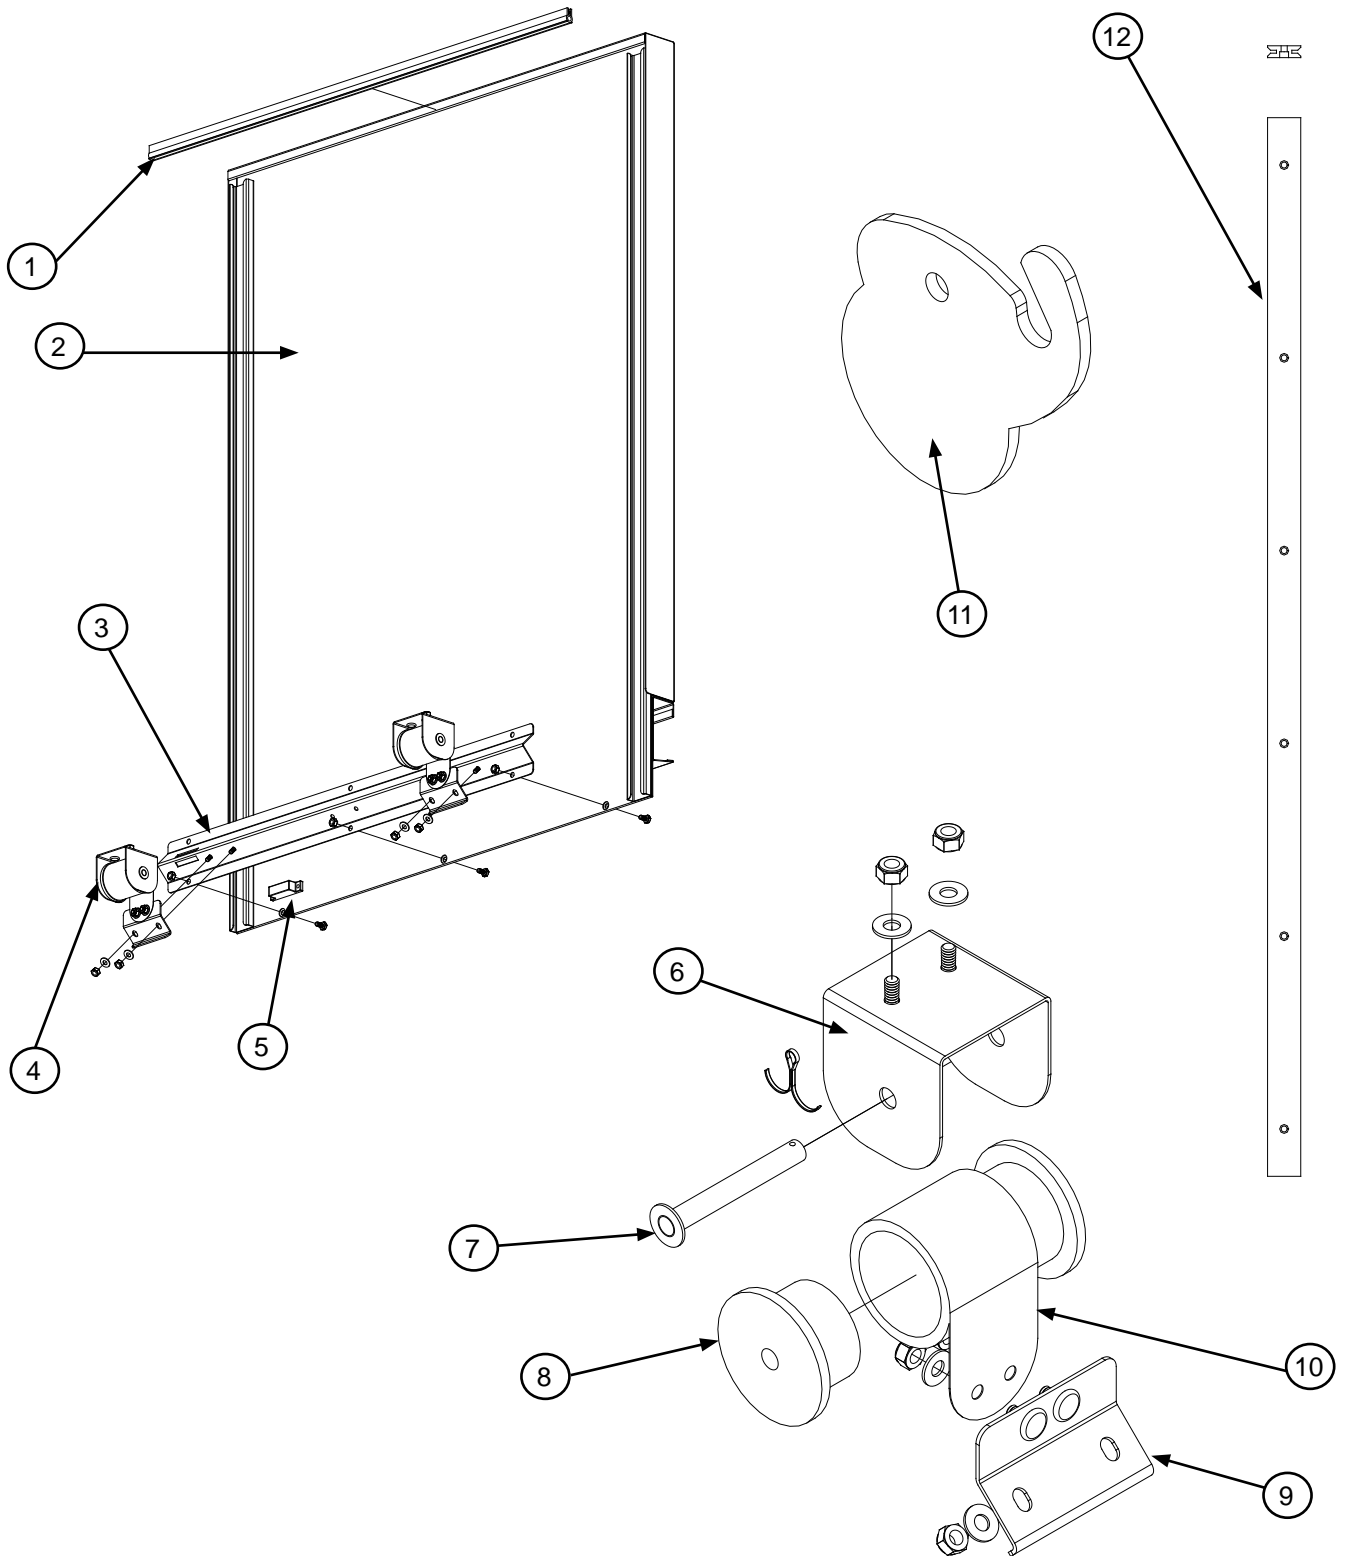


DOOR ASSEMBLIES (TALL VERSION)

PARTS

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---|-----------------|
| 1 | 1 | Seal, Door | 05700-002-91-18 |
| 2 | 1 | Door Weldment | 05700-002-64-57 |
| | 1 | Sponge Gasket | 05700-002-84-44 |
| 3 | 1 | Door Stop Weldment | 05700-002-94-81 |
| 4 | 2 | Door Riser Assembly | 05700-002-67-34 |
| 5 | 1 | Magnet | 05930-002-88-42 |
| 6 | 1 | Holder Bracket | 05700-002-83-62 |
| 7 | 1 | PIN, DOOR SPRING | 05700-002-83-55 |
| 8 | 2 | Spindle, Door Spring | 05700-002-67-28 |
| 9 | 1 | Bracket, Door Holding Weldment | 05315-002-94-92 |
| 10 | 1 | Spring, Door | 05315-002-67-29 |
| 11 | 1 | Door Catch | 05700-003-10-71 |
| 12 | 2 | Door Guide | 05700-002-64-54 |
| | 12 | Hardware: 10-32 x 5/8" Truss Head Screw | 05305-003-02-12 |


This door is used in each of the Prewash, Wash and Power Rinse sections.

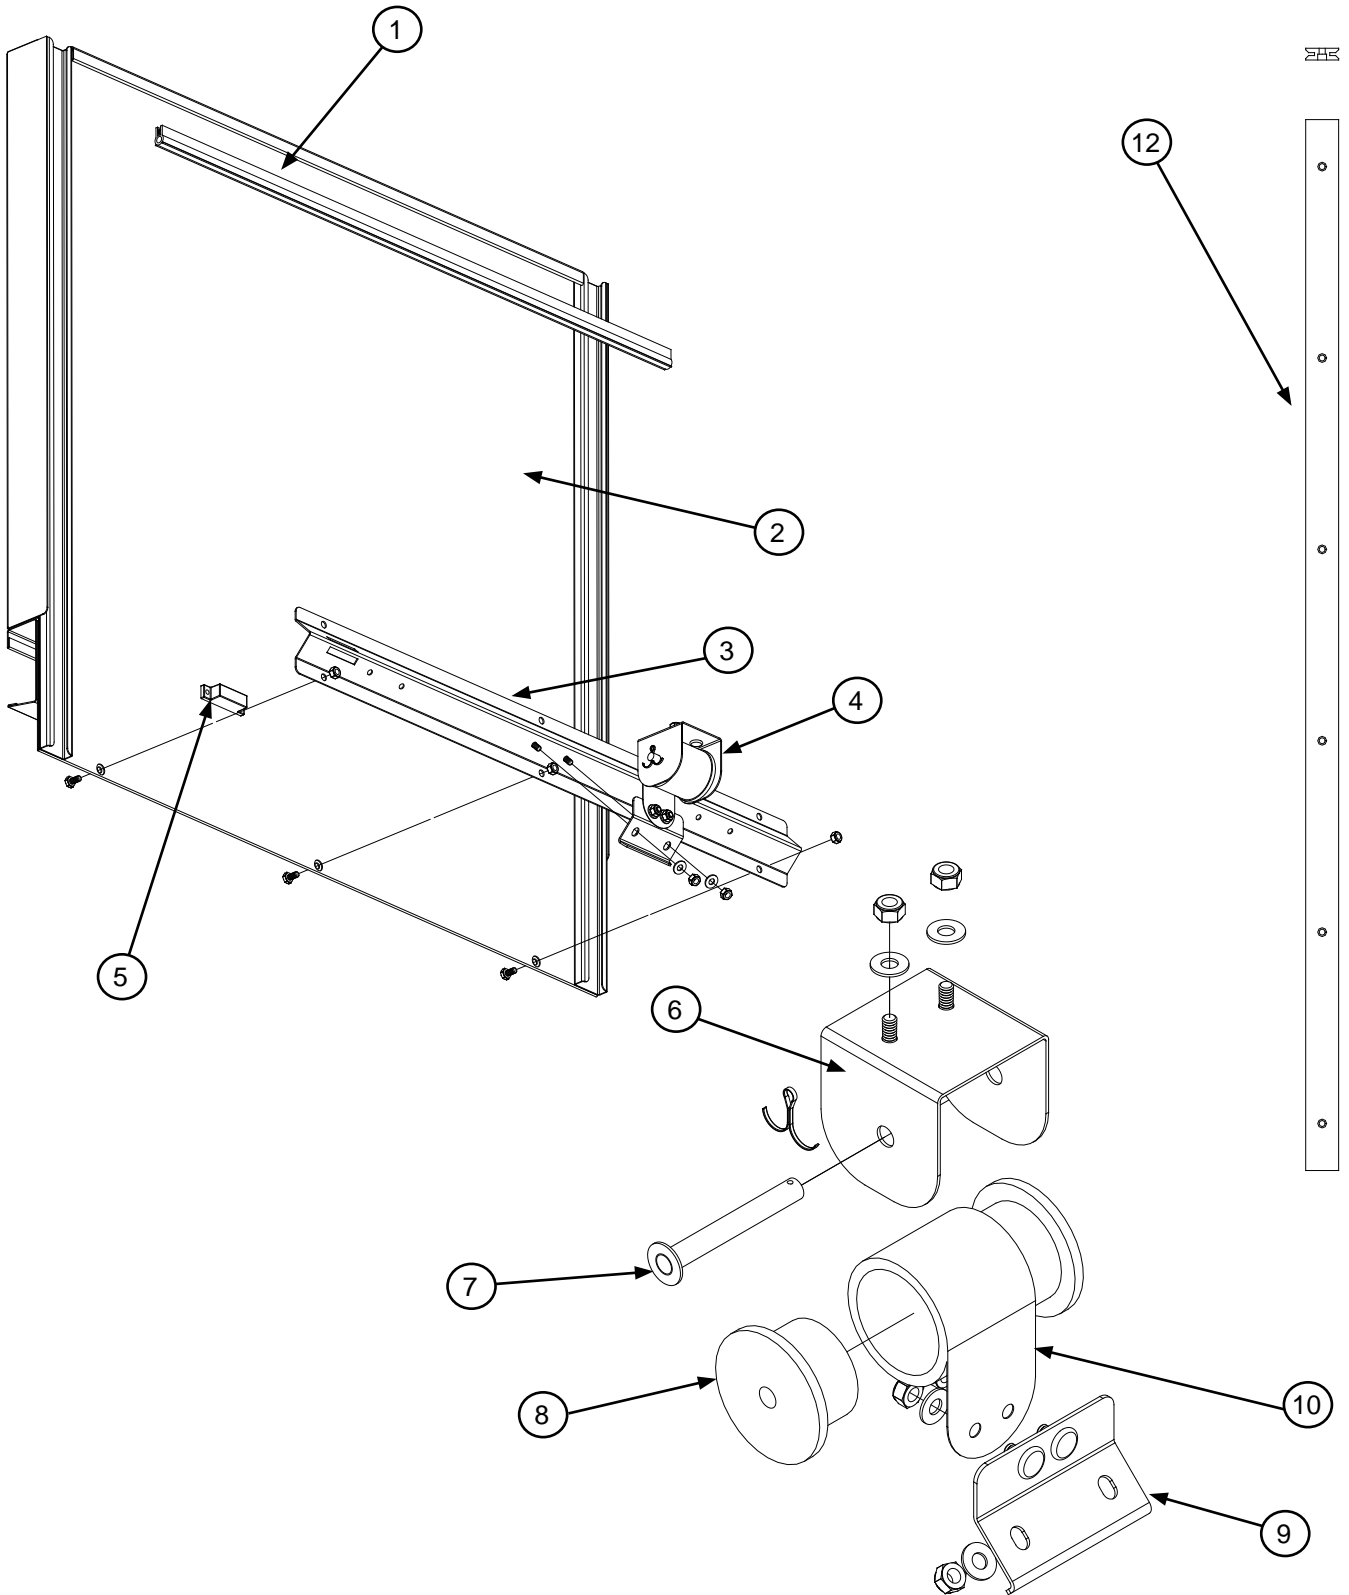

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---|-----------------|
| 1 | 1 | Seal, Door | 05700-002-91-18 |
| 2 | 1 | Door Weldment | 05700-002-64-57 |
| | 1 | Sponge Gasket | 05700-002-84-44 |
| 3 | 1 | Door Stop Weldment | 05700-002-94-81 |
| 4 | 2 | Door Riser Assembly | 05700-002-67-34 |
| 5 | 1 | Magnet | 05930-002-88-42 |
| 6 | 1 | Holder Bracket | 05700-002-83-62 |
| 7 | 1 | PIN, DOOR SPRING | 05700-002-83-55 |
| 8 | 2 | Spindle, Door Spring | 05700-002-67-28 |
| 9 | 1 | Bracket, Door Holding Weldment | 05315-002-94-92 |
| 10 | 1 | Spring, Door | 05315-002-67-29 |
| 11 | 1 | Door Catch | 05700-003-10-71 |
| 12 | 2 | Door Guide | 05700-002-64-54 |
| | 12 | Hardware: 10-32 x 5/8" Truss Head Screw | 05305-003-02-12 |


This door is used in each of the Prewash, Wash and Power Rinse sections.

This frame is used in each of the Prewash, Wash and Power Rinse sections.

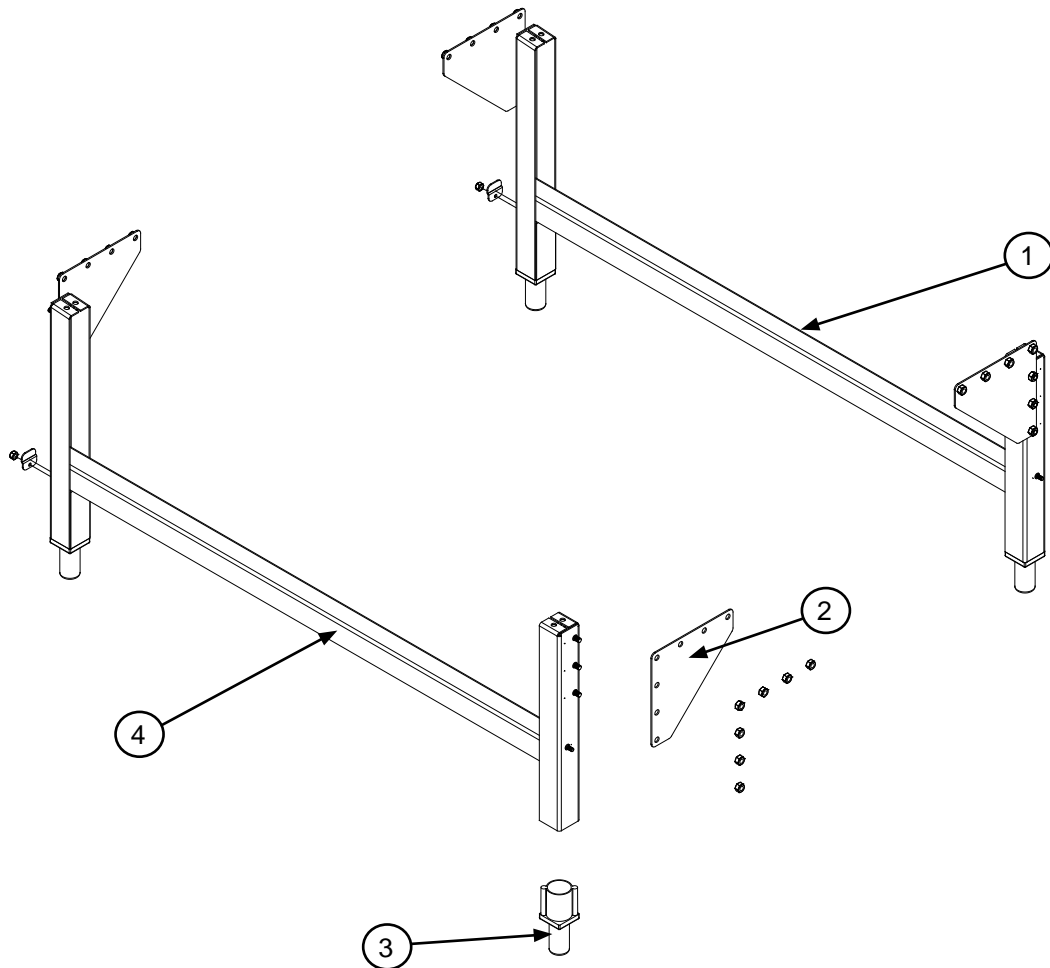


| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|-------------------------|---------------------------------|
| | | Complete Frame Assembly | 05700-002-79-04 |
| 1 | | Right Frame Weldment | 05700-002-79-03 |
| 2 | | Support Bracket | 05700-002-64-07 |
| 3 | | Left Frame Weldment | 05700-002-64-09 |
| 4 | | Bullet Foot | 05340-108-02-06 |


This frame is used only in the Blower Dryer section.

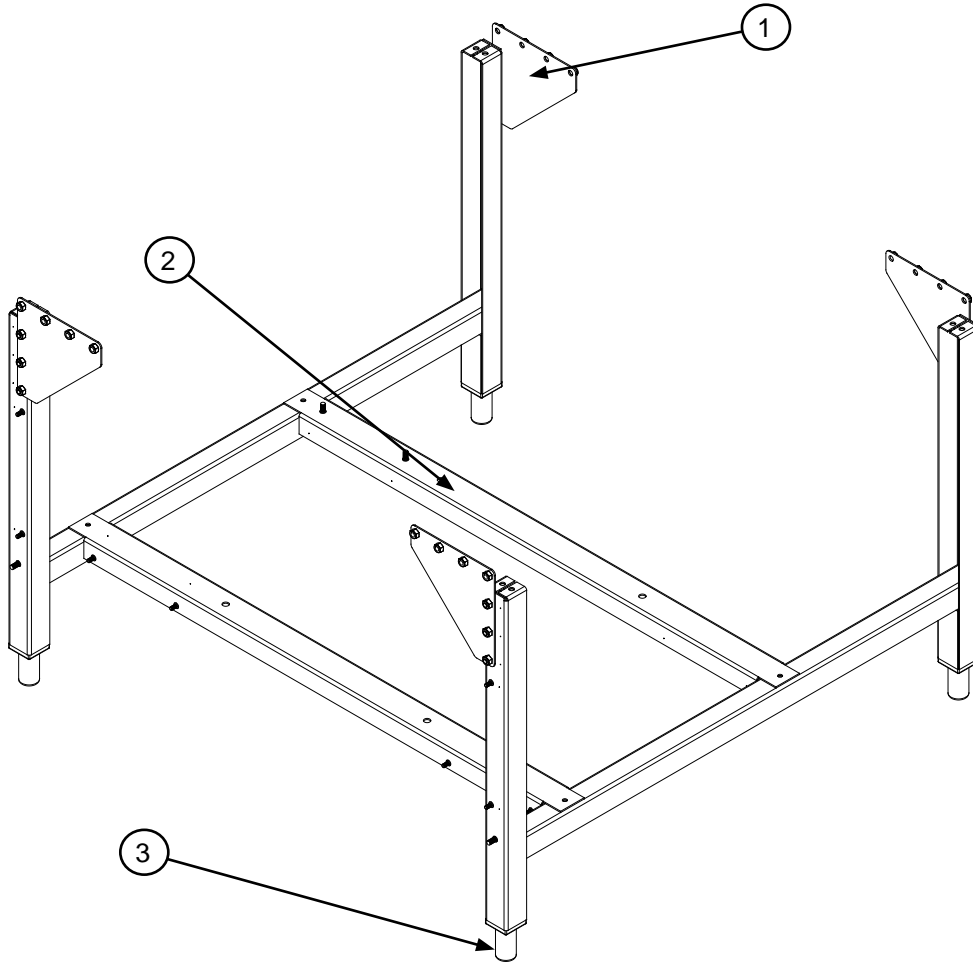

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| | | Blower Dryer Section Complete Frame Assembly | 05700-002-86-26 |
| 1 | | Bracket, Support | 05700-002-64-07 |
| 2 | | Stand, Dryer Weldment | 05700-002-70-51 |
| 3 | | Bullet Foot | 05340-108-02-06 |

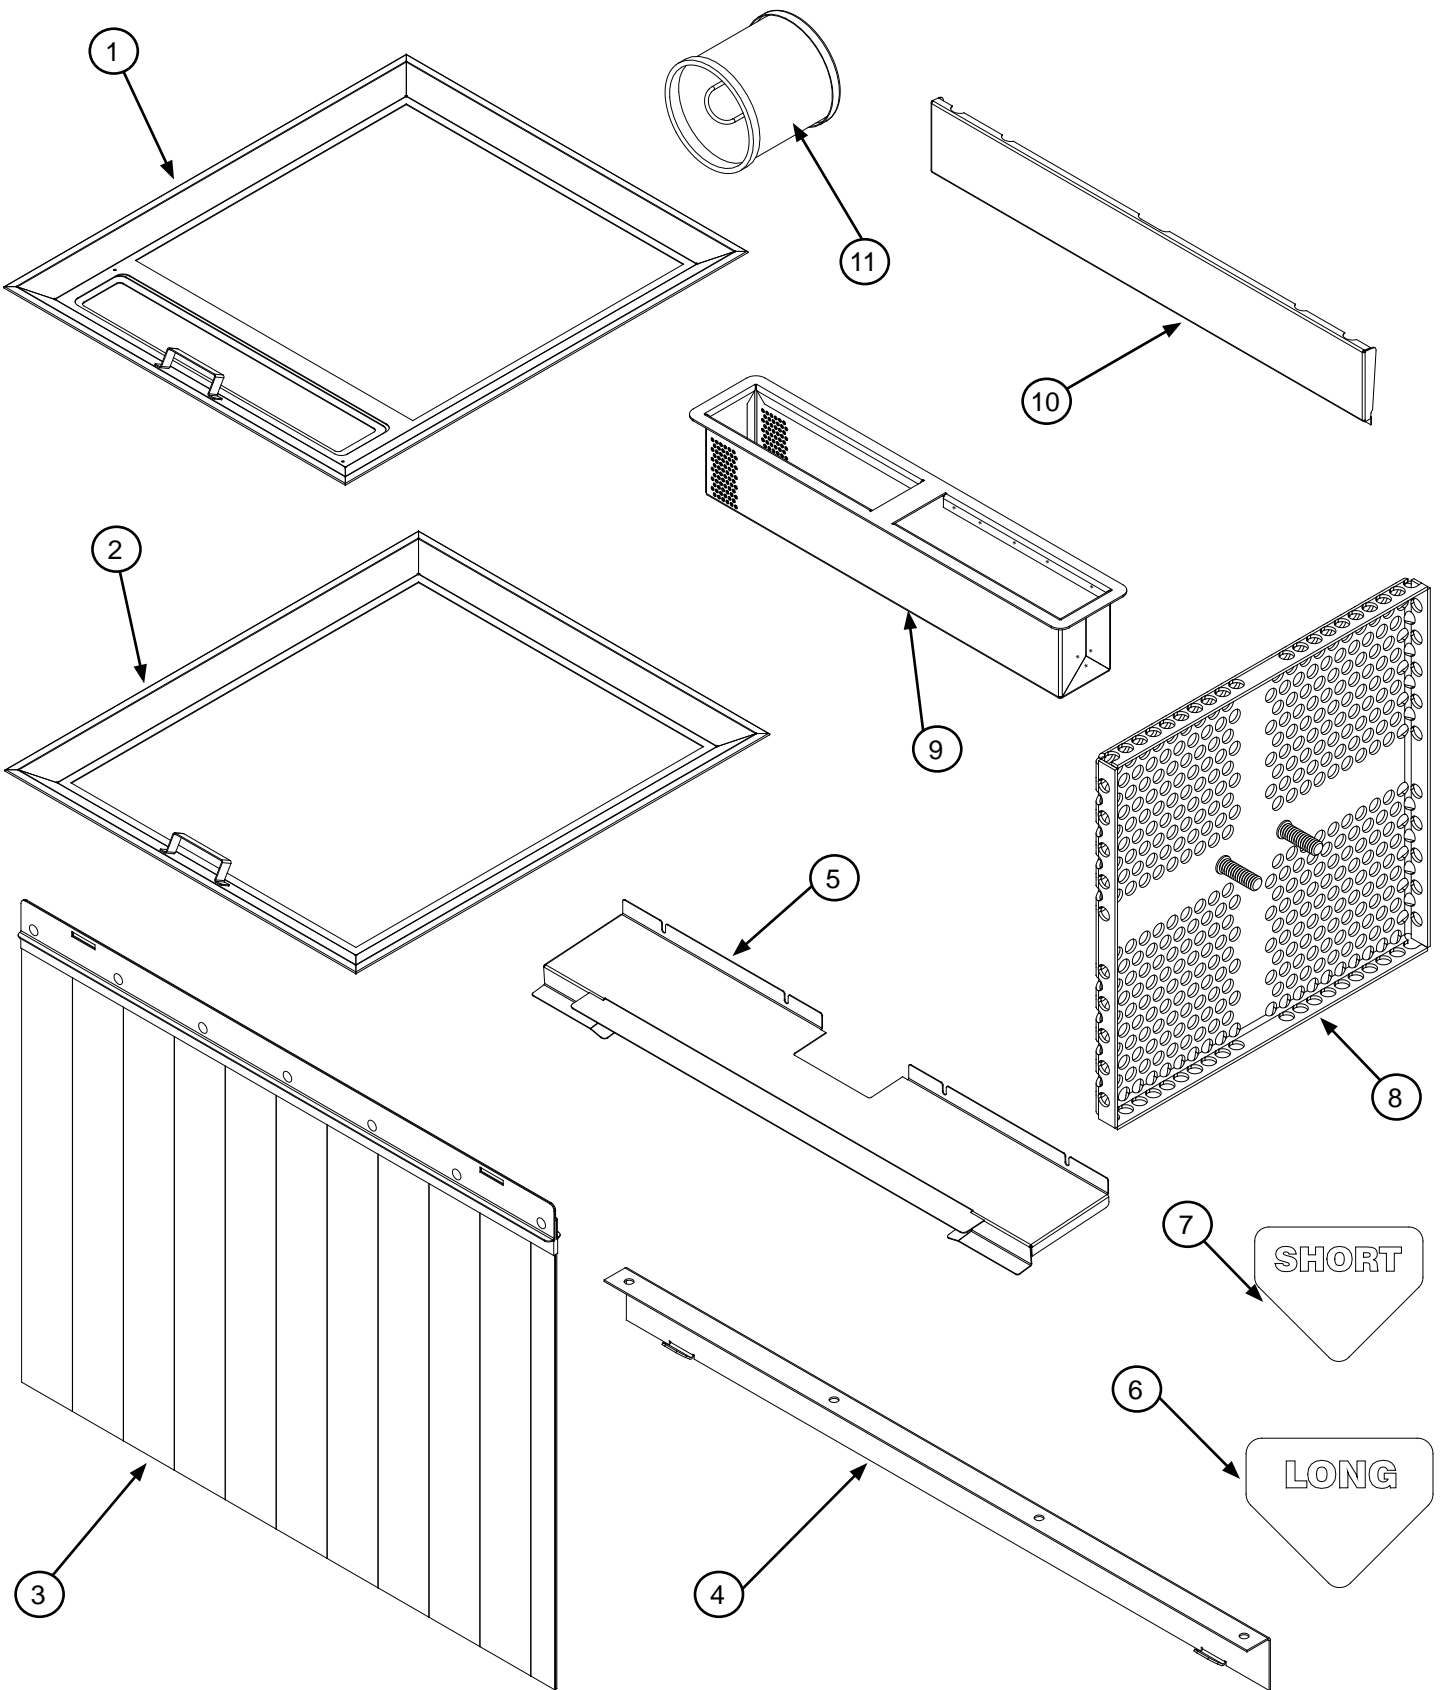

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| 1 | 1 | Prewash Section Pan Strainer | 05700-002-74-77 |
| 2 | 1 | Wash & Power Rinse Sections Pan Strainer | 05700-002-88-24 |
| 3 | 1 | Prewash, Wash and Power Rinse sections | 05700-002-79-70 |
| | 1 | Control section | 05700-002-79-71 |
| | 1 | Blower section | 05700-002-86-00 |
| 4 | 1 | Curtain Holder | 05700-002-79-65 |
| 5 | 1 | Strainer Support, Back | 05700-002-97-46 |
| 6 | 1 | Long Curtain Decal | 09905-011-73-84 |
| 7 | 1 | Short Curtain Decal | 09905-011-73-82 |
| 8 | 1 | Unload/Load End Strainer | 05700-003-22-99 |
| 9 | 1 | Prewash Section Basket, Scrap | 05700-002-74-61 |
| 10 | 2 | Strainer Support, Side | 05700-002-64-43 |
| 11 | 1 | Drain Suction Strainer | 05700-002-66-47 |

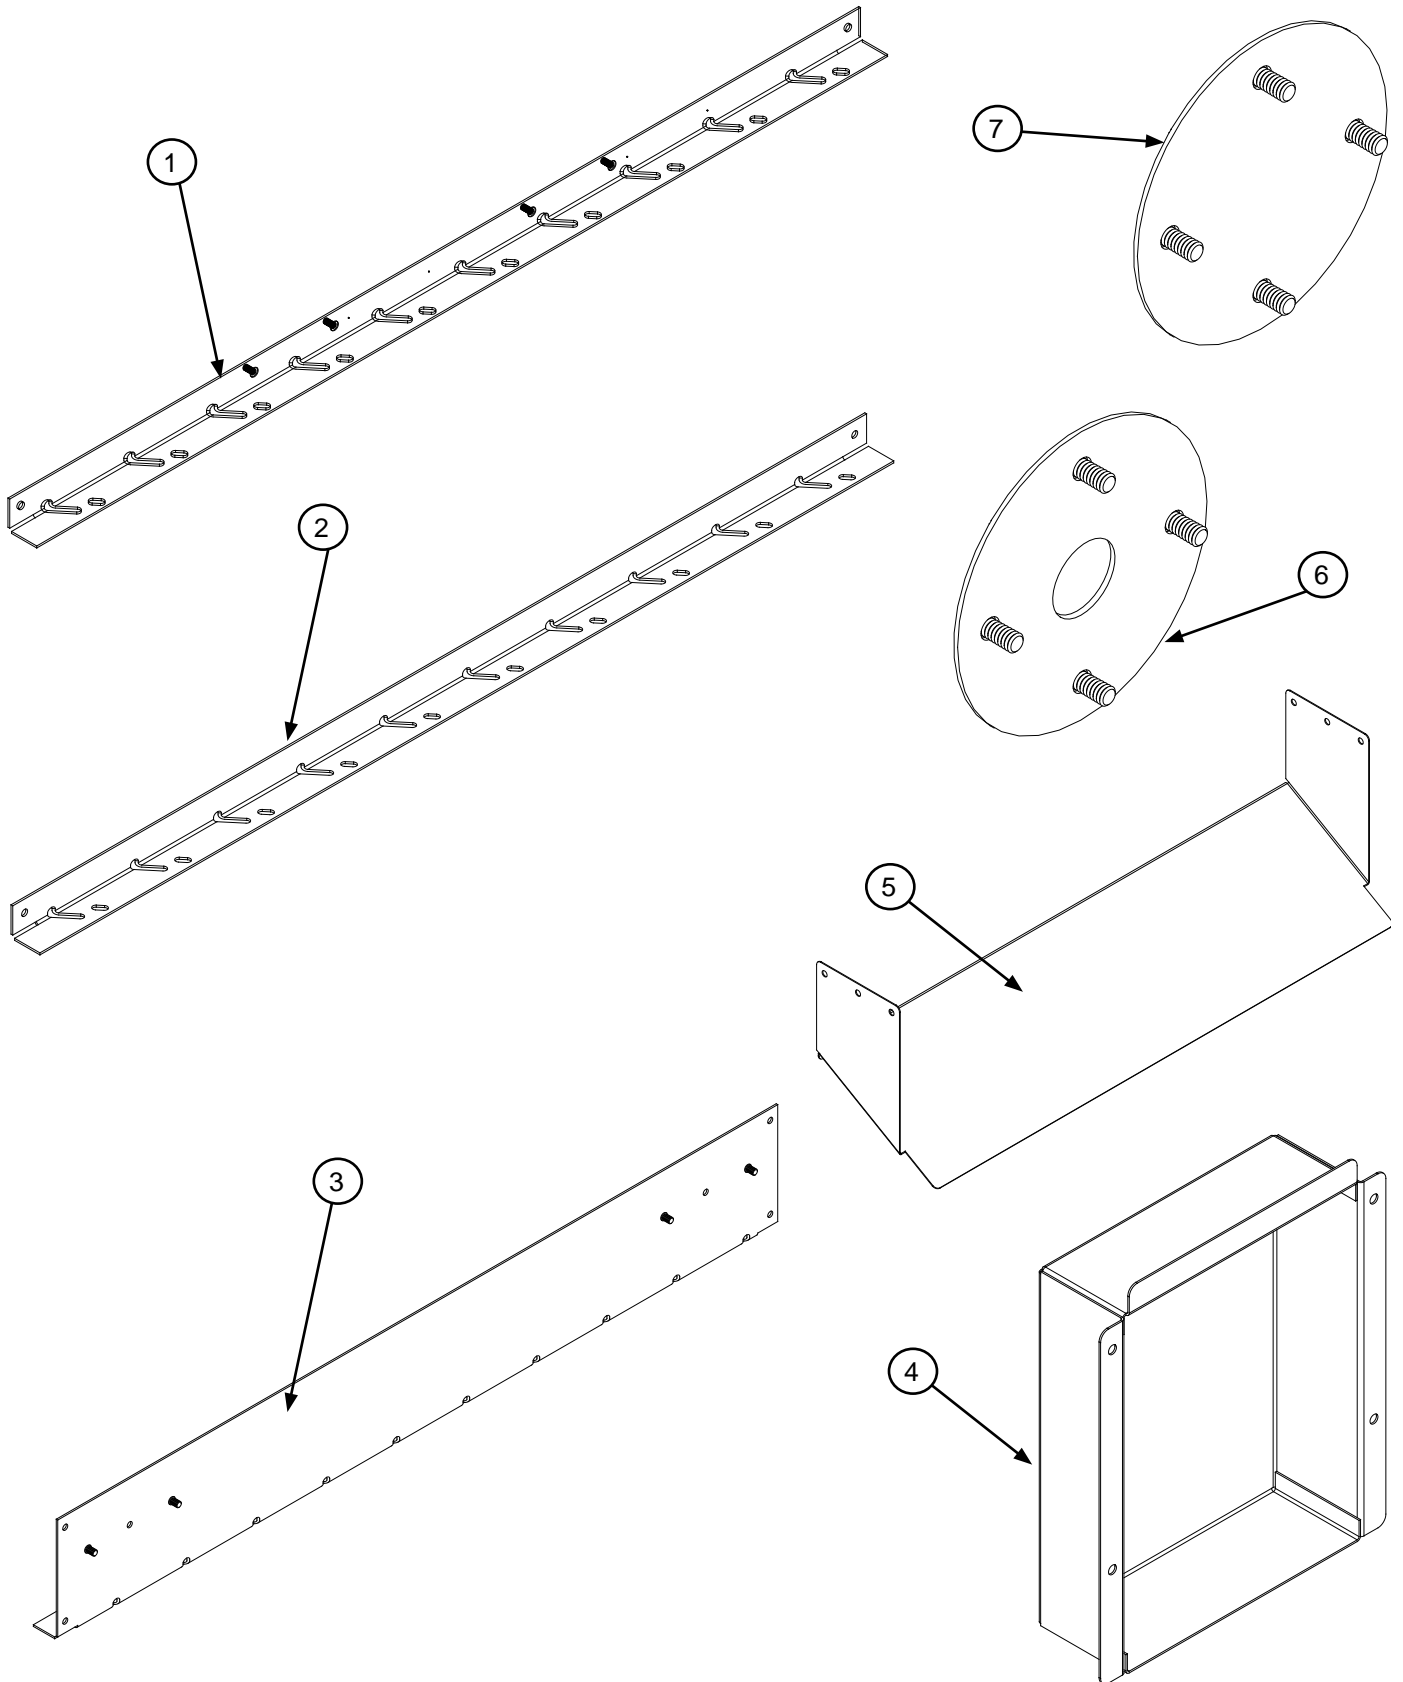

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|--|---------------------------------|
| 1 | 1 | Lower Front Rail Weldment | 05700-002-80-17 |
| 2 | 1 | Rail, Lower Section | 05700-002-65-07 |
| 3 | 2 | Rail, Upper Section | 05700-002-84-39 |
| 4 | 1 | Wash & Power Rinse Sections Cover, Tank Heater Terminals | 05700-002-74-34 |
| 5 | 2 | Run Off Bracket | 05700-002-81-98 |
| 6 | 1 | Wash Section Plate Weldment | 05700-002-88-49 |
| 7 | 1 | Power Rinse Section Cross Over Plate Weldment | 05700-002-74-48 |

GO*BOX COMPONENTS:

A GO*Box is a kit of the most needed parts for a particular model or model family to successfully effect a repair in the first call 90% or more of the time.

The following components may be ordered together using Mfg. No.: 06401-002-99-17.

| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|------------------------------------|---------------------------------|
| 1 | 1 | Valve, Solenoid 120V | 04810-002-38-15 |
| 2 | 2 | Spring, Door | 05315-002-67-29 |
| 3 | 2 | Seal, Pump | 05330-011-71-98 |
| 4 | 2 | Gasket, Pump | 05330-011-71-62 |
| 5 | 20 | Wheel, PVC | 05340-002-63-86 |
| 6 | 4 | Lanyard, 6" Long | 05340-011-72-46 |
| 7 | 20 | Peg, Belt | 05700-002-63-88 |
| 8 | 1 | Switch, Start, Green | 05930-002-80-60 |
| 9 | 1 | Switch, Stop, Red | 05930-002-80-72 |
| 10 | 1 | Switch, Reed | 05930-002-36-80 |
| 11 | 1 | Thermostat, High Limit | 05930-002-83-31 |
| 12 | 1 | Contactor, 3 Pole 50 Amp | 05945-002-24-70 |
| 13 | 1 | Overload, Motor, 10-16 Amp | 05945-011-84-59 |
| 14 | 1 | Overload, Drive Motor, 1-1.5 Amp | 05945-111-68-39 |
| 15 | 1 | Overload, Wash Motor , 5.5-5.8 Amp | 05945-111-68-40 |
| 16 | 1 | Transformer 480 TO 240V - 500VA | 05950-111-65-93 |
| 17 | 1 | Transformer, 208-240/24V | 05950-400-01-35 |
| 18 | 2 | Controller & Probe, Level Control | 05700-002-87-53 |

SPARE PARTS KIT:

The following spare parts kit may be ordered together using part number: 05700-002-94-74




| ITEM | QTY | DESCRIPTION | PART NUMBER |
|------|-----|---|---------------------------------|
| 1 | 12 | Wheel, PVC | 05340-002-63-86 |
| 2 | 6 | Plate, Connector | 05700-002-63-85 |
| 3 | 6 | Rod, Belt | 05700-002-63-92 |
| 4 | 48 | Washer, 1/4" ID x 3/4" OD | 05311-011-76-30 |
| 5 | 12 | Locknut, 1/4"-20, Low Profile with Nylon Insert | 05310-374-02-00 |
| 6 | 250 | Screw, 10-24 x 1/2" Hex Head | 05305-011-40-89 |
| 7 | 250 | Locknut, 10-24 with Nylon Insert | 05310-373-01-00 |
| 8 | 500 | Washer, Flat #10 | 05311-173-02-00 |
| 9 | 20 | Screw, 8-32 x 3/8" Phillips Flat Head | 05305-011-37-07 |
| 10 | 20 | Nut, Hex 8-32 Locking | 05310-272-02-00 |
| 11 | 10 | Screw, 10-32 x 1/2" Flat Phillips Head | 05305-011-44-51 |
| 12 | 10 | Locknut, 10-32 with Nylon Insert | 05310-373-02-00 |

LEGEND


| | | | |
|----------|------------------------------------|--------|---------------------------------------|
| L1 L2 L3 | POWER DISTRIBUTION BLOCK | S17 | STOP BUTTON 3 |
| GND | GROUND | FRS | FINAL RINSE SOLENOID |
| H1 | WASH HEATER 1 | TFS | TANK FILL SOLENOID |
| H2 | WASH HEATER 2 | TS1 | WASH REGULATING THERMOSTAT |
| H7 | RINSE HEATER 1 | TS2 | WASH HIGH LIMIT THERMOSTAT 1 |
| H8 | RINSE HEATER 2 | TS3 | WASH HIGH LIMIT THERMOSTAT 2 |
| H9 | BLOWER HEATER (OPTIONAL) | TS10 | RINSE REGULATING THERMOSTAT |
| M1 | DRIVE MOTOR | TS11 | RINSE HIGH LIMIT THERMOSTAT 1 |
| M2 | PREWASH PUMP MOTOR | TS12 | RINSE HIGH LIMIT THERMOSTAT 2 |
| M3 | WASH PUMP MOTOR | TS13 | INTERNAL BLOWER HIGH LIMIT |
| M6 | POWER RINSE PUMP MOTOR | TS14 | BLOWER HEATER HIGH LIMIT THERMOSTAT |
| M8 | BLOWER MOTOR (OPTIONAL) | TS16 | INTERNAL EXHAUST FAN HIGH LIMIT |
| M9 | EXHAUST FAN MOTOR | OL1 | DRIVE MOTOR OVERLOAD 1 |
| R1 | DRIVE MOTOR CONTACTOR 1 | OL2 | DRIVE MOTOR OVERLOAD 2 |
| R2 | DRIVE MOTOR CONTACTOR 2 | OL3 | PREWASH MOTOR OVERLOAD |
| R3 | PREWASH PUMP MOTOR CONTACTOR | OL4 | WASH MOTOR OVERLOAD |
| R4 | WASH PUMP MOTOR CONTACTOR | OL7 | POWER RINSE MOTOR OVERLOAD |
| R7 | POWER RINSE PUMP MOTOR CONTACTOR | OL9 | BLOWER MOTOR OVERLOAD (OPTIONAL) |
| R9 | BLOWER MOTOR CONTACTOR (OPTIONAL) | OL23 | EXHAUST FAN MOTOR OVERLOAD |
| R10 | WASH HEATER CONTACTOR 1 | E1 | TANK FILLED LIGHT |
| R11 | WASH HEATER CONTACTOR 2 | E2 | MOTOR FAULT LIGHT |
| R16 | RINSE HEATER CONTACTOR 1 | E3 | ON LIGHT |
| R17 | RINSE HEATER CONTACTOR 2 | E4 | START LIGHT 1 |
| R18 | BLOWER HEATER CONTACTOR (OPTIONAL) | E5 | START LIGHT 2 |
| R19 | ON RELAY | E6 | START LIGHT 3 |
| R20 | START RELAY | PWP | PREWASH PROBE |
| R21 | MACHINE FILL RELAY | WP | WASH PROBE |
| R22 | DOOR RELAY | PRP | POWER RINSE PROBE |
| R23 | EXHAUST FAN MOTOR CONTACTOR | FRP | FINAL RINSE PROBE |
| R24 | WASH TANK FILL RELAY | TD | TEMPERATURE DISPLAY |
| R25 | POWER RINSE TANK FILL RELAY | PWFSW1 | PREWASH TOP FLOAT SWITCH |
| S1 | EMERGENCY STOP BUTTON | PWFSW2 | PREWASH BOTTOM FLOAT SWITCH |
| S2 | DOOR SWITCH 1 | WFSW1 | WASH TOP FLOAT SWITCH |
| S3 | DOOR SWITCH 2 | WFSW2 | WASH BOTTOM FLOAT SWITCH |
| S6 | DOOR SWITCH 5 | PRFSW1 | POWER RINSE TOP FLOAT SWITCH |
| S7 | ON BUTTON | PRFSW2 | POWER RINSE BOTTOM FLOAT SWITCH |
| S8 | OFF BUTTON | T1 | CONTROL TRANSFORMER |
| S9 | START BUTTON 1 | CF | CONTROL FUSE |
| S10 | STOP BUTTON 1 | DF | DETERGENT FUSE |
| S11 | START BUTTON 2 | RF | RINSE AID FUSE |
| S12 | STOP BUTTON 2 | TM1 | BLOWER TIMER (OPTIONAL) |
| S13 | DRIVE MOTOR SELECTOR SWITCH | TM2 | AUTO SHUTOFF TIMER |
| S14 | CONVEYOR JAM SWITCH | TM3 | EXTERNAL EXHAUST FAN TIMER (OPTIONAL) |
| S15 | DRIVE MOTOR JAM SWITCH | SE1 | SENSOR - EMITTER |
| | | SE2 | SENSOR - RECEIVER |


**JFT
ELECTRICAL DIAGRAM**

208/230/460 VOLT 50/60 HZ 3 PHASE

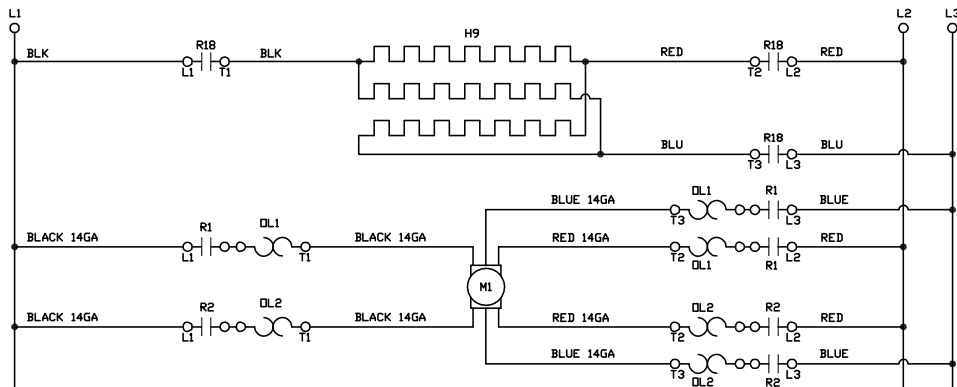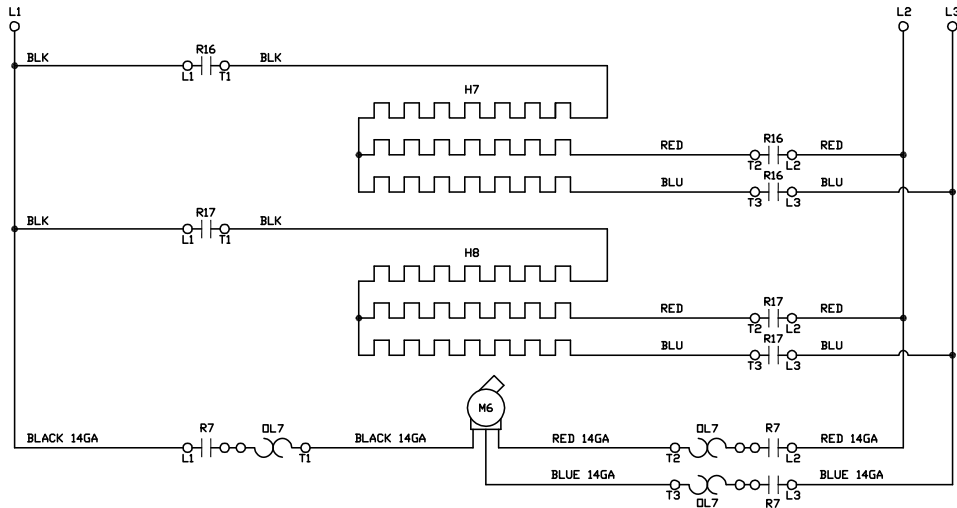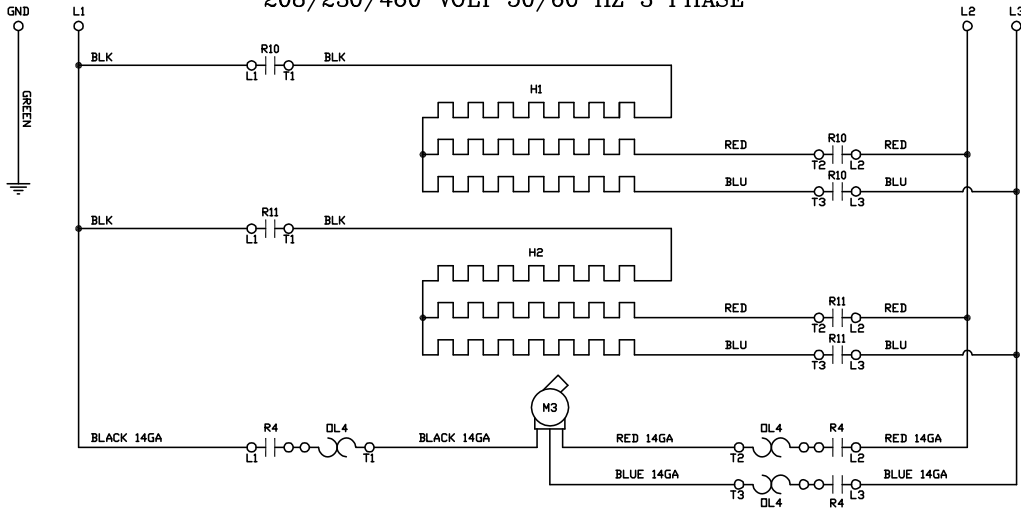

(CONTINUED)

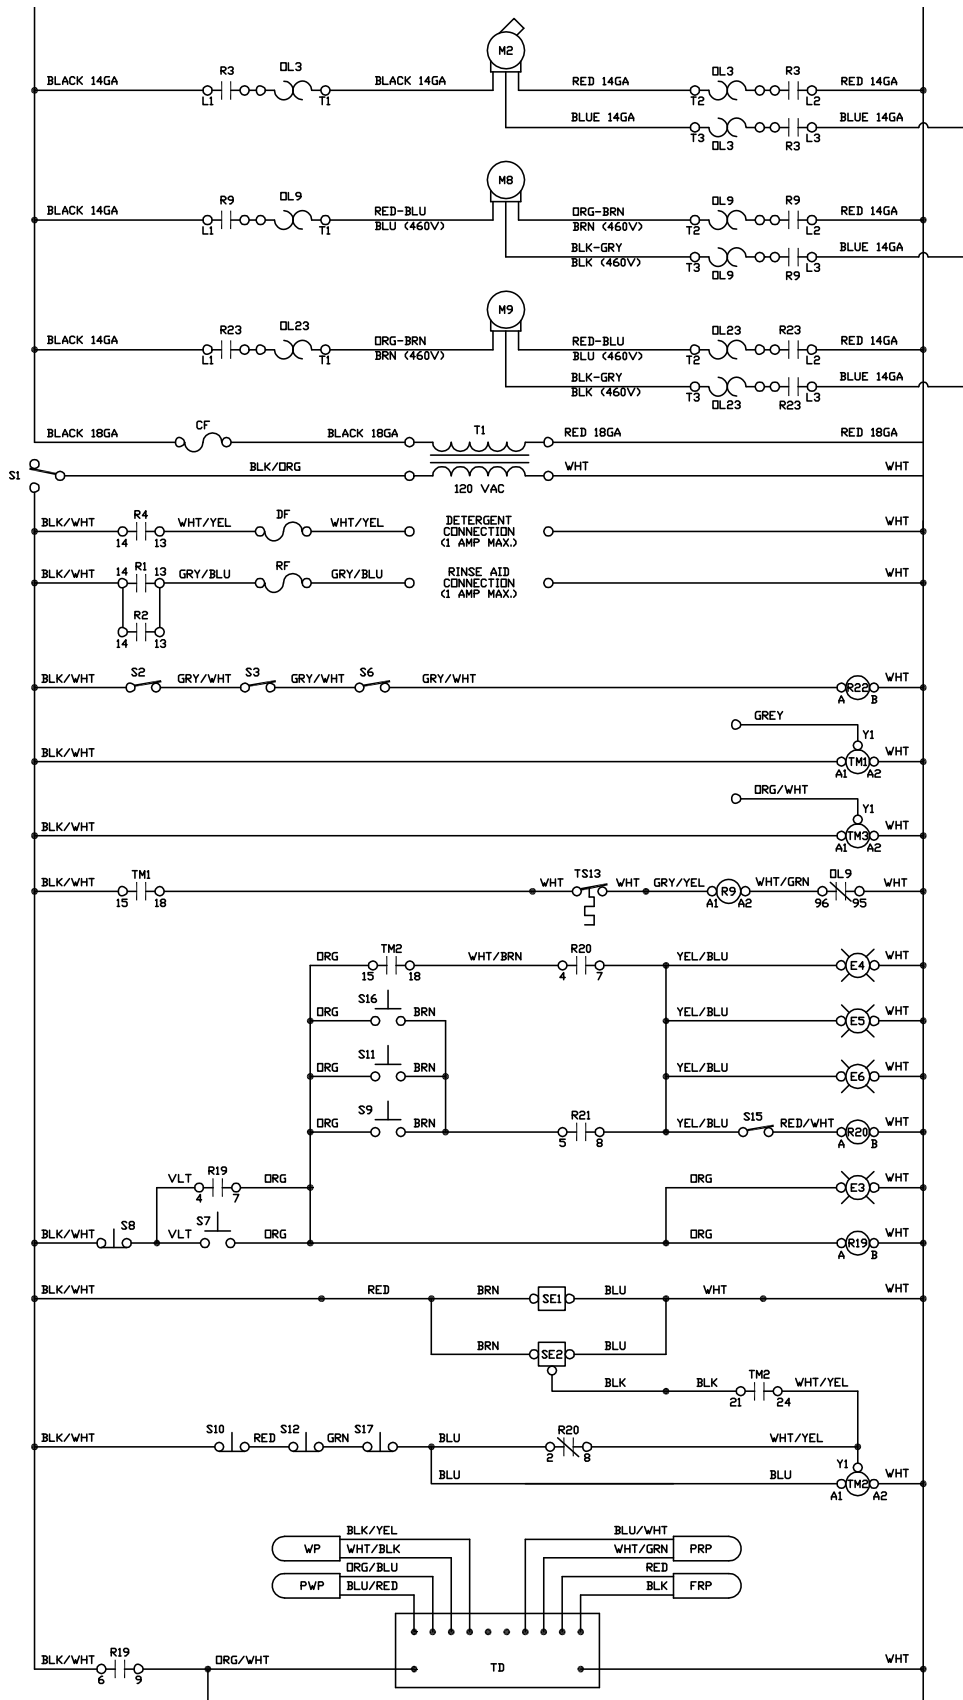


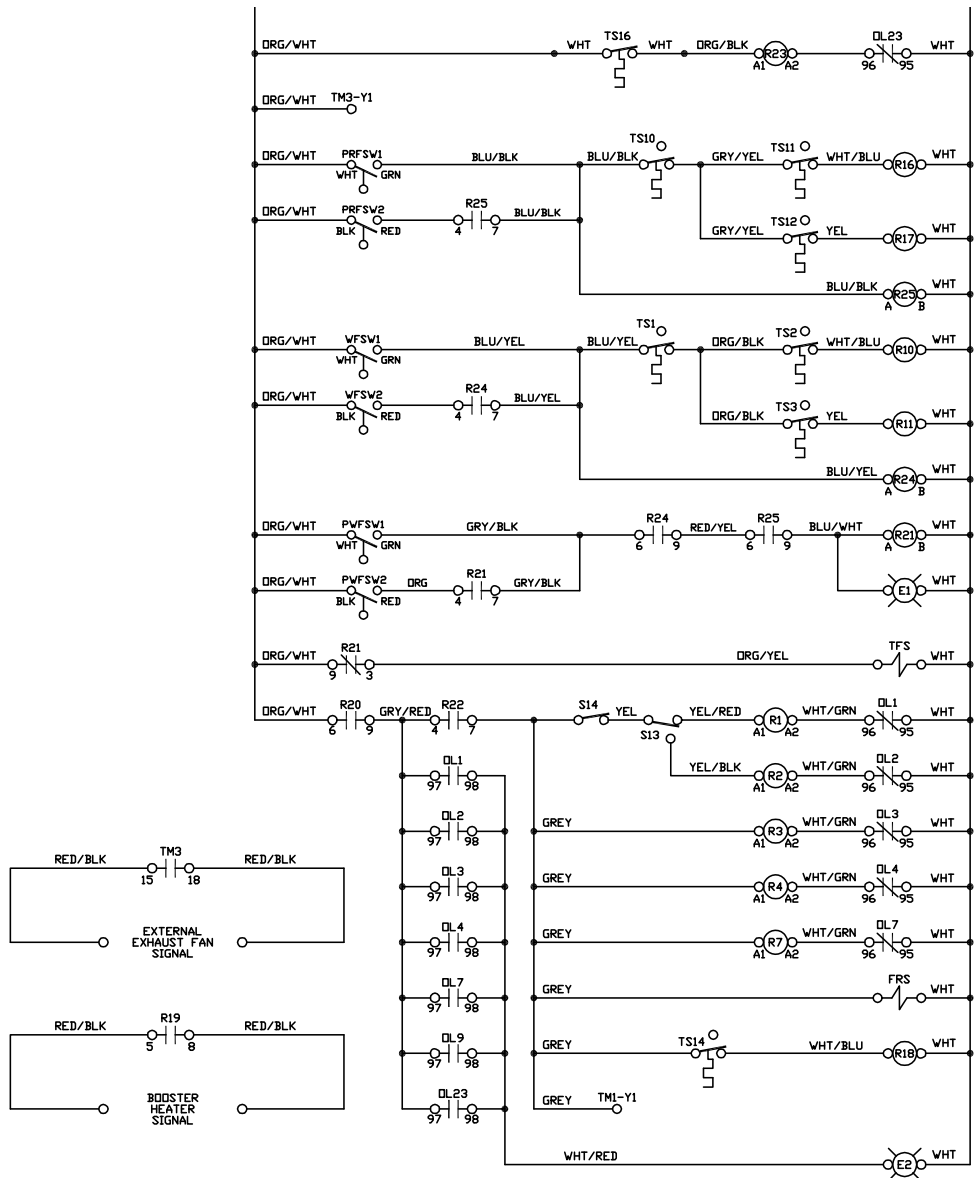


LEGEND

| | | | |
|----------|-----------------------------------|--------|---------------------------------------|
| L1 L2 L3 | POWER DISTRIBUTION BLOCK | WSS | WASH STEAM SOLENOID |
| GND | GROUND | BSS | BLOWER STEAM SOLENOID (OPTIONAL) |
| M1 | DRIVE MOTOR | TS1 | WASH REGULATING THERMOSTAT |
| M2 | PREWASH PUMP MOTOR | TS10 | RINSE REGULATING THERMOSTAT |
| M3 | WASH PUMP MOTOR | TS13 | INTERNAL BLOWER HIGH LIMIT |
| M6 | POWER RINSE PUMP MOTOR | TS15 | STEAM BOOSTER THERMOSTAT |
| M8 | BLOWER MOTOR (OPTIONAL) | TS16 | INTERNAL EXHAUST FAN HIGH LIMIT |
| M9 | EXHAUST FAN MOTOR | OL1 | DRIVE MOTOR OVERLOAD 1 |
| R1 | DRIVE MOTOR CONTACTOR 1 | OL2 | DRIVE MOTOR OVERLOAD 2 |
| R2 | DRIVE MOTOR CONTACTOR 2 | OL3 | PREWASH MOTOR OVERLOAD |
| R3 | PREWASH PUMP MOTOR CONTACTOR | OL4 | WASH MOTOR OVERLOAD |
| R4 | WASH PUMP MOTOR CONTACTOR | OL7 | POWER RINSE MOTOR OVERLOAD |
| R7 | POWER RINSE PUMP MOTOR CONTACTOR | OL9 | BLOWER MOTOR OVERLOAD (OPTIONAL) |
| R9 | BLOWER MOTOR CONTACTOR (OPTIONAL) | OL23 | EXHAUST FAN MOTOR OVERLOAD |
| R19 | ON RELAY | E1 | TANK FILLED LIGHT |
| R20 | START RELAY | E2 | MOTOR FAULT LIGHT |
| R21 | MACHINE FILL RELAY | E3 | ON LIGHT |
| R22 | DOOR RELAY | E4 | START LIGHT 1 |
| R23 | EXHAUST FAN MOTOR CONTACTOR | E5 | START LIGHT 2 |
| R24 | WASH TANK FILL RELAY | E6 | START LIGHT 3 |
| R25 | POWER RINSE TANK FILL RELAY | PWP | PREWASH PROBE |
| S1 | EMERGENCY STOP BUTTON | WP | WASH PROBE |
| S2 | DOOR SWITCH 1 | PRP | POWER RINSE PROBE |
| S3 | DOOR SWITCH 2 | FRP | FINAL RINSE PROBE |
| S6 | DOOR SWITCH 5 | TD | TEMPERATURE DISPLAY |
| S7 | ON BUTTON | PWFSW1 | PREWASH TOP FLOAT SWITCH |
| S8 | OFF BUTTON | PWFSW2 | PREWASH BOTTOM FLOAT SWITCH |
| S9 | START BUTTON 1 | WFSW1 | WASH TOP FLOAT SWITCH |
| S10 | STOP BUTTON 1 | WFSW2 | WASH BOTTOM FLOAT SWITCH |
| S11 | START BUTTON 2 | PRFSW1 | POWER RINSE TOP FLOAT SWITCH |
| S12 | STOP BUTTON 2 | PRFSW2 | POWER RINSE BOTTOM FLOAT SWITCH |
| S13 | DRIVE MOTOR SELECTOR SWITCH | T1 | CONTROL TRANSFORMER |
| S14 | CONVEYOR JAM SWITCH | T3 | 600-208V TRANSFORMER |
| S15 | DRIVE MOTOR JAM SWITCH | CF | CONTROL FUSE |
| S16 | START BUTTON 3 | DF | DETERGENT FUSE |
| SK | KEYED SWITCH (OPTION) | RF | RINSE AID FUSE |
| S17 | STOP BUTTON 3 | TM1 | BLOWER TIMER (OPTIONAL) |
| FRS | FINAL RINSE SOLENOID | TM2 | AUTO SHUTOFF TIMER |
| TFS | TANK FILL SOLENOID | TM3 | EXTERNAL EXHAUST FAN TIMER (OPTIONAL) |
| SBS | STEAM BOOSTER SOLENOID | SE1 | SENSOR - EMITTER |
| RSS | RINSE STEAM SOLENOID | SE2 | SENSOR - RECEIVER |

**JFT-S
ELECTRICAL DIAGRAM
600 VOLT 60 HZ 3 PHASE**

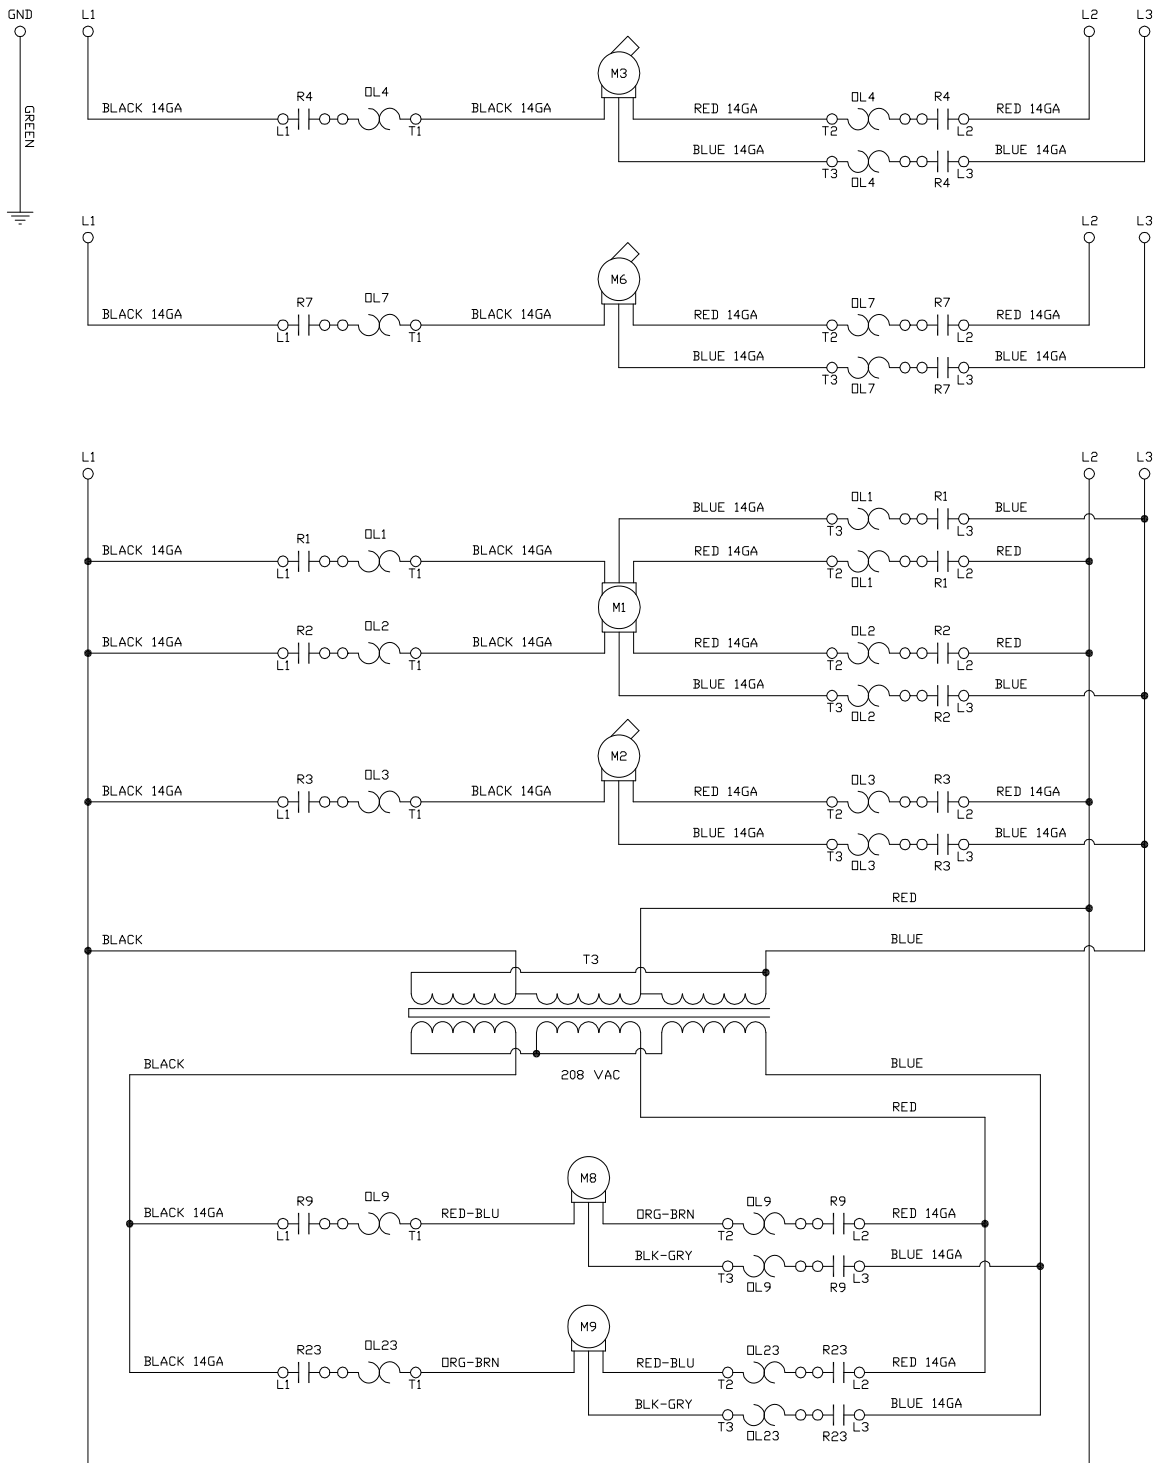

(CONTINUED)

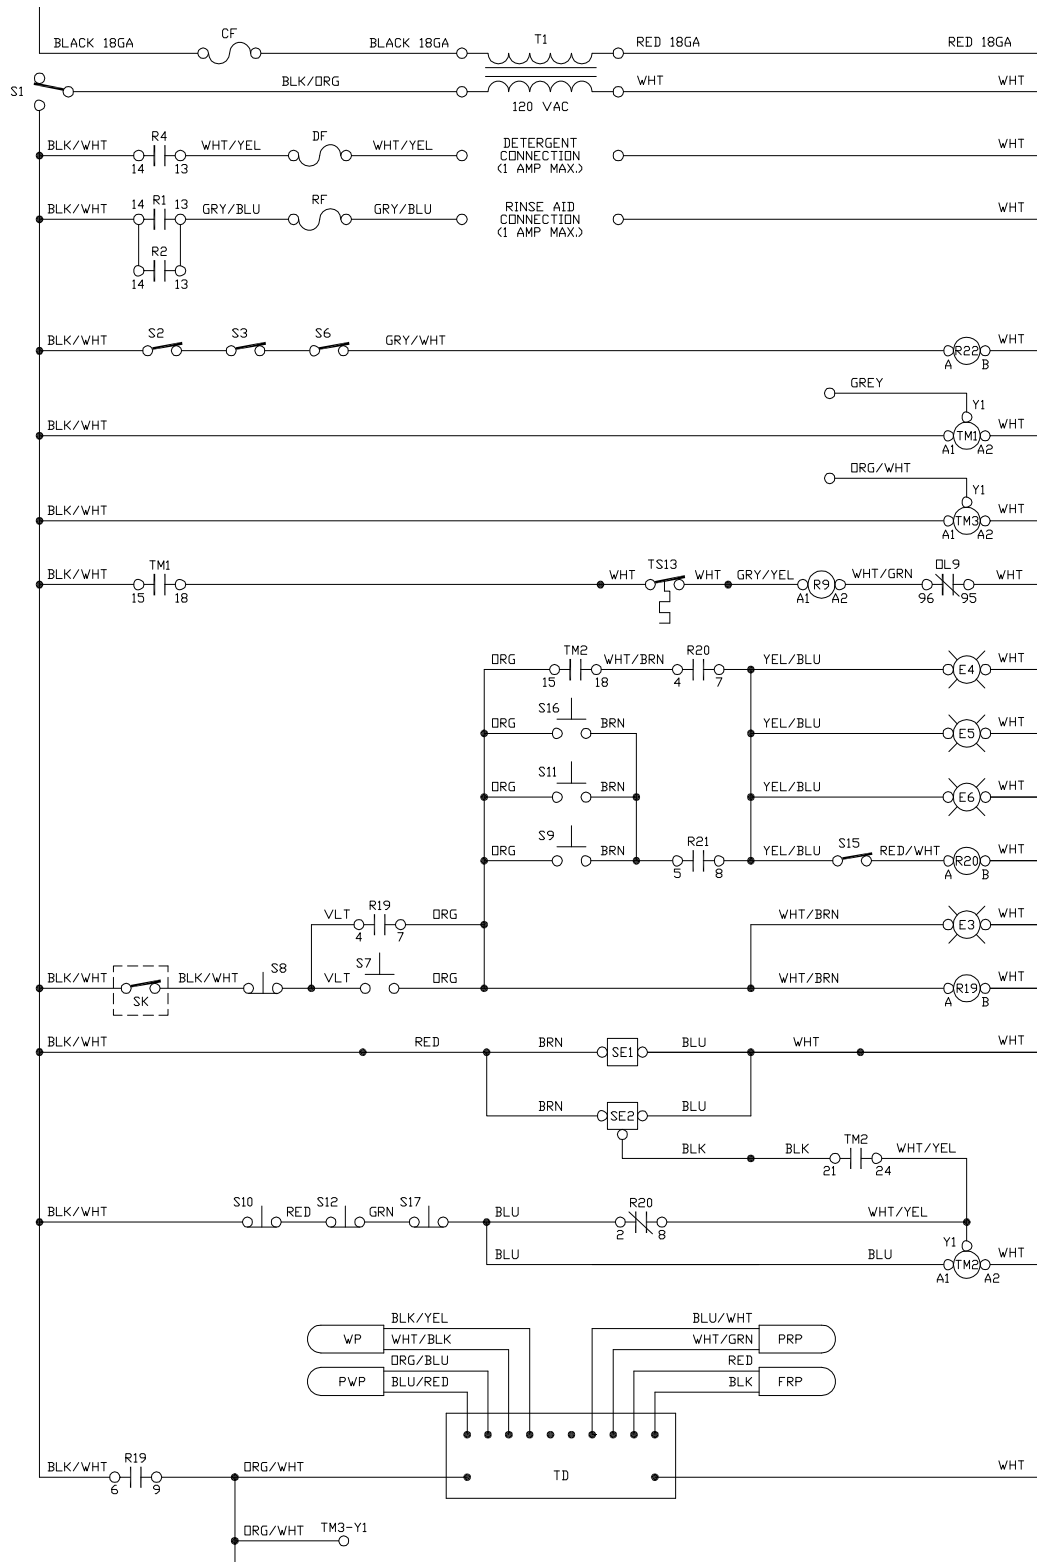

(CONTINUED)

(PUMPED FINAL RINSE)


LEGEND

| | | | |
|----------|------------------------------------|--------|---------------------------------------|
| L1 L2 L3 | POWER DISTRIBUTION BLOCK | S17 | STOP BUTTON 3 |
| GND | GROUND | FRS | FINAL RINSE SOLENOID |
| H1 | WASH HEATER 1 | TFS | TANK FILL SOLENOID |
| H2 | WASH HEATER 2 | TS1 | WASH REGULATING THERMOSTAT |
| H7 | RINSE HEATER 1 | TS2 | WASH HIGH LIMIT THERMOSTAT 1 |
| H8 | RINSE HEATER 2 | TS3 | WASH HIGH LIMIT THERMOSTAT 2 |
| H9 | BLOWER HEATER (OPTIONAL) | TS10 | RINSE REGULATING THERMOSTAT |
| M1 | DRIVE MOTOR | TS11 | RINSE HIGH LIMIT THERMOSTAT 1 |
| M2 | PREWASH PUMP MOTOR | TS12 | RINSE HIGH LIMIT THERMOSTAT 2 |
| M3 | WASH PUMP MOTOR | TS13 | INTERNAL BLOWER HIGH LIMIT |
| M6 | POWER RINSE PUMP MOTOR | TS14 | BLOWER HEATER HIGH LIMIT THERMOSTAT |
| M7 | FINAL RINSE PUMP MOTOR | TS16 | INTERNAL EXHAUST FAN HIGH LIMIT |
| M8 | BLOWER MOTOR (OPTIONAL) | QL1 | DRIVE MOTOR OVERLOAD 1 |
| M9 | EXHAUST FAN MOTOR | QL2 | DRIVE MOTOR OVERLOAD 2 |
| R1 | DRIVE MOTOR CONTACTOR 1 | QL3 | PREWASH MOTOR OVERLOAD |
| R2 | DRIVE MOTOR CONTACTOR 2 | QL4 | WASH MOTOR OVERLOAD |
| R3 | PREWASH PUMP MOTOR CONTACTOR | QL7 | POWER RINSE MOTOR OVERLOAD |
| R4 | WASH PUMP MOTOR CONTACTOR | QL8 | FINAL RINSE MOTOR OVERLOAD |
| R7 | POWER RINSE PUMP MOTOR CONTACTOR | QL9 | BLOWER MOTOR OVERLOAD (OPTIONAL) |
| R8 | FINAL RINSE PUMP MOTOR CONTACTOR | QL23 | EXHAUST FAN MOTOR OVERLOAD |
| R9 | BLOWER MOTOR CONTACTOR (OPTIONAL) | E1 | TANK FILLED LIGHT |
| R10 | WASH HEATER CONTACTOR 1 | E2 | MOTOR FAULT LIGHT |
| R11 | WASH HEATER CONTACTOR 2 | E3 | ON LIGHT |
| R16 | RINSE HEATER CONTACTOR 1 | E4 | START LIGHT 1 |
| R17 | RINSE HEATER CONTACTOR 2 | E5 | START LIGHT 2 |
| R18 | BLOWER HEATER CONTACTOR (OPTIONAL) | E6 | START LIGHT 3 |
| R19 | ON RELAY | PWP | PREWASH PROBE |
| R20 | START RELAY | WP | WASH PROBE |
| R21 | MACHINE FILL RELAY | PRP | POWER RINSE PROBE |
| R22 | DOOR RELAY | FRP | FINAL RINSE PROBE |
| R23 | EXHAUST FAN MOTOR CONTACTOR | TD | TEMPERATURE DISPLAY |
| R24 | WASH TANK FILL RELAY | PWFSW1 | PREWASH TOP FLOAT SWITCH |
| R25 | POWER RINSE TANK FILL RELAY | PWFSW2 | PREWASH BOTTOM FLOAT SWITCH |
| R26 | FINAL RINSE TANK FILL RELAY | WFSW1 | WASH TOP FLOAT SWITCH |
| S1 | EMERGENCY STOP BUTTON | WFSW2 | WASH BOTTOM FLOAT SWITCH |
| S2 | DOOR SWITCH 1 | PRFSW1 | POWER RINSE TOP FLOAT SWITCH |
| S3 | DOOR SWITCH 2 | PRFSW2 | POWER RINSE BOTTOM FLOAT SWITCH |
| S6 | DOOR SWITCH 5 | FRFSW1 | FINAL RINSE BOTTOM FLOAT SWITCH |
| S7 | ON BUTTON | FRFSW2 | FINAL RINSE TOP FLOAT SWITCH |
| S8 | OFF BUTTON | T1 | CONTROL TRANSFORMER |
| S9 | START BUTTON 1 | CF | CONTROL FUSE |
| S10 | STOP BUTTON 1 | DF | DETERGENT FUSE |
| S11 | START BUTTON 2 | RF | RINSE AID FUSE |
| S12 | STOP BUTTON 2 | TM1 | BLOWER TIMER (OPTIONAL) |
| S13 | DRIVE MOTOR SELECTOR SWITCH | TM2 | AUTO SHUTOFF TIMER |
| S14 | CONVEYOR JAM SWITCH | TM3 | EXTERNAL EXHAUST FAN TIMER (OPTIONAL) |
| S15 | DRIVE MOTOR JAM SWITCH | SE1 | SENSOR - EMITTER |
| S16 | START BUTTON 3 | SE2 | SENSOR - RECEIVER |
| SK | KEYED SWITCH (OPTION) | | |

(CONTINUED)


(PUMPED FINAL RINSE)

**JFT
ELECTRICAL DIAGRAM
208/230/460 VOLT 50/60 HZ 3 PHASE**

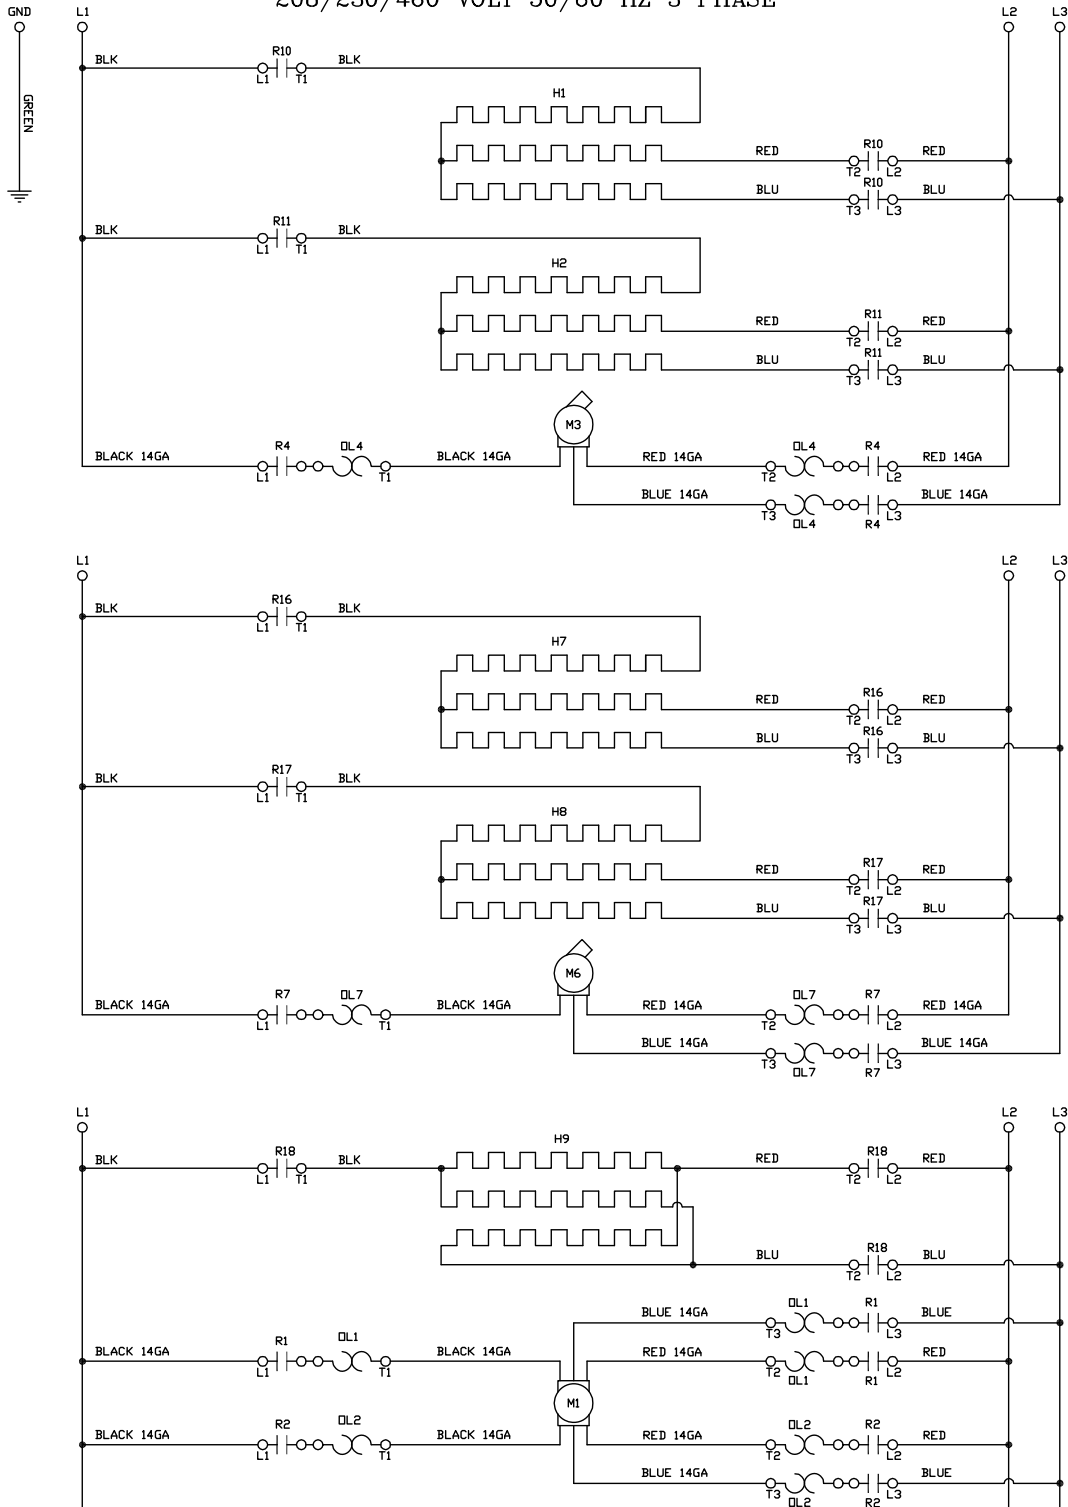


(CONTINUED)

(PUMPED FINAL RINSE)

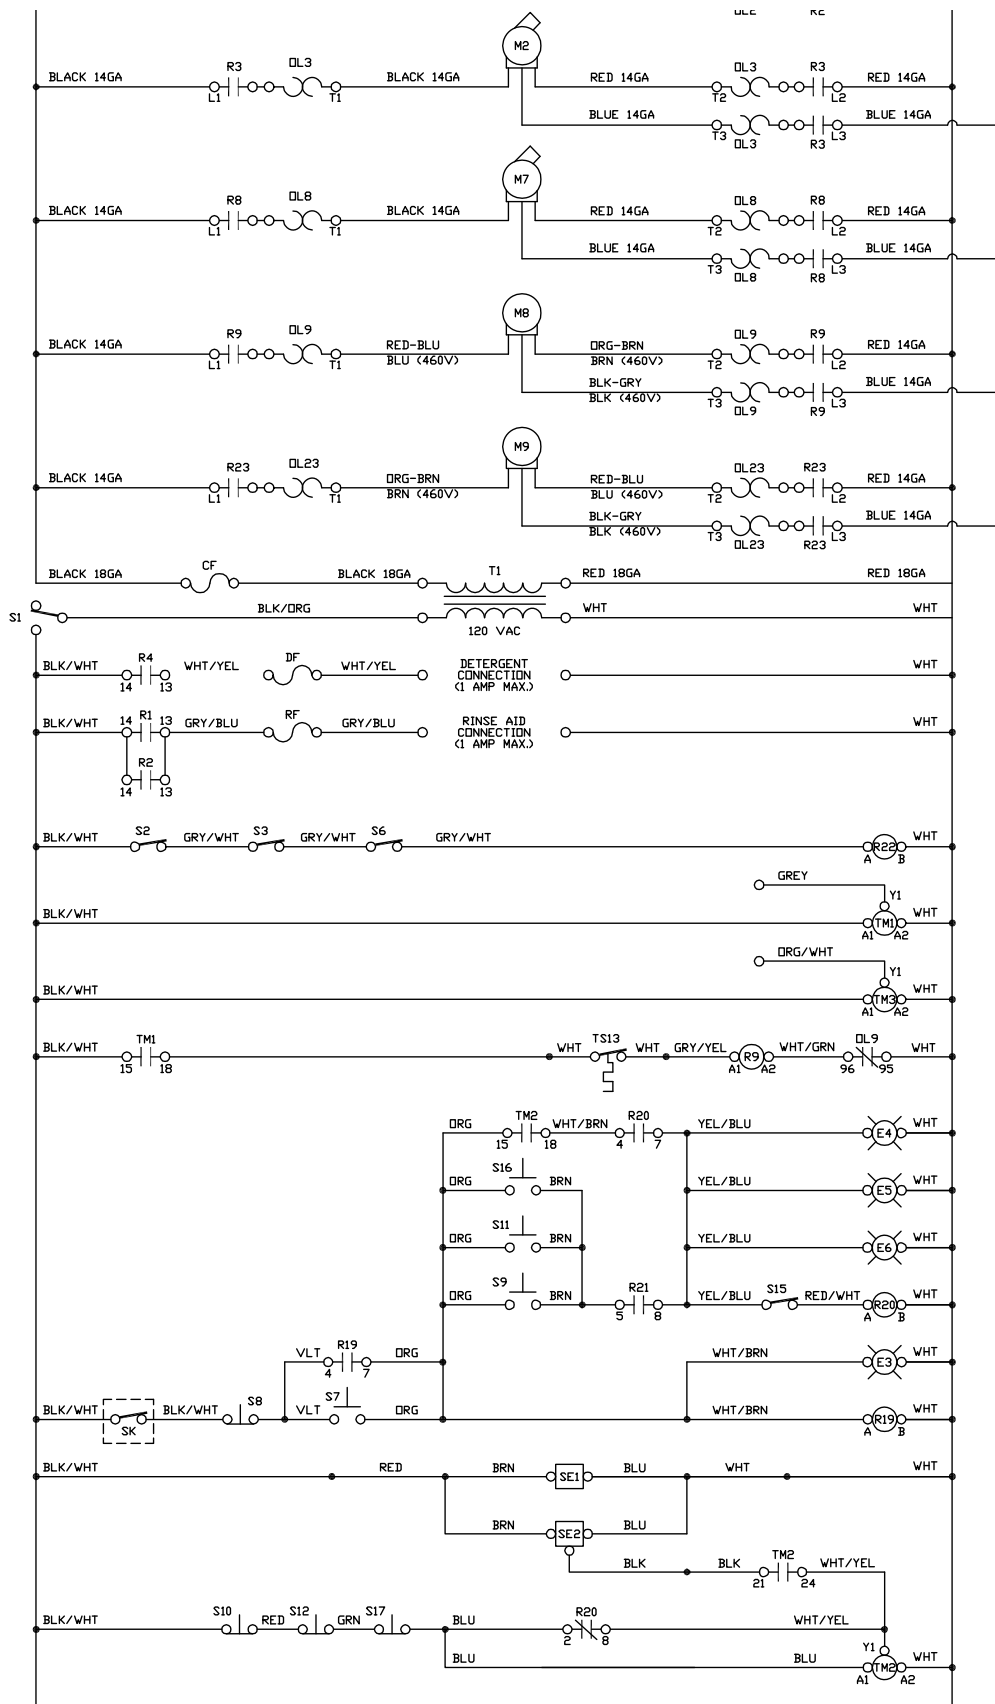

(CONTINUED)

(PUMPED FINAL RINSE)

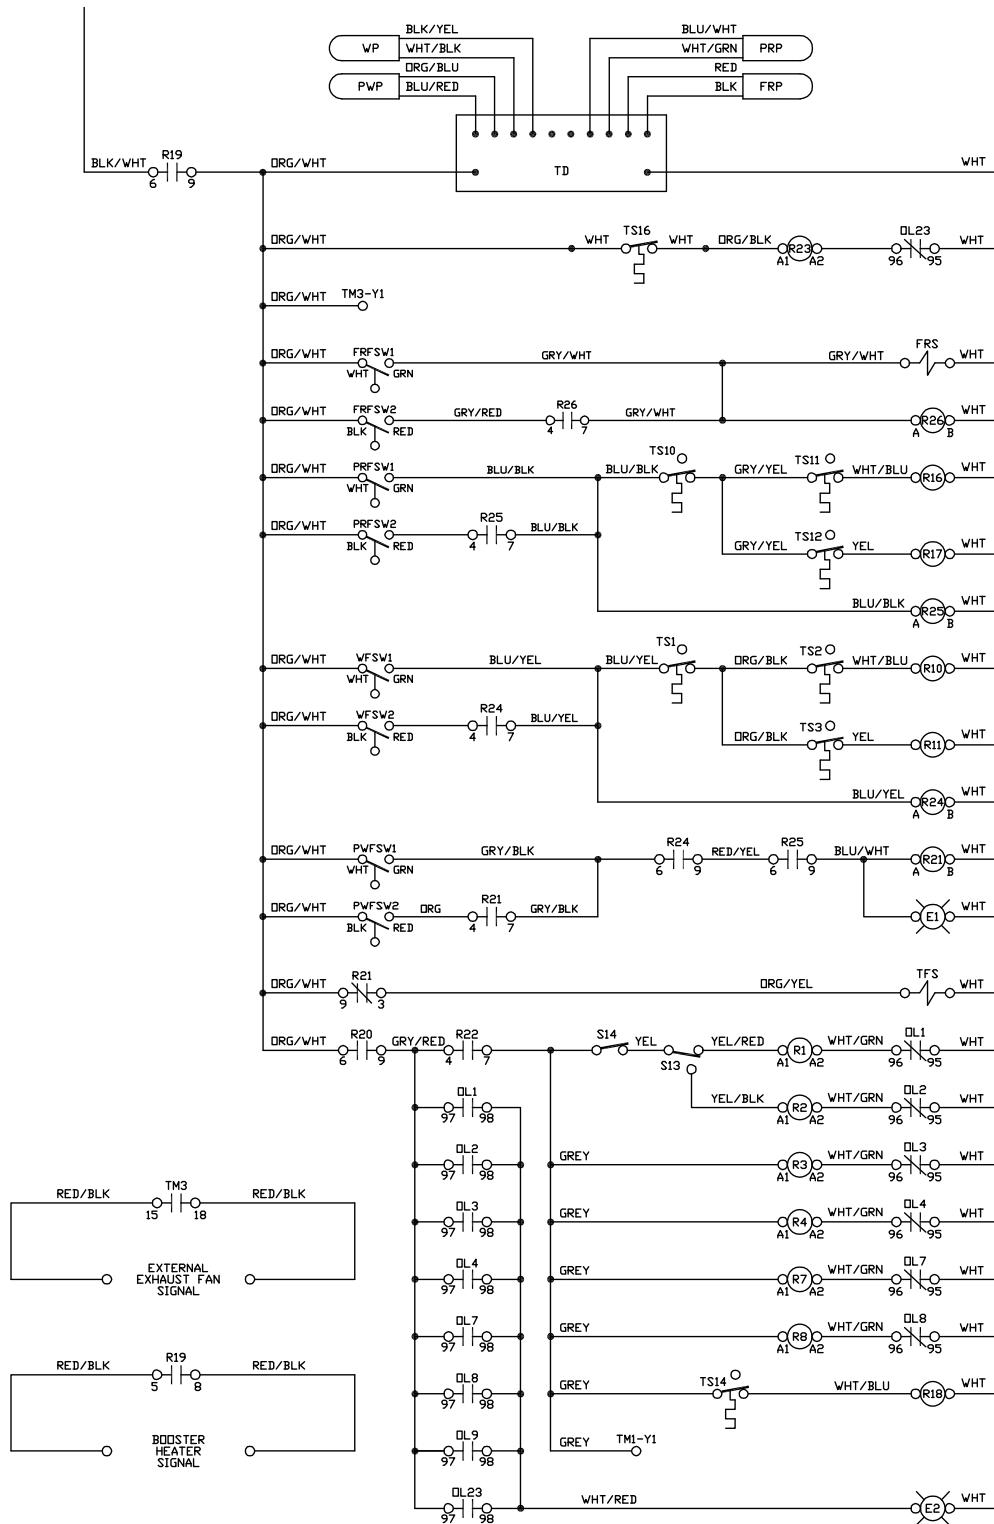

9905-003-08-61C


LEGEND

| | | | |
|----------|-----------------------------------|--------|---------------------------------------|
| L1 L2 L3 | POWER DISTRIBUTION BLOCK | WSS | WASH STEAM SOLENOID |
| GND | GROUND | BSS | BLOWER STEAM SOLENOID (OPTIONAL) |
| M1 | DRIVE MOTOR | TS1 | WASH REGULATING THERMOSTAT |
| M2 | PREWASH PUMP MOTOR | TS10 | RINSE REGULATING THERMOSTAT |
| M3 | WASH PUMP MOTOR | TS13 | INTERNAL BLOWER HIGH LIMIT |
| M6 | POWER RINSE PUMP MOTOR | TS15 | STEAM BOOSTER THERMOSTAT |
| M8 | BLOWER MOTOR (OPTIONAL) | TS16 | INTERNAL EXHAUST FAN HIGH LIMIT |
| M9 | EXHAUST FAN MOTOR | OL1 | DRIVE MOTOR OVERLOAD 1 |
| R1 | DRIVE MOTOR CONTACTOR 1 | OL2 | DRIVE MOTOR OVERLOAD 2 |
| R2 | DRIVE MOTOR CONTACTOR 2 | OL3 | PREWASH MOTOR OVERLOAD |
| R3 | PREWASH PUMP MOTOR CONTACTOR | OL4 | WASH MOTOR OVERLOAD |
| R4 | WASH PUMP MOTOR CONTACTOR | OL7 | POWER RINSE MOTOR OVERLOAD |
| R7 | POWER RINSE PUMP MOTOR CONTACTOR | OL9 | BLOWER MOTOR OVERLOAD (OPTIONAL) |
| R9 | BLOWER MOTOR CONTACTOR (OPTIONAL) | OL23 | EXHAUST FAN MOTOR OVERLOAD |
| R19 | ON RELAY | E1 | TANK FILLED LIGHT |
| R20 | START RELAY | E2 | MOTOR FAULT LIGHT |
| R21 | MACHINE FILL RELAY | E3 | ON LIGHT |
| R22 | DOOR RELAY | E4 | START LIGHT 1 |
| R23 | EXHAUST FAN MOTOR CONTACTOR | E5 | START LIGHT 2 |
| R24 | WASH TANK FILL RELAY | E6 | START LIGHT 3 |
| R25 | POWER RINSE TANK FILL RELAY | PWP | PREWASH PROBE |
| S1 | EMERGENCY STOP BUTTON | WP | WASH PROBE |
| S2 | DOOR SWITCH 1 | RRP | POWER RINSE PROBE |
| S3 | DOOR SWITCH 2 | FRP | FINAL RINSE PROBE |
| S6 | DOOR SWITCH 5 | TD | TEMPERATURE DISPLAY |
| S7 | ON BUTTON | PWFSW1 | PREWASH TOP FLOAT SWITCH |
| S8 | OFF BUTTON | PWFSW2 | PREWASH BOTTOM FLOAT SWITCH |
| S9 | START BUTTON 1 | WFSW1 | WASH TOP FLOAT SWITCH |
| S10 | STOP BUTTON 1 | WFSW2 | WASH BOTTOM FLOAT SWITCH |
| S11 | START BUTTON 2 | PRFSW1 | POWER RINSE TOP FLOAT SWITCH |
| S12 | STOP BUTTON 2 | PRFSW2 | POWER RINSE BOTTOM FLOAT SWITCH |
| S13 | DRIVE MOTOR SELECTOR SWITCH | T1 | CONTROL TRANSFORMER |
| S14 | CONVEYOR JAM SWITCH | CF | CONTROL FUSE |
| S15 | DRIVE MOTOR JAM SWITCH | DF | DETERGENT FUSE |
| S16 | START BUTTON 3 | RF | RINSE AID FUSE |
| SK | KEYED SWITCH (OPTION) | TM1 | BLOWER TIMER (OPTIONAL) |
| S17 | STOP BUTTON 3 | TM2 | AUTO SHUTOFF TIMER |
| FRS | FINAL RINSE SOLENOID | TM3 | EXTERNAL EXHAUST FAN TIMER (OPTIONAL) |
| TFS | TANK FILL SOLENOID | SE1 | SENSOR - EMITTER |
| SBS | STEAM BOOSTER SOLENOID | SE2 | SENSOR - RECEIVER |
| RSS | RINSE STEAM SOLENOID | | |


(CONTINUED)

ELECTRICAL DIAGRAM


208-480 VOLT 50/60 HZ 3-PHASE

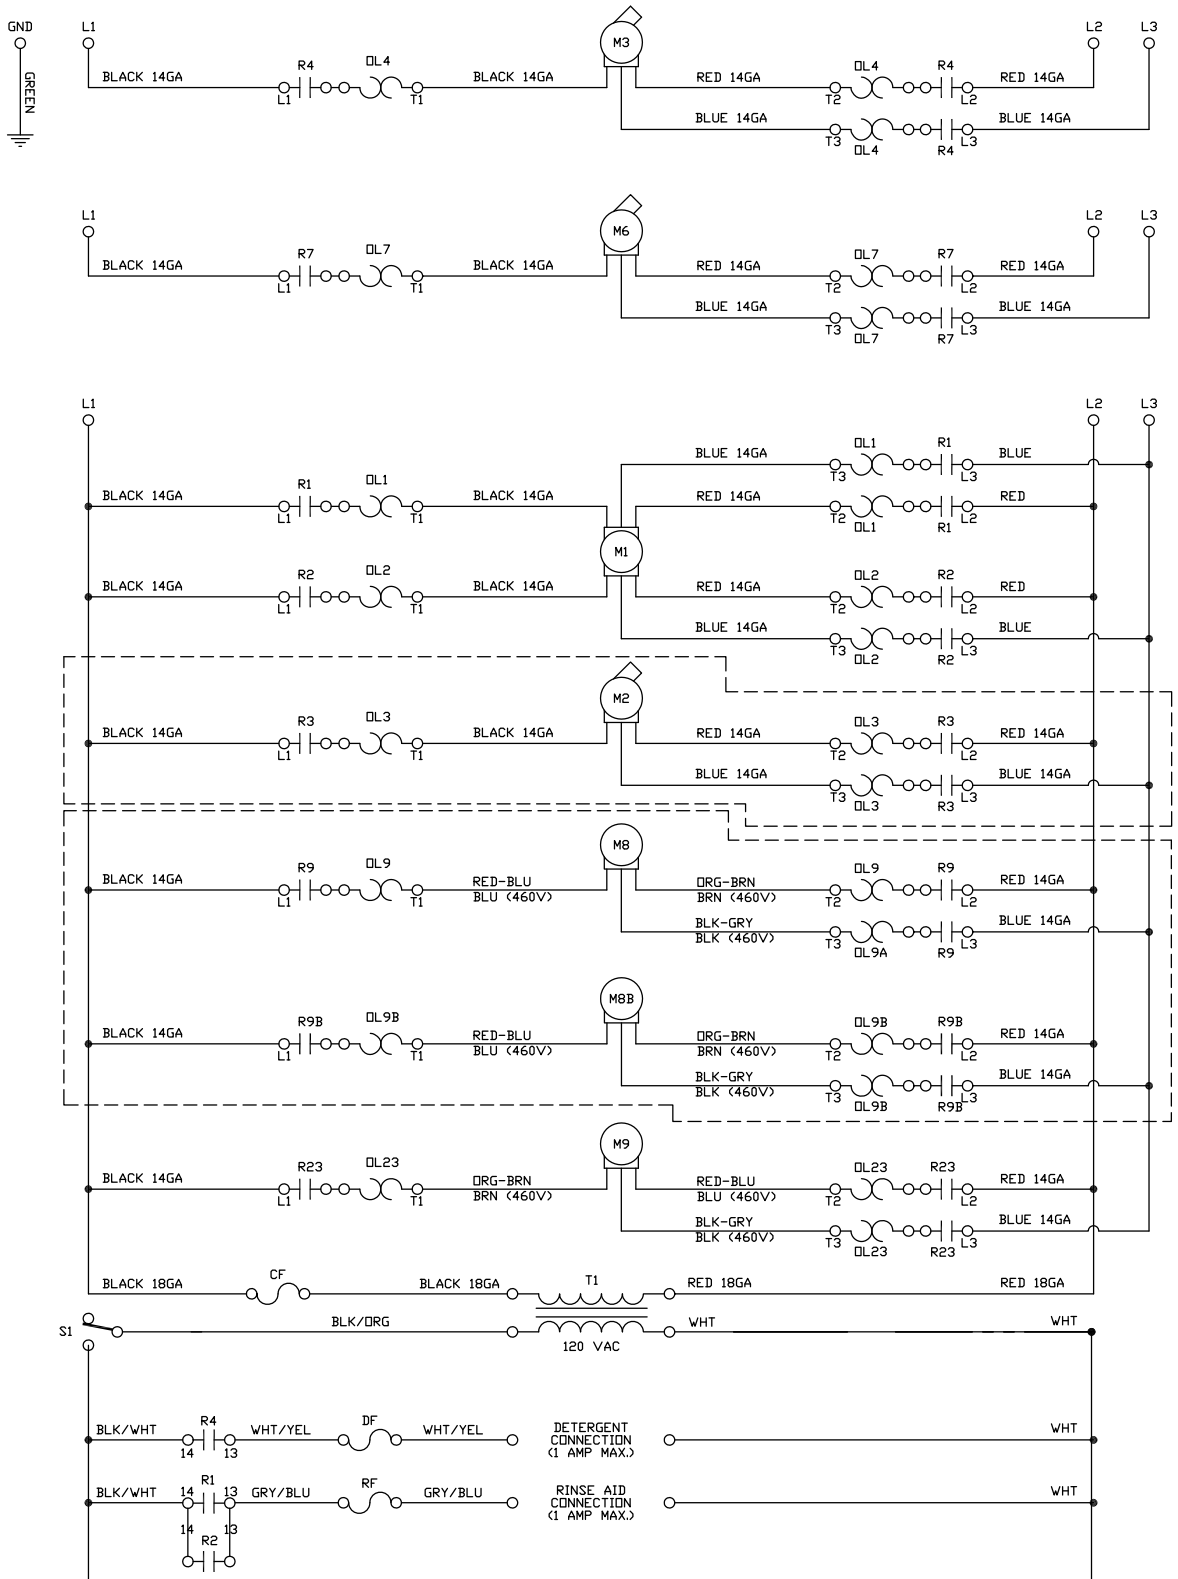

(CONTINUED)

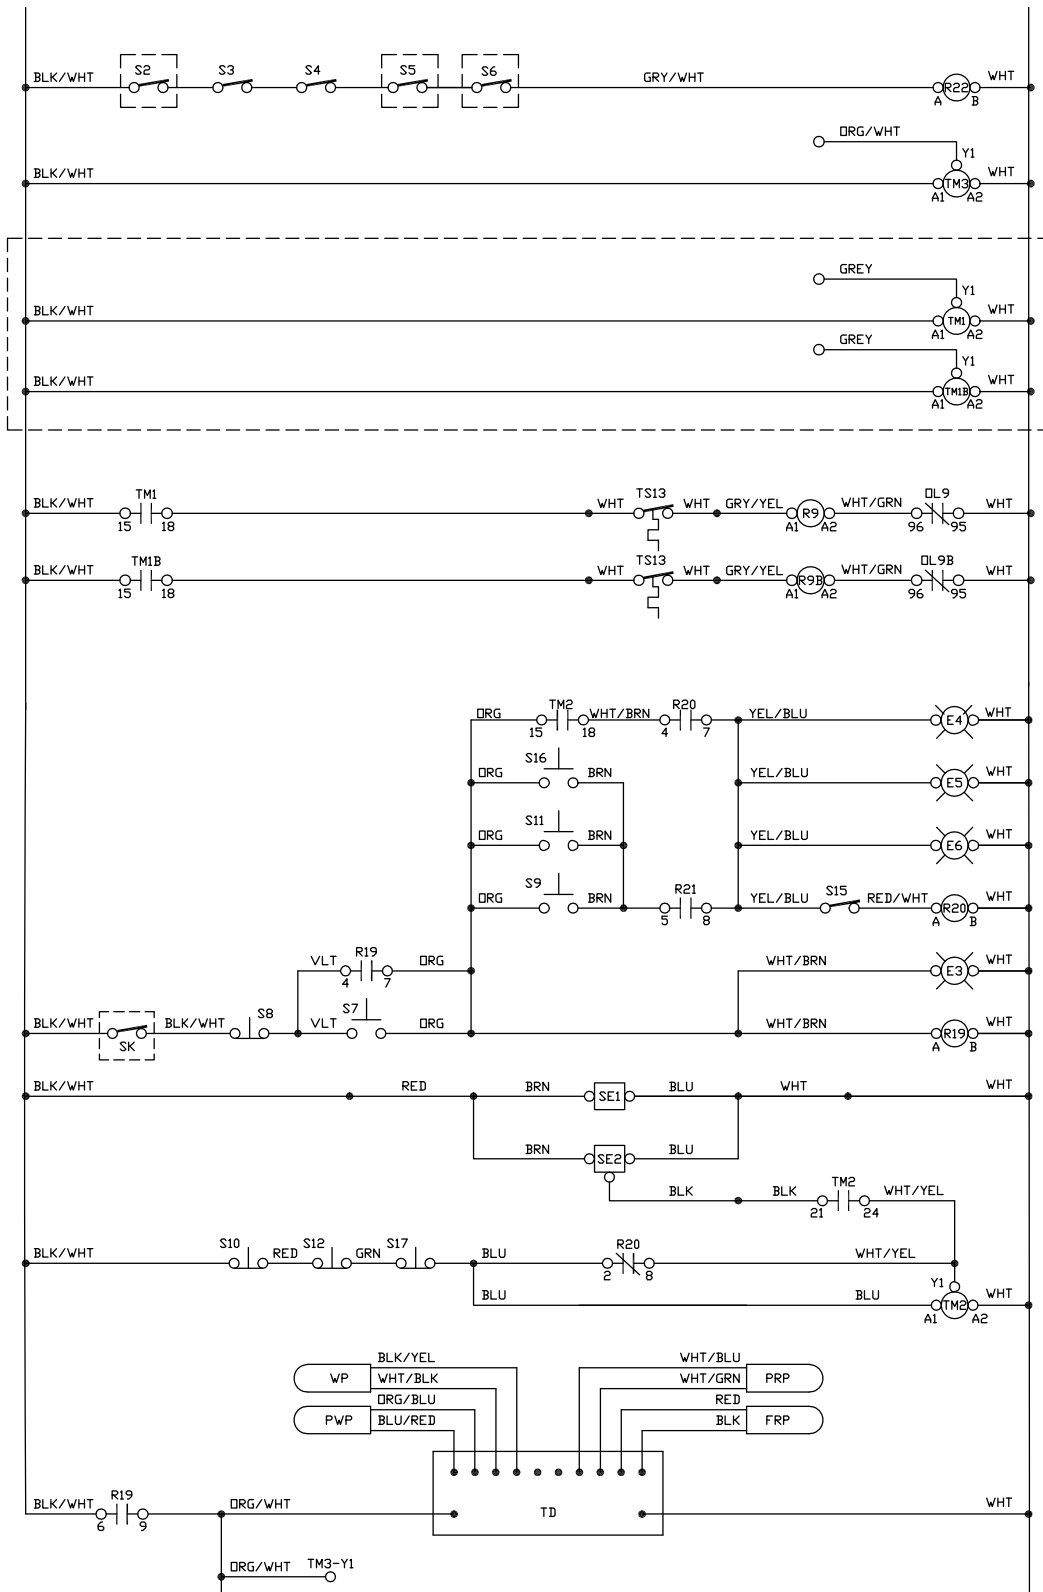


(CONTINUED)

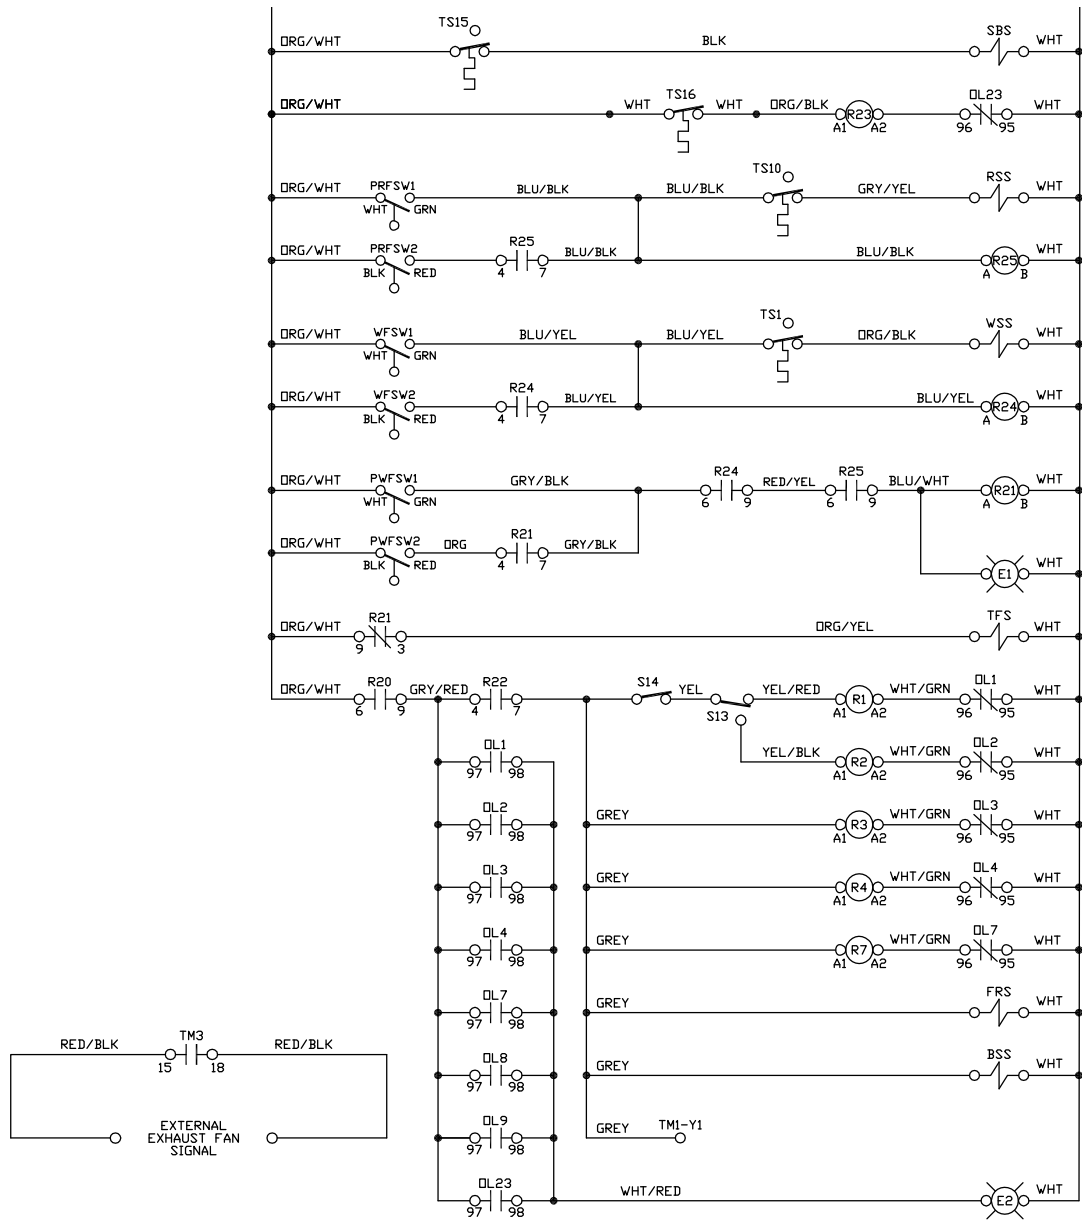


LEGEND

| | | | |
|----------|-----------------------------------|--------|---------------------------------------|
| L1 L2 L3 | POWER DISTRIBUTION BLOCK | WSS | WASH STEAM SOLENOID |
| GND | GROUND | BSS | BLOWER STEAM SOLENOID (OPTIONAL) |
| M1 | DRIVE MOTOR | TS1 | WASH REGULATING THERMOSTAT |
| M2 | PREWASH PUMP MOTOR | TS10 | RINSE REGULATING THERMOSTAT |
| M3 | WASH PUMP MOTOR | TS13 | INTERNAL BLOWER HIGH LIMIT |
| M6 | POWER RINSE PUMP MOTOR | TS15 | STEAM BOOSTER THERMOSTAT |
| M8 | BLOWER MOTOR (OPTIONAL) | TS16 | INTERNAL EXHAUST FAN HIGH LIMIT |
| M9 | EXHAUST FAN MOTOR | OL1 | DRIVE MOTOR OVERLOAD 1 |
| R1 | DRIVE MOTOR CONTACTOR 1 | OL2 | DRIVE MOTOR OVERLOAD 2 |
| R2 | DRIVE MOTOR CONTACTOR 2 | OL3 | PREWASH MOTOR OVERLOAD |
| R3 | PREWASH PUMP MOTOR CONTACTOR | OL4 | WASH MOTOR OVERLOAD |
| R4 | WASH PUMP MOTOR CONTACTOR | OL7 | POWER RINSE MOTOR OVERLOAD |
| R7 | POWER RINSE PUMP MOTOR CONTACTOR | OL9 | BLOWER MOTOR OVERLOAD (OPTIONAL) |
| R9 | BLOWER MOTOR CONTACTOR (OPTIONAL) | OL23 | EXHAUST FAN MOTOR OVERLOAD |
| R19 | ON RELAY | E1 | TANK FILLED LIGHT |
| R20 | START RELAY | E2 | MOTOR FAULT LIGHT |
| R21 | MACHINE FILL RELAY | E3 | ON LIGHT |
| R22 | DOOR RELAY | E4 | START LIGHT 1 |
| R23 | EXHAUST FAN MOTOR CONTACTOR | E5 | START LIGHT 2 |
| R24 | WASH TANK FILL RELAY | E6 | START LIGHT 3 |
| R25 | POWER RINSE TANK FILL RELAY | PWP | PREWASH PROBE |
| S1 | EMERGENCY STOP BUTTON | WP | WASH PROBE |
| S2 | DOOR SWITCH 1 | PRP | POWER RINSE PROBE |
| S3 | DOOR SWITCH 2 | FRP | FINAL RINSE PROBE |
| S6 | DOOR SWITCH 5 | TD | TEMPERATURE DISPLAY |
| S7 | ON BUTTON | PWFSW1 | PREWASH TOP FLOAT SWITCH |
| S8 | OFF BUTTON | PWFSW2 | PREWASH BOTTOM FLOAT SWITCH |
| S9 | START BUTTON 1 | WFSW1 | WASH TOP FLOAT SWITCH |
| S10 | STOP BUTTON 1 | WFSW2 | WASH BOTTOM FLOAT SWITCH |
| S11 | START BUTTON 2 | PRFSW1 | POWER RINSE TOP FLOAT SWITCH |
| S12 | STOP BUTTON 2 | PRFSW2 | POWER RINSE BOTTOM FLOAT SWITCH |
| S13 | DRIVE MOTOR SELECTOR SWITCH | T1 | CONTROL TRANSFORMER |
| S14 | CONVEYOR JAM SWITCH | T3 | 600-208V TRANSFORMER |
| S15 | DRIVE MOTOR JAM SWITCH | CF | CONTROL FUSE |
| S16 | START BUTTON 3 | DF | DETERGENT FUSE |
| SK | KEYED SWITCH (OPTION) | RF | RINSE AID FUSE |
| S17 | STOP BUTTON 3 | TM1 | BLOWER TIMER (OPTIONAL) |
| FRS | FINAL RINSE SOLENOID | TM2 | AUTO SHUTOFF TIMER |
| TFS | TANK FILL SOLENOID | TM3 | EXTERNAL EXHAUST FAN TIMER (OPTIONAL) |
| SBS | STEAM BOOSTER SOLENOID | SE1 | SENSOR - EMITTER |
| RSS | RINSE STEAM SOLENOID | SE2 | SENSOR - RECEIVER |


**JFT-S
ELECTRICAL DIAGRAM
600 VOLT 60 HZ 3 PHASE**

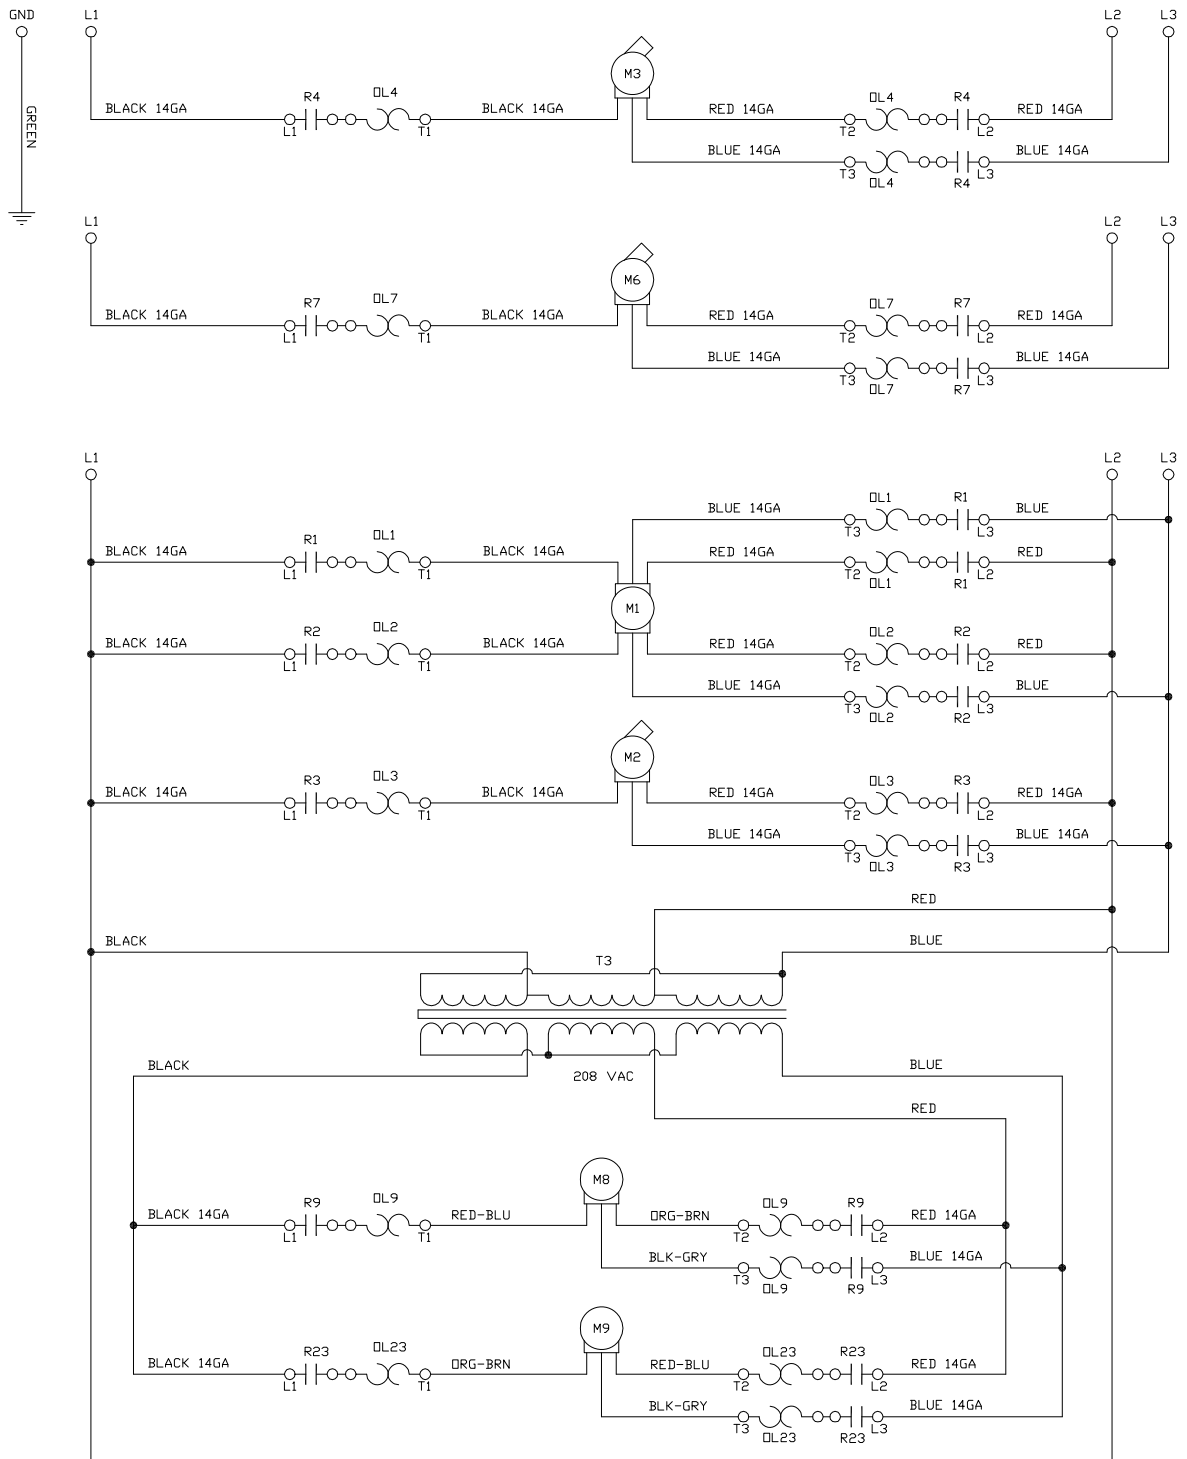

(CONTINUED)

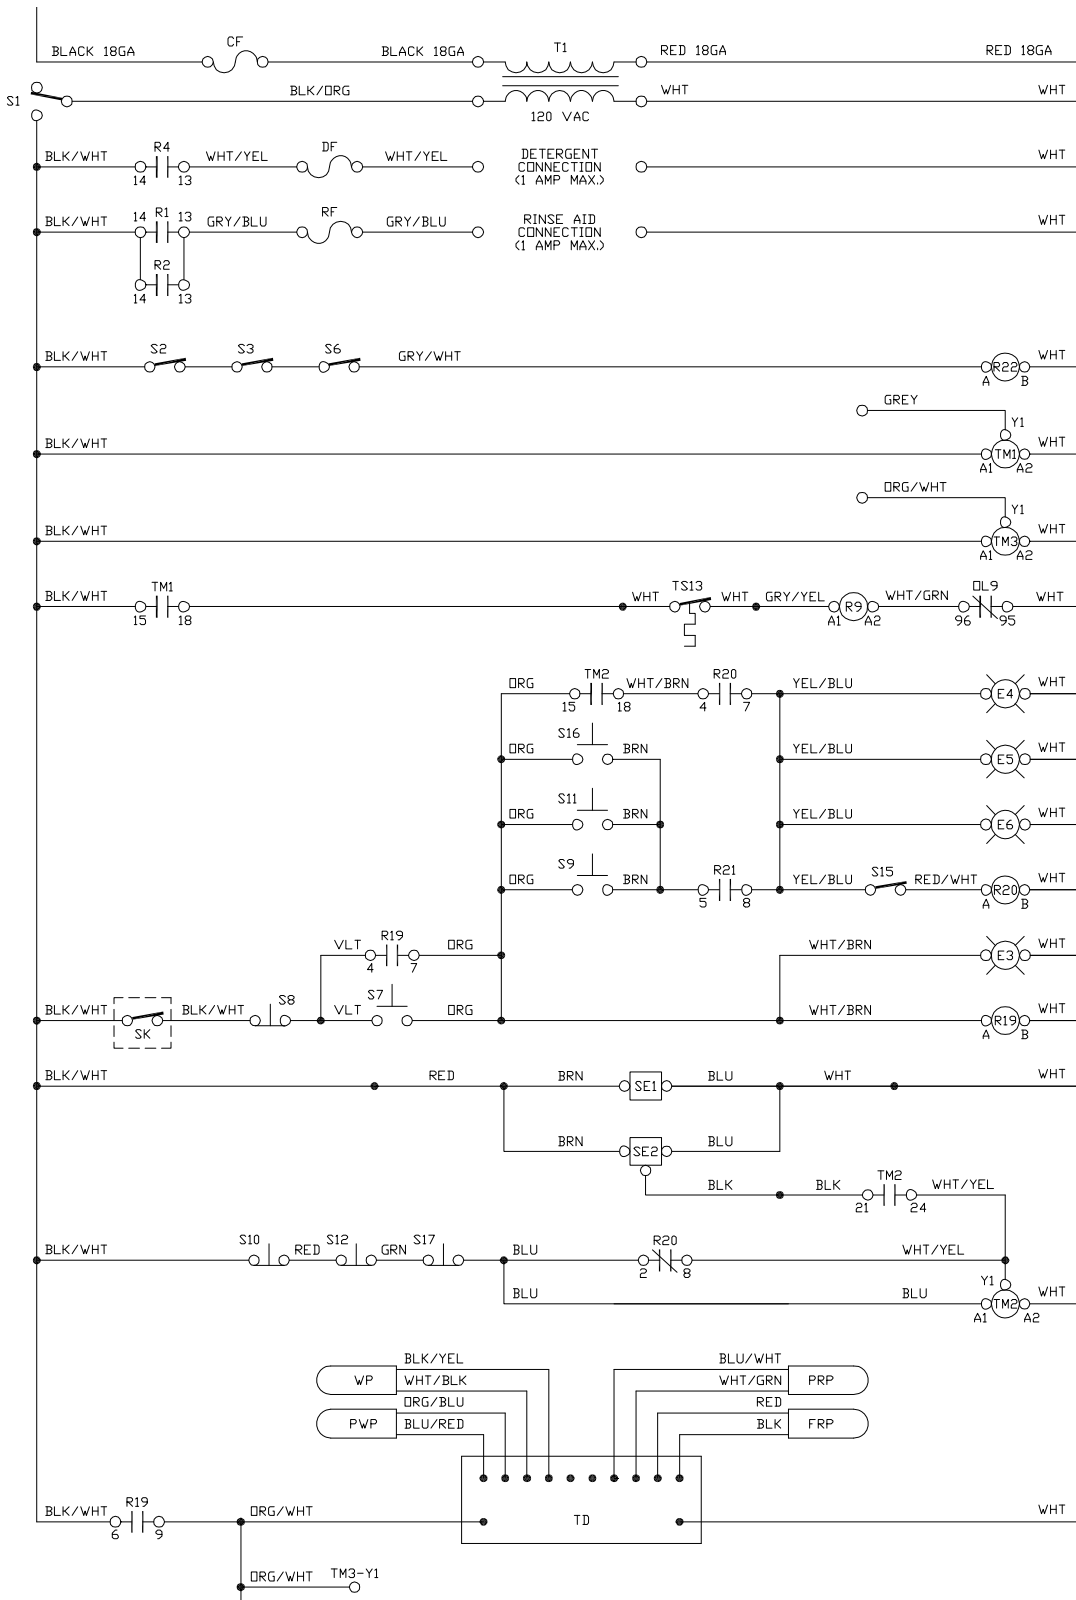

(CONTINUED)

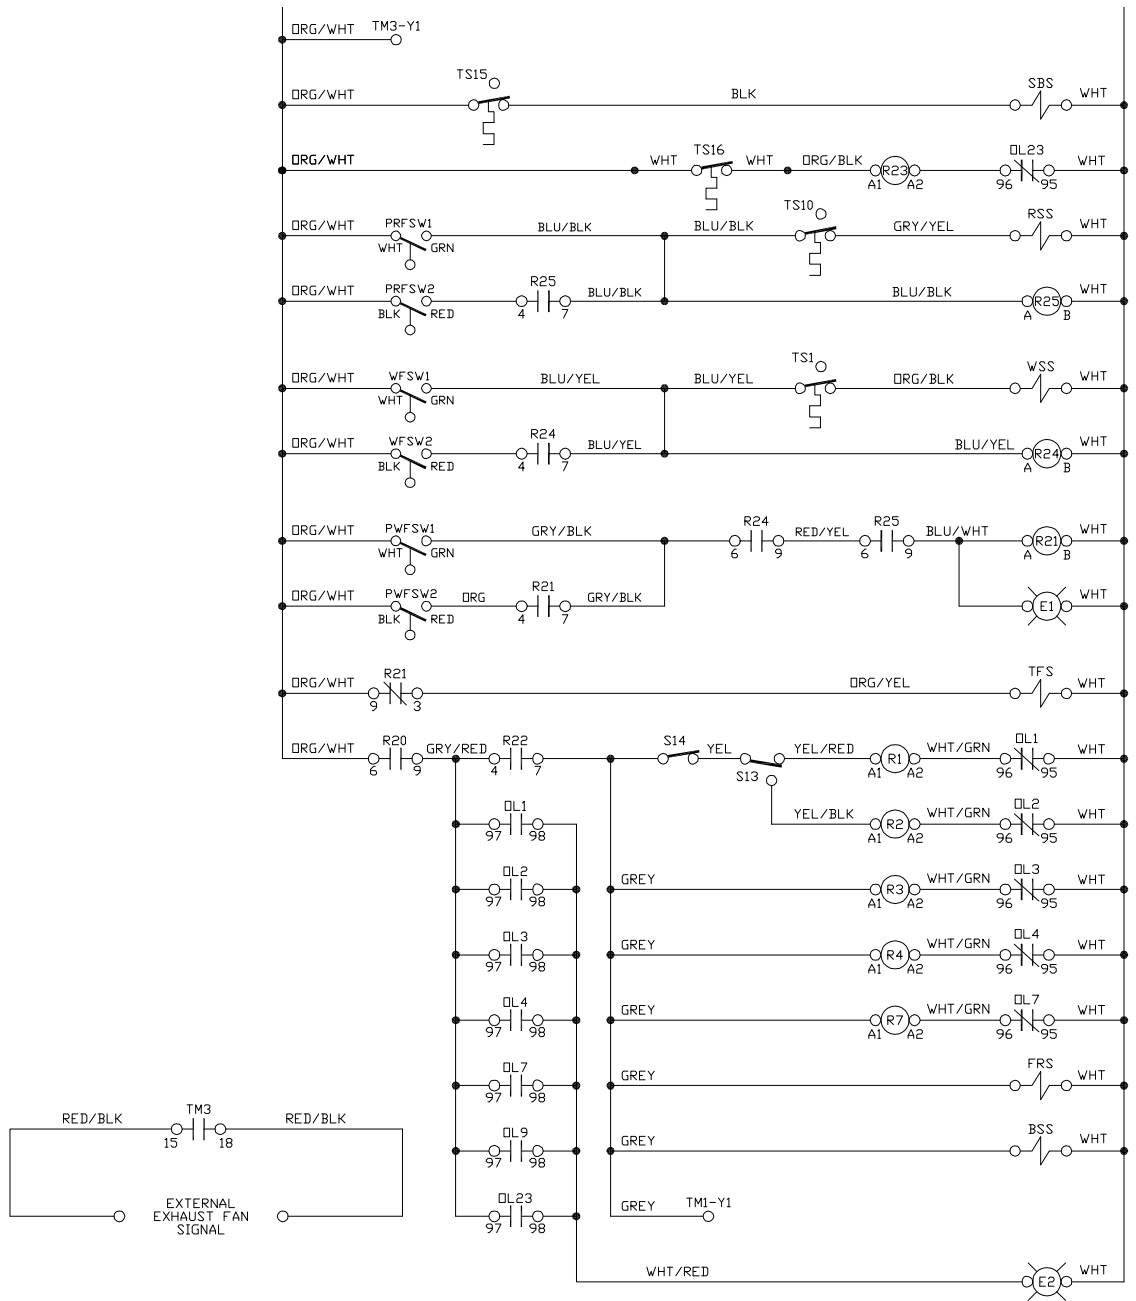

9905-003-01-68C

(PUMPED FINAL RINSE)


LEGEND

| | | | |
|----------|-----------------------------------|--------|---------------------------------------|
| L1 L2 L3 | POWER DISTRIBUTION BLOCK | WSS | WASH STEAM SOLENOID |
| GND | GROUND | BSS | BLOWER STEAM SOLENOID (OPTIONAL) |
| M1 | DRIVE MOTOR | TS1 | WASH REGULATING THERMOSTAT |
| M2 | PREWASH PUMP MOTOR | TS10 | RINSE REGULATING THERMOSTAT |
| M3 | WASH PUMP MOTOR | TS13 | INTERNAL BLOWER HIGH LIMIT |
| M6 | POWER RINSE PUMP MOTOR | TS15 | STEAM BOOSTER THERMOSTAT |
| M7 | FINAL RINSE PUMP MOTOR | TS16 | INTERNAL EXHAUST FAN HIGH LIMIT |
| M8 | BLOWER MOTOR (OPTIONAL) | OL1 | DRIVE MOTOR OVERLOAD 1 |
| M9 | EXHAUST FAN MOTOR | OL2 | DRIVE MOTOR OVERLOAD 2 |
| R1 | DRIVE MOTOR CONTACTOR 1 | OL3 | PREWASH MOTOR OVERLOAD |
| R2 | DRIVE MOTOR CONTACTOR 2 | OL4 | WASH MOTOR OVERLOAD |
| R3 | PREWASH PUMP MOTOR CONTACTOR | OL7 | POWER RINSE MOTOR OVERLOAD |
| R4 | WASH PUMP MOTOR CONTACTOR | OL8 | FINAL RINSE MOTOR OVERLOAD |
| R7 | POWER RINSE PUMP MOTOR CONTACTOR | OL9 | BLOWER MOTOR OVERLOAD (OPTIONAL) |
| R8 | FINAL RINSE PUMP MOTOR CONTACTOR | OL23 | EXHAUST FAN MOTOR OVERLOAD |
| R9 | BLOWER MOTOR CONTACTOR (OPTIONAL) | E1 | TANK FILLED LIGHT |
| R19 | ON RELAY | E2 | MOTOR FAULT LIGHT |
| R20 | START RELAY | E3 | ON LIGHT |
| R21 | MACHINE FILL RELAY | E4 | START LIGHT 1 |
| R22 | DOOR RELAY | E5 | START LIGHT 2 |
| R23 | EXHAUST FAN MOTOR CONTACTOR | E6 | START LIGHT 3 |
| R24 | WASH TANK FILL RELAY | PWP | PREWASH PROBE |
| R25 | POWER RINSE TANK FILL RELAY | WP | WASH PROBE |
| R26 | FINAL RINSE TANK FILL RELAY | RRP | POWER RINSE PROBE |
| S1 | EMERGENCY STOP BUTTON | FRP | FINAL RINSE PROBE |
| S2 | DOOR SWITCH 1 | TD | TEMPERATURE DISPLAY |
| S3 | DOOR SWITCH 2 | PWFSW1 | PREWASH TOP FLOAT SWITCH |
| S6 | DOOR SWITCH 5 | PWFSW2 | PREWASH BOTTOM FLOAT SWITCH |
| S7 | ON BUTTON | WFSW1 | WASH TOP FLOAT SWITCH |
| S8 | OFF BUTTON | WFSW2 | WASH BOTTOM FLOAT SWITCH |
| S9 | START BUTTON 1 | PRFSW1 | POWER RINSE TOP FLOAT SWITCH |
| S10 | STOP BUTTON 1 | PRFSW2 | POWER RINSE BOTTOM FLOAT SWITCH |
| S11 | START BUTTON 2 | FRFSW1 | FINAL RINSE BOTTOM FLOAT SWITCH |
| S12 | STOP BUTTON 2 | FRFSW2 | FINAL RINSE TOP FLOAT SWITCH |
| S13 | DRIVE MOTOR SELECTOR SWITCH | T1 | CONTROL TRANSFORMER |
| S14 | CONVEYOR JAM SWITCH | CF | CONTROL FUSE |
| S15 | DRIVE MOTOR JAM SWITCH | DF | DETERGENT FUSE |
| S16 | START BUTTON 3 | RF | RINSE AID FUSE |
| SK | KEYED SWITCH (OPTION) | TM1 | BLOWER TIMER (OPTIONAL) |
| S17 | STOP BUTTON 3 | TM2 | AUTO SHUTOFF TIMER |
| FRS | FINAL RINSE SOLENOID | TM3 | EXTERNAL EXHAUST FAN TIMER (OPTIONAL) |
| TFS | TANK FILL SOLENOID | SE1 | SENSOR - EMITTER |
| SBS | STEAM BOOSTER SOLENOID | SE2 | SENSOR - RECEIVER |
| RSS | RINSE STEAM SOLENOID | | |

(CONTINUED)


(PUMPED FINAL RINSE)

**JFT-S
ELECTRICAL DIAGRAM
208/230/460 VOLT 50/60 HZ 3 PHASE**

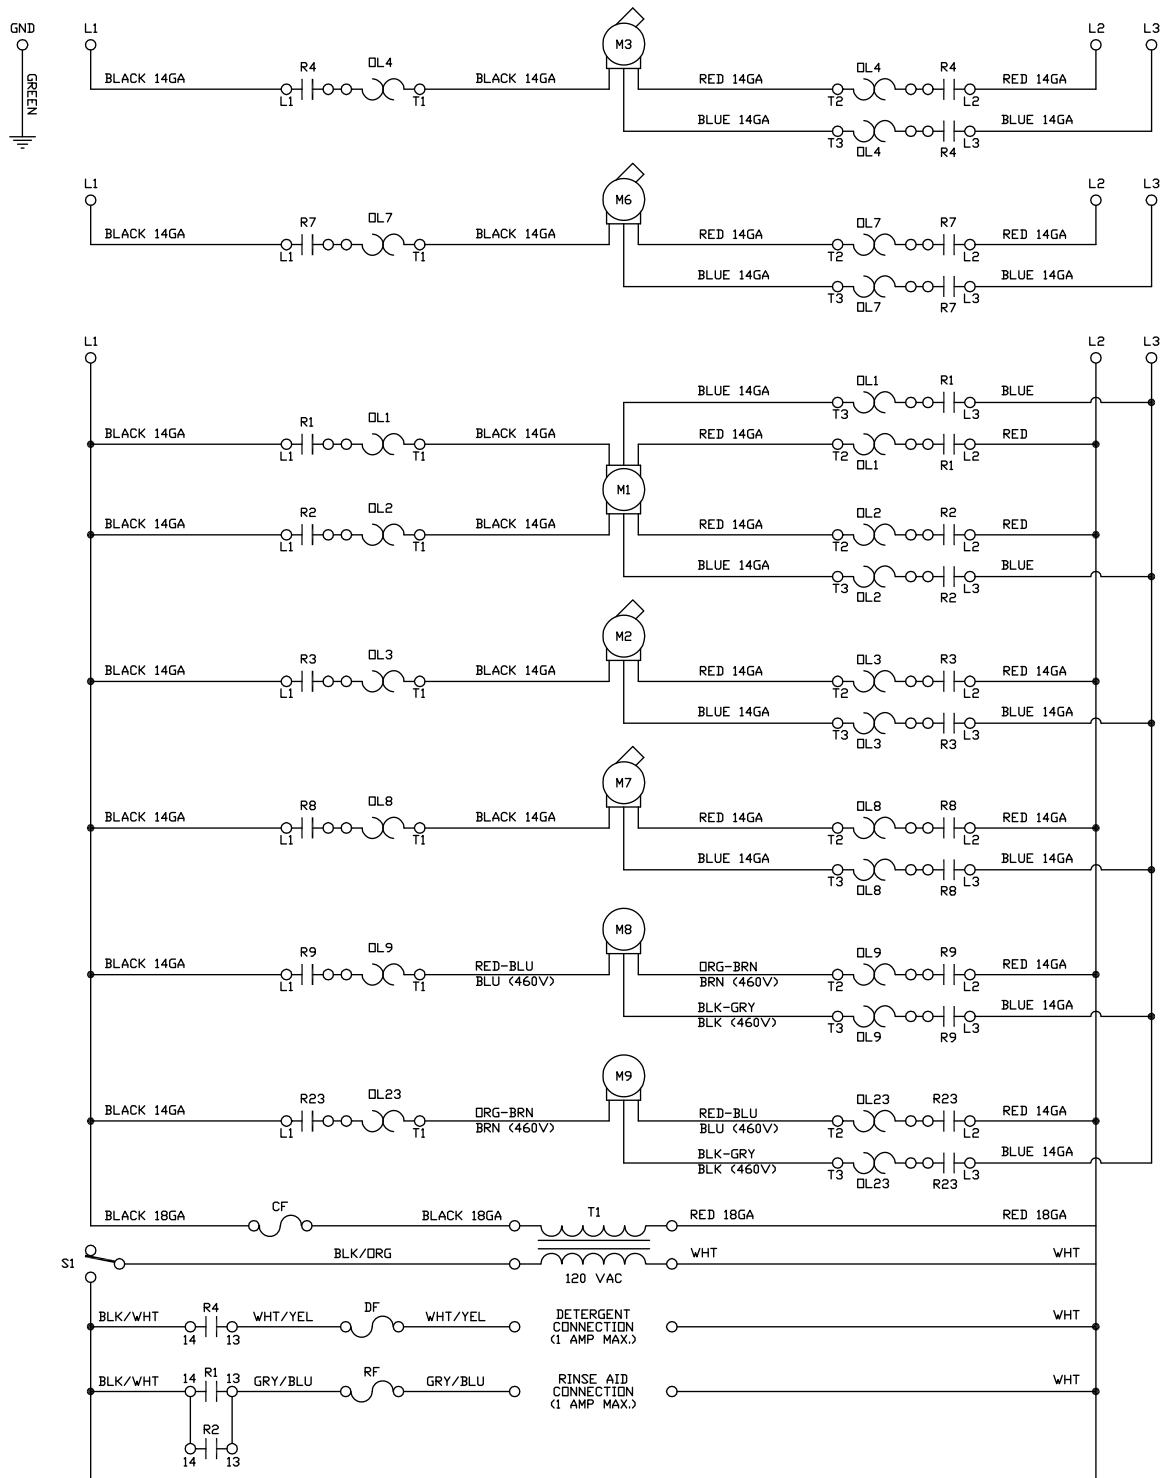


(CONTINUED)

(PUMPED FINAL RINSE)

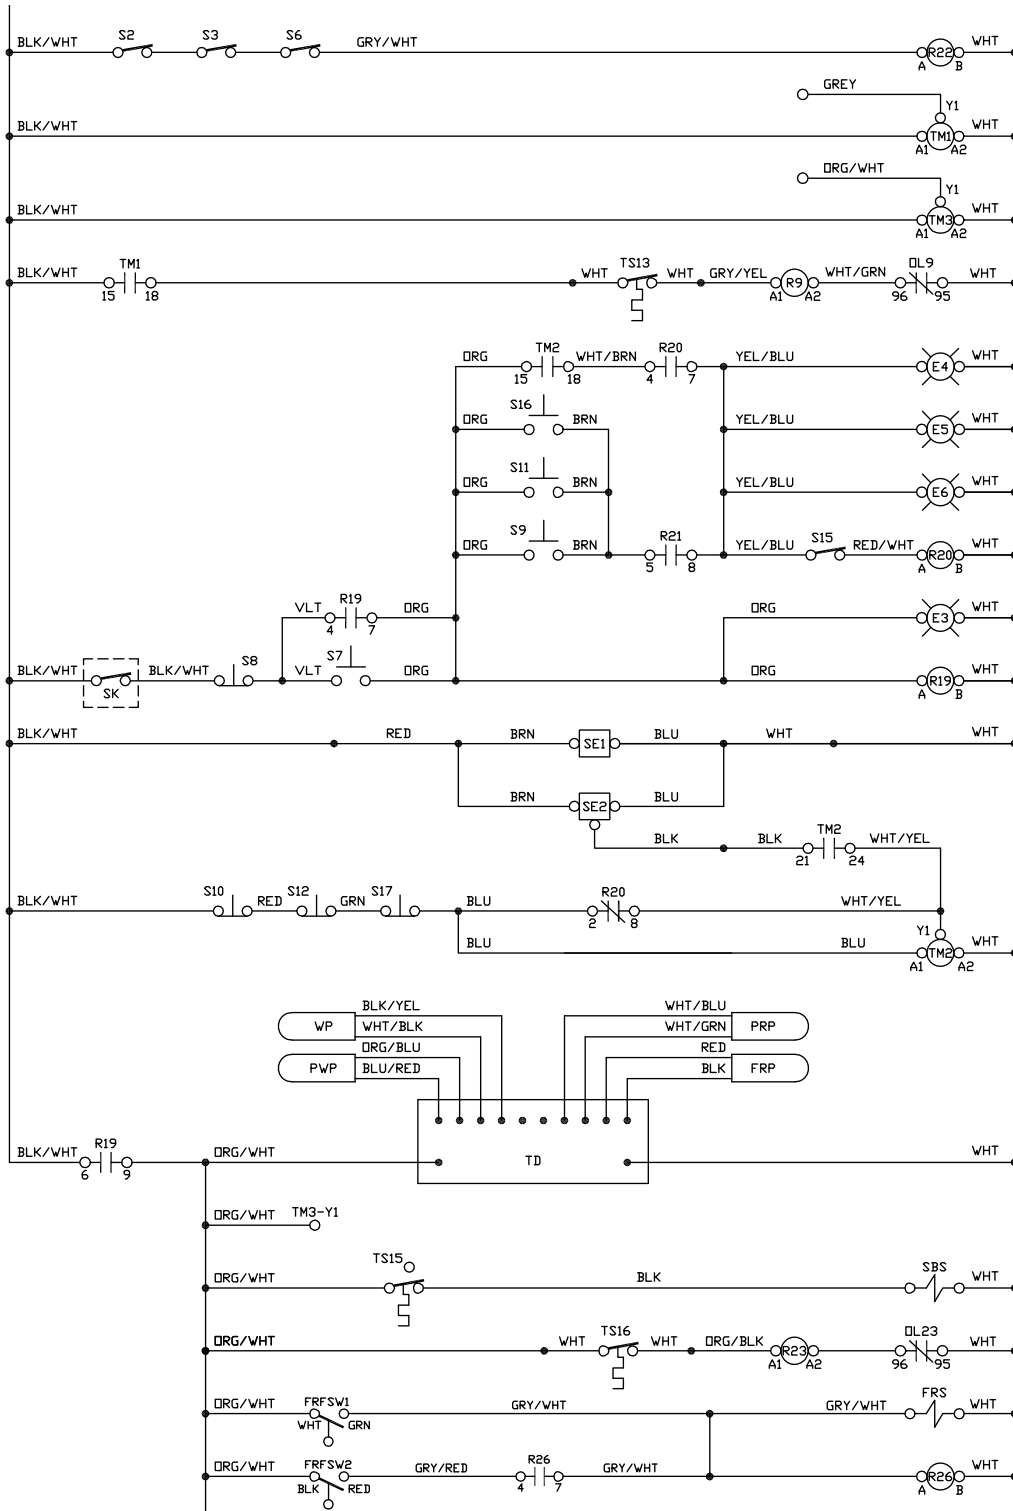

(CONTINUED)

(PUMPED FINAL RINSE)

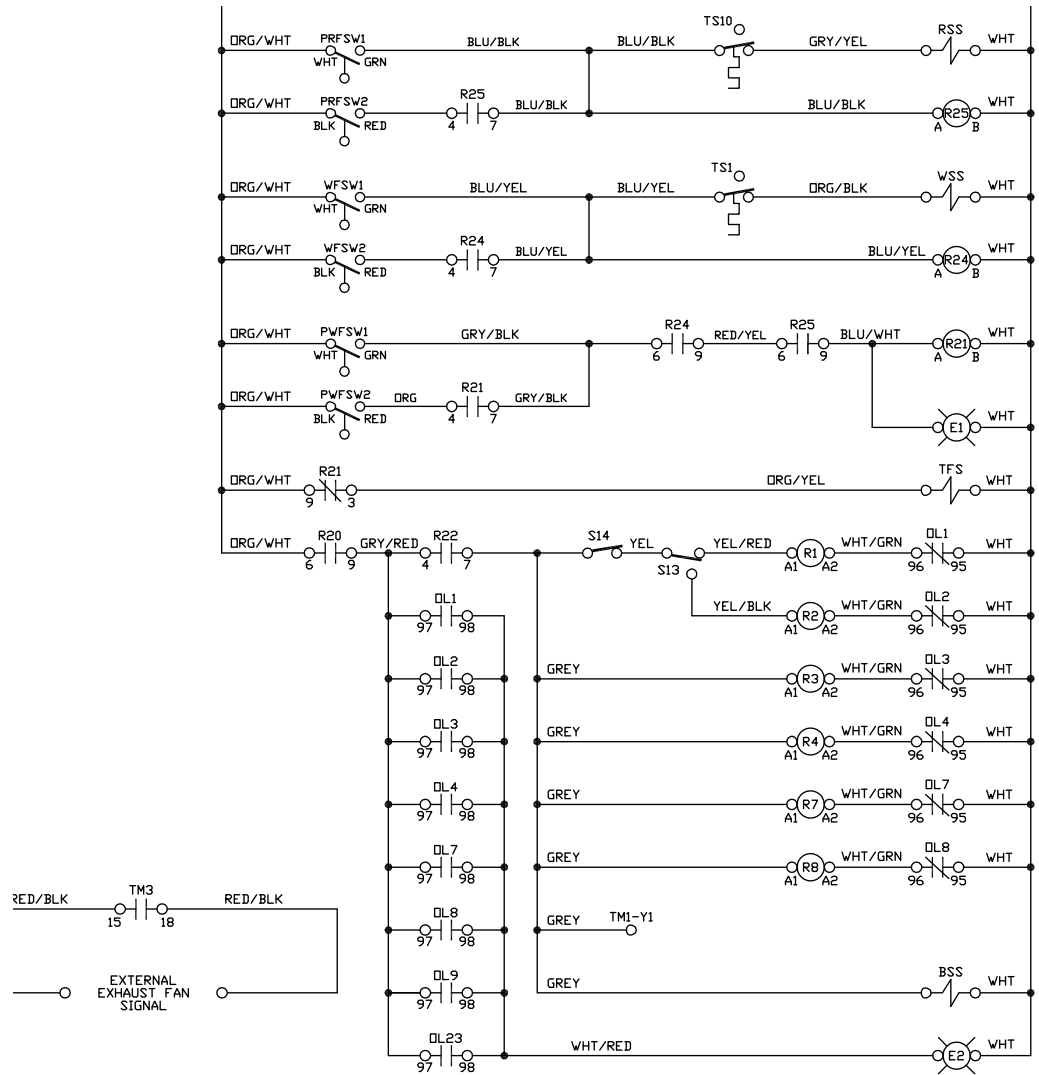


-88-25F


LEGEND


| | | | |
|----------|-----------------------------------|--------|---------------------------------------|
| L1 L2 L3 | POWER DISTRIBUTION BLOCK | RSS | RINSE STEAM SOLENOID |
| GND | GROUND | WSS | WASH STEAM SOLENOID |
| M1 | DRIVE MOTOR | BSS | BLOWER STEAM SOLENOID (OPTIONAL) |
| M2 | PREWASH PUMP MOTOR | TS1 | WASH REGULATING THERMOSTAT |
| M3 | WASH PUMP MOTOR | TS10 | RINSE REGULATING THERMOSTAT |
| M6 | POWER RINSE PUMP MOTOR | TS13 | INTERNAL BLOWER HIGH LIMIT |
| M8 | BLOWER MOTOR (OPTIONAL) | TS15 | STEAM BOOSTER THERMOSTAT |
| M9 | EXHAUST FAN MOTOR | TS16 | INTERNAL EXHAUST FAN HIGH LIMIT |
| R1 | DRIVE MOTOR CONTACTOR 1 | OL1 | DRIVE MOTOR OVERLOAD 1 |
| R2 | DRIVE MOTOR CONTACTOR 2 | OL2 | DRIVE MOTOR OVERLOAD 2 |
| R3 | PREWASH PUMP MOTOR CONTACTOR | OL3 | PREWASH MOTOR OVERLOAD |
| R4 | WASH PUMP MOTOR CONTACTOR | OL4 | WASH MOTOR OVERLOAD |
| R7 | POWER RINSE PUMP MOTOR CONTACTOR | OL7 | POWER RINSE MOTOR OVERLOAD |
| R9 | BLOWER MOTOR CONTACTOR (OPTIONAL) | OL9 | BLOWER MOTOR OVERLOAD (OPTIONAL) |
| R19 | ON RELAY | OL23 | EXHAUST FAN MOTOR OVERLOAD |
| R20 | START RELAY | E1 | TANK FILLED LIGHT |
| R21 | MACHINE FILL RELAY | E2 | MOTOR FAULT LIGHT |
| R22 | DOOR RELAY | E3 | ON LIGHT |
| R23 | EXHAUST FAN MOTOR CONTACTOR | E4 | START LIGHT 1 |
| R24 | WASH TANK FILL RELAY | E5 | START LIGHT 2 |
| R25 | POWER RINSE TANK FILL RELAY | E6 | START LIGHT 3 |
| S1 | EMERGENCY STOP BUTTON | PWP | PREWASH PROBE |
| S2 | DOOR SWITCH 1 | WP | WASH PROBE |
| S3 | DOOR SWITCH 2 | RRP | POWER RINSE PROBE |
| S6 | DOOR SWITCH 5 | FRP | FINAL RINSE PROBE |
| S7 | ON BUTTON | TD | TEMPERATURE DISPLAY |
| S8 | OFF BUTTON | PWFSW1 | PREWASH TOP FLOAT SWITCH |
| S9 | START BUTTON 1 | PWFSW2 | PREWASH BOTTOM FLOAT SWITCH |
| S10 | STOP BUTTON 1 | WFSW1 | WASH TOP FLOAT SWITCH |
| S11 | START BUTTON 2 | WFSW2 | WASH BOTTOM FLOAT SWITCH |
| S12 | STOP BUTTON 2 | PRFSW1 | POWER RINSE TOP FLOAT SWITCH |
| S13 | DRIVE MOTOR SELECTOR SWITCH | PRFSW2 | POWER RINSE BOTTOM FLOAT SWITCH |
| S14 | CONVEYOR JAM SWITCH | T1 | CONTROL TRANSFORMER |
| S15 | DRIVE MOTOR JAM SWITCH | CF | CONTROL FUSE |
| S16 | START BUTTON 3 | TM1 | BLOWER TIMER (OPTIONAL) |
| SK | KEYED SWITCH (OPTION) | TM2 | AUTO SHUTOFF TIMER |
| S17 | STOP BUTTON 3 | TM3 | EXTERNAL EXHAUST FAN TIMER (OPTIONAL) |
| FRS | FINAL RINSE SOLENOID | SE1 | SENSOR - EMITTER |
| TFS | TANK FILL SOLENOID | SE2 | SENSOR - RECEIVER |
| SBS | STEAM BOOSTER SOLENOID | | |

**JFT-S
ELECTRICAL DIAGRAM
200 VOLT 50/60 HZ 3 PHASE**

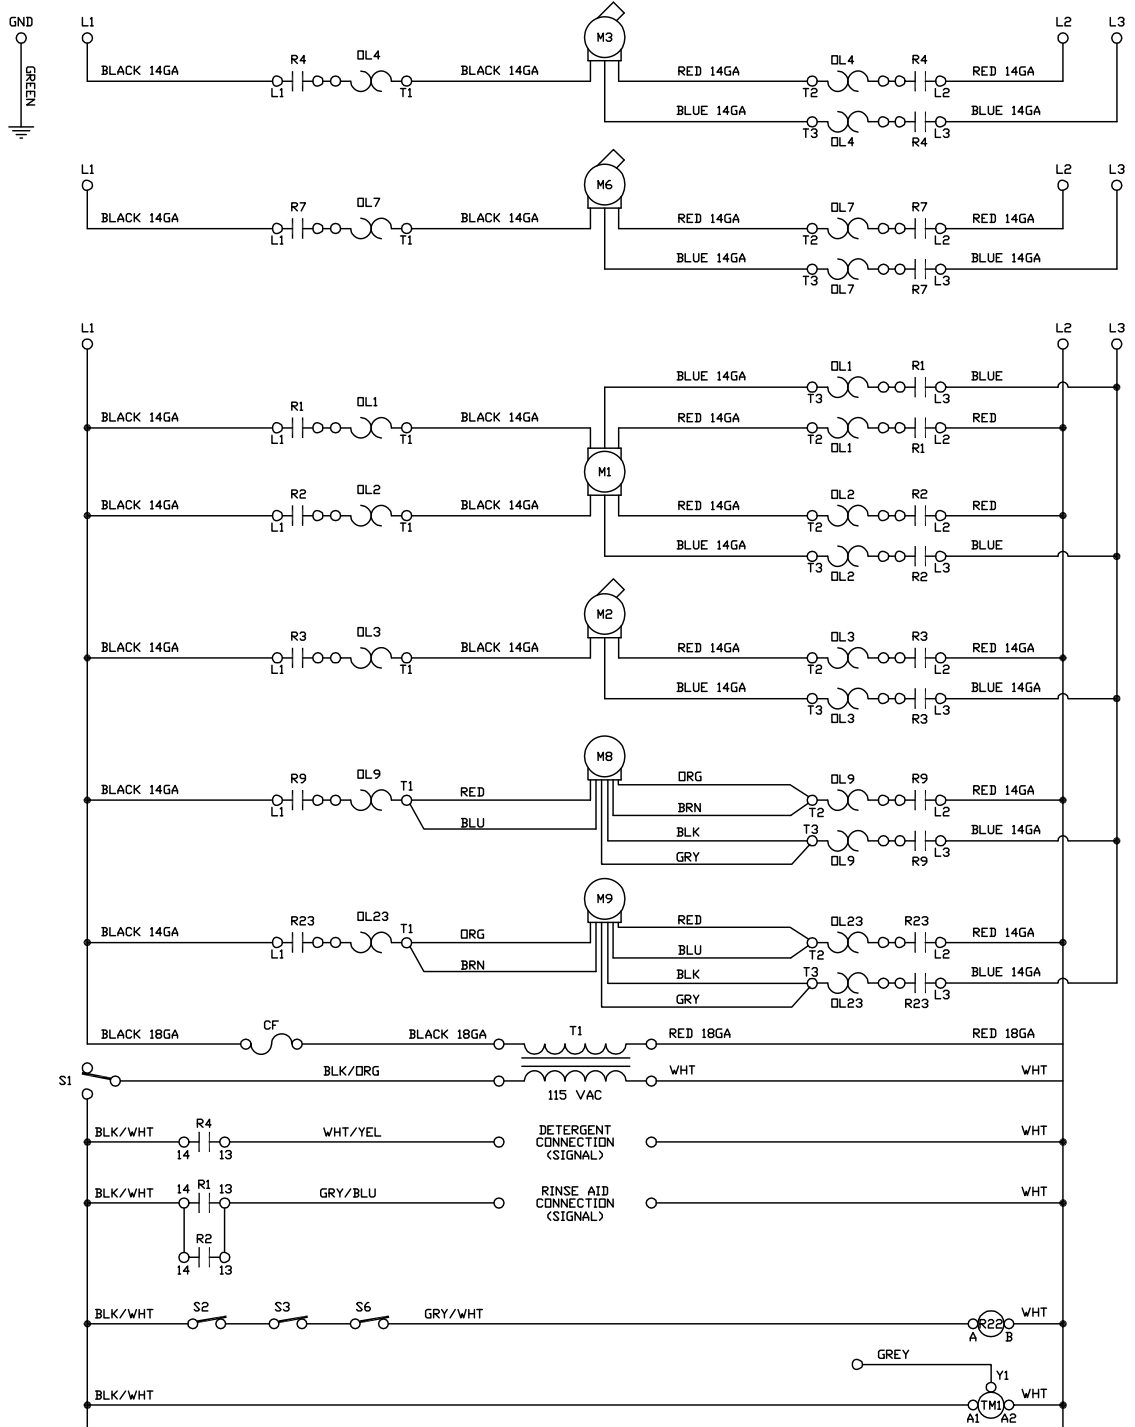

(CONTINUED)

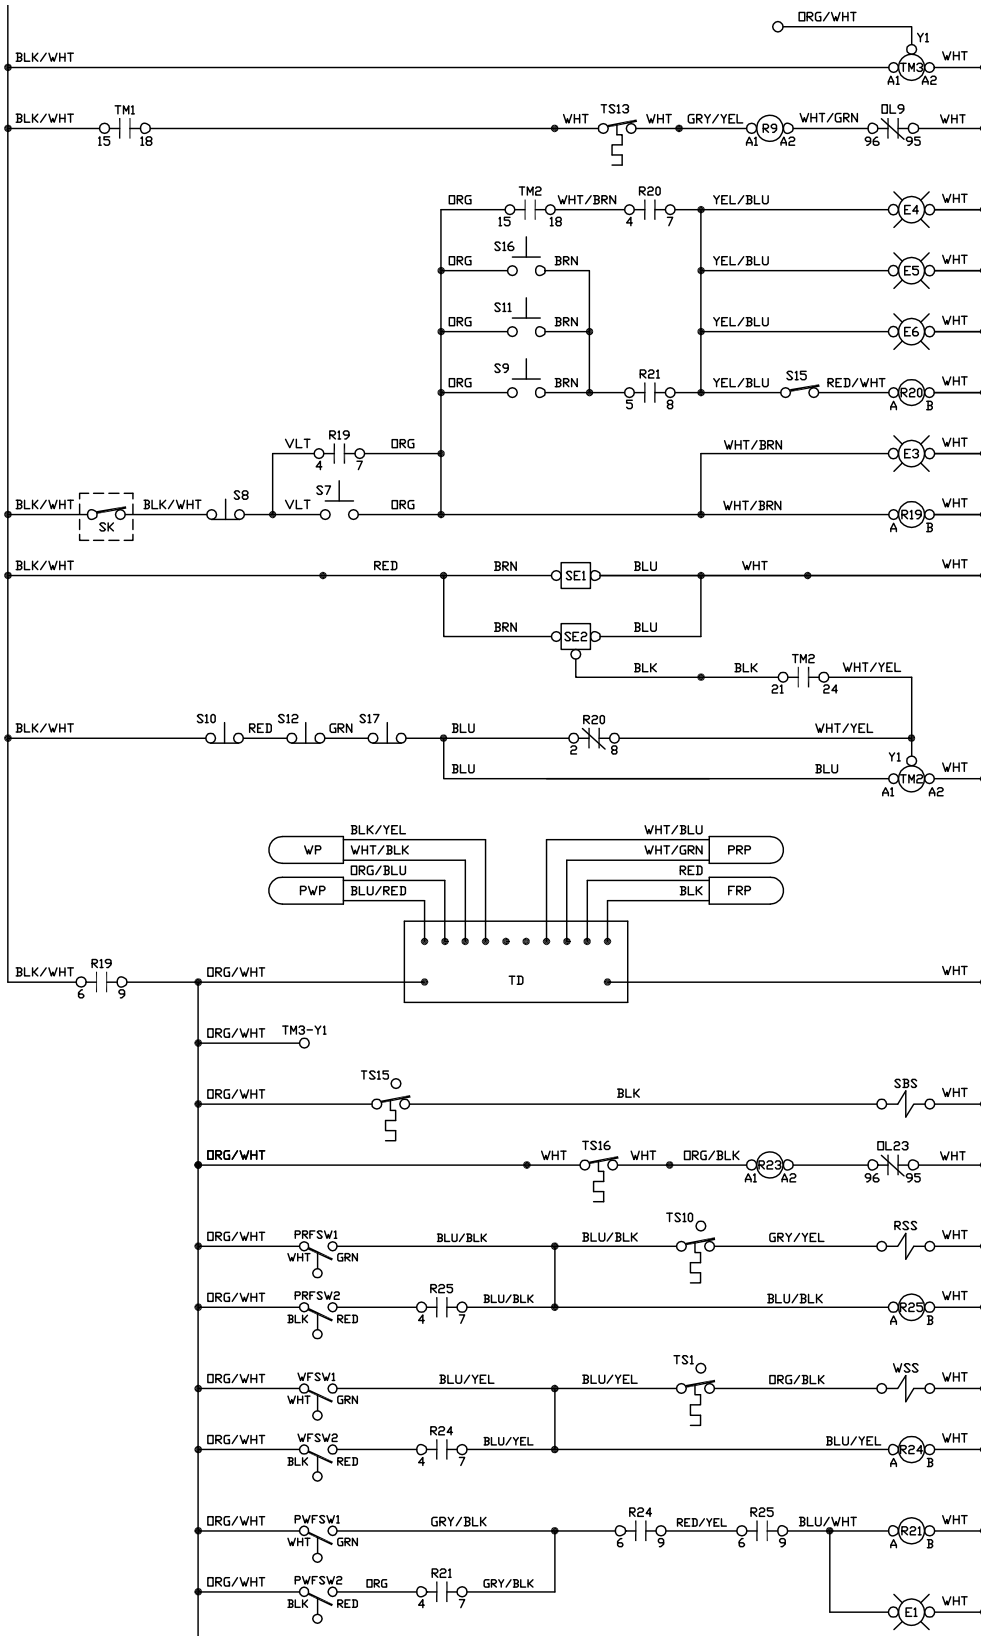

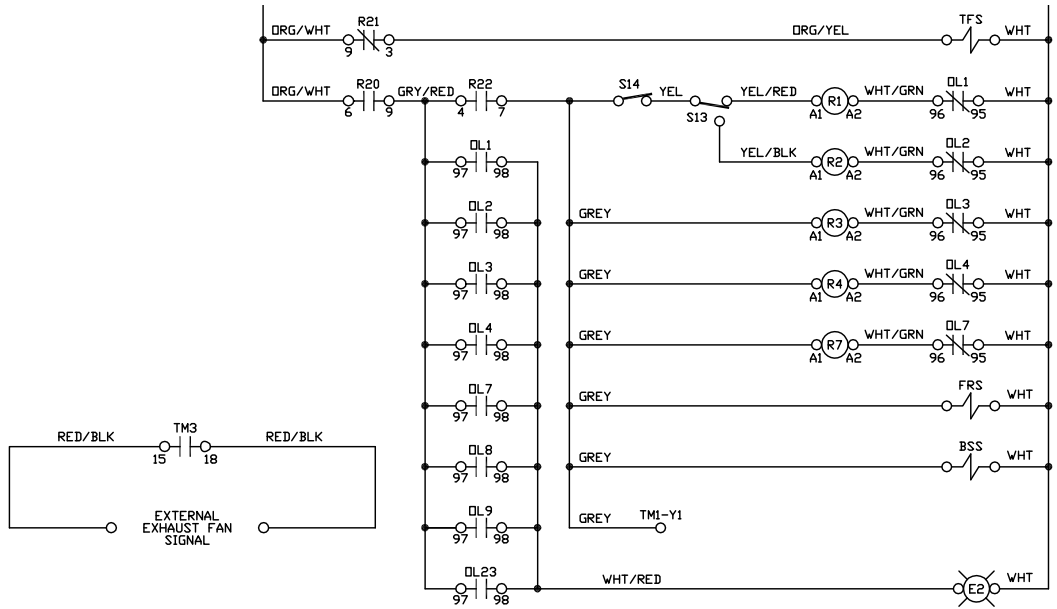

9905-003-53-66A



Jackson WWS, Inc. • 6209 N. US Hwy 25E • Gray, KY 40734 USA
1.888.800.5672 • www.jacksonwws.com